

HCD-HDX275/HDX277WC/HDX279W/ HDX475/HDX576WF/HDX675

SERVICE MANUAL



Ver. 1.1 2008.05



Photo: HCD-HDX275

US Model
HCD-HDX275/HDX277WC/
HDX279W/HDX576WF

Canadian Model
HCD-HDX475/HDX576WF/HDX675

E Model
Australian Model
HCD-HDX275

- HCD-HDX275 is the amplifier section, super audio CD/DVD system, tuner section and video section in DAV-HDX275.
- HCD-HDX277WC is the amplifier section, super audio CD/DVD system, tuner section and video section in DAV-HDX277WC.
- HCD-HDX279W is the amplifier section, super audio CD/DVD system, tuner section and video section in DAV-HDX279W.
- HCD-HDX475 is the amplifier section, super audio CD/DVD system, tuner section and video section in DAV-HDX475.
- HCD-HDX576WF is the amplifier section, super audio CD/DVD system, tuner section and video section in DAV-HDX576WF.
- HCD-HDX675 is the amplifier section, super audio CD/DVD system, tuner section and video section in DAV-HDX675.

This product incorporates copyright protection technology that is protected by U.S. patents and other intellectual property rights. Use of this copyright protection technology must be authorized by Macrovision, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision. Reverse engineering or disassembly is prohibited.

This system incorporates with Dolby® Digital and Dolby Pro Logic (II) adaptive matrix surround decoder and the DTS® Digital Surround System.

- * Manufactured under license from Dolby Laboratories. "Dolby", "Pro Logic", and the double-D symbol are trademarks of Dolby Laboratories.
- ** Manufactured under license from DTS, Inc. "DTS" and "DTS Digital Surround" are registered trademarks of DTS, Inc.

This system incorporates High-Definition Multimedia Interface (HDMI) technology. HDMI, the HDMI logo and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC.

"BRAVIA" and BRAVIA are trademarks of Sony Corporation.

"S-AIR" and its logo are trademarks of Sony Corporation.

Model Name Using Similar Mechanism	HCD-HDX265
DVD Mechanism Type	CDM81C-DVBU101
Optical Pick-up Block Name	KHM-310CAB or KHM-313CAB

SPECIFICATIONS

AUDIO POWER SPECIFICATIONS for the US model

POWER OUTPUT AND TOTAL HARMONIC DISTORTION:

With 3 ohms loads, both channels driven, from 180 - 20,000 Hz; rated 84 watts per channel minimum RMS power, with no more than 0.7% total harmonic distortion from 250 milli watts to rated output.

Amplifier Section (EXCEPT HCD-HDX279W/HDX576WF)

Surround mode (reference) RMS output power
FL/FR/C/SL/SR*: 143 watts (per channel at 3 ohms, 1 kHz, 10% THD)
Subwoofer*: 285 watts (at 1.5 ohms, 80 Hz, 10% THD)

Amplifier Section (HCD-HDX279W/HDX576WF)

Surround mode (reference) RMS output power
FL/FR/C*: 143 watts (per channel at 3 ohms, 1 kHz, 10% THD)
Subwoofer*: 285 watts (at 1.5 ohms, 80 Hz, 10% THD)

- * Depending on the decoding mode settings and the source, there may be no sound output.

Inputs (Analog)
TV/VIDEO (AUDIO IN) (EXCEPT HCD-HDX576WF)
Sensitivity: 450/250 mV (HCD-HDX576WF)
TV (AUDIO IN) Sensitivity: 450/250 mV (HCD-HDX576WF)
SAT/CABLE (AUDIO IN) Sensitivity: 450/250 mV
AUDIO IN Sensitivity: 250/125 mV

Inputs (Digital)
TV/VIDEO (COAXIAL IN/OPTICAL IN) (EXCEPT HCD-HDX576WF) Impedance: 75 ohms/-
TV (COAXIAL IN/OPTICAL IN) (HCD-HDX576WF) Impedance: 75 ohms/-

Outputs (Analog)
Phones Accepts low- and high-impedance headphones.

Super Audio CD/DVD System
Laser Semiconductor laser
(Super Audio CD/DVD: $\lambda = 650$ nm)
(CD: $\lambda = 790$ nm)
Emission duration: continuous
NTSC

Signalformat system
Tuner Section
System PLL quartz-locked digital synthesizer

FM tuner section
Tuning range
North American models: 87.5 MHz - 108.0 MHz (100 kHz step)
Other models: 87.5 MHz - 108.0 MHz (50 kHz step)

Antenna (aerial) FM wire antenna (aerial)
Antenna (aerial) terminals 75 ohms, unbalanced
Intermediate frequency 10.7 MHz
AM tuner section
Tuning range
North American, Mexican, and Latin American models:
530kHz - 1,710kHz (with the interval set at 10kHz)
531kHz - 1,710kHz (with the interval set at 9kHz)

— Continued on next page —

DVD RECEIVER

9-887-987-02
2008E05-1
© 2008.05

Sony Corporation
Audio Business Group
Published by Sony Techno Create Corporation

SONY®

HCD-HDX275/HDX277WC/HDX279W/HDX475/HDX576WF/HDX675

European, CIS and Middle Eastern models:	531kHz - 1,602 kHz (with the interval set at 9 kHz)
Australian and New Zealand models:	531kHz - 1,710 kHz (with the interval set at 9 kHz) 530kHz - 1,710 kHz (with the interval set at 10 kHz)
Other models:	531kHz - 1,602 kHz (with the interval set at 9 kHz) 530kHz - 1,610 kHz (with the interval set at 10 kHz)
Antenna (aerial)	AM loop antenna (aerial)
Intermediate frequency	450 kHz
Video Section	
Outputs	VIDEO: 1 Vp-p 75 ohms COMPONENT: Y: 1 Vp-p 75ohms Pb/Cb, Pr/Cr: 0.7Vp-p 75 ohms HDMI OUT: Type A (19 pin)

General	
Power requirements	
North American models:	120 V AC, 60 Hz
Other models:	220 V - 240 V AC, 50/60 Hz
Power consumption	
HCD-HDX275/HDX277WC/HDX475/HDX675	On: 165 W Standby: 0.3 W (at the Power Saving mode)
HCD-HDX279W/HDX576WF	On: 125 W Standby: 0.3 W (at the Power Saving mode)
Output voltage (DIGITAL MEDIA PORT)	DC 5 V
Output current (DIGITAL MEDIA PORT)	700 mA
Dimensions (approx.)	430 mm × 85 mm × 420 mm (17 in × 3 3/8 in × 16 5/8 in) (w/h/d) incl. projecting parts
Mass (approx.)	5.2 kg (11 lb 8 oz)

Design and specifications are subject to change without notice.

Notes on chip component replacement

- Never reuse a disconnected chip component.
- Notice that the minus side of a tantalum capacitor may be damaged by heat.

CAUTION

Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

SAFETY CHECK-OUT

After correcting the original service problem, perform the following safety check before releasing the set to the customer:
Check the antenna terminals, metal trim, “metallized” knobs, screws, and all other exposed metal parts for AC leakage.
Check leakage as described below.

LEAKAGE TEST

The AC leakage from any exposed metal part to earth ground and from all exposed metal parts to any exposed metal part having a return to chassis, must not exceed 0.5 mA (500 microamperes.). Leakage current can be measured by any one of three methods.

1. A commercial leakage tester, such as the Simpson 229 or RCA WT-540A. Follow the manufacturers’ instructions to use these instruments.
2. A battery-operated AC milliammeter. The Data Precision 245 digital multimeter is suitable for this job.
3. Measuring the voltage drop across a resistor by means of a VOM or battery-operated AC voltmeter. The “limit” indication is 0.75 V, so analog meters must have an accurate low-voltage scale. The Simpson 250 and Sanwa SH-63Trd are examples of a passive VOM that is suitable. Nearly all battery operated digital multimeters that have a 2 V AC range are suitable. (See Fig. A)

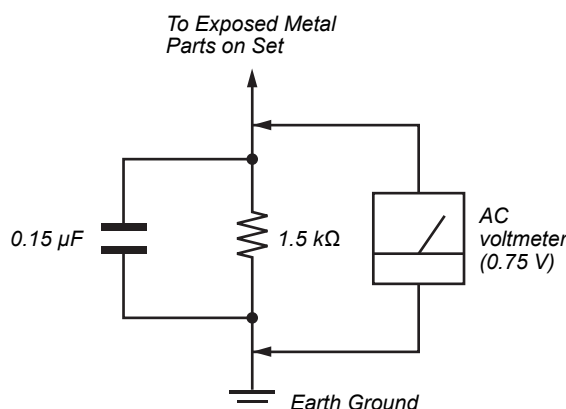


Fig. A. Using an AC voltmeter to check AC leakage.

SAFETY-RELATED COMPONENT WARNING!

COMPONENTS IDENTIFIED BY MARK \triangle OR DOTTED LINE WITH MARK \triangle ON THE SCHEMATIC DIAGRAMS AND IN THE PARTS LIST ARE CRITICAL TO SAFE OPERATION. REPLACE THESE COMPONENTS WITH SONY PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL OR IN SUPPLEMENTS PUBLISHED BY SONY.


ATTENTION AU COMPOSANT AYANT RAPPORT À LA SÉCURITÉ!

LES COMPOSANTS IDENTIFIÉS PAR UNE MARQUE \triangle SUR LES DIAGRAMMES SCHÉMATIQUES ET LA LISTE DES PIÈCES SONT CRITIQUES POUR LA SÉCURITÉ DE FONCTIONNEMENT. NE REMPLACER CES COM- POSANTS QUE PAR DES PIÈCES SONY DONT LES NUMÉROS SONT DON- NÉS DANS CE MANUEL OU DANS LES SUPPLÉMENTS PUBLIÉS PAR SONY.

SELF DIAGNOSIS FUNCTION

(When letters/numbers appear in the display)

When the self-diagnosis function is activated to prevent the system from malfunctioning, a 5-character service number (e.g., C 13 50) with a combination of a letter and 4 digits appears on the TV screen or front panel display. In this case, check the following table.

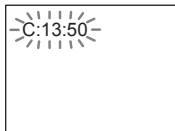

First 3 characters of the service number	Cause and/or corrective action
C 13	The disc is dirty. ➡ Clean the disc with a soft cloth.
C 31	The disc is not inserted correctly. ➡ Restart the system, then re-insert the disc correctly.
E XX (XX is a number)	To prevent a malfunction, the system has performed the self-diagnosis function. ➡ Contact your nearest Sony dealer or local authorized Sony service facility and give the 5-character service number. Example: E 61 10

When displaying the version number on the TV screen

When you turn on the system, the version number [VER.X.XX] (X is a number) may appear on the TV screen. Although this is not a malfunction and for Sony service use only, normal system operation will not be possible. Turn off the system, and then turn on the system again to operate.



TABLE OF CONTENTS

1. SERVICING NOTES	5	6-24. Printed Wiring Board - S-AIR INC Board (HDX277WC/HDX279W/HDX576WF) -	50
2. GENERAL	9	6-25. Schematic Diagram - S-AIR INC Board (HDX277WC/HDX279W/HDX576WF) -	51
3. DISASSEMBLY		6-26. Printed Wiring Board - I/O Board (Component Side) -	52
3-1. Disassembly Flow	12	6-27. Printed Wiring Board - I/O Board (Conductor Side) -	53
3-2. Case (DCR)	13	6-28. Schematic Diagram - I/O Board -	54
3-3. Front Panel Block	13	6-29. Printed Wiring Board - SPEAKER Board -	55
3-4. POWER Board	14	6-30. Schematic Diagram - SPEAKER Board -	55
3-5. Back Panel Block (HDX275/HDX475/HDX675)	14	6-31. Printed Wiring Boards - JACK-KEY Section -	56
3-6. Back Panel Block (HDX277WC/HDX279W/HDX576WF)	15	6-32. Schematic Diagram - JACK-KEY Section -	57
3-7. SPEAKER Board, SERIPARA Board and MAIN Board	15	6-33. Printed Wiring Boards - RELAY Section -	58
3-8. Cover (CDM-DCR)	16	6-34. Schematic Diagram - RELAY Section -	59
3-9. DVD Mechanism Deck (CDM81C-DVBUI01)	16	6-35. Printed Wiring Board - FL Board -	60
3-10. Tray (Main) Assy	17	6-36. Schematic Diagram - FL Board -	61
3-11. MOTOR Board	17	6-37. Printed Wiring Board - POWER Board -	62
3-12. Optical Pick-up Section	18	6-38. Schematic Diagram - POWER Board -	63
3-13. Optical Pick-up Block (KHM-310CAB or KHM-313CAB)	18	7. EXPLODED VIEWS	
3-14. Gear (Sub Tray 1)/Gear (Sub Tray 2)	19	7-1. Case Section	81
3-15. Lever (Mode)	19	7-2. Front Panel Section	82
3-16. Stocker Block	20	7-3. Chassis Section	83
3-17. Cam (Stocker)	20	7-4. DVD Mechanism Deck Section-1 (CDM81C-DVBUI01)	84
3-18. Gear (Stocker 3)	21	7-5. DVD Mechanism Deck Section-2 (CDM81C-DVBUI01)	85
3-19. Rotary Encoder (MD) (S771)	21	7-6. DVD Mechanism Deck Section-3 (CDM81C-DVBUI01)	86
3-20. Gear (BU1)	22	7-7. Optical Pick-up Section	87
4. TEST MODE	23	8. ELECTRICAL PARTS LIST	88
5. ELECTRICAL ADJUSTMENTS	27		
6. DIAGRAMS			
6-1. Block Diagram - RF SERVO/VIDEO Section -	28		
6-2. Block Diagram - CHANGER/HDMI/DMPORT Section -	29		
6-3. Block Diagram - TUNER/S-AIR Section -	30		
6-4. Block Diagram - AMP Section -	31		
6-5. Block Diagram - PANEL/POWER SUPPLY Section -	32		
6-6. Printed Wiring Board - MAIN Board (Component Side) -	34		
6-7. Printed Wiring Board - MAIN Board (Conductor Side) -	35		
6-8. Schematic Diagram - MAIN Board (1/12) -	36		
6-9. Schematic Diagram - MAIN Board (2/12) -	37		
6-10. Schematic Diagram - MAIN Board (3/12) -	38		
6-11. Schematic Diagram - MAIN Board (4/12) -	39		
6-12. Schematic Diagram - MAIN Board (5/12) -	40		
6-13. Schematic Diagram - MAIN Board (6/12) -	41		
6-14. Schematic Diagram - MAIN Board (7/12) -	42		
6-15. Schematic Diagram - MAIN Board (8/12) -	43		
6-16. Schematic Diagram - MAIN Board (9/12) -	44		
6-17. Schematic Diagram - MAIN Board (10/12) -	45		
6-18. Schematic Diagram - MAIN Board (11/12) -	46		
6-19. Schematic Diagram - MAIN Board (12/12) -	47		
6-20. Printed Wiring Board - SERIPARA Board -	47		
6-21. Schematic Diagram - SERIPARA Board -	48		
6-22. Printed Wiring Board - S-AIR CON Board (HDX275/HDX475/HDX675) -	49		
6-23. Schematic Diagram - S-AIR CON Board (HDX275/HDX475/HDX675) -	49		

SECTION 1

SERVICING NOTES

NOTES ON HANDLING THE OPTICAL PICK-UP BLOCK OR BASE UNIT

The laser diode in the optical pick-up block may suffer electrostatic break-down because of the potential difference generated by the charged electrostatic load, etc. on clothing and the human body. During repair, pay attention to electrostatic break-down and also use the procedure in the printed matter which is included in the repair parts.

The flexible board is easily damaged and should be handled with care.

NOTES ON LASER DIODE EMISSION CHECK

The laser beam on this model is concentrated so as to be focused on the disc reflective surface by the objective lens in the optical pickup block. Therefore, when checking the laser diode emission, observe from more than 30 cm away from the objective lens.

UNLEADED SOLDER

Boards requiring use of unleaded solder are printed with the lead-free mark (LF) indicating the solder contains no lead.

(Caution: Some printed circuit boards may not come printed with the lead free mark due to their particular size)



: LEAD FREE MARK

Unleaded solder has the following characteristics.

- Unleaded solder melts at a temperature about 40 °C higher than ordinary solder.
Ordinary soldering irons can be used but the iron tip has to be applied to the solder joint for a slightly longer time.
Soldering irons using a temperature regulator should be set to about 350 °C.
Caution: The printed pattern (copper foil) may peel away if the heated tip is applied for too long, so be careful!
- Strong viscosity
Unleaded solder is more viscous (sticky, less prone to flow) than ordinary solder so use caution not to let solder bridges occur such as on IC pins, etc.
- Usable with ordinary solder
It is best to use only unleaded solder but unleaded solder may also be added to ordinary solder.

RELEASING THE TRAY LOCK

The disc tray lock function for the antitheft of an demonstration disc in the store is equipped.

Releasing Procedure:

- Press the [I/⏻] button to turn on the system.
- Press the [FUNCTION] button repeatedly to select "DVD".
- While pressing the [□] button, press the [△] button until "UN-LOCKED" displayed on the fluorescent indicator tube (around 5 seconds).

Note: When "LOCKED" is displayed, the tray lock is not released by turning power on/off with the [I/⏻] button.

RELEASING THE DEMO PLAY LOCK

Releasing Procedure:


- Press the [I/⏻] button to turn on the system.
- Press the [FUNCTION] button repeatedly to select "DVD".
- While pressing the [□] button, press the [▷] button until "DEMO OFF" displayed on the fluorescent indicator tube (around 5 seconds).

Note: When "DEMO ON" is displayed, the set is not possible to turn off the system.

NOTE OF REPLACING THE IC1103 ON THE MAIN BOARD





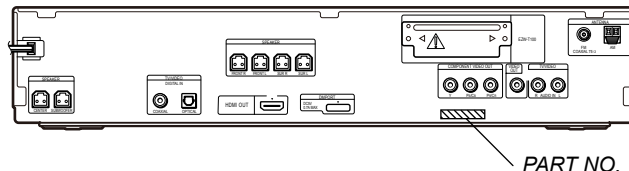















IC1103 on the MAIN board cannot exchange with single. When IC1103 on the MAIN board is damaged, exchange the entire mounted board.

MODEL IDENTIFICATION



Model	Part No.
HDX576WF: Canadian model	3-277-790-0□
HDX576WF: US model	3-278-578-3□
HDX277WC	3-278-578-4□
HDX675	3-278-578-5□
HDX275: US model	3-278-578-7□
HDX275: Australian model	3-278-578-8□
HDX275: 240V AC area in E model	3-278-579-0□
HDX475	3-278-579-3□
HDX279W	3-278-579-4□

Playable Discs

Type	Disc logo	Characteristics	Icon
DVD VIDEO	       	<ul style="list-style-type: none">• DVD VIDEO• DVD-R/DVD-RW in DVD VIDEO format or video mode• DVD+R/DVD+RW in DVD VIDEO format	
VR (Video Recording) mode	 	<ul style="list-style-type: none">• DVD-R/DVD-RW in VR (Video Recording) mode (except for DVD-R DL)	
Super Audio CD	 <small>SUPER AUDIO CD</small>	<ul style="list-style-type: none">• Super Audio CD	
VIDEO CD		<ul style="list-style-type: none">• VIDEO CD (Ver. 1.1 and 2.0 discs)• Super VCD• CD-R/CD-RW/CD-ROM in video CD format or Super VCD format	
CD		<ul style="list-style-type: none">• Audio CD• CD-R/CD-RW in audio CD format	
DATA CD	—	<ul style="list-style-type: none">• CD-R/CD-RW/CD-ROM in DATA CD format, containing MP3 files¹⁾ and JPEG image files²⁾, and DivX video files³⁾⁴⁾⁵⁾, and conforming to ISO 9660⁶⁾ Level 1/ Level 2, or Joliet (extended format)	
DATA DVD	—	<ul style="list-style-type: none">• DVD-ROM/DVD-R/DVD-RW/ DVD+R/DVD+RW in DATA DVD format, containing MP3 files¹⁾ and JPEG image files²⁾, and DivX video files³⁾⁴⁾⁵⁾, and conforming to UDF (Universal Disk Format)	

¹⁾MP3 (MPEG1 Audio Layer 3) is a standard format defined by ISO/MPEG which compresses audio data. MP3 files must be in MPEG1 Audio Layer 3 format.

²⁾JPEG image files must conform to the DCF image file format. (DCF “Design rule for Camera File system”: Image standards for digital cameras regulated by Japan Electronics and Information Technology Industries Association (JEITA).)

³⁾Except for United Kingdom and North American models.

⁴⁾DivX® is a video file compression technology, developed by DivX, Inc.

⁵⁾DivX, DivX Certified, and associated logos are trademarks of DivX, Inc. and are used under license.

⁶⁾A logical format of files and folders on CD-ROMs, defined by ISO (International Organization for Standardization).

“DVD-RW,” “DVD+RW,” “DVD+R,”“DVD VIDEO,” and the “CD” logos are trademarks.

Example of discs that the system cannot play

The system cannot play the following discs:

- CD-ROM/CD-R/CD-RW other than those recorded in the formats listed
- CD-ROM recorded in PHOTO CD format
- Data part of CD-Extra
- CD Graphics disc
- DVD Audio
- DATA DVD that does not contain MP3 files or JPEG image files, or DivX video files*
- * Except for United Kingdom and North American models.
- DVD-RAM

Also, the system cannot play the following discs:

- A DVD VIDEO with a different region code
- A disc that has a non-standard shape (e.g., card, heart)
- A disc with paper or stickers on it
- A disc that has the adhesive of cellophane tape or a sticker still left on it

Note about CD-R/CD-RW/DVD-R/DVD-RW/DVD+R/DVD+RW

In some cases, CD-R/CD-RW/DVD-R/DVD-RW/DVD+R/DVD+RW cannot be played on this system due to the recording quality or physical condition of the disc, or the characteristics of the recording device and authoring software.

The disc will not play if it has not been correctly finalized. For more information, refer to the operating instructions for the recording device.

Note that some playback functions may not work with some DVD+RWs/DVD+Rs, even if they have been correctly finalized. In this case, view the disc by normal playback. Also some DATA CDs/DATA DVDs created in Packet Write format cannot be played.

Music discs encoded with copyright protection technologies

This product is designed to play back discs that conform to the Compact Disc (CD) standard. Recently, various music discs encoded with copyright protection technologies are marketed by some record companies. Please be aware that among those discs, there are some that do not conform to the CD standard and may not be playable by this product.

Note on DualDiscs

A DualDisc is a two sided disc product which mates DVD recorded material on one side with digital audio material on the other side. However, since the audio material side does not conform to the Compact Disc (CD) standard, playback on this product is not guaranteed.

About Multi Session CD

- This system can play a Multi Session CD when an MP3 file is contained in the first session. Any subsequent MP3 files recorded in later sessions can also be played back.
- This system can play a Multi Session CD when a JPEG image file is contained in the first session. Any subsequent JPEG image files recorded in later sessions can also be played back.
- If MP3 files and JPEG image files in music CD format or video CD format are recorded in the first session, only the first session will be played back.

Region code

Your system has a region code printed on the rear of the unit and will only play a DVD labeled with the same region code.

A DVD VIDEO labeled  will also play on this system.


If you try to play any other DVD VIDEO, the message [Playback prohibited by area limitations.] will appear on the TV screen. Depending on the DVD VIDEO, no region code indication may be given even though playing the DVD VIDEO is prohibited by area restrictions.

Note about playback operations of a DVD or VIDEO CD


Some playback operations on a DVD or VIDEO CD may be intentionally set by software producers. Since this system will play a DVD or VIDEO CD according to the disc contents the software producers designed, some playback features may not be available. Be sure to read the operating instructions supplied with the DVD or VIDEO CD.

HOW TO IDENTIFY OPTICAL PICK-UP BLOCK


Note: There are two kinds of OPTICAL PICK-UP BLOCK in this set. When replacing the OPTICAL PICK-UP BLOCK, make sure which OPTICAL PICK-UP BLOCK it is following the "How to Identify" in the figure shown below.

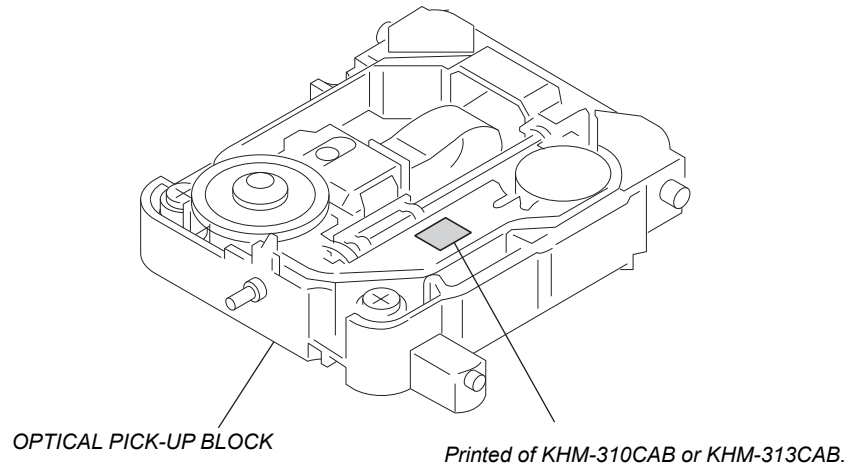

HOW TO OPEN THE TRAY WHEN POWER SWITCH TURN OFF

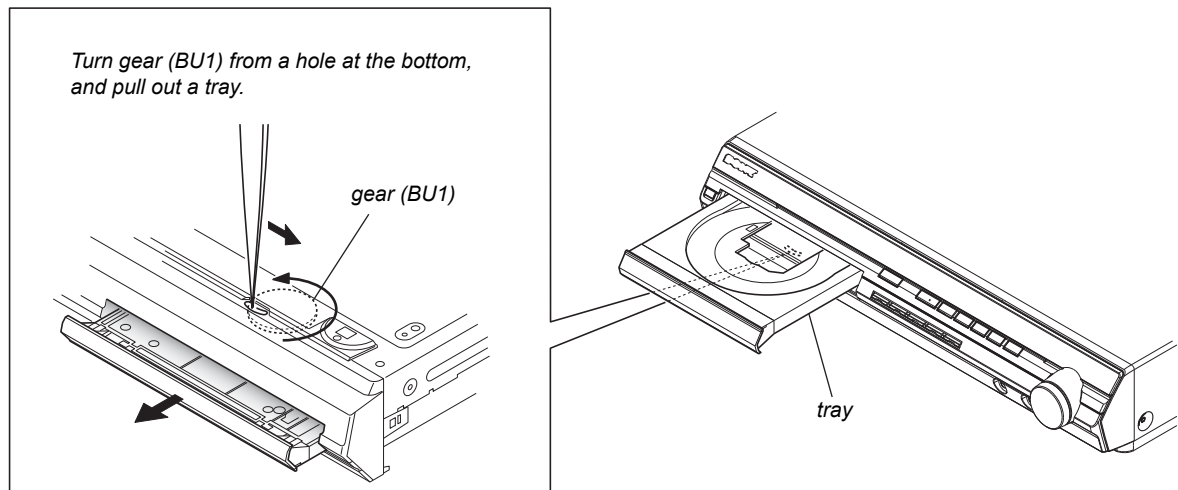

HARNESS SETTING

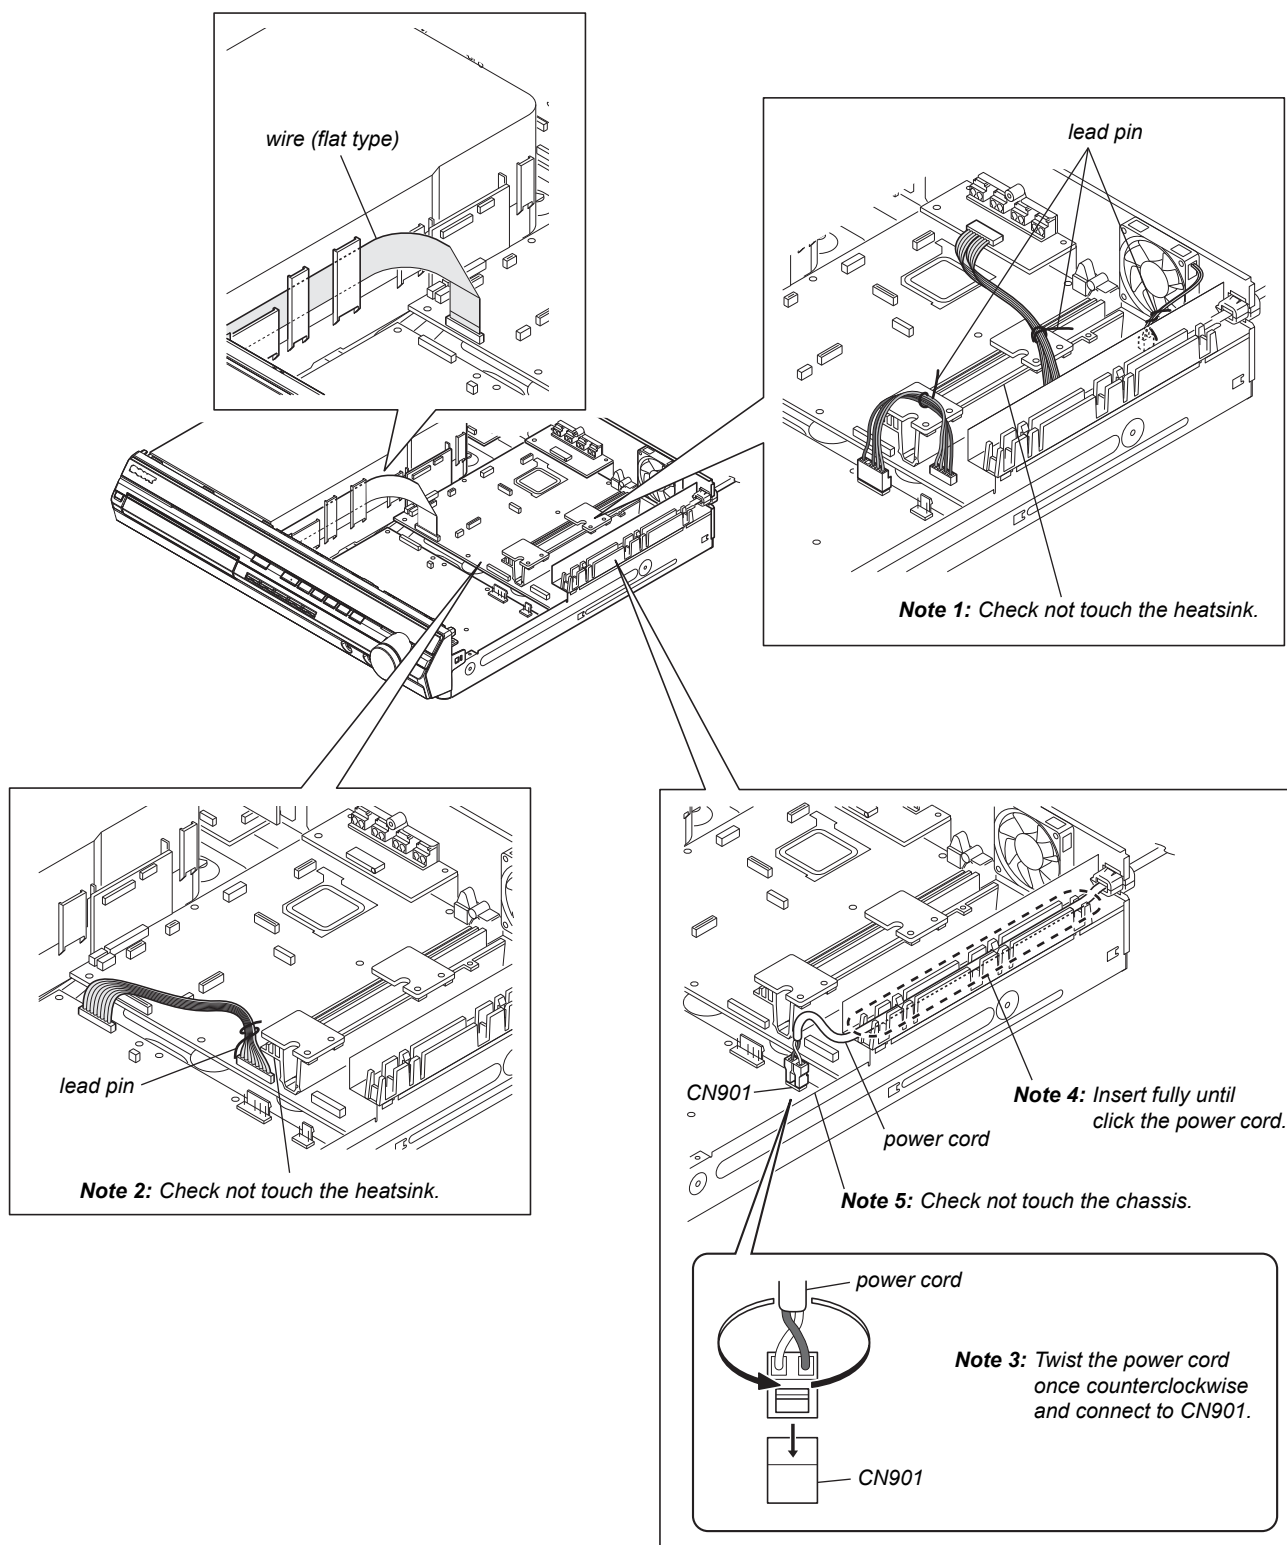

SECTION 2


GENERAL

This section is extracted
from instruction manual.

Index to Parts and Control

For more information, refer to the pages indicated in parentheses.


Front panel

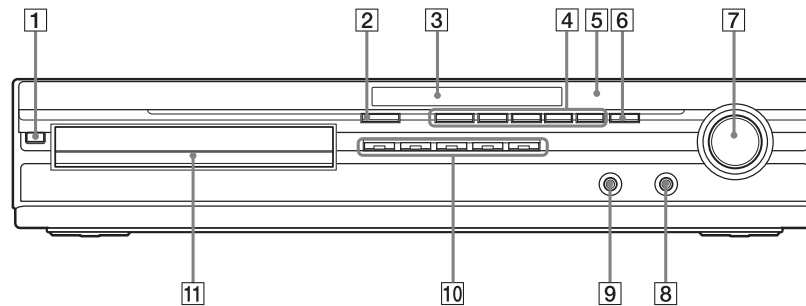

- | | |
|--------------------------|--------------------------------|
| 1 I/⏻ (on/standby) | 7 VOLUME control |
| 2 ≡ (open/close) | 8 PHONES jack |
| 3 Front panel display | 9 AUDIO IN/A.CAL MIC jack |
| 4 Play operation buttons | 10 DISC 1-5 buttons/indicators |
| 5 [] (remote sensor) | 11 Disc tray |
| 6 FUNCTION | |

Rear panel

HCD-HDX275/HDX475/HDX675

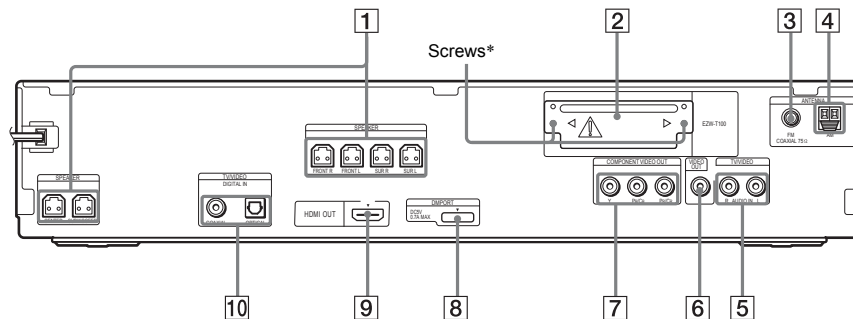


- | | |
|---------------------------------|---|
| 1 SPEAKER jacks | 7 COMPONENT VIDEO OUT jacks |
| 2 EZW-T100 slot | 8 DMPORT (DIGITAL MEDIA PORT) jack |
| 3 FM COAXIAL 75Ω jack | 9 HDMI OUT jack |
| 4 AM terminal | 10 TV/VIDEO (DIGITAL IN COAXIAL/ OPTICAL) jacks |
| 5 TV/VIDEO (AUDIO IN R/L) jacks | |
| 6 VIDEO OUT jack | |

* ⚠ **CAUTION**


Please do not remove the screws before installing the EZW-T100.

Rear panel


HCD-HDX277WC

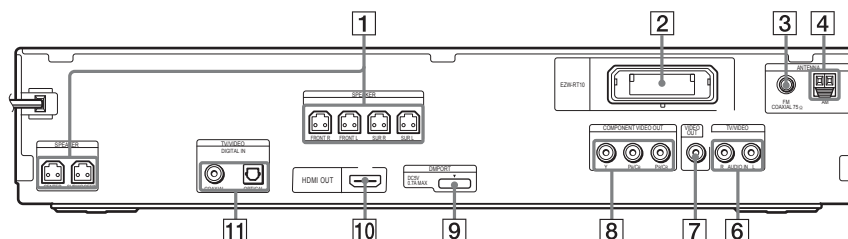

HCD-HDX279W

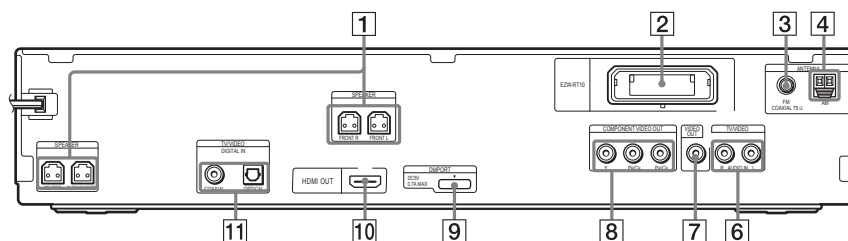


HCD-HDX576WF

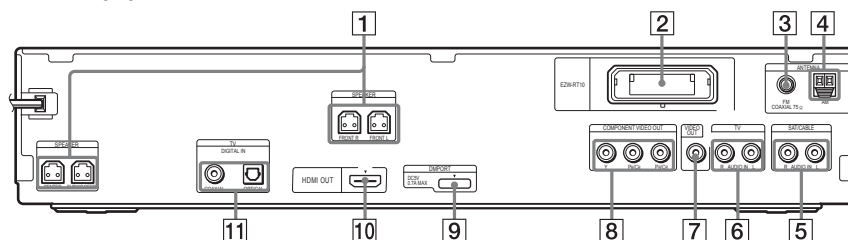

- | | |
|--|---|
| 1 SPEAKER jacks | 7 VIDEO OUT jack |
| 2 EZW-RT10 slot | 8 COMPONENT VIDEO OUT jacks |
| 3 FM COAXIAL 75Ω jack | 9 DMPORT (DIGITAL MEDIA PORT) jack |
| 4 AM terminal | 10 HDMI OUT jack |
| 5 SAT/CABLE (AUDIO IN R/L) jacks
(HCD-HDX576WF only) | 11 TV/VIDEO (DIGITAL IN COAXIAL/
OPTICAL) jacks (HCD-HDX277WC/
HDX279W) |
| 6 TV/VIDEO (AUDIO IN R/L) jacks (HCD-
HDX277WC/HDX279W) | TV (DIGITAL IN COAXIAL/OPTICAL)
jacks (HCD-HDX576WF) |
| TV (AUDIO IN R/L) jacks (HCD-
HDX576WF) | |

Front panel display

About the indications in the front panel display

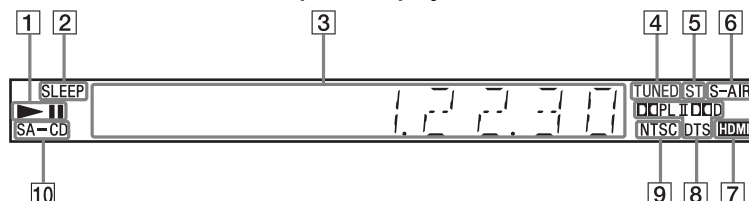


- | | |
|---|--|
| 1 Playing status | 7 Lights up when the HDMI OUT jack is
correctly connected to HDCP (High-
bandwidth Digital Content Protection)
compliant device with HDMI or DVI
(Digital Visual Interface) input. |
| 2 Flashes when the sleep timer is set. | 8 Current surround format (Except for
JPEG image file) |
| 3 Displays system's status such as
chapter, title, or track number, time
information, radio frequency, playing
status, decoding mode, etc. | 9 Lights up when the color system is set
to NTSC. (Asian, Australian, and Middle
Eastern models only) |
| 4 Lights up when a station is received.
(Radio only) | 10 Lights up when Super Audio CD/CD is
loaded. |
| 5 Stereo/Monaural effect (Radio only) | |
| 6 Lights up when the S-AIR transmitter
(not supplied) is inserted in the unit
and the system transmits the sound. | |

Remote control

HCD-HDX275/HDX277WC/HDX279W/HDX475/HDX576WF

ALPHABETICAL ORDER		BUTTON DESCRIPTIONS
A – O	P – Z	
ANGLE [3]	PICTURE NAVI [15]	Number buttons [14]
AUDIO [16]	PRESET +/- [27]	I/⏻ (on/standby) [1]
CLEAR [32]	PROG +/- ²⁾ [27]	TV I/⏻ (on/standby) [19]
D.TUNING [22]	S-AIR MODE ³⁾ [4]	⏮/⏪/⏩/⏭/⏯ [12]
DISC SKIP [33]	SLEEP [17]	⏮/⏩/⏭/⏯ REPLAY/ADVANCE [9]
DISPLAY [21]	SOUND MODE [5]	⏮/⏩/⏭/⏯ [27]
DVD MENU [25]	SUBTITLE [22]	⏮/⏩/⏭/⏯ [10]
DVD TOP MENU [13]	SYSTEM MENU [24]	STEP ⏮/⏩/⏭/⏯ [9]
DYNAMIC BASS [6]	THEATER/THEATRE ⁴⁾ [18]	SLOW ⏮/⏩/⏭/⏯ [10]
ENTER ¹⁾ [24]	TOOLS [26]	▷ (play) [30]
FUNCTION +/- [2]	TUNING +/- [10]	■ (stop) [28]
MENU [25]	TV [29]	⏮ (pause) [11]
MUTING [7]	TV CH +/- ⁵⁾ [27]	⏮ DISPLAY ⁶⁾ [26]
NIGHT [23]	TV INPUT [20]	⏮ RETURN [31]
ONE-TOUCH PLAY [35]	TV VOL +/- [34]	⏮ ²⁾ [32]
	VOLUME +/- [8]	⏮ ⁵⁾ [32]

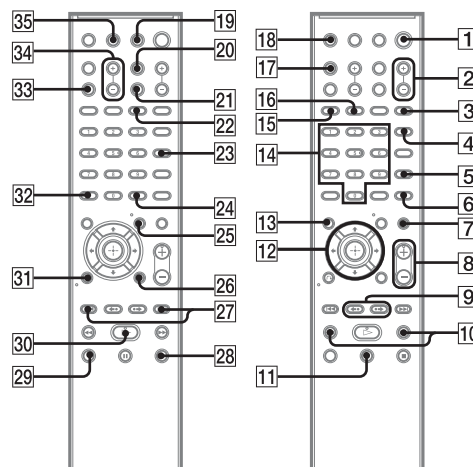

¹⁾The ENTER button has the same function as the ⏮ button. When you operate the TV, the ENTER button is used for selecting a channel, and the ⏮ button is used for selecting menu items.

²⁾Except for North American models.

³⁾HCD-HDX275/HDX475 only.

⁴⁾The button name differs depending on the area.


⁵⁾North American models only.

⁶⁾This button is available for the "DVD" or "DMPORT" function. Depending on the DIGITAL MEDIA PORT adapter, this button may not work.

Remote control

HCD-HDX675

ALPHABETICAL ORDER		BUTTON DESCRIPTIONS
A – L	M – Z	
ANGLE [5]	MENU [23]	Number buttons [3]
AUDIO [30]	MUTING [25]	I/⏻ (on/standby) [1]
CC [30]	NIGHT [20]	TV I/⏻ (on/standby) [19]
CLEAR [31]	ONE-TOUCH PLAY [34]	⏮/⏪/⏩/⏭/⏯ [14]
D.TUNING [22]	PICTURE NAVI [15]	⏮/⏩/⏭/⏯ REPLAY/ADVANCE [23]
DISC SKIP [16]	PRESET +/- [8]	⏮/⏩/⏭/⏯ [8]
DISPLAY [32]	S-AIR MODE [17]	⏮/⏩/⏭/⏯ [27]
DVD MENU [6]	SLEEP [33]	⏮/⏩/⏭/⏯ [27]
DVD TOP MENU [29]	SOUND MODE +/- [10]	▷ (play) [9]
DYNAMIC BASS [21]	SUBTITLE [22]	■ (stop) [24]
ENTER* [4]	SYSTEM MENU [7]	⏮ (pause) [26]
FAVORITES [15]	THEATER [18]	⏮ DISPLAY** [28]
FUNCTION +/- [2]	TOOLS [7]	
GUIDE [29]	TV [12]	⏮ RETURN [13]
INPUT [6]	TV CH +/- [11]	⏮ [31]
	TV VOL +/- [27]	
	TUNING +/- [27]	
	VOLUME +/- [11]	

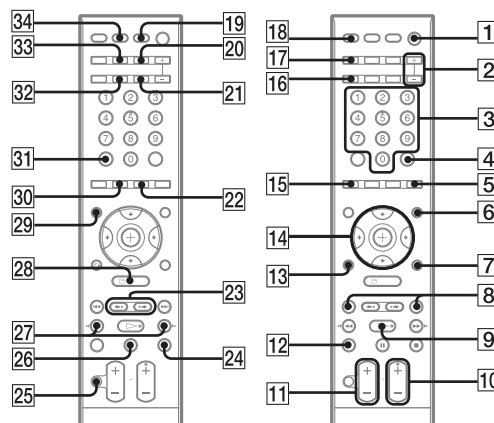


* The ENTER button has the same function as the ⏮ button. When you operate the TV, the ENTER button is used for selecting a channel, and the ⏮ button is used for selecting menu items.

** This button is available for the "DVD" or "DMPORT" function. Depending on the DIGITAL MEDIA PORT adapter, this button may not work.

SECTION 3 DISASSEMBLY


- This set can be disassembled in the order shown below.

3-1. DISASSEMBLY FLOW

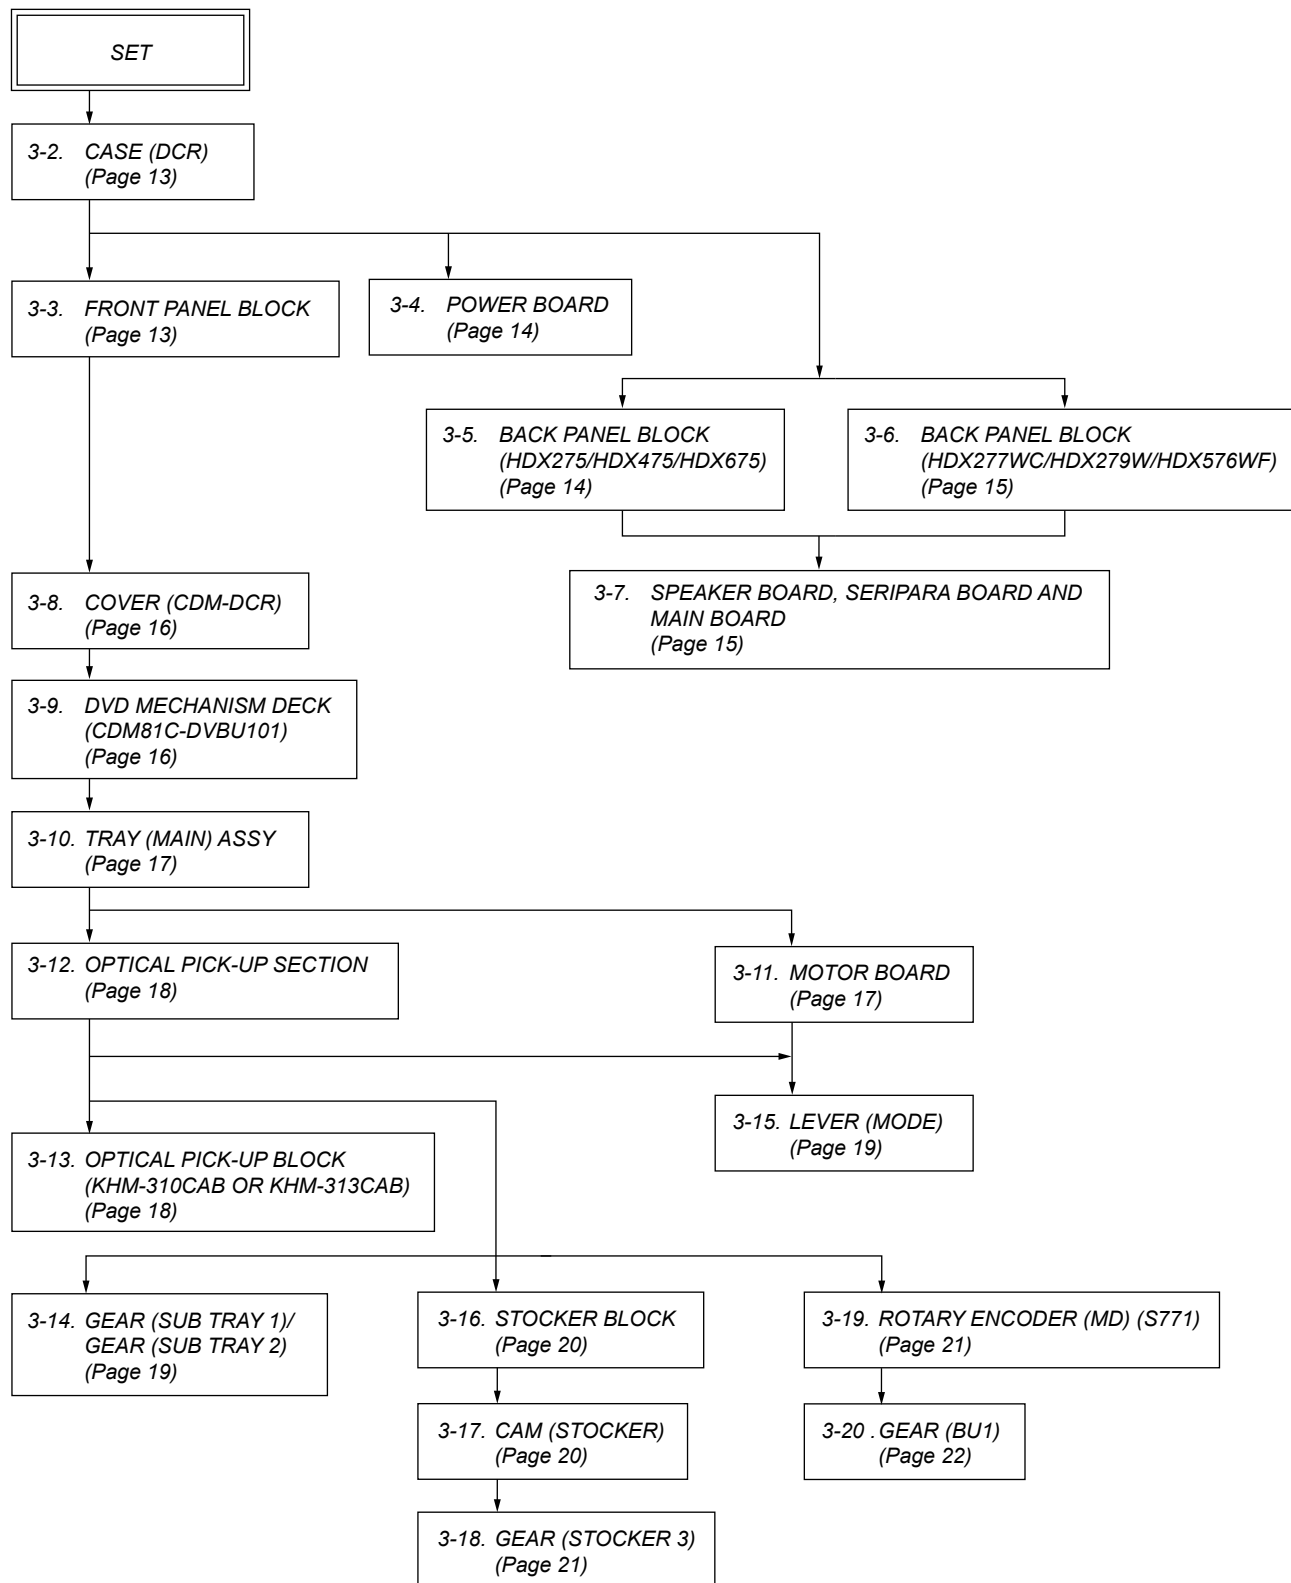


Note: Follow the disassembly procedure in the numerical order given.


3-2. CASE (DCR)

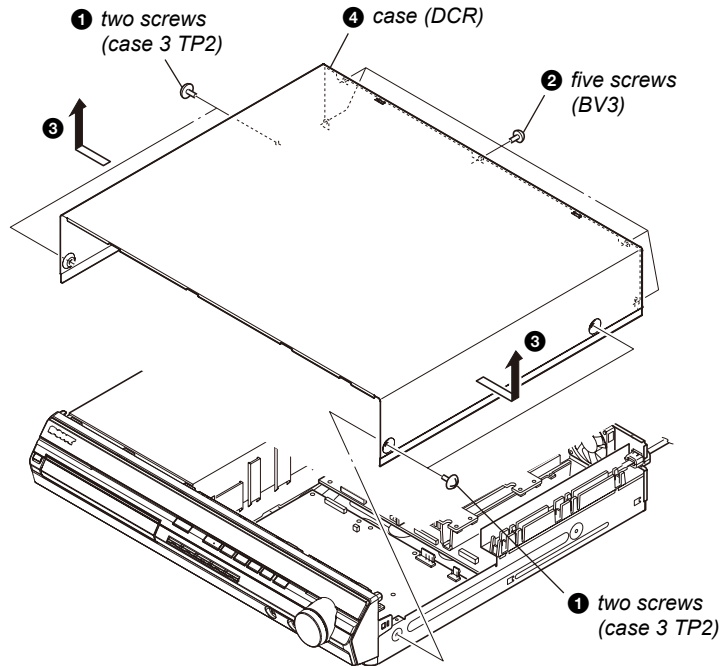


3-3. FRONT PANEL BLOCK

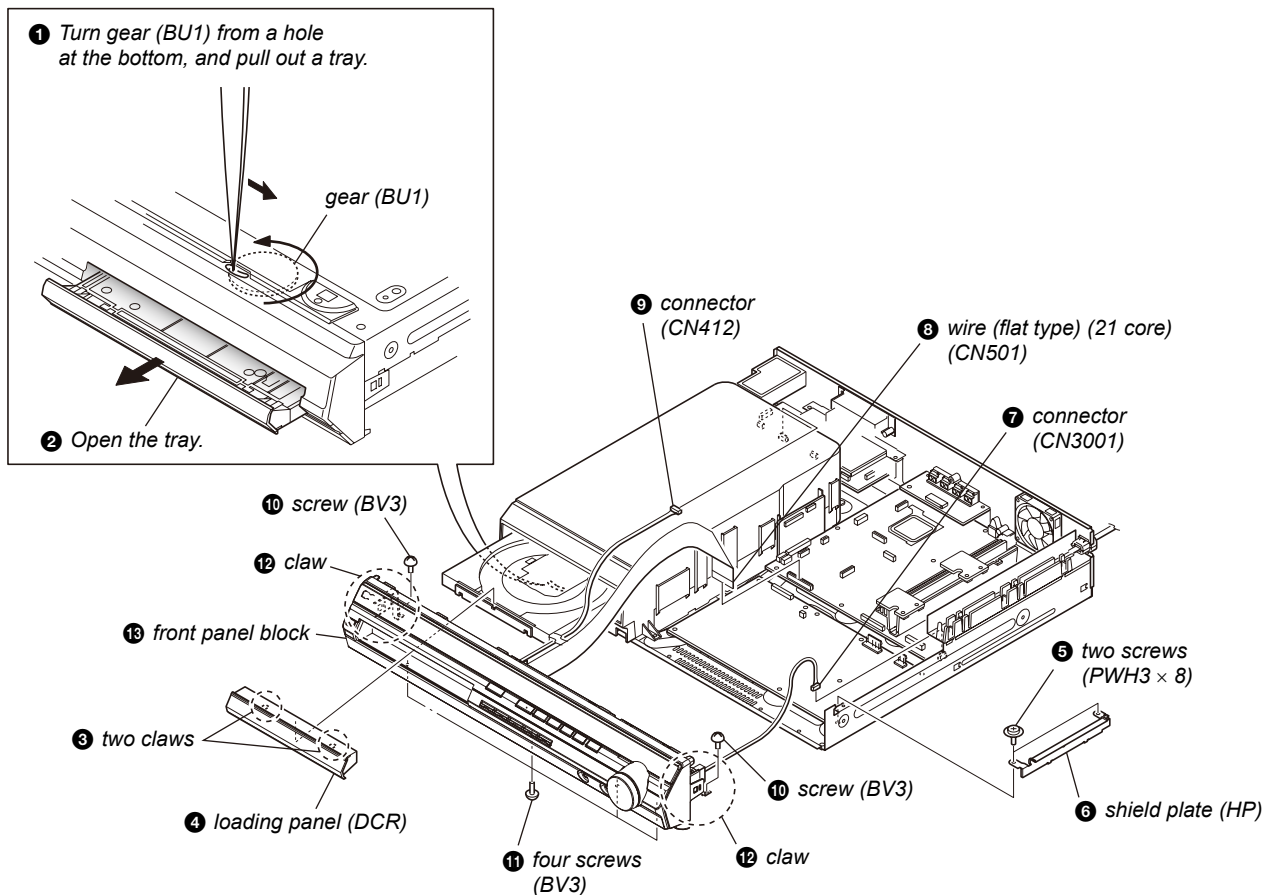


3-4. POWER BOARD

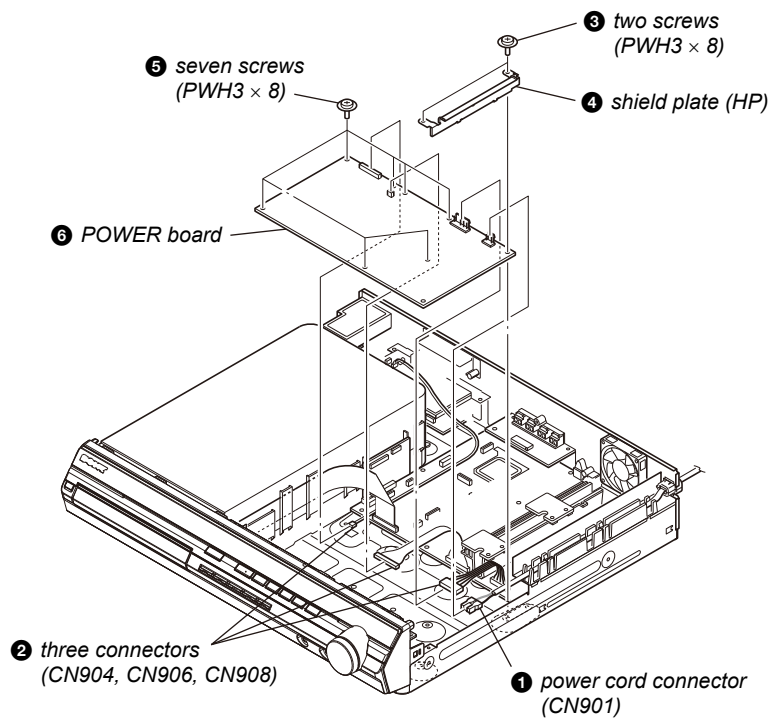


3-5. BACK PANEL BLOCK (HDX275/HDX475/HDX675)

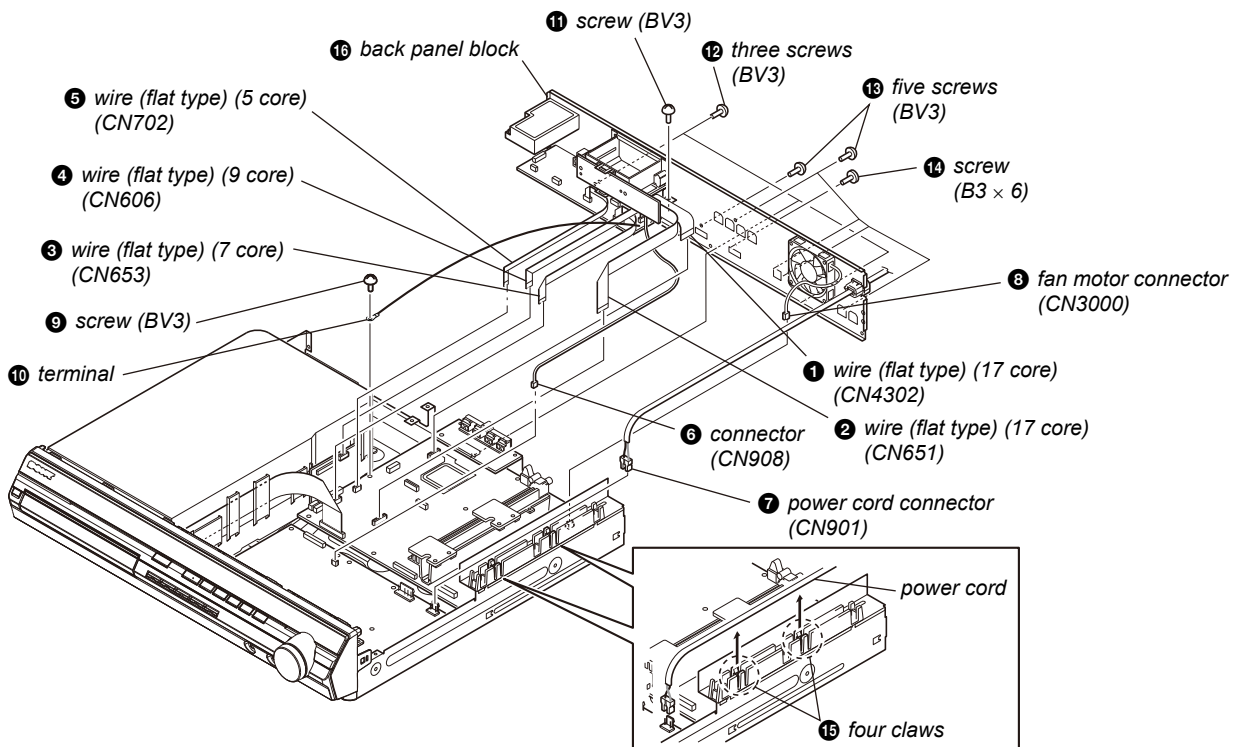


3-6. BACK PANEL BLOCK (HDX277WC/HDX279W/HDX576WF)

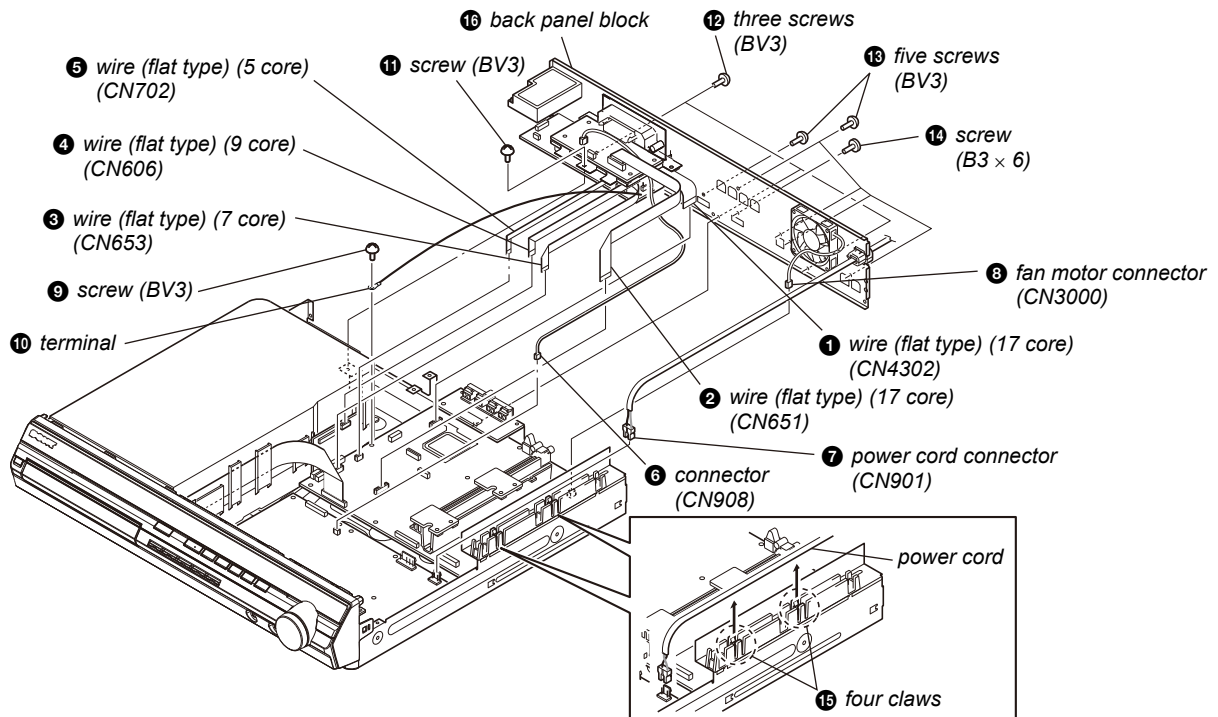


3-7. SPEAKER BOARD, SERIPARA BOARD AND MAIN BOARD

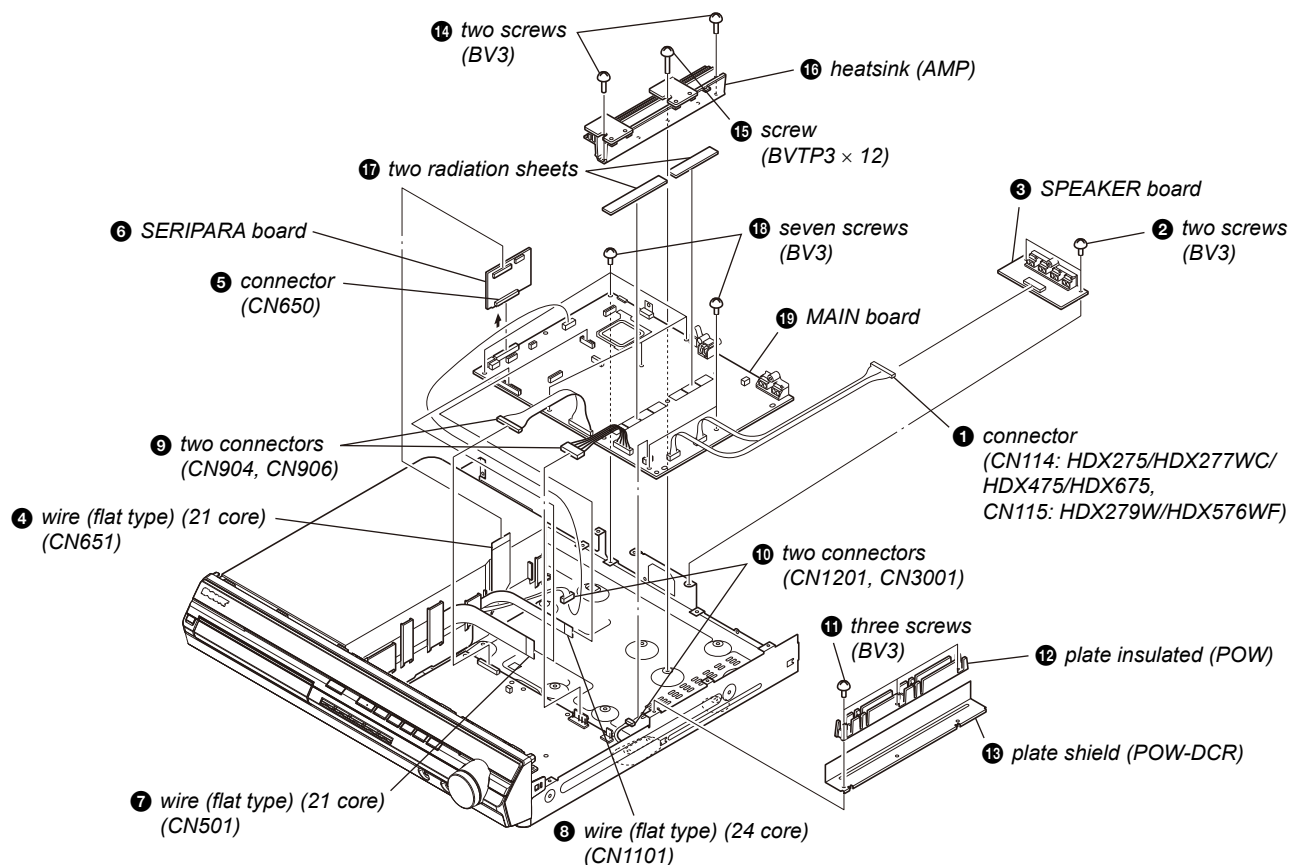


3-8. COVER (CDM-DCR)

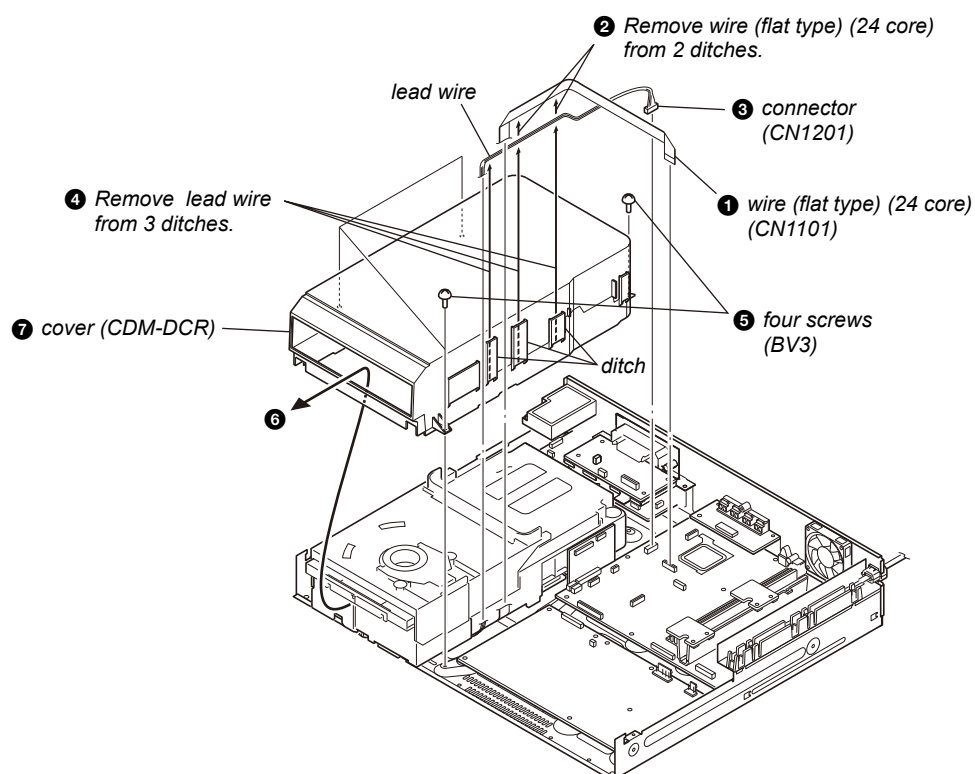


3-9. DVD MECHANISM DECK (CDM81C-DVBU101)

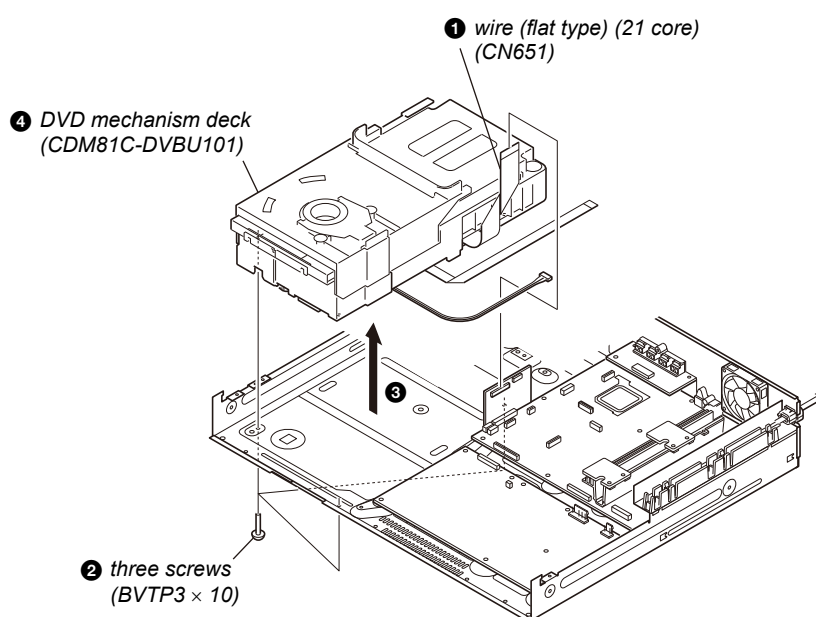


3-10. TRAY (MAIN) ASSY

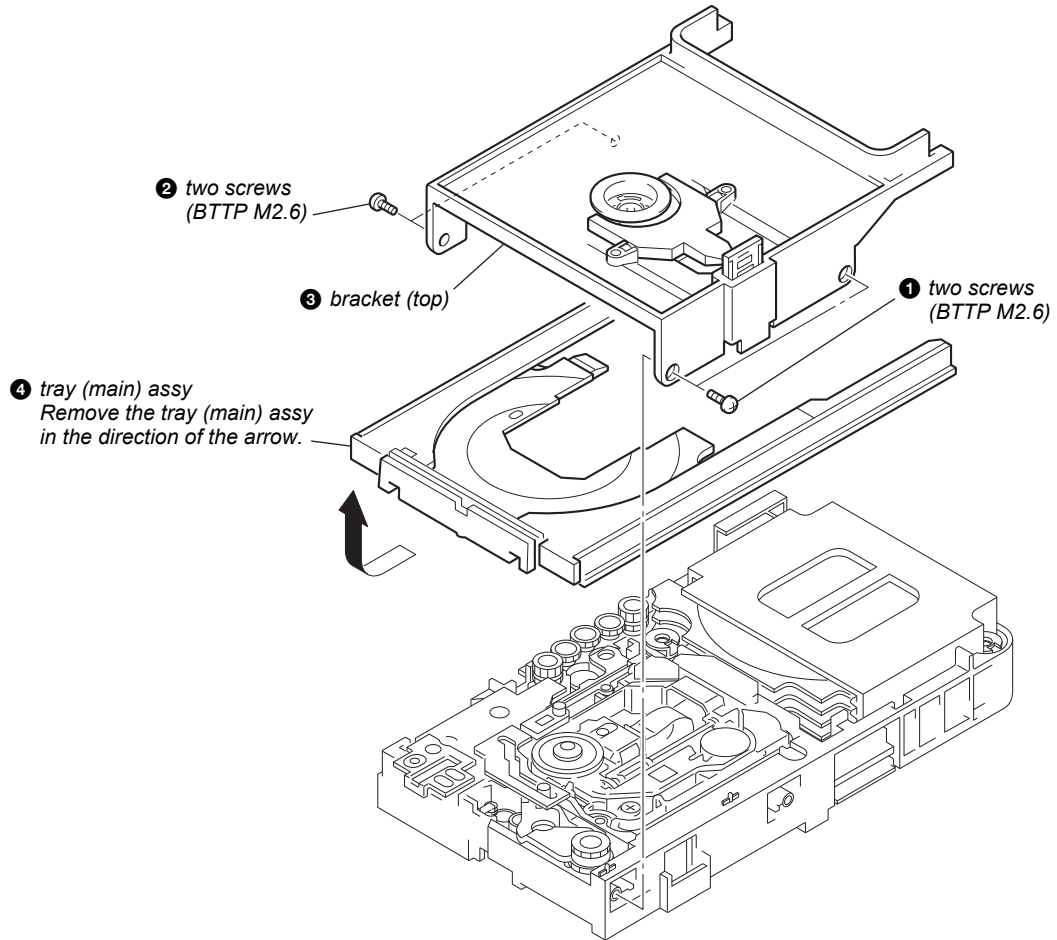


3-11. MOTOR BOARD

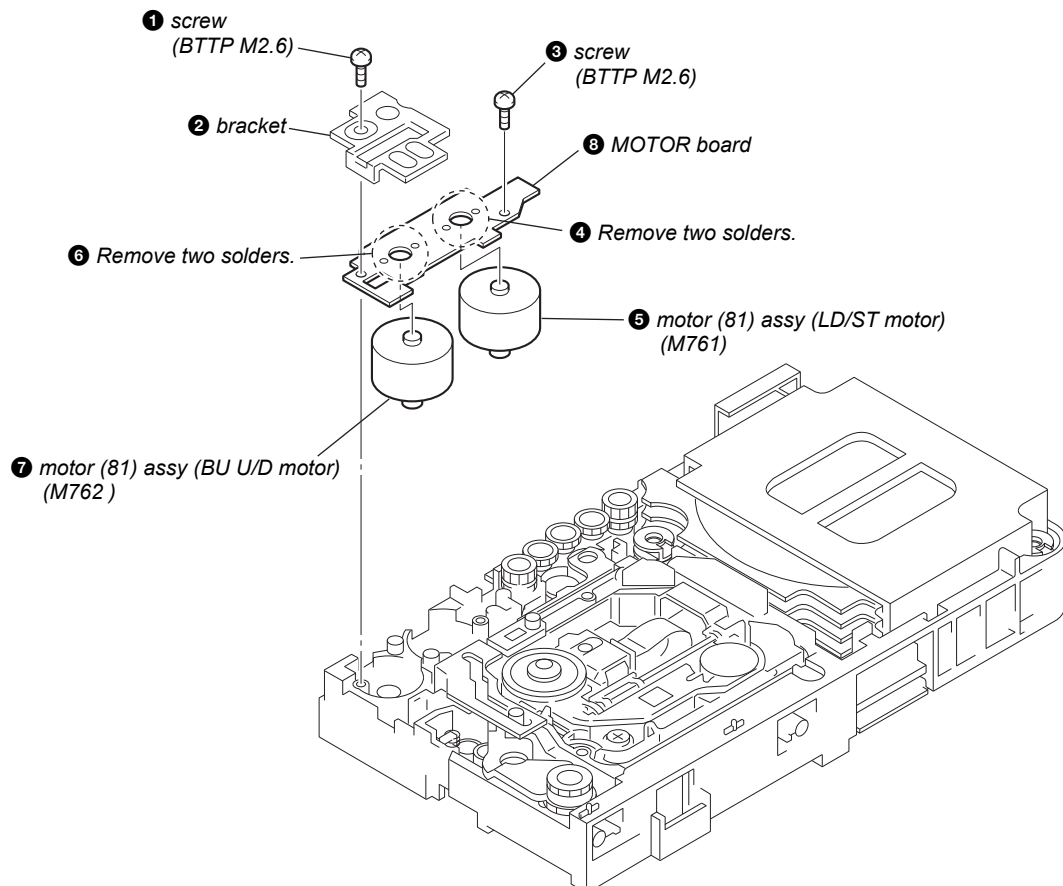

3-12. OPTICAL PICK-UP SECTION

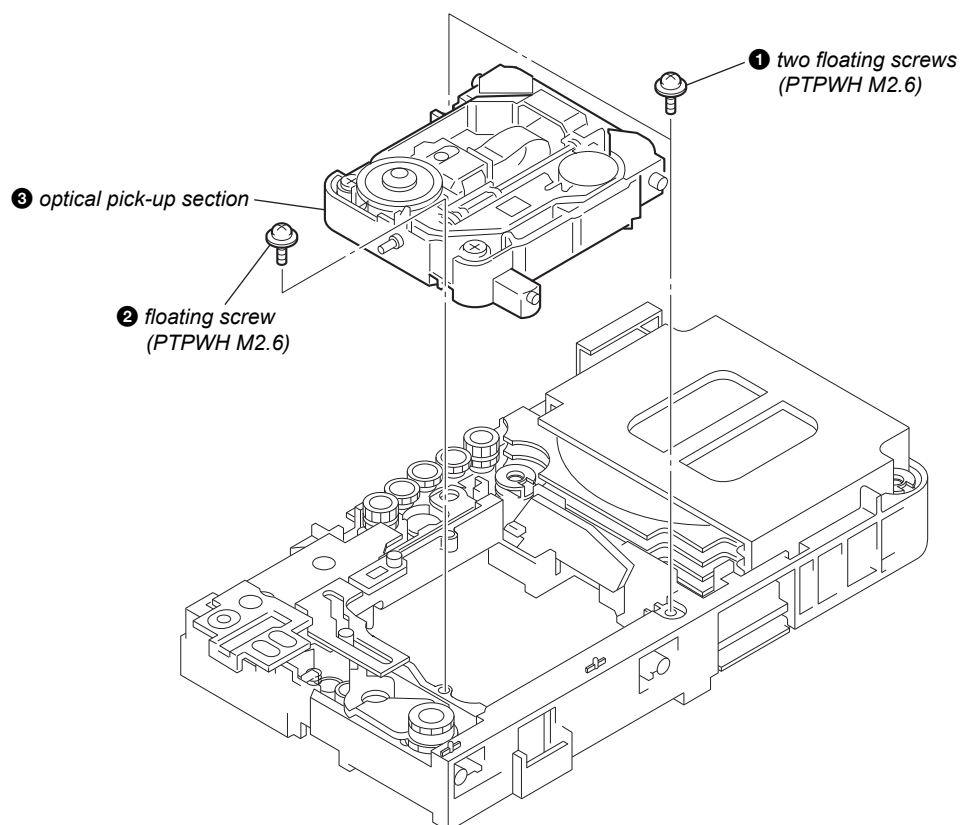



3-13. OPTICAL PICK-UP BLOCK (KHM-310CAB OR KHM-313CAB)

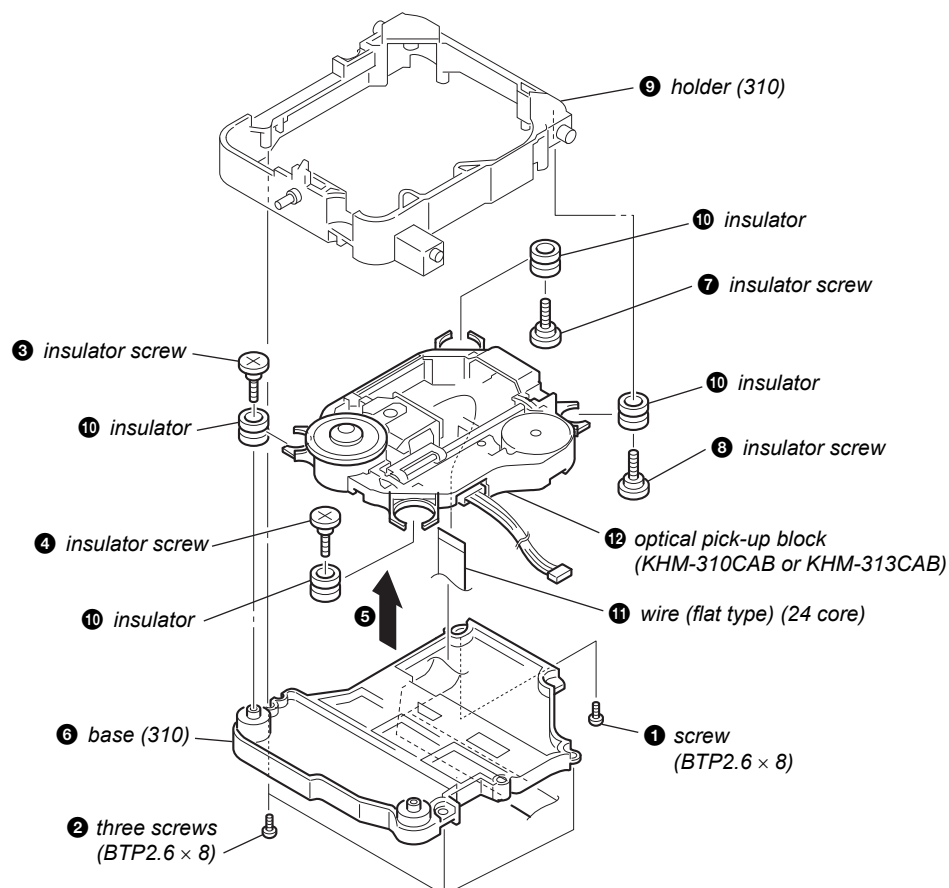

3-14. GEAR (SUB TRAY 1)/GEAR (SUB TRAY 2)


PRECAUTION DURING GEAR (SUB TRAY 1/2) INSTALLATION

Align the marks of the gears as shown in the illustration.

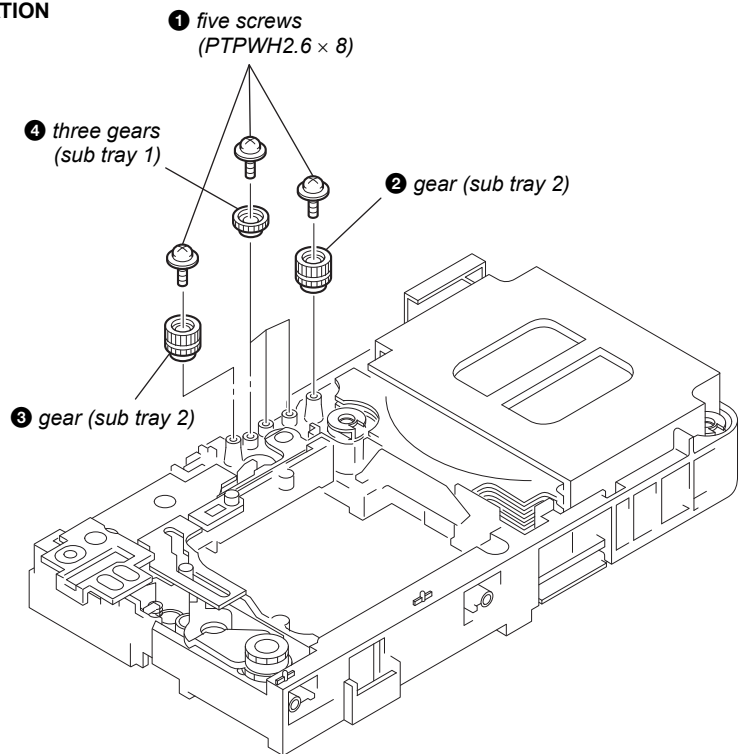
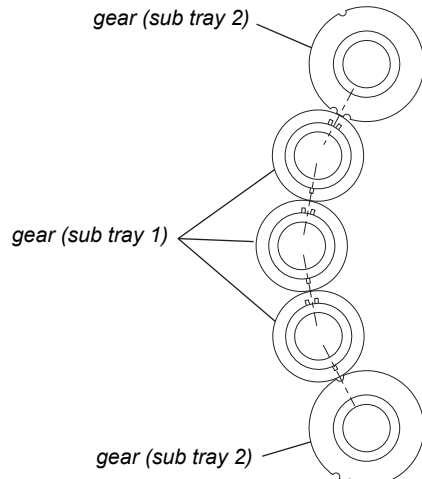


3-15. LEVER (MODE)

Before re-assembling, align the lever (release) and the lever (sub tray) with the lever (mode) as shown in the illustration.

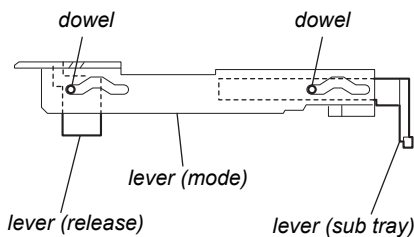


When re-assembling, insert the lever (sub tray) between the bosses of the shutter (tray).

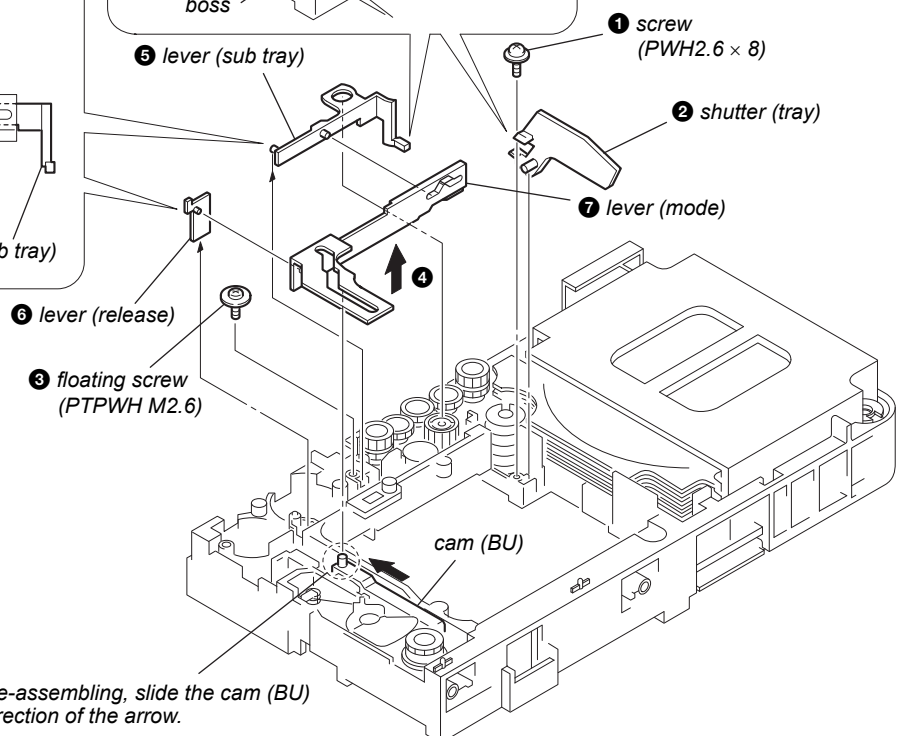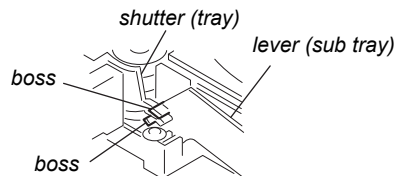

Before re-assembling, slide the cam (BU) in the direction of the arrow.



3-16. STOCKER BLOCK

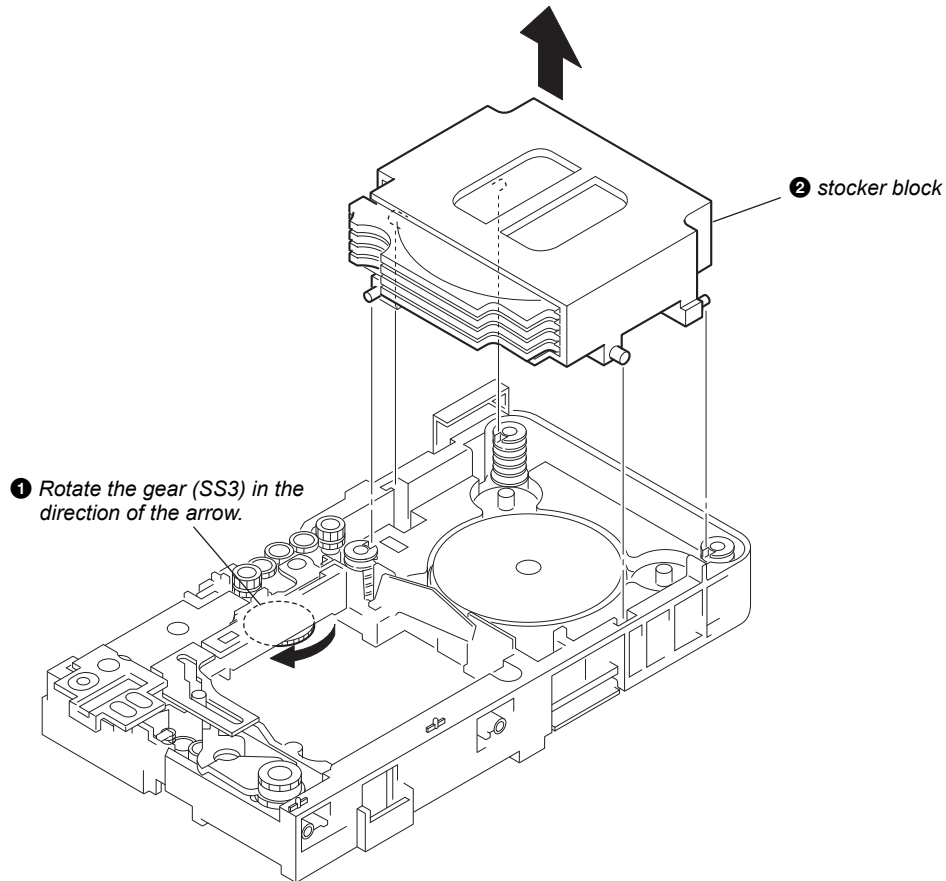


3-17. CAM (STOCKER)

PRECAUTION DURING CAM (STOCKER) INSTALLATION

Before installing the cams (stocker), fix the gear (stocker 3) in the manner so that the hole of the gear (stocker 3) should be aligned with the hole of the chassis located beneath the gear (stocker 3). Be sure to install the cams (stocker) in such a way that the grooves of the cams (stocker) face the direction of the arrows.

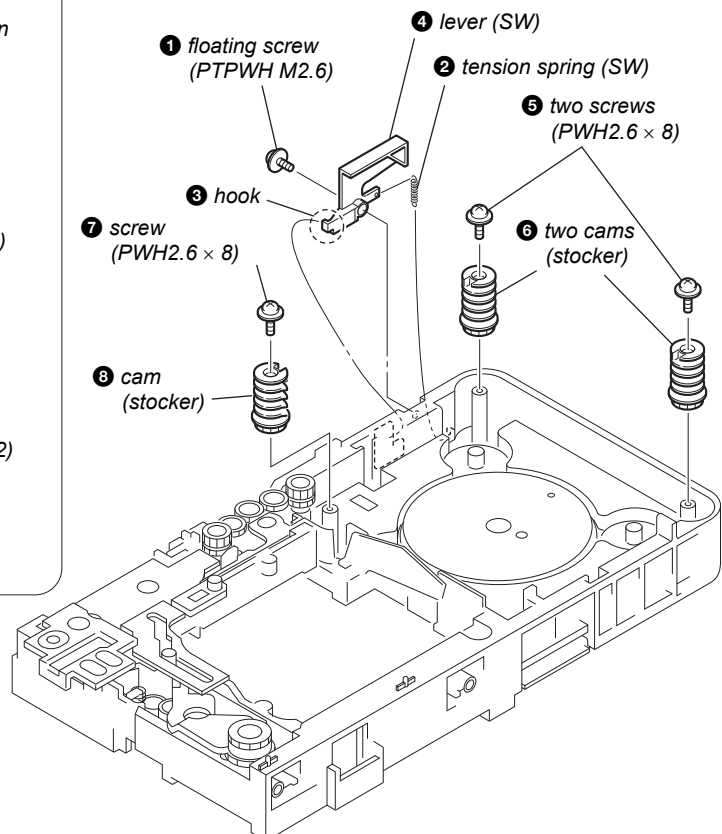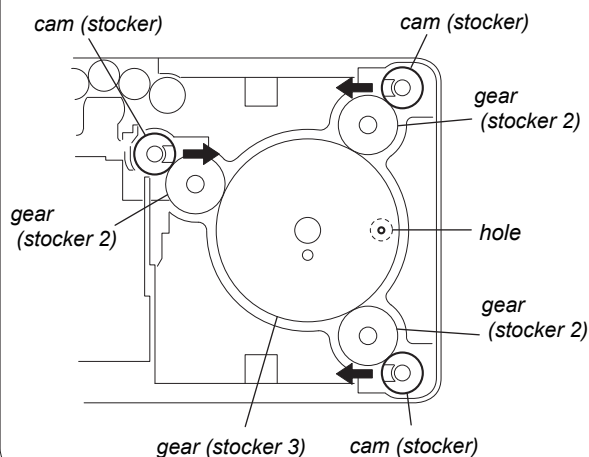


3-18. GEAR (STOCKER 3)

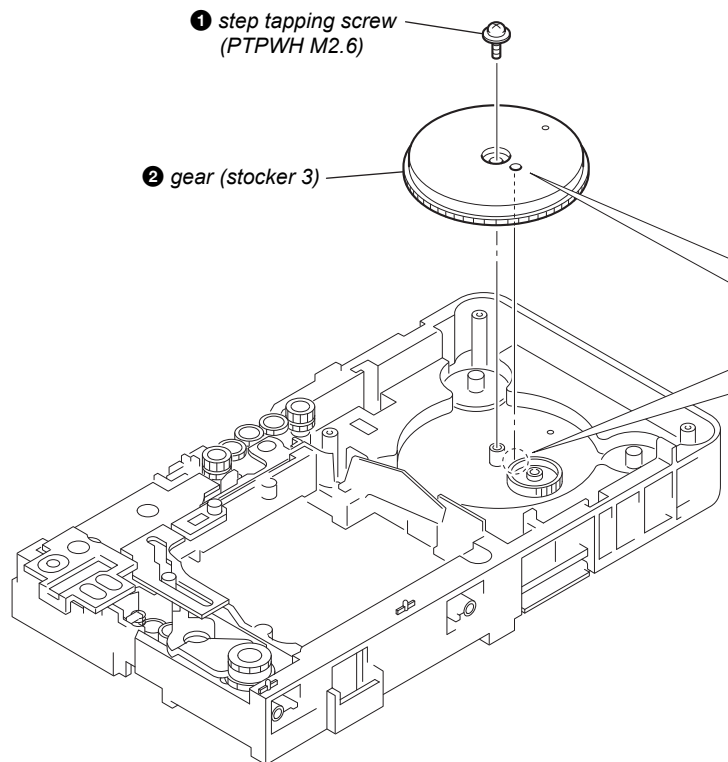

PRECAUTION DURING GEAR (STOCKER 3) INSTALLATION



Be sure to align the rib of the gear (stocker 3) with the groove of the rotary encoder.

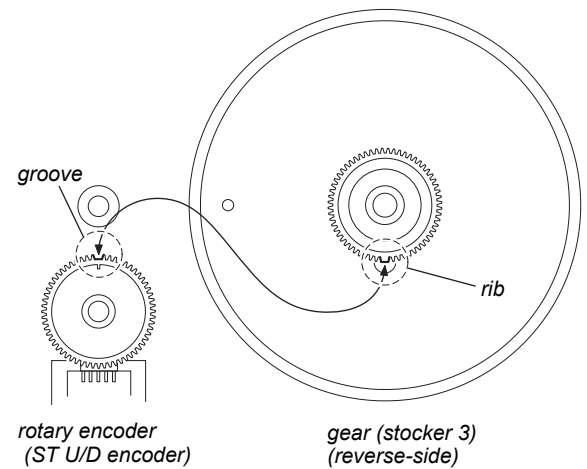

3-19. ROTARY ENCODER (MD) (S771)

PRECAUTION DURING ROTARY ENCODER (MD) INSTALLATION

Slide the cam (BU) in the direction of the arrow so that the mark of the gear (BU1) can be seen. Engage the gears while aligning the mark of the gear (BU1) with the protruding part of the rotary encoder.

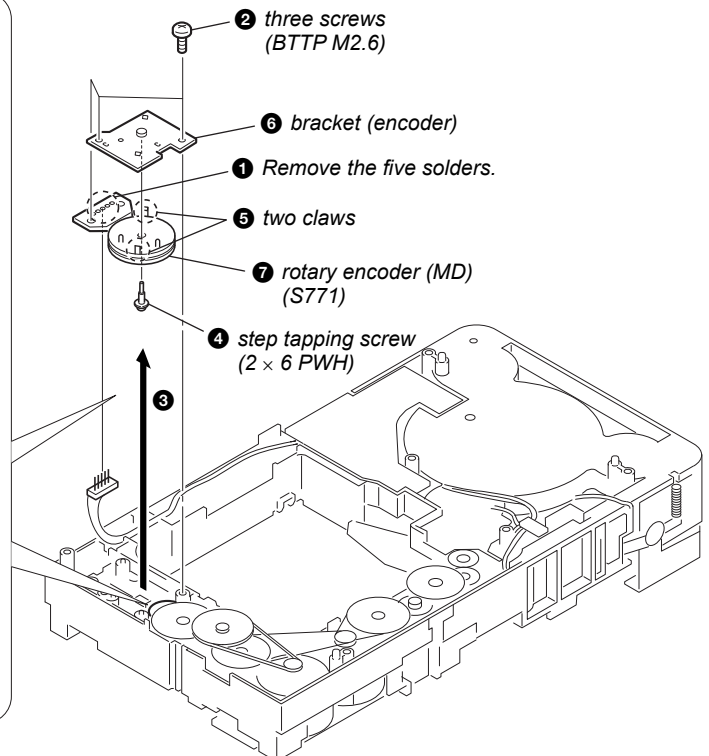
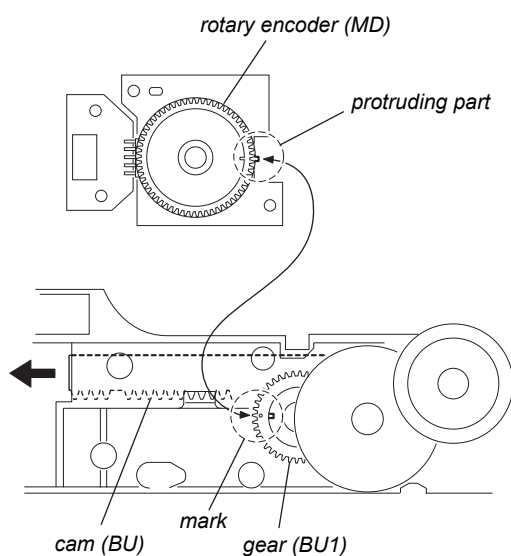


– CD mechanism deck bottom view –

3-20. GEAR (BU1)

PRECAUTION DURING GEAR (BU2) INSTALLATION

Before re-assembling, slide the cam (BU) in the direction of the arrow.
Assemble the gear (BU2) in such a manner that the groove of the cam (BU) is aligned with the rib of the gear (BU2).

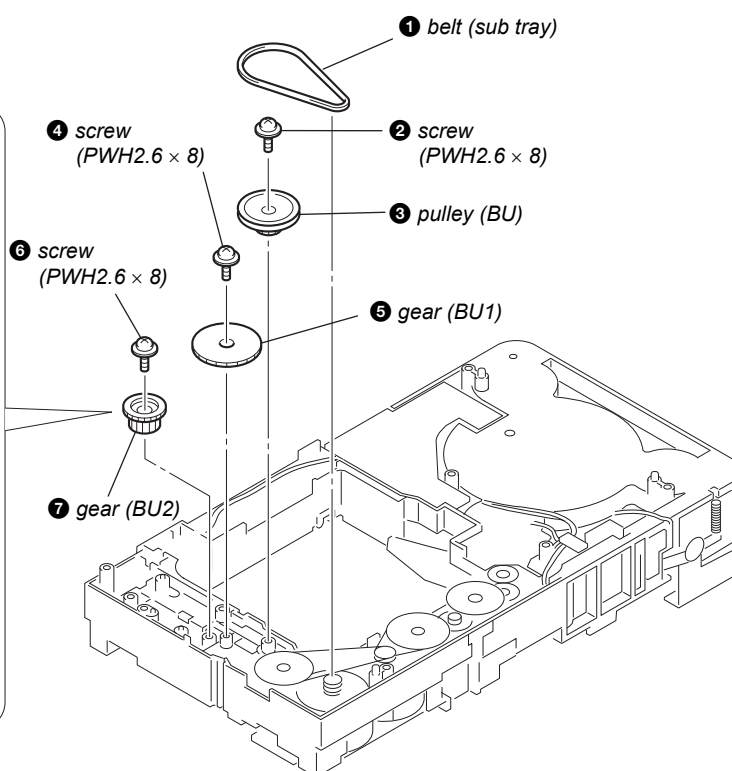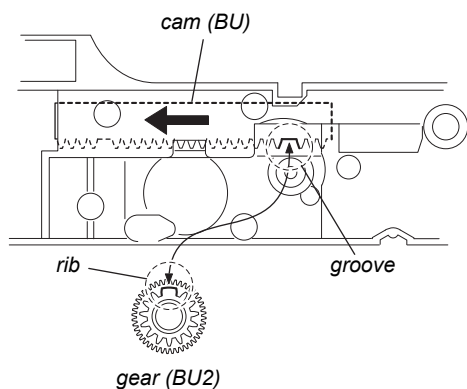

– CD mechanism deck bottom view –

SECTION 4

TEST MODE

Note: Incorrect operations may be performed if the test mode is not entered properly. In this case, press the [I/⏻] button to turn the power off, and retry to enter the test mode.

COLD RESET

The cold reset clears all data including preset data stored in the RAM to initial conditions. Execute this mode when returning the set to the customers.

Procedure:

1. Press the [I/⏻] button to turn the power on.
2. Press three buttons [□], [△] and [I/⏻] simultaneously.
3. When this button is operated, display as “COLD RESET” for a while and all of the settings are reset.

PANEL TEST MODE

This mode is used to check the software version, FL, LED and KEY.

1. Display Test Mode

Procedure:

1. Press the [I/⏻] button to turn the power on.
2. Press three buttons [□], [◀◀] and [△] simultaneously.
3. When the display test mode is activated, all segments are turned on.
4. To exit from this mode, press three buttons [□], [◀◀] and [△] simultaneously.

2. Version Test Mode

Procedure:

1. When the display test mode is activated, press the [◀◀] button and “DCR2” is displayed, the version test mode is activated.
2. Whenever the [◀◀] button is pressed, the display changes in order of “DCR2” (model name) → “NA” (destination) → MC → SYS → UI → DVD → CDMA → CDMB → ST → TA → DSP → TM → CLA → CEC → SAIR → “DCR2” (model name).

Note: Model name/destination is different according to model.

3. Press the [▶▶] button and the date of the software production is displayed.
4. Press the [▶▶] button again and the version is displayed.
5. To exit from this mode, press three buttons [□], [◀◀] and [△] simultaneously.

3. Key Test Mode

Procedure:

1. When the display test mode is activated, press the [▶] button, to select the key test mode.
2. To enter the KEY test mode, the fluorescent indicator displays “K0 V0”. Each time an another button is pressed, “KEY” value increases. However, once a button is pressed, it is no longer taken into account. When all keys are pressed correctly, “K13 V0” is displayed.
3. When the [VOLUME] dial is turned in the direction of (+), “V0” is changed to “V1”, then ... “V9”.
When the [VOLUME] dial is turned in the direction of (–), “V0” is changed to “V9”, then ... “V1”.
4. To exit from this mode, press three buttons [□], [◀◀] and [△] simultaneously.

DISC TRAY LOCK

The disc tray lock function for the antitheft of an demonstration disc in the store is equipped.

Setting Procedure:

1. Press the [I/⏻] button to turn the set on.
2. Press the [FUNCTION] button to set DVD function.
3. Insert a disc.
4. Press the [□] button and the [△] button simultaneously for five seconds.
5. The message “LOCKED” is displayed and the tray is locked.

Releasing Procedure:

1. Press the [□] button and the [△] button simultaneously for five seconds again.
2. The message “UNLOCKED” is displayed and the tray is unlocked.

Note: When “LOCKED” is displayed, the tray lock is not released by turning power on/off with the [I/⏻] button.

DVD SHIP MODE

Use this mode when returning the set to the customer after repair.

Procedure:

1. Press the [I/⏻] button to turn the set on.
2. Press the [FUNCTION] button to set the function “DVD”.
3. Remove all discs, and then press two buttons [▶] and [I/⏻] simultaneously.
4. After a message “MECHA LOCK” ⇔ “UNPLAG” is displayed on the fluorescent indicator tube, pull out the AC plug.
5. To exit from this mode, press the [I/⏻] button to turn the set on.

AM STEP CHANGE

A step of AM channels can be changed over between 9 kHz and 10 kHz.

Procedure:

1. Press the [I/⏻] button to turn the set ON.
2. Press the [FUNCTION] button to set the function “TUNER AM”.
3. Press the [I/⏻] button to turn the set OFF.
4. Press two buttons [▶▶] and [I/⏻] simultaneously, and the display of fluorescent indicator tube changes to “AM 9k STEP” or “AM 10k STEP”, and thus the channel step is changed over.

PRODUCT OUT


This mode moves the optical pick-up to the position durable to vibration and clears all data including preset data stored in the RAM to initial conditions. Use this mode when returning the set to the customer after repair.

Procedure:

1. Press the [I/⏻] button to turn the power on.
2. Press the [FUNCTION] button to set the function “DVD”.
3. Remove all discs, and then press three buttons [▶▶], [△] and [I/⏻] simultaneously.
4. After the “STANDBY” blinking display finishes, the message “MECHA LOCK” ⇔ “UNPLAG” is displayed on the fluorescent indicator tube disconnect the AC power plug, then the ship mode is set.

AUTOMATIC ACOUSTIC FIELD CALIBRATION MICROPHONE TEST MODE**Procedure:**

1. Press the [I/⏻] button to turn the power on.
2. Insert ECM-AC2 supplied as an accessory into the AUDIO IN/A.CAL MIC jack.
3. While pressing the [00] and [△] buttons simultaneously, turn the [VOLUME] dial in the direction of (+).
4. Confirm that the following are shown on the display panel.
 - ① The JACK inserted/non-inserted detection display and the STEREO/MONO detection display.
 - ② Presence of DIGITAL voice input to the microcomputer. (OK: input, NG: no input)
 - ③ The value of the MIC input to the microcomputer. (shown "255h")

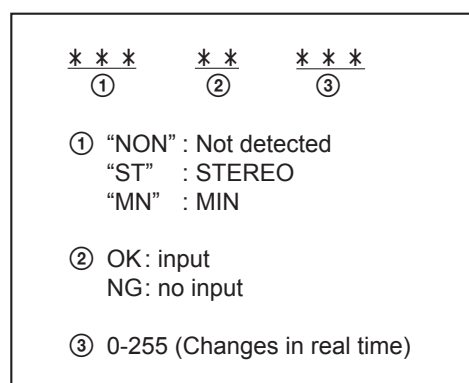

5. To exit this mode, press two buttons [00] and [△] simultaneously, turn the [VOLUME] dial in the direction of (+).

DEMO PLAY OUT

It is a mode to release the demonstration reproduct by the dedicated demonstration disc.

Procedure:

1. During playback the DEMO disc, press the [□] and [▷] buttons for five seconds simultaneously.
2. The message "DEMO OFF" is displayed, a mode to reproduct the demonstration is released.

VOLUME TEST MODE**Procedure:**

1. Press the [I/⏻] button to turn the power on.
2. Press three buttons [◀◀], [▷] and [▶▶] simultaneously.
3. The message "VOLUME MAX" is displayed, when the [VOLUME] dial is turned in the direction of (+).
The message "VOLUME MIN" is displayed, when the [VOLUME] dial is turned in the direction of (-).
4. To exit from this mode, press the [I/⏻] button to turn the set off.

PROTECTION FACTOR (SD DETECTION/DC DETECTION) IDENTIFICATION TEST MODE

When an error is detected, the florescent indicator tube alternately displays

"PROTECTOR" ⇔ "PUSH POWER".

↓ Press the [I/⏻] button.
* Buttons other than the [I/⏻] button are invalid.
"STANDBY" blinks three times on the florescent indicator tube.

↓
The protection release state (POWER OFF) is established.
(No florescent indicator tube display)

↓ Press the [I/⏻] button twice.
The power to the system turns on, and the normal operation is established. (Restore)

During the protection state:

1. If the AC plug is connected or disconnected during the protection state, the protection state is released, and the normal operation is established. (The protection state is not maintained)
2. The protection factor is displayed by pressing the [FUNCTION], [△] and [▶▶] buttons at the same time during the protection state. (during the "PROTECTOR" ⇔ "PUSH POWER" display)
 - When SD is detected: Repeats
"SD DETECT" ⇔ "PROTECTOR".
 - When DC is detected: Repeats
"DC DETECT" ⇔ "PROTECTOR".

SD detection:

When the "L" output from the SD (shutdown) port on the S-MASTER POWER Driver Shutdown and voltage descent (15V or less) of 30V power supply (PVDD) are detected.


DC detection:

When the "L" output from the power/speaker error detection circuit (DC detection port) is detected for two seconds continually, the power system other than that of the florescent indicator tube is turned off, and the protection state is established.

DIGITAL MEDIA PORT TEST

Procedure:

1. Connect the DMPORT CHECK JIG (Part No.: J-2501-309-A) with the terminal DMPORT.
2. Press the [I/⏻] button to turn the power on.
3. Confirm that both LEDs of the DMPORT confirmation JIG lights. (Confirmation the power supply line.)
4. Set the [FUNCTION] button with "DMPORT" on this model.
5. Press the [00], [◀◀] buttons and turn the [VOLUME] control in the direction of (+) simultaneously, the DMPORT test mode is activated.
6. It is confirmed that "DMPORT OK" is displayed on this set display. (Confirmation of communication line)
7. To a pinjack of the DMPORT confirmation JIG input information relevant to audio signal (sine-wave 1.0Vrms) and composite video signal (white 100% 1.0 Vp-p, color bar, etc.)
8. Confirm the output of speakers and monitor TV. (Confirmation of analog signal)
9. To exit from this mode, press the [00], [◀◀] buttons and turn the [VOLUME] control in the direction of (+).

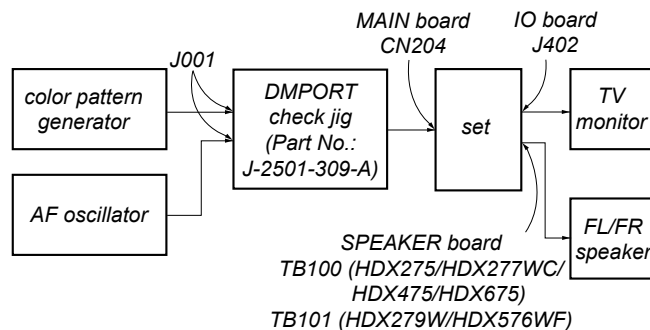

DVD SECTION


1. DVD SERVICE MODE GENERAL DESCRIPTION

This mode let you make diagnosis and adjustment easily by using the remote commander and the TV screen. The instructions, diagnostic results, etc. are given on the on-screen display. Be sure to execute the IOP measurement when a base unit is replaced.

2. ENTERING DVD SERVICE MODE

Procedure:

1. Press the [I/⏻] button to turn on the system.
2. Press the [FUNCTION] button repeatedly to select the "DVD".
3. While pressing the [□] and [≡] buttons simultaneously, turn [VOLUME] dial in the direction of (+) with the DVD player in power on.
4. The message "SERVICE IN" appears on the fluorescent indicator tube and top menu of the Remocon Diagnosis Menu appears on the on-screen display on the TV screen as follows. The model name, IF-con version and Syscon version are displayed at the bottom of the on-screen display.

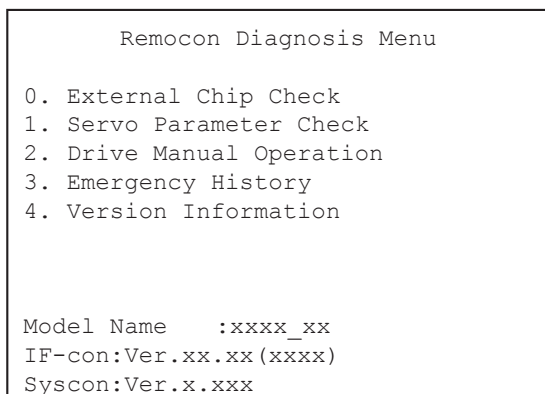


5. To execute each function, press its number by using numeric button on the remote commander.
6. To release from this mode, press the [I/⏻] button to turn off the system.

3. EXECUTING IOP MEASUREMENT


In order to execute IOP measurement, the following standard procedures must be followed.

Procedure:


1. From the top menu of Remocon Diagnosis Menu, select "2 Drive Manual Operation" by pressing the [2] button on the remote commander. The following screen appears on the on-screen display

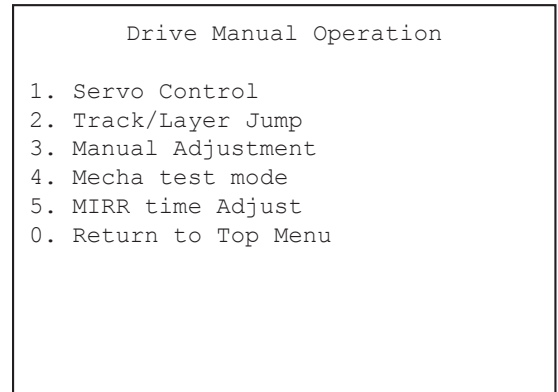

2. Select "3. Manual Adjustment" by pressing the [3] button on the remote commander. The following screen appears on the on-screen display.

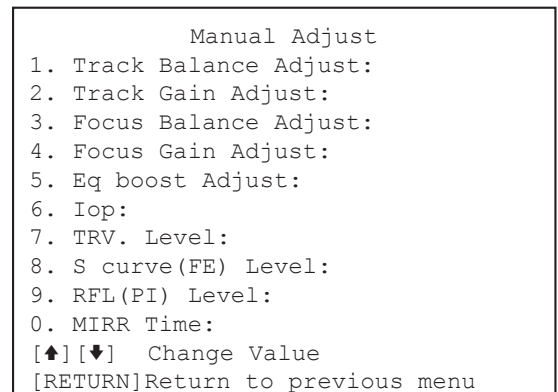

3. Select "6. Iop:" by pressing [6] button on the remote commander.
4. Wait until a hexadecimal number appear in the on-screen display as below.

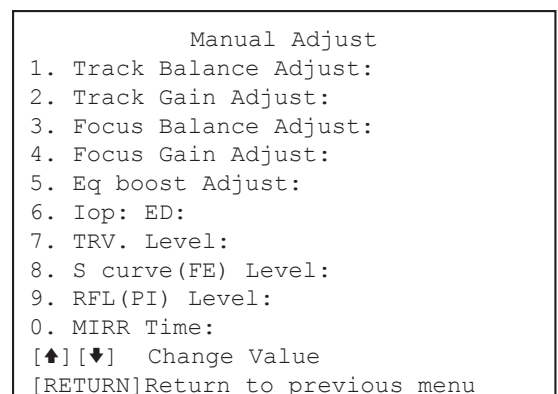

5. Convert data from hexadecimal to decimal by using conversion table.

6. If the value is smaller than 93 (decimal), then it is OK. However if the value is higher than 93, then BU (base unit) is defective and need to be change.
7. Press the [↩️ RETURN] button on the remote commander to return to previous menu.
8. Press the [0] button on the remote commander to return to the top menu of Remocon Diagnosis Menu.
9. Press the [I/O] button to turn off the system.

4. CHECKING EMERGENCY HISTORY

To check the emergency history, please follow the following procedure.

Procedure:

1. From the top menu of Remocon Diagnosis Menu, select “3. Emergency History” by pressing the [3] button on the remote commander. The following screen appears on the on-screen display.

Emg. History Check									
Laser		Hours		CD		999h		59min	
				DVD		999h		59min	
01.	01	05	04	04		00	92	46	00
		00	00	00	00	00	00	23	45
02.	02	02	01	01		00	A9	4B	00
		00	00	00	00	00	00	23	45
[Next]Next page [Prev]Prev page									
[0]Return to Top Menu									

2. You can check the total time when the laser is turned on during playback of DVD and CD from the above menu. The maximum time, which can be displayed are 999h 59min.
3. You can check the error code of latest 10 emergency history from the above menu. To view the previous or next page of emergency history, press the [◀◀] or [▶▶] button on the remote commander. The error code consists of three kinds of error codes.

A. Error code

Example of Error code									
01.	01	05	04	04		00	92	46	00
		00	00	00	00	00	00	23	45

The meaning of error code is as below:

- 01: Communication error (No reply from syscon)
- 02: Syscon hung up
- 03: Power OFF request when syscon hung up
- 19: Thermal shutdown
- 24: MoveSledHome error
- 25: Mechanical move error (5 changer)
- 26: Mechanical move stack error
- 30: DC motor adjustment error
- 31: DPD offset adjustment error
- 32: TE balance adjustment error
- 33: TE sensor adjustment error
- 34: TE loop gain adjustment error
- 35: FE loop gain adjustment error
- 36: Bad jitter after adjustment
- 40: Focus NG
- 42: Focus layer jump NG
- 51: Spindle stop error
- 52: Open kick spindle error

- 60: Focus on error
- 61: Seek fail error
- 62: Read Q data/ID error
- 70: Lead in data read fail
- 71: TOC read time out (CD)
- 80: Can't buffering
- 81: Unknown media type

B. Parameter of error code

This is the detail of error code.

Example of Error code									
01.	01	05	04	04		00	92	46	00
		00	00	00	00	00	00	23	45

C. Time of error code

This is the laser time when an error occurred.

Example of Error code									
01.	01	05	04	04		00	92	46	00
		00	00	00	00	00	00	23	45

To Clear the Laser Hour

Press the [DISPLAY] button on the remote commander and then press the [CLEAR] button on the remote commander. The data for both CD and DVD data are reset.

Emg. History Check									
Laser		Hours		CD		0h		0min	
				DVD		0h		0min	
01.	01	05	04	04		00	92	46	00
		00	00	00	00	00	00	23	45
02.	02	02	01	01		00	A9	4B	00
		00	00	00	00	00	00	23	45
[Next]Next page [Prev]Prev page									
[0]Return to Top Menu									

To Clear the Emergency History

Press the [DVD TOP MENU] button on the remote commander and then press the [CLEAR] button on the remote commander. The error code for all emergency history would be reset.

Emg. History Check									
Laser		Hours		CD		999h		59min	
				DVD		999h		59min	
01.	00	00	00	00		00	00	00	00
		00	00	00	00	00	00	00	00
02.	00	00	00	00		00	00	00	00
		00	00	00	00	00	00	00	00
[Next]Next page [Prev]Prev page									
[0]Return to Top Menu									

HCD-HDX275/HDX277WC/HDX279W/HDX475/HDX576WF/HDX675


SECTION 5

ELECTRICAL ADJUSTMENTS

To Execute the Initialize Setup Data

Procedure:

1. Press the [DVD MENU] button on the remote commander and then press the [CLEAR] button on the remote commander. The following screen appears on the on-screen display.

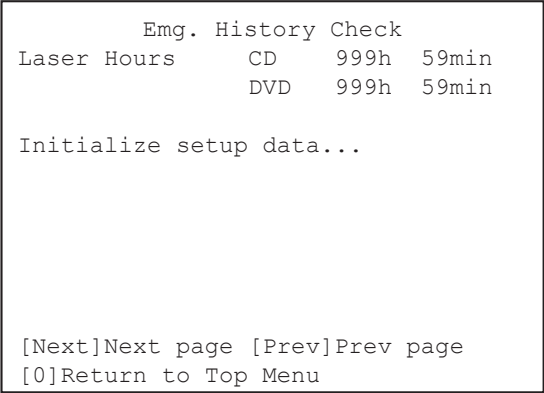

2. The screen after a while returns to former display.


To Return to the Top Menu of Remocon Diagnosis Menu
Press the [0] button on the remote commander.

5. CHECKING VERSION INFORMATION

To check the version information, please follow the following procedure.

Procedure:

1. From the top menu of Remocon Diagnosis Menu, select “4. Version Information” by pressing the [4] button on the remote commander. The following screen appears on the on-screen display.

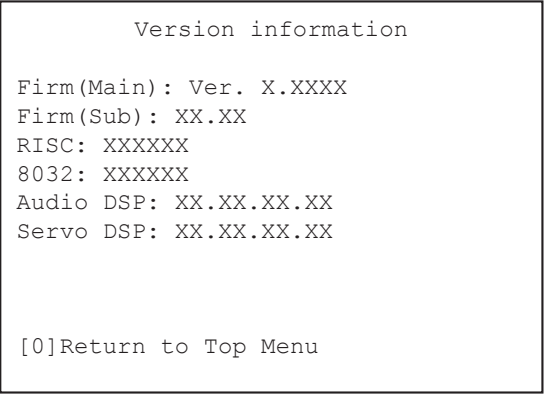

2. To return to the top menu of Remocon Diagnosis Menu, press the [0] on the remote commander.

 
DVD SECTION

When the base unit is replaced, perform the adjustment and the measurement as shown below in this order.

EXECUTING IOP MEASUREMENT (See page 25)

TUNER SECTION

FM TUNE LEVEL CHECK



Procedure:

1. Turn on the set.
2. Input the following signal from signal generator to FM antenna input directly.

Carrier frequency: A = 87.5 MHz, B = 98 MHz, C = 108 MHz
Deviation : 75 kHz
Modulation : 1 kHz
ANT input : 35 dBu (EMF)


Note: Use 75 ohm coaxial cable to connect signal generator and the set.
You cannot use video cable for checking.
Use signal generator whose output impedance is 75 ohm.

3. Set to FM tuner function and tune A, B and C signals.
4. Confirm “TUNED” is lit on the display for A, B and C signals.


When the selected station signal is received in good condition, “TUNED” is displayed.

SECTION 6
DIAGRAMS


6-1. BLOCK DIAGRAM - RF SERVO/VIDEO Section -

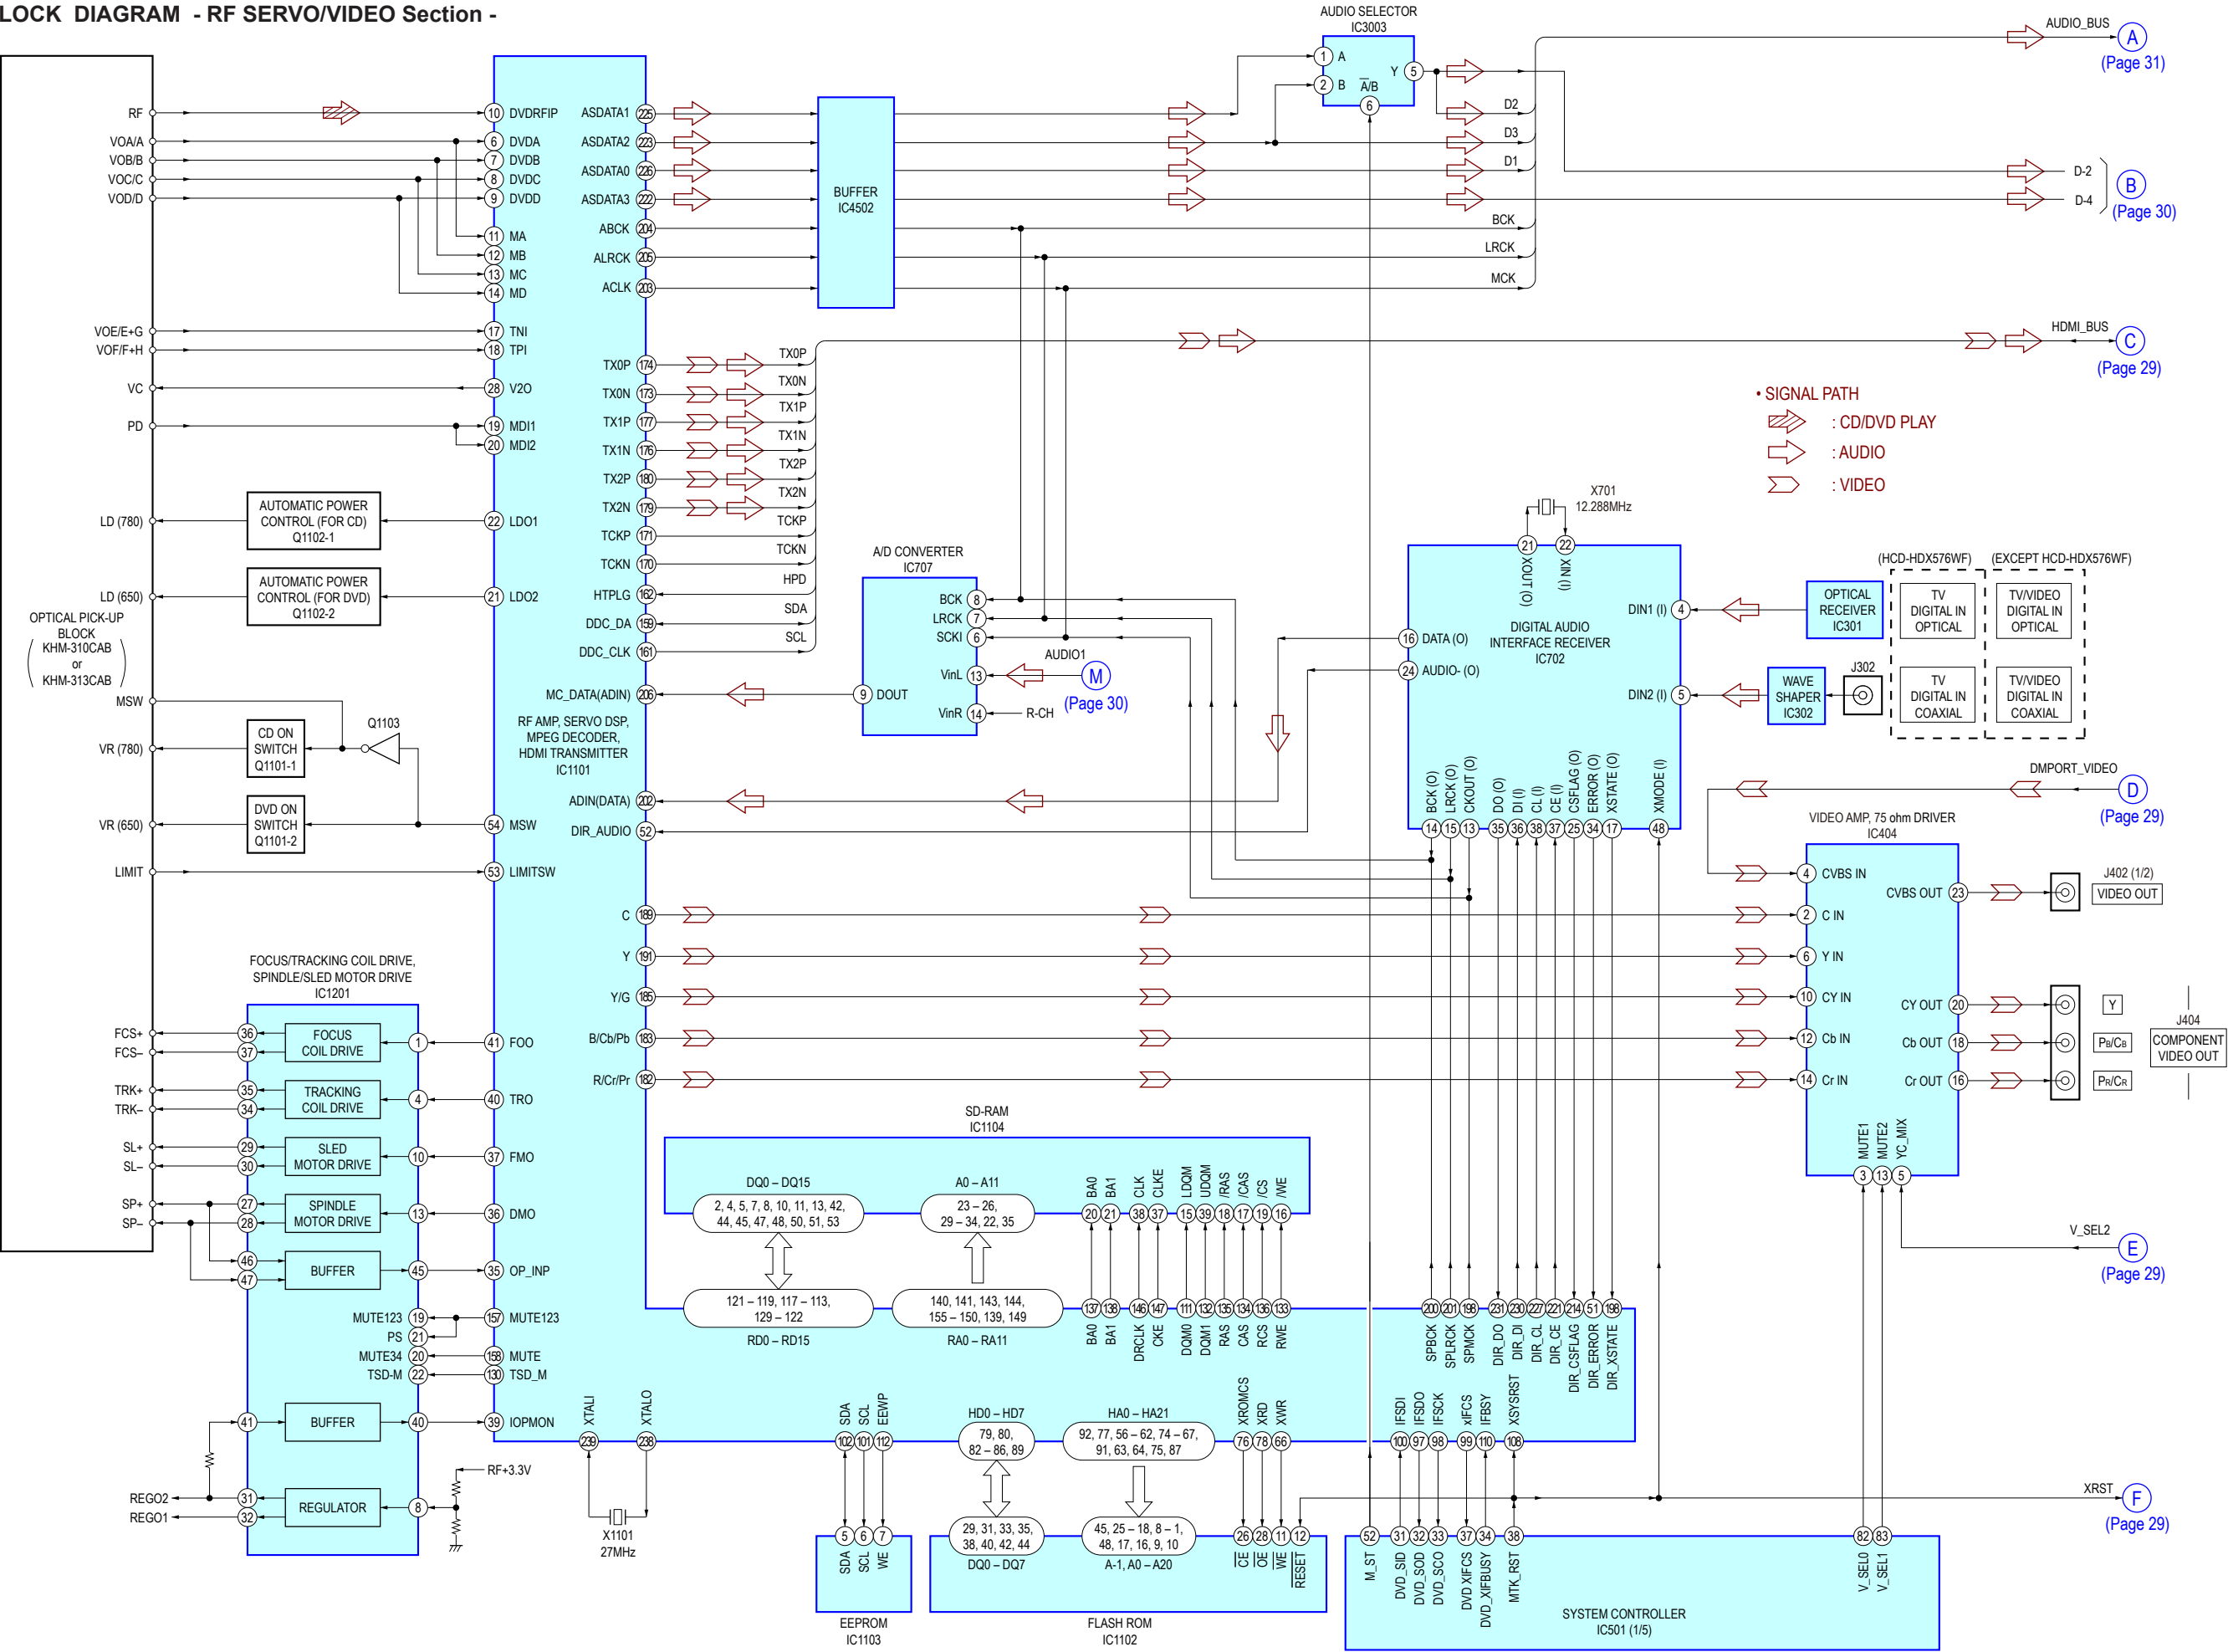


6-2. BLOCK DIAGRAM - CHANGER/HDMI/DMPORT Section -

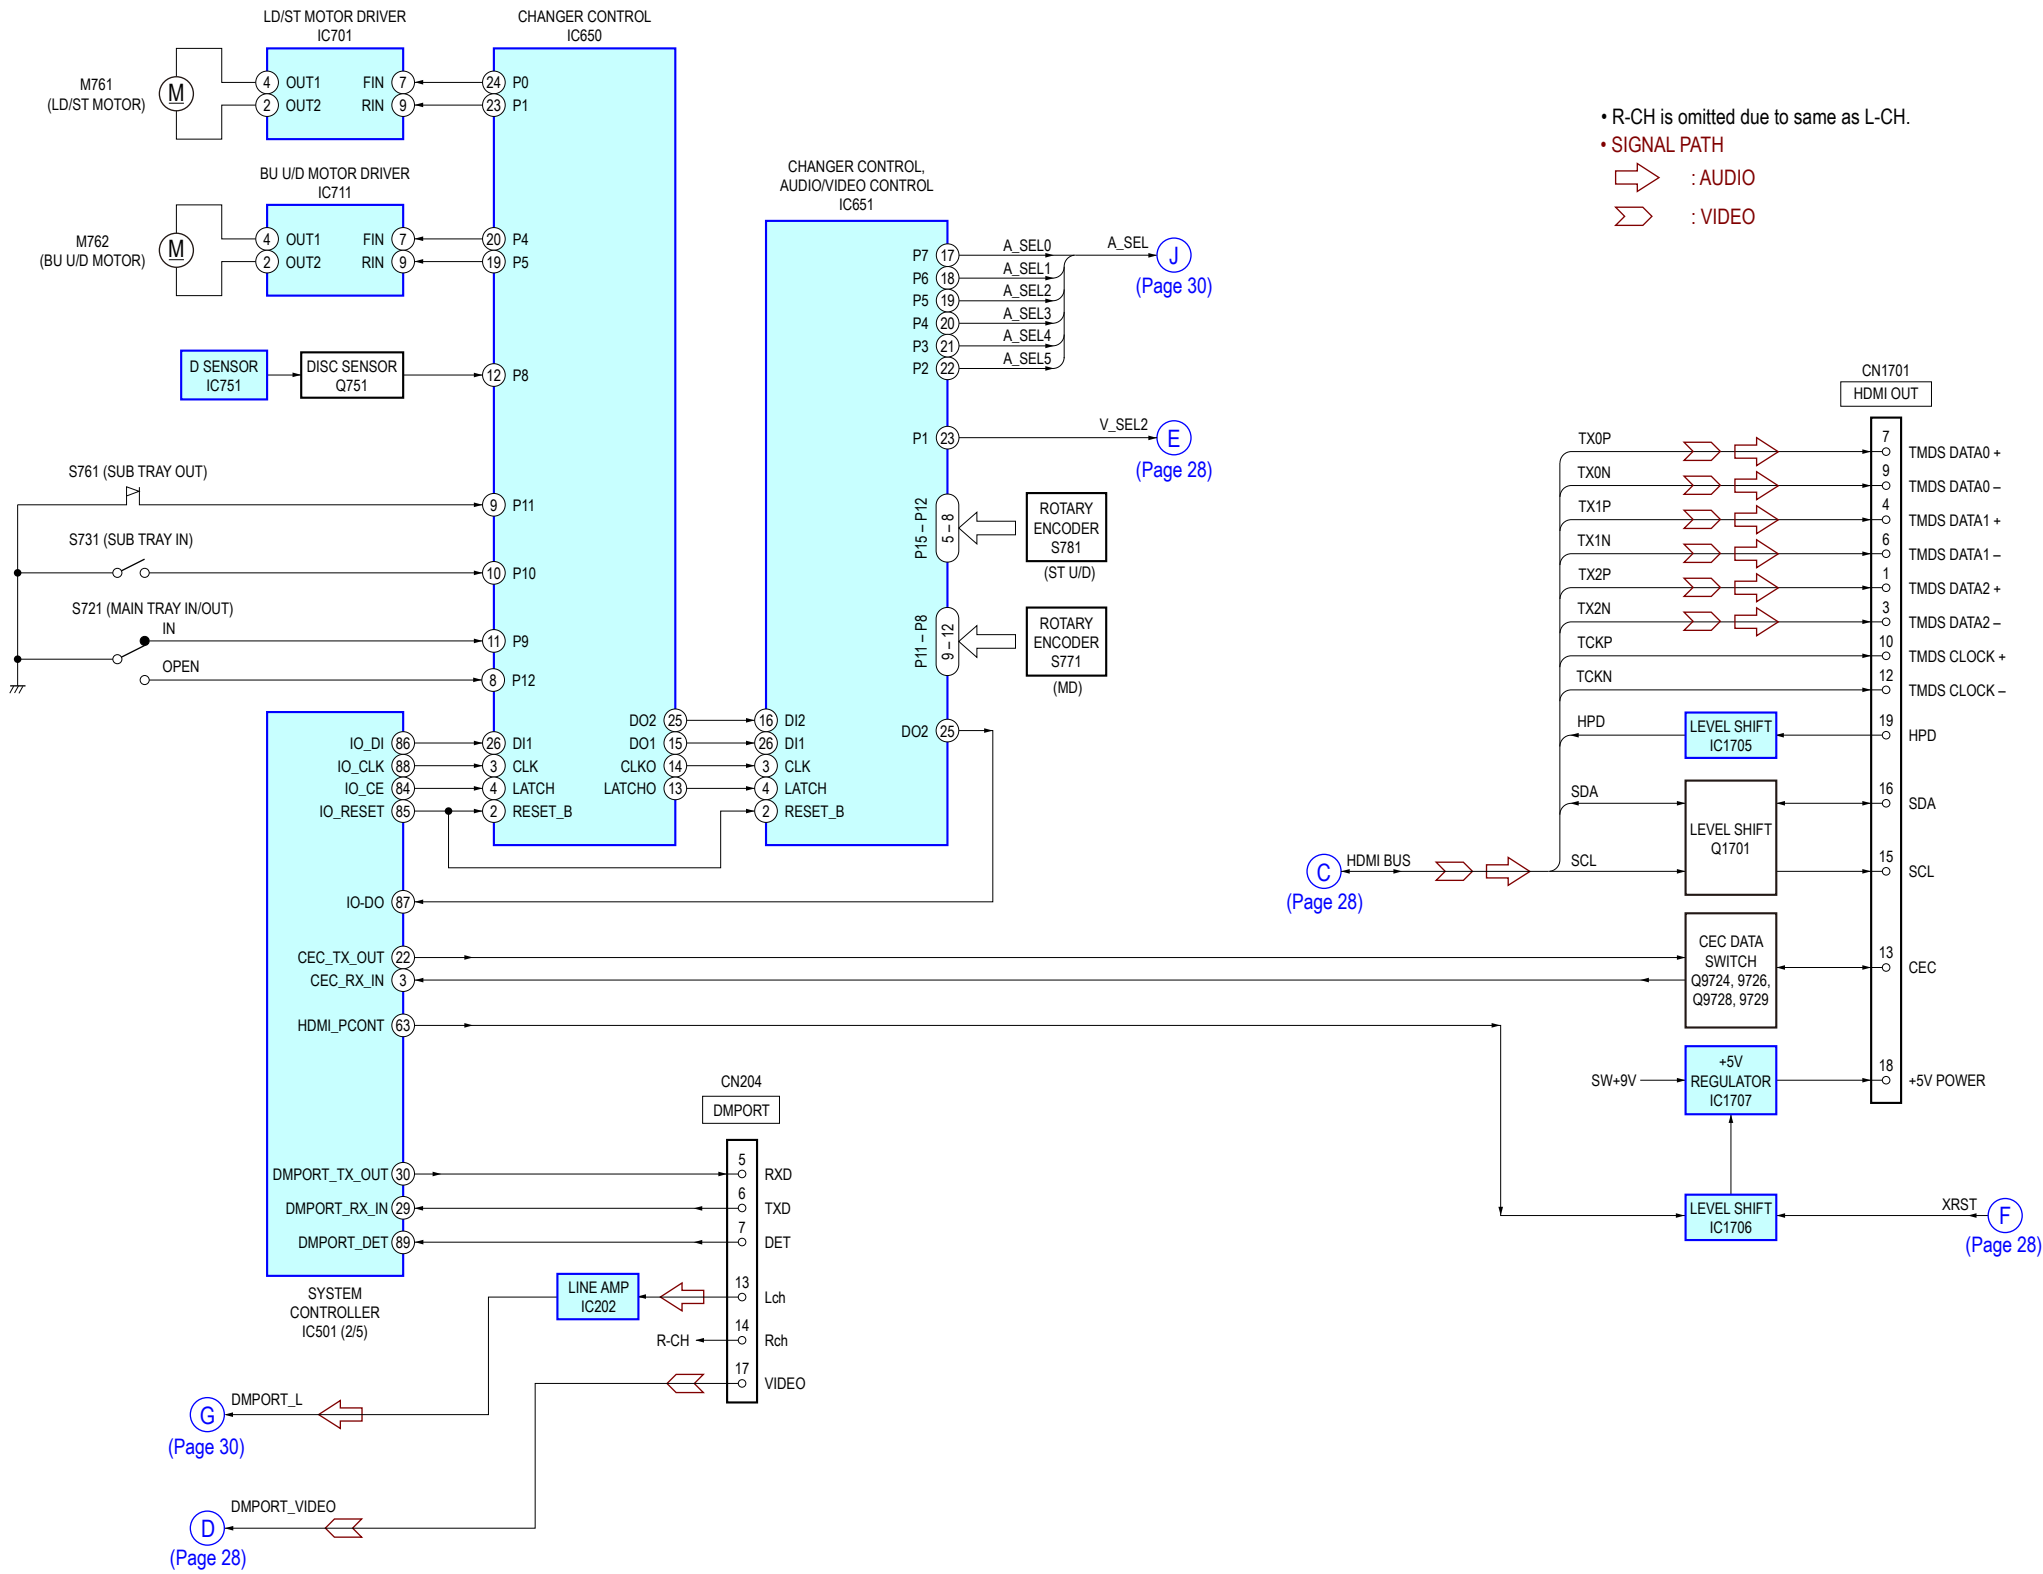


6-3. BLOCK DIAGRAM - TUNER/S-AIR Section -

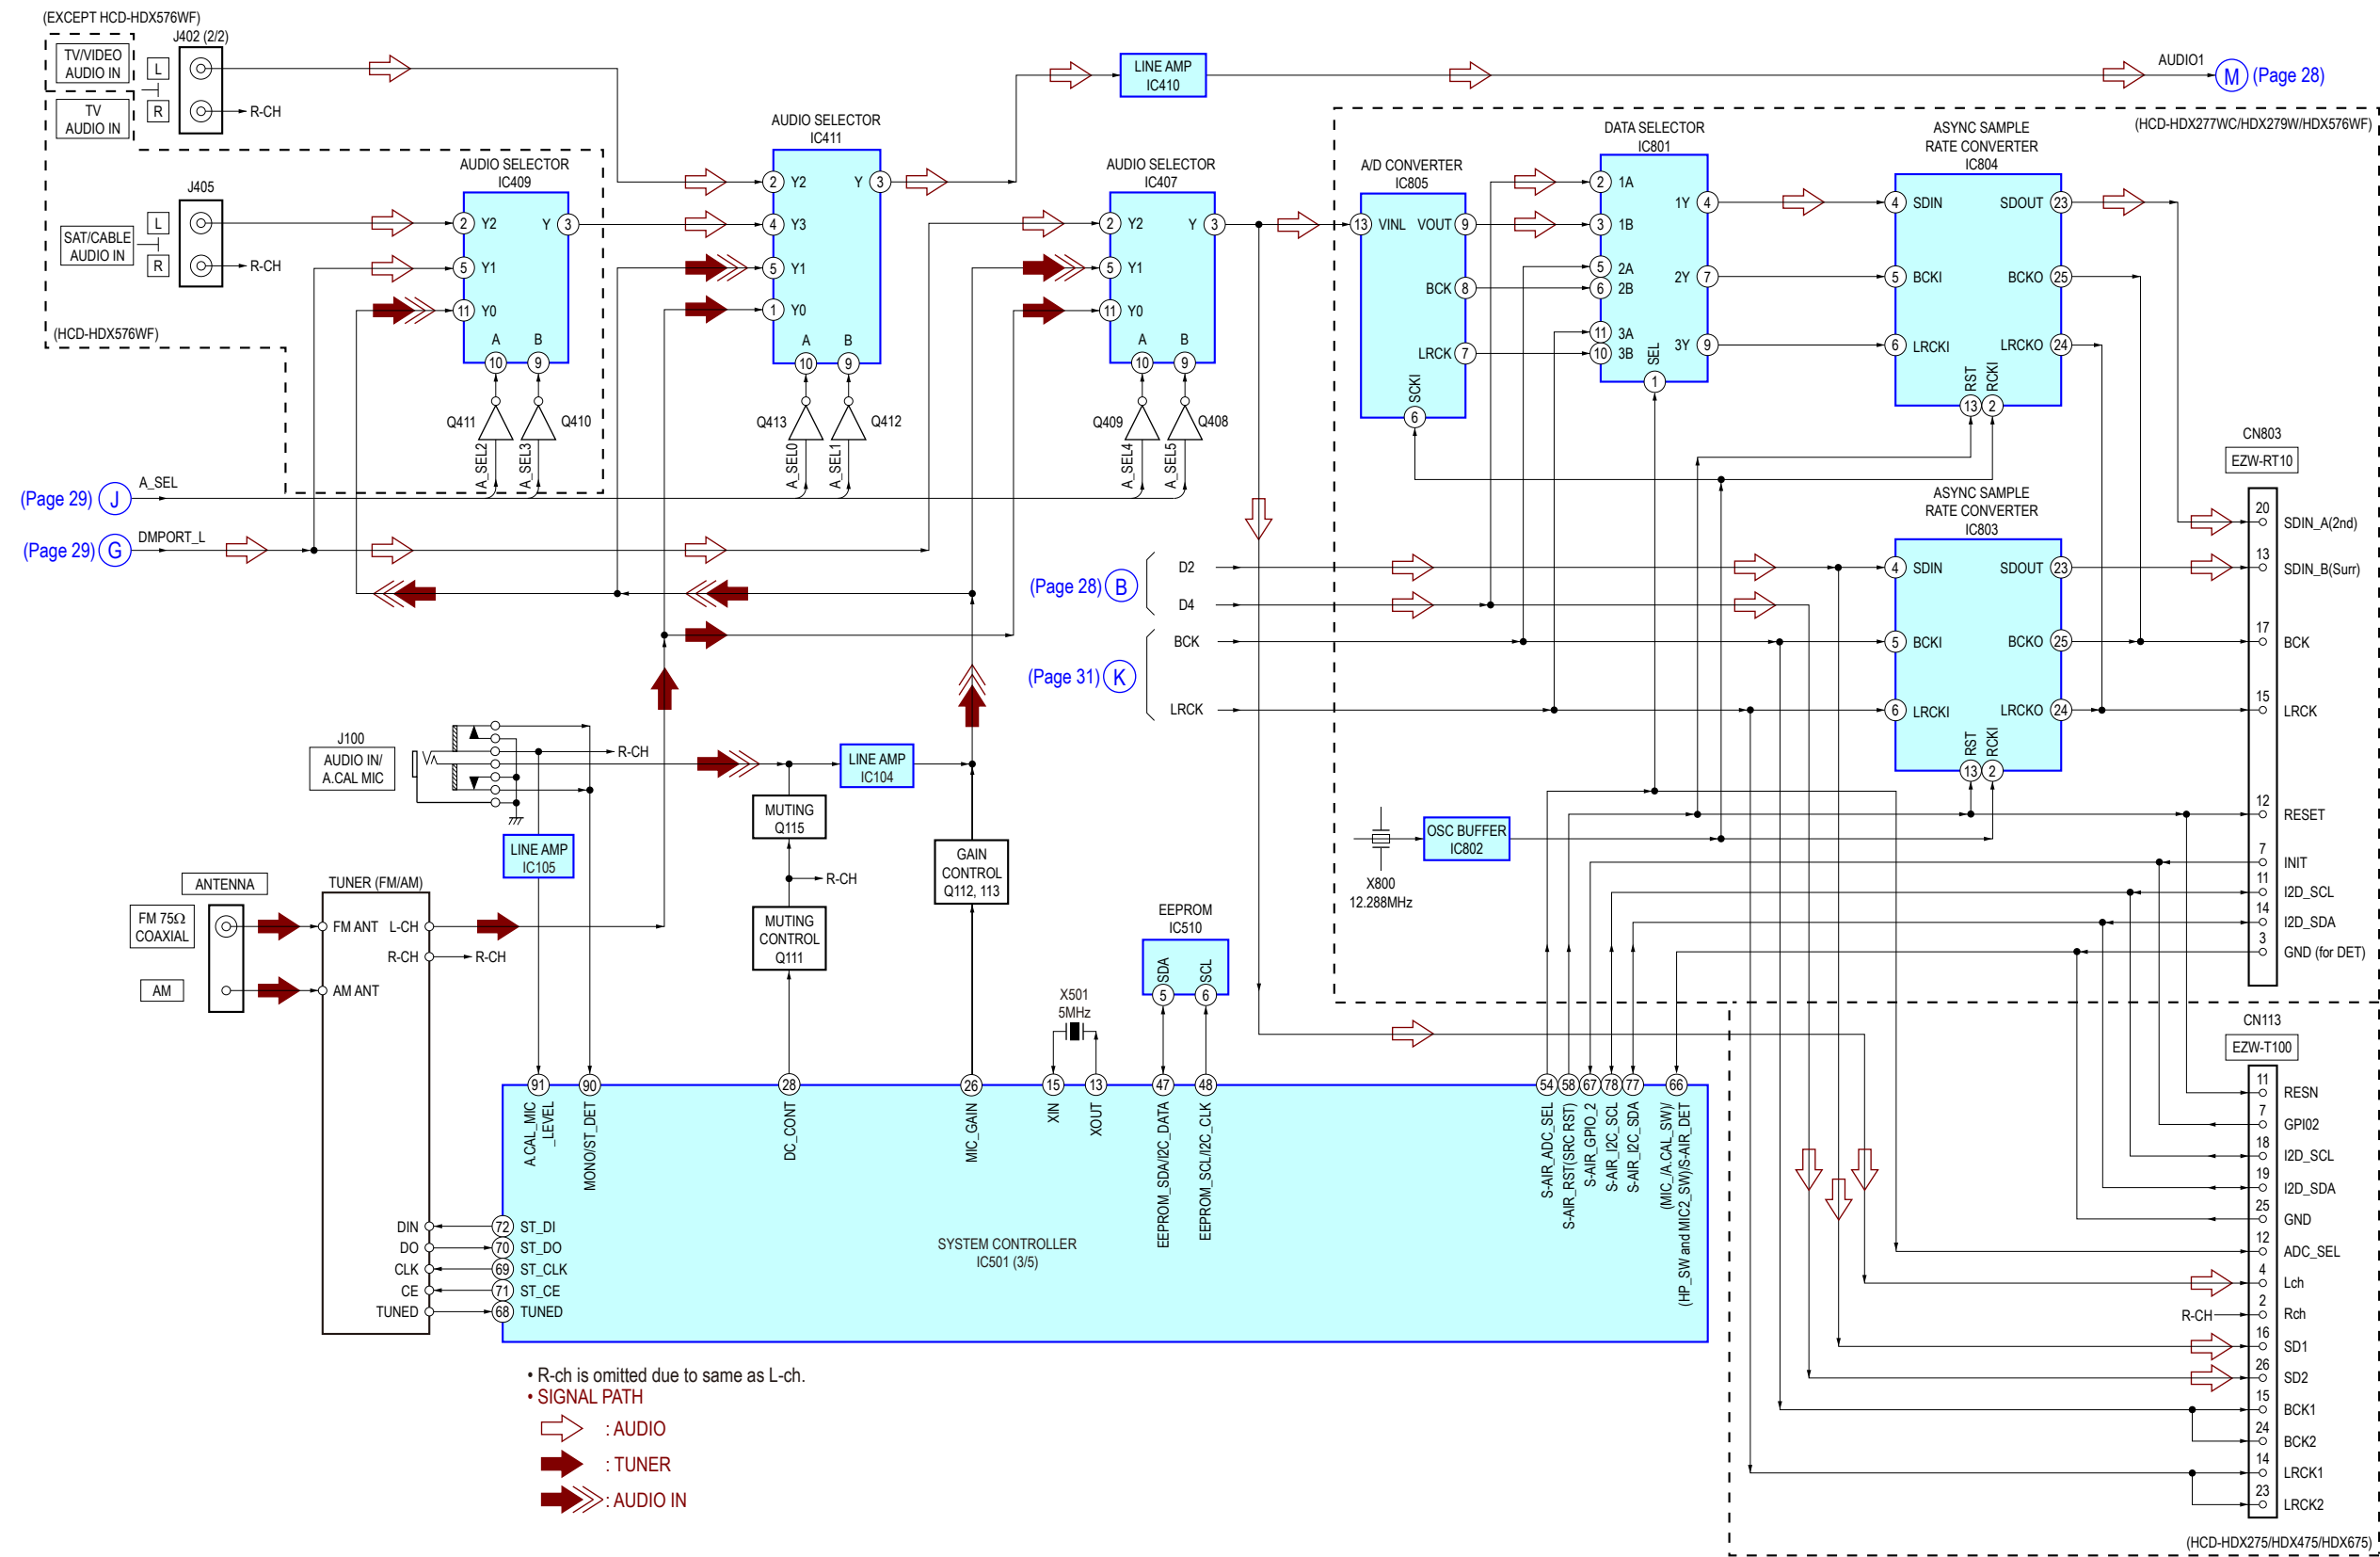

6-4. BLOCK DIAGRAM - AMP Section -

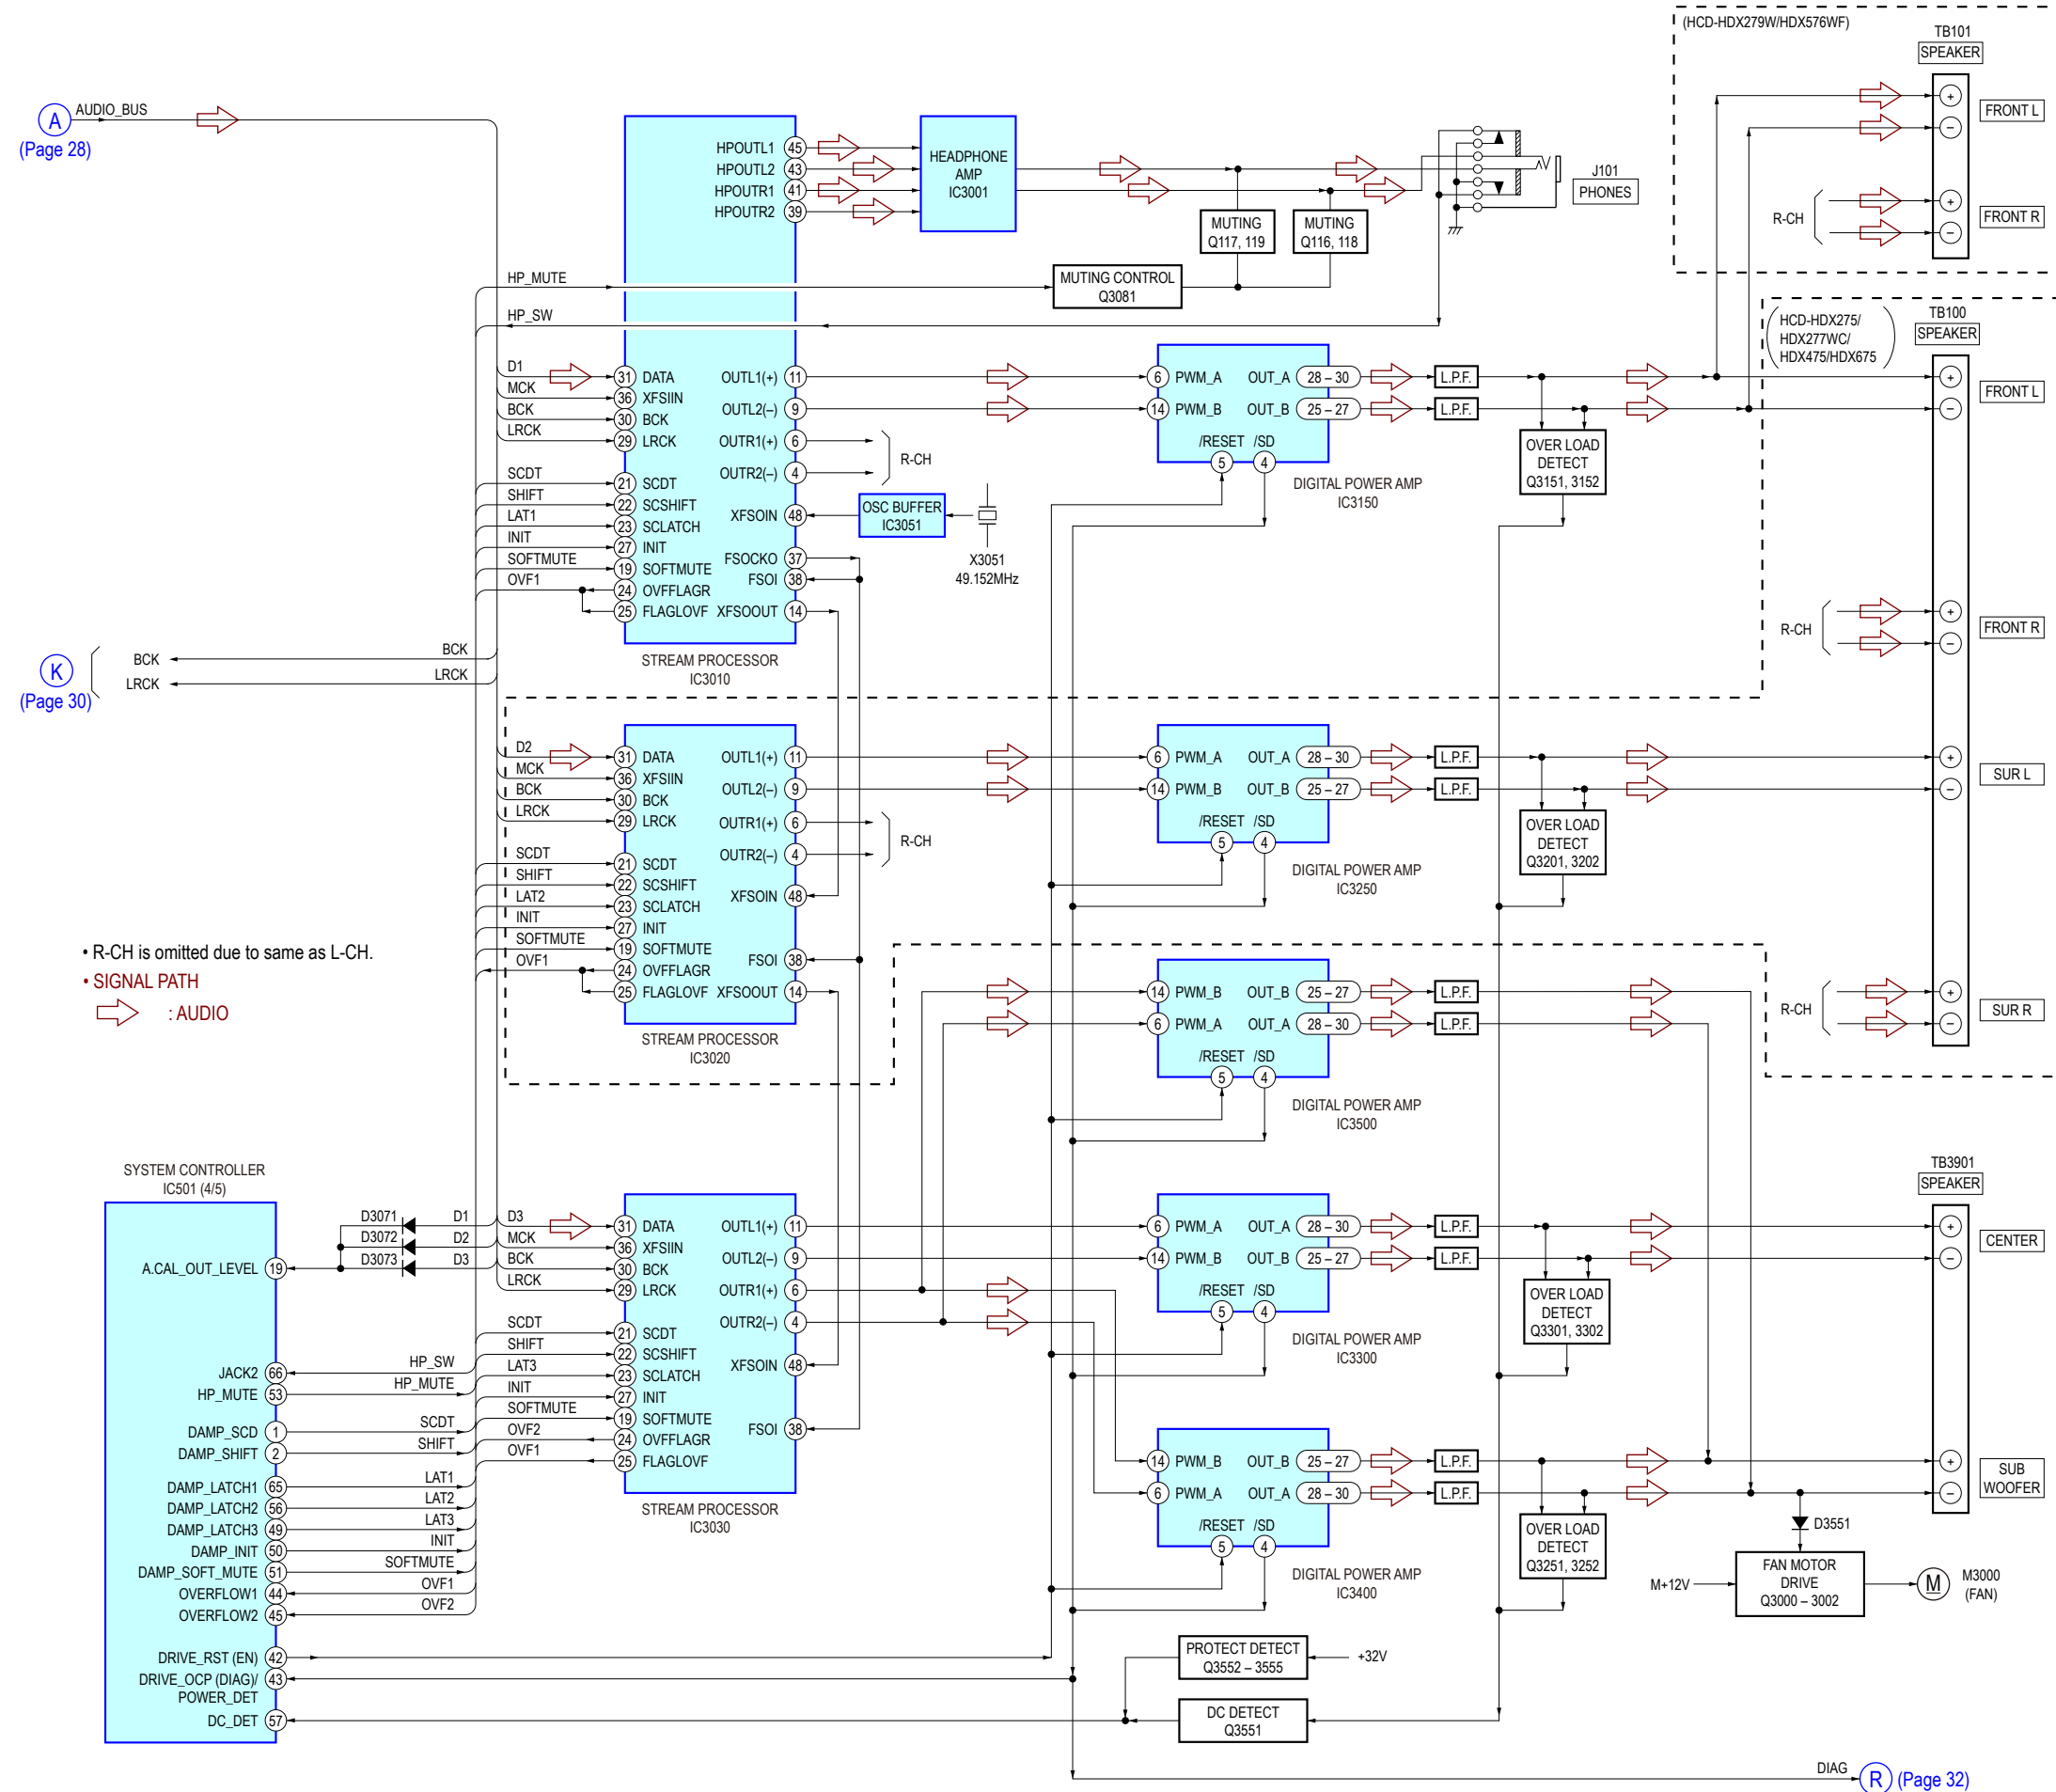

6-5. BLOCK DIAGRAM - PANEL/POWER SUPPLY Section -

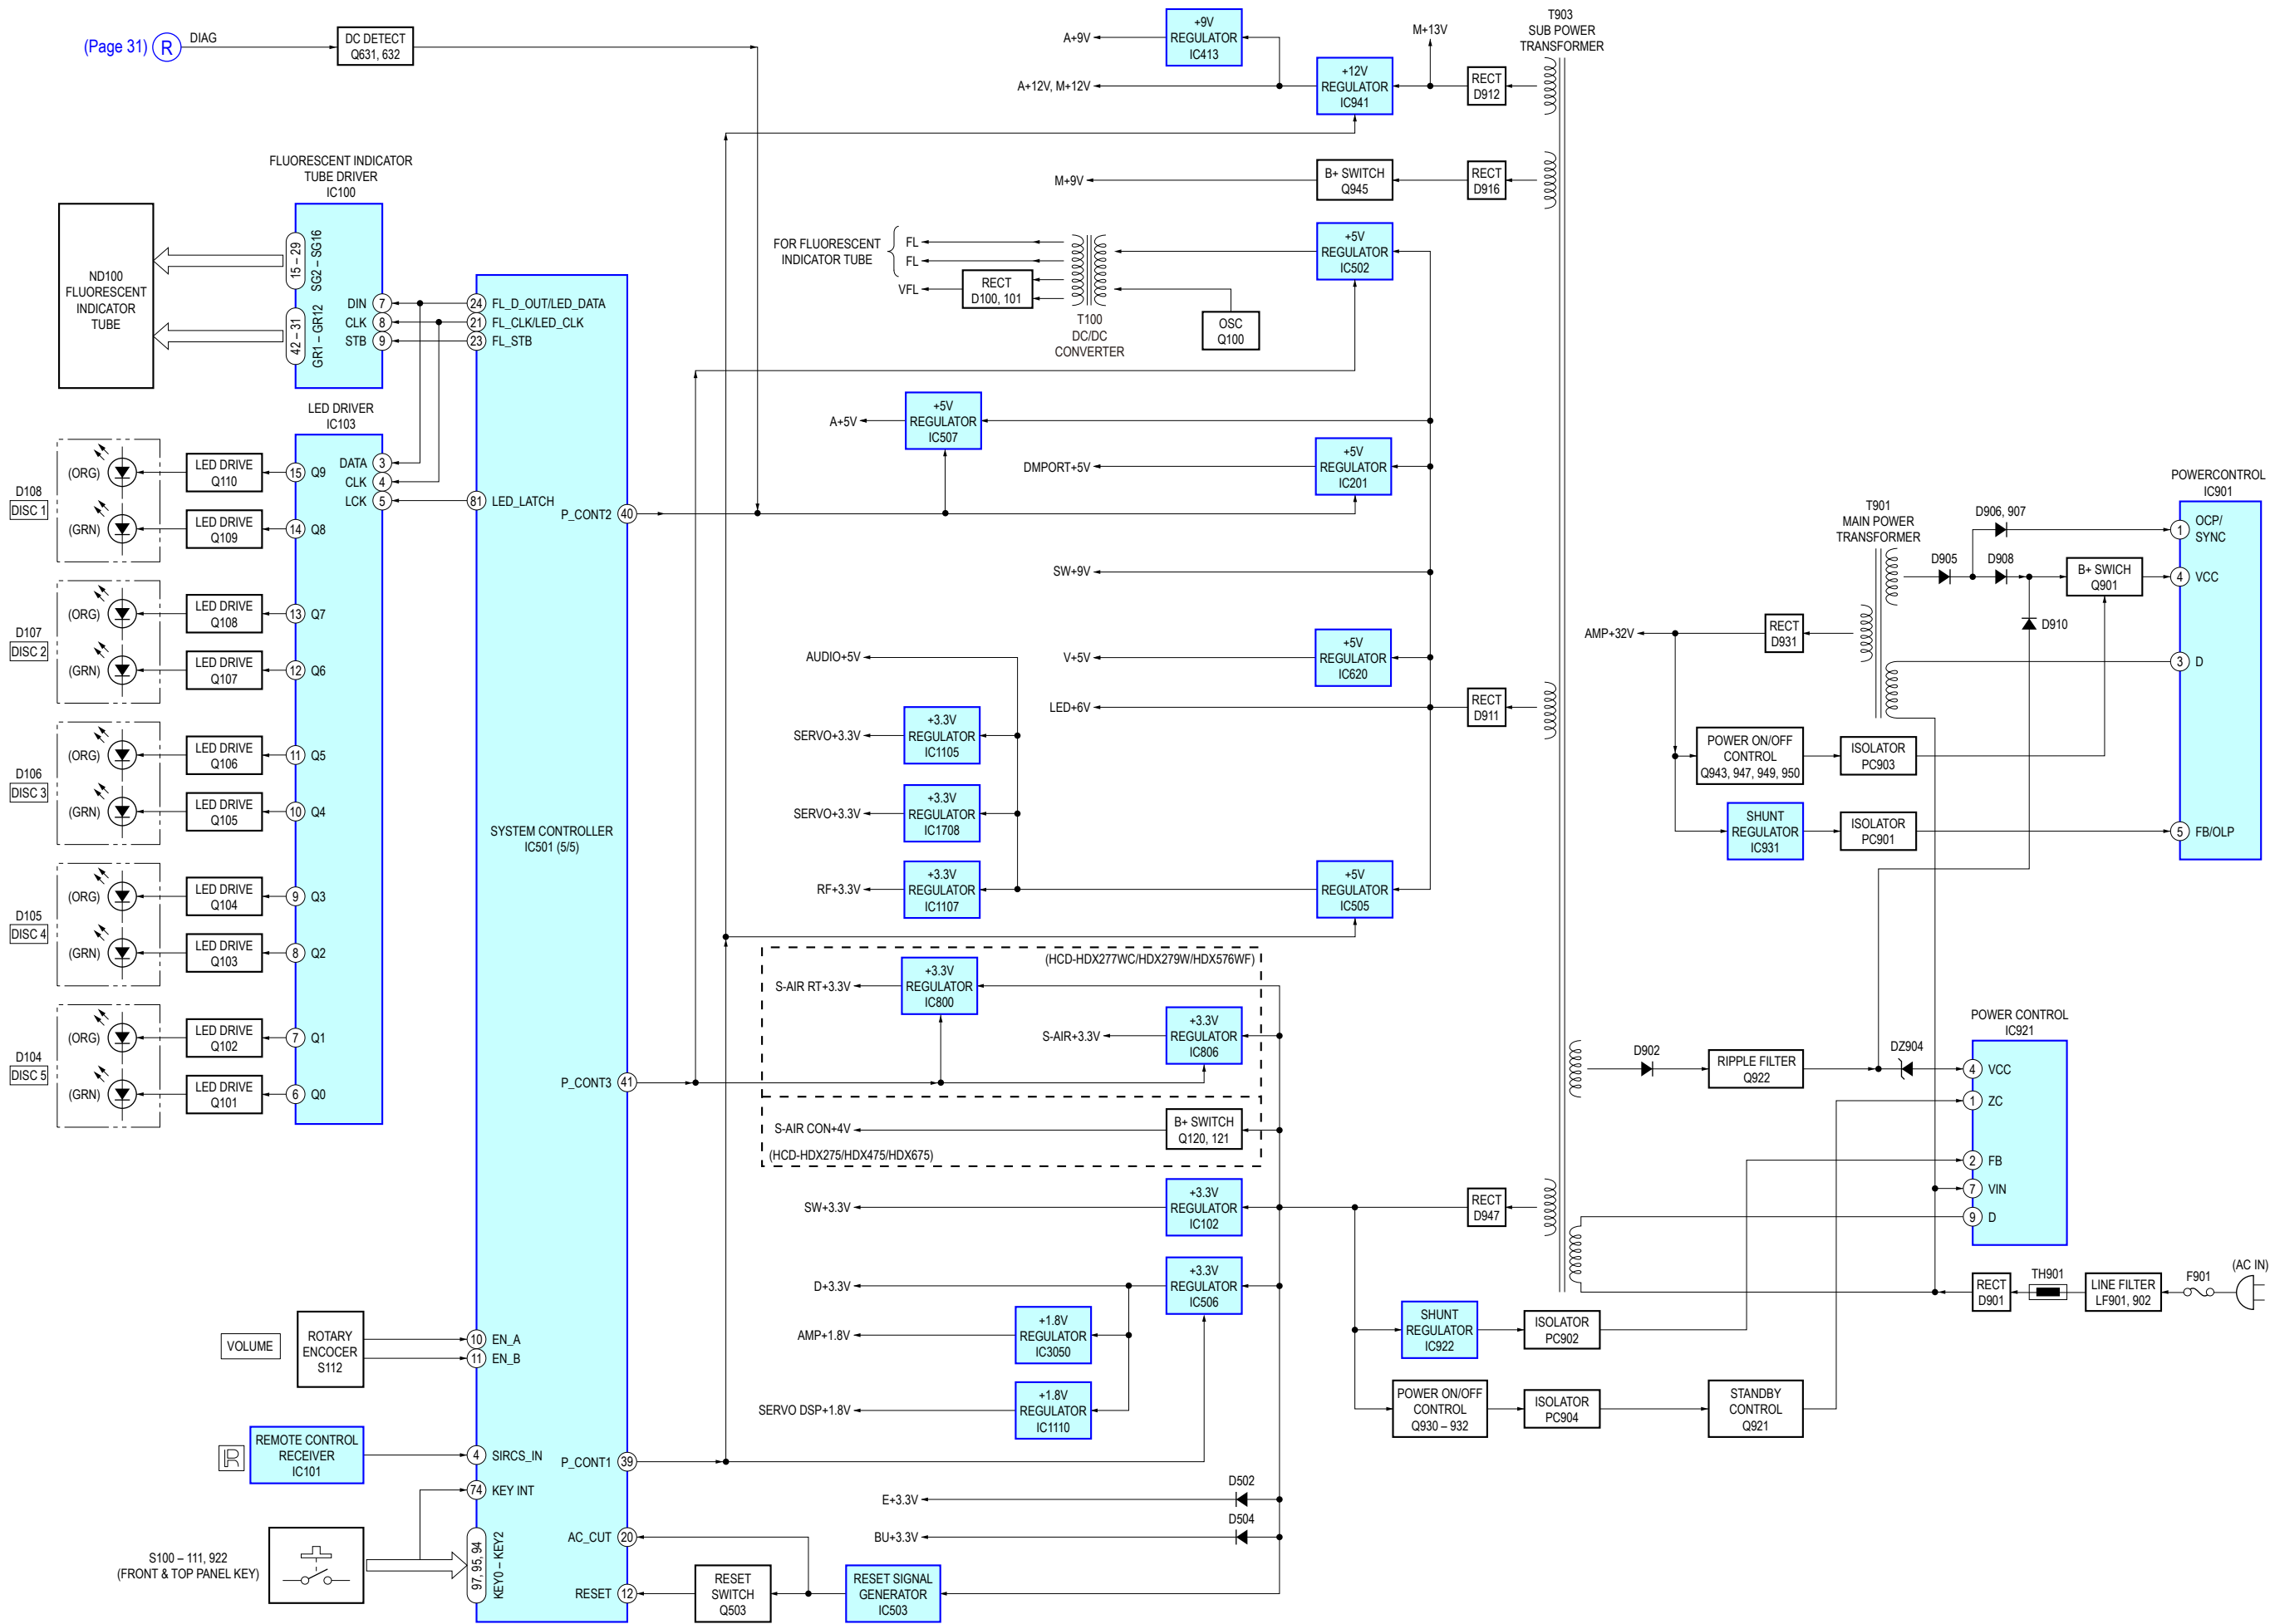



THIS NOTE IS COMMON FOR PRINTED WIRING BOARDS AND SCHEMATIC DIAGRAMS.
(In addition to this, the necessary note is printed in each block.)

For Printed Wiring Boards.

- Note:**
- — : Parts extracted from the component side.
 - : parts extracted from the conductor side.
 - △ : internal component.
 - : Pattern from the side which enables seeing.
(The other layers' patterns are not indicated.)

Caution:
Pattern face side: Parts on the pattern face side seen from
(Conductor Side) the pattern face are indicated.
Parts face side: Parts on the parts face side seen from
(Component Side) the parts face are indicated.

- MAIN board is multi-layer printed board.
However, the patterns of intermediate layers have not
been included in diagrams.
- Indication of transistor.

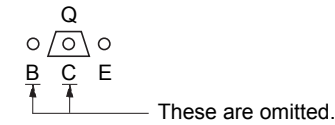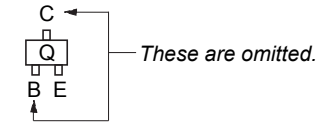



For Schematic Diagrams.

- Note:**
- All capacitors are in μF unless otherwise noted. (p: pF) 50
WV or less are not indicated except for electrolytics and
tantalums.
 - All resistors are in Ω and 1/4 W or less unless otherwise
specified.
 - △ : internal component.
 - ⊞ : nonflammable resistor.
 - ⊞ : fusible resistor.
 - : panel designation.


Note: The components identi- fied by mark △ or dotted line with mark △ are criti- cal for safety. Replace only with part number specified.	Note: Les composants identifiés par une marque △ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le nu- méro spécifié.
---	---

- : B+ Line.
- - - : B- Line.
- Voltages and waveforms are dc with respect to ground
under no-signal conditions.
no mark: TUNER
() : DVD PLAY
- Voltages are taken with VOM (Input impedance 10 M Ω).
Voltage variations may be noted due to normal production
tolerances.
- Waveforms are taken with a oscilloscope.
Voltage variations may be noted due to normal production
tolerances.
- Circled numbers refer to waveforms.
- Signal path.
⇒ : AUDIO
⇒ : CD/DVD PLAY
⇒ : TUNER
⇒ : AUDIO IN
⇒ : VIDEO
- Abbreviation
AUS : Australian model
E3 : 240V AC area in E model

• Circuit Boards Location

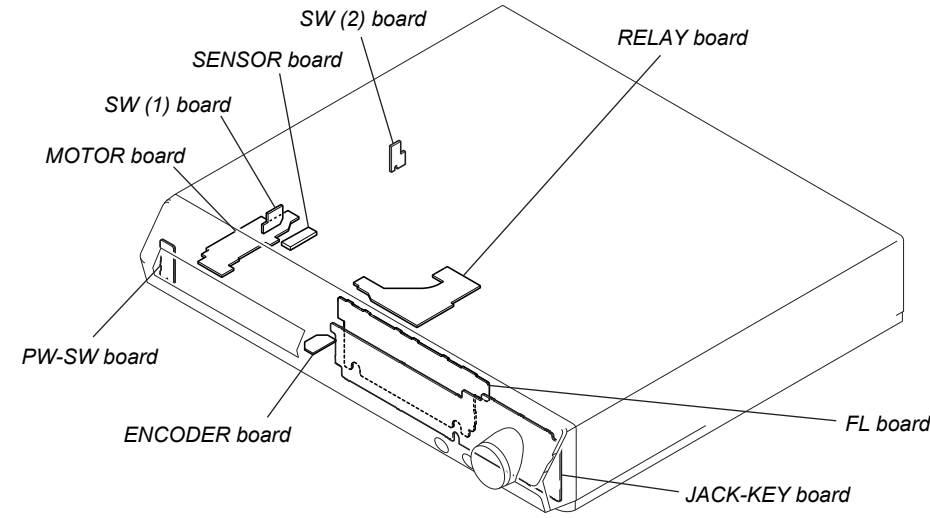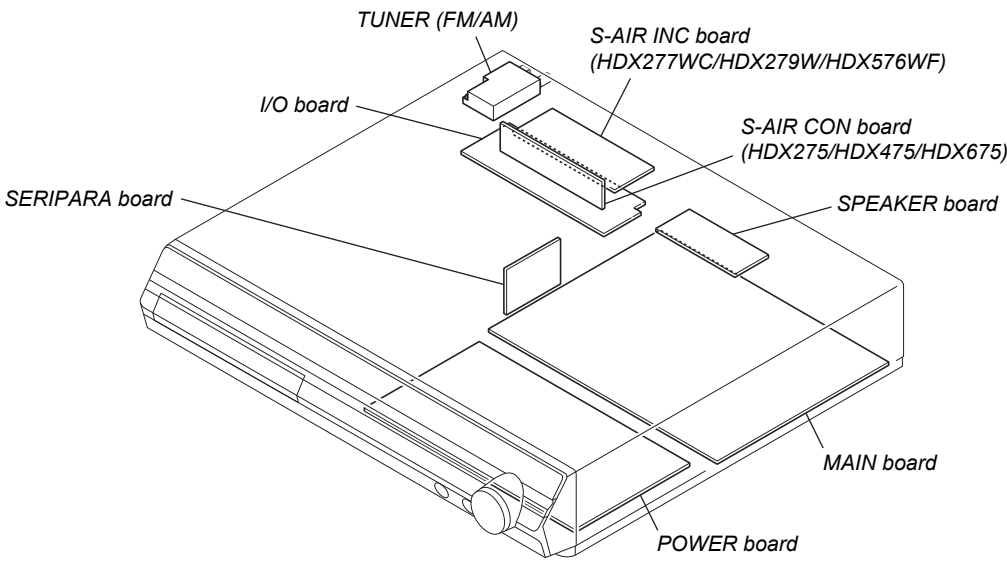

Ref. No.	Location
D501	C-10
D3071	C-6
D3072	C-6
D3073	C-6
D3552	G-3
D9712	G-7
IC202	G-10
IC302	G-5
IC501	B-9
IC502	A-10
IC503	C-10
IC507	A-8
IC510	B-10
IC702	D-7
IC707	D-10
IC1101	G-8
IC1102	F-7
IC1103	G-7
IC1104	H-7
IC1105	F-10
IC1107	F-10
IC1110	H-9
IC1201	E-10
IC1705	H-8
IC1706	H-9
IC1707	H-9
IC1708	H-9
IC3001	B-6
IC3003	D-6
IC3010	D-5
IC3020	E-5
IC3030	F-5
IC3050	C-6
IC3051	D-5
IC3100	B-4
IC3150	C-4
IC3200	D-4
IC3250	D-4
IC3300	E-4
IC3400	F-4
IC3500	G-4
IC4502	D-8
Q503	C-10
Q631	B-5
Q632	C-5
Q1101	F-7
Q1102	E-9
Q1103	F-7
Q1701	G-8
Q3000	G-4
Q3001	G-4
Q3081	B-6
Q3101	C-2
Q3102	C-2
Q3151	C-2
Q3152	C-2
Q3201	D-2
Q3202	D-2
Q3251	F-2
Q3252	F-2
Q3301	E-2
Q3302	E-2
Q3401	E-2
Q3402	D-2
Q3551	H-3
Q3552	H-3
Q3553	H-3
Q3554	H-3
Q3555	H-3
Q9724	G-6
Q9726	G-6
Q9728	G-6
Q9729	G-6

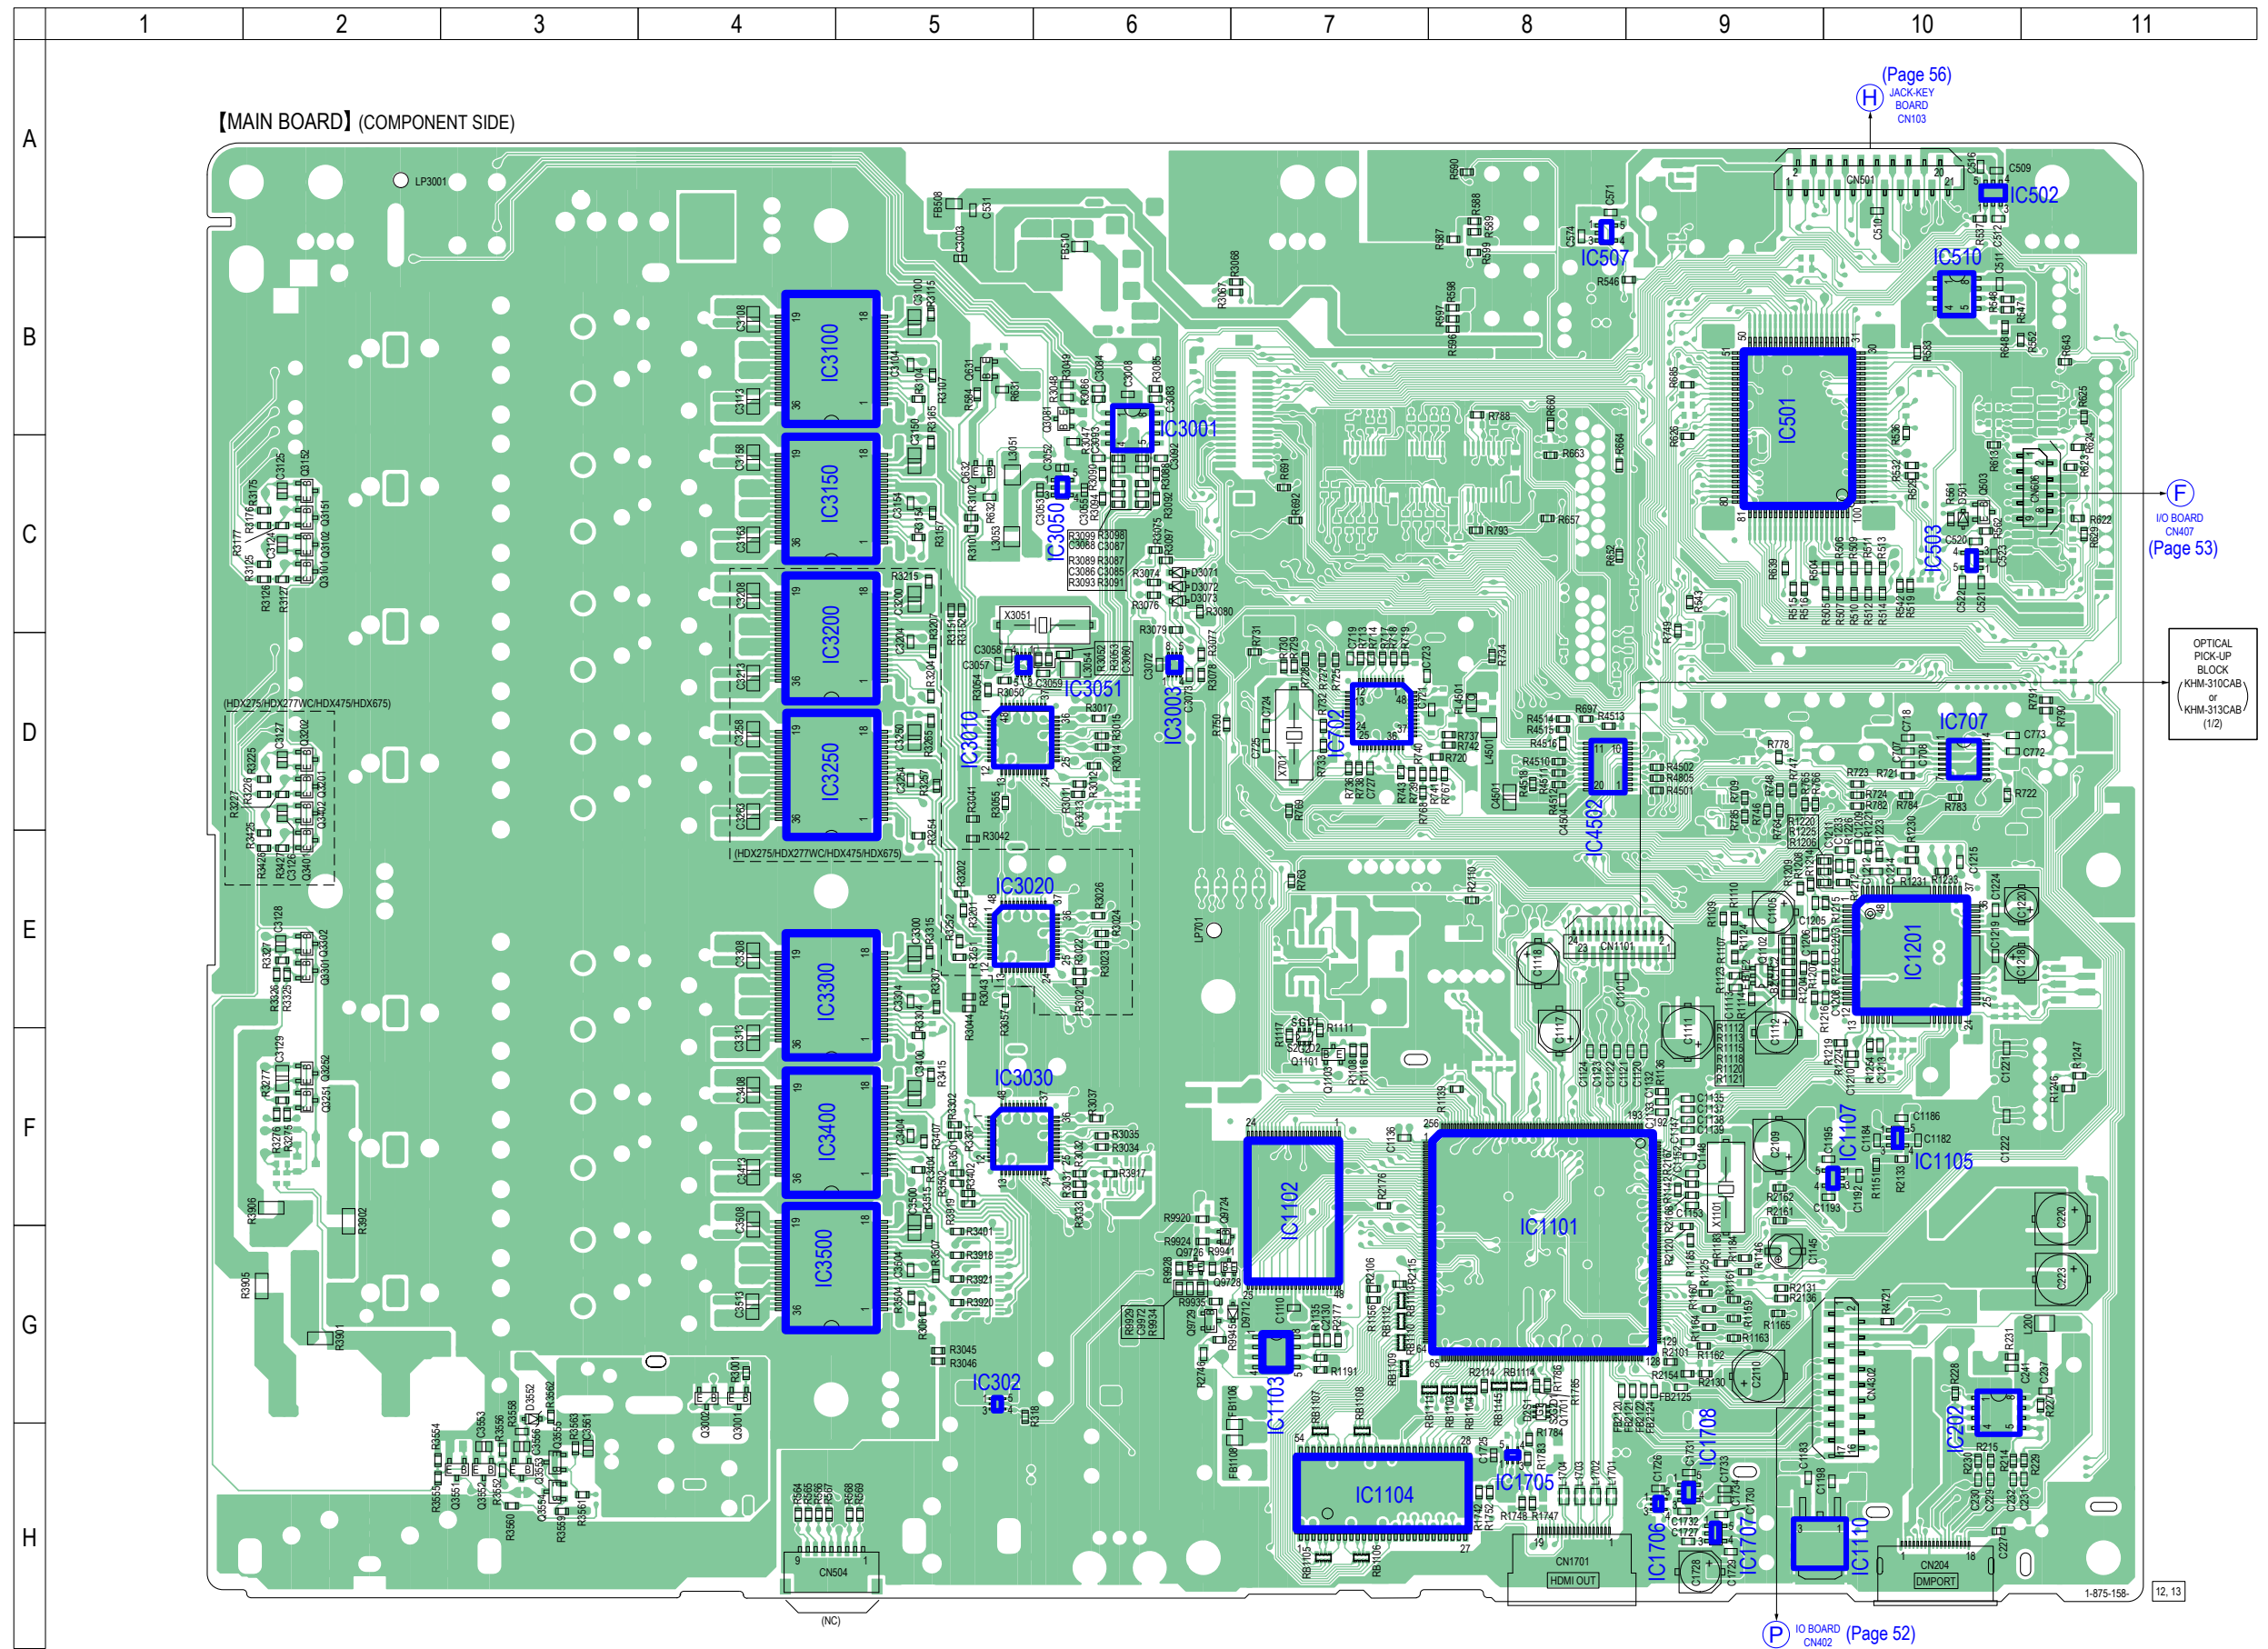


Note: IC1103 on the MAIN board cannot exchange with single. When IC1103 on the MAIN board is damaged, exchange the entire mounted board.




IC201	G-2
IC301	H-7
IC505	A-5
IC506	B-5
Q3002	H-9


6-8. SCHEMATIC DIAGRAM - MAIN Board (1/12) - • See page 65 for IC Block Diagrams.

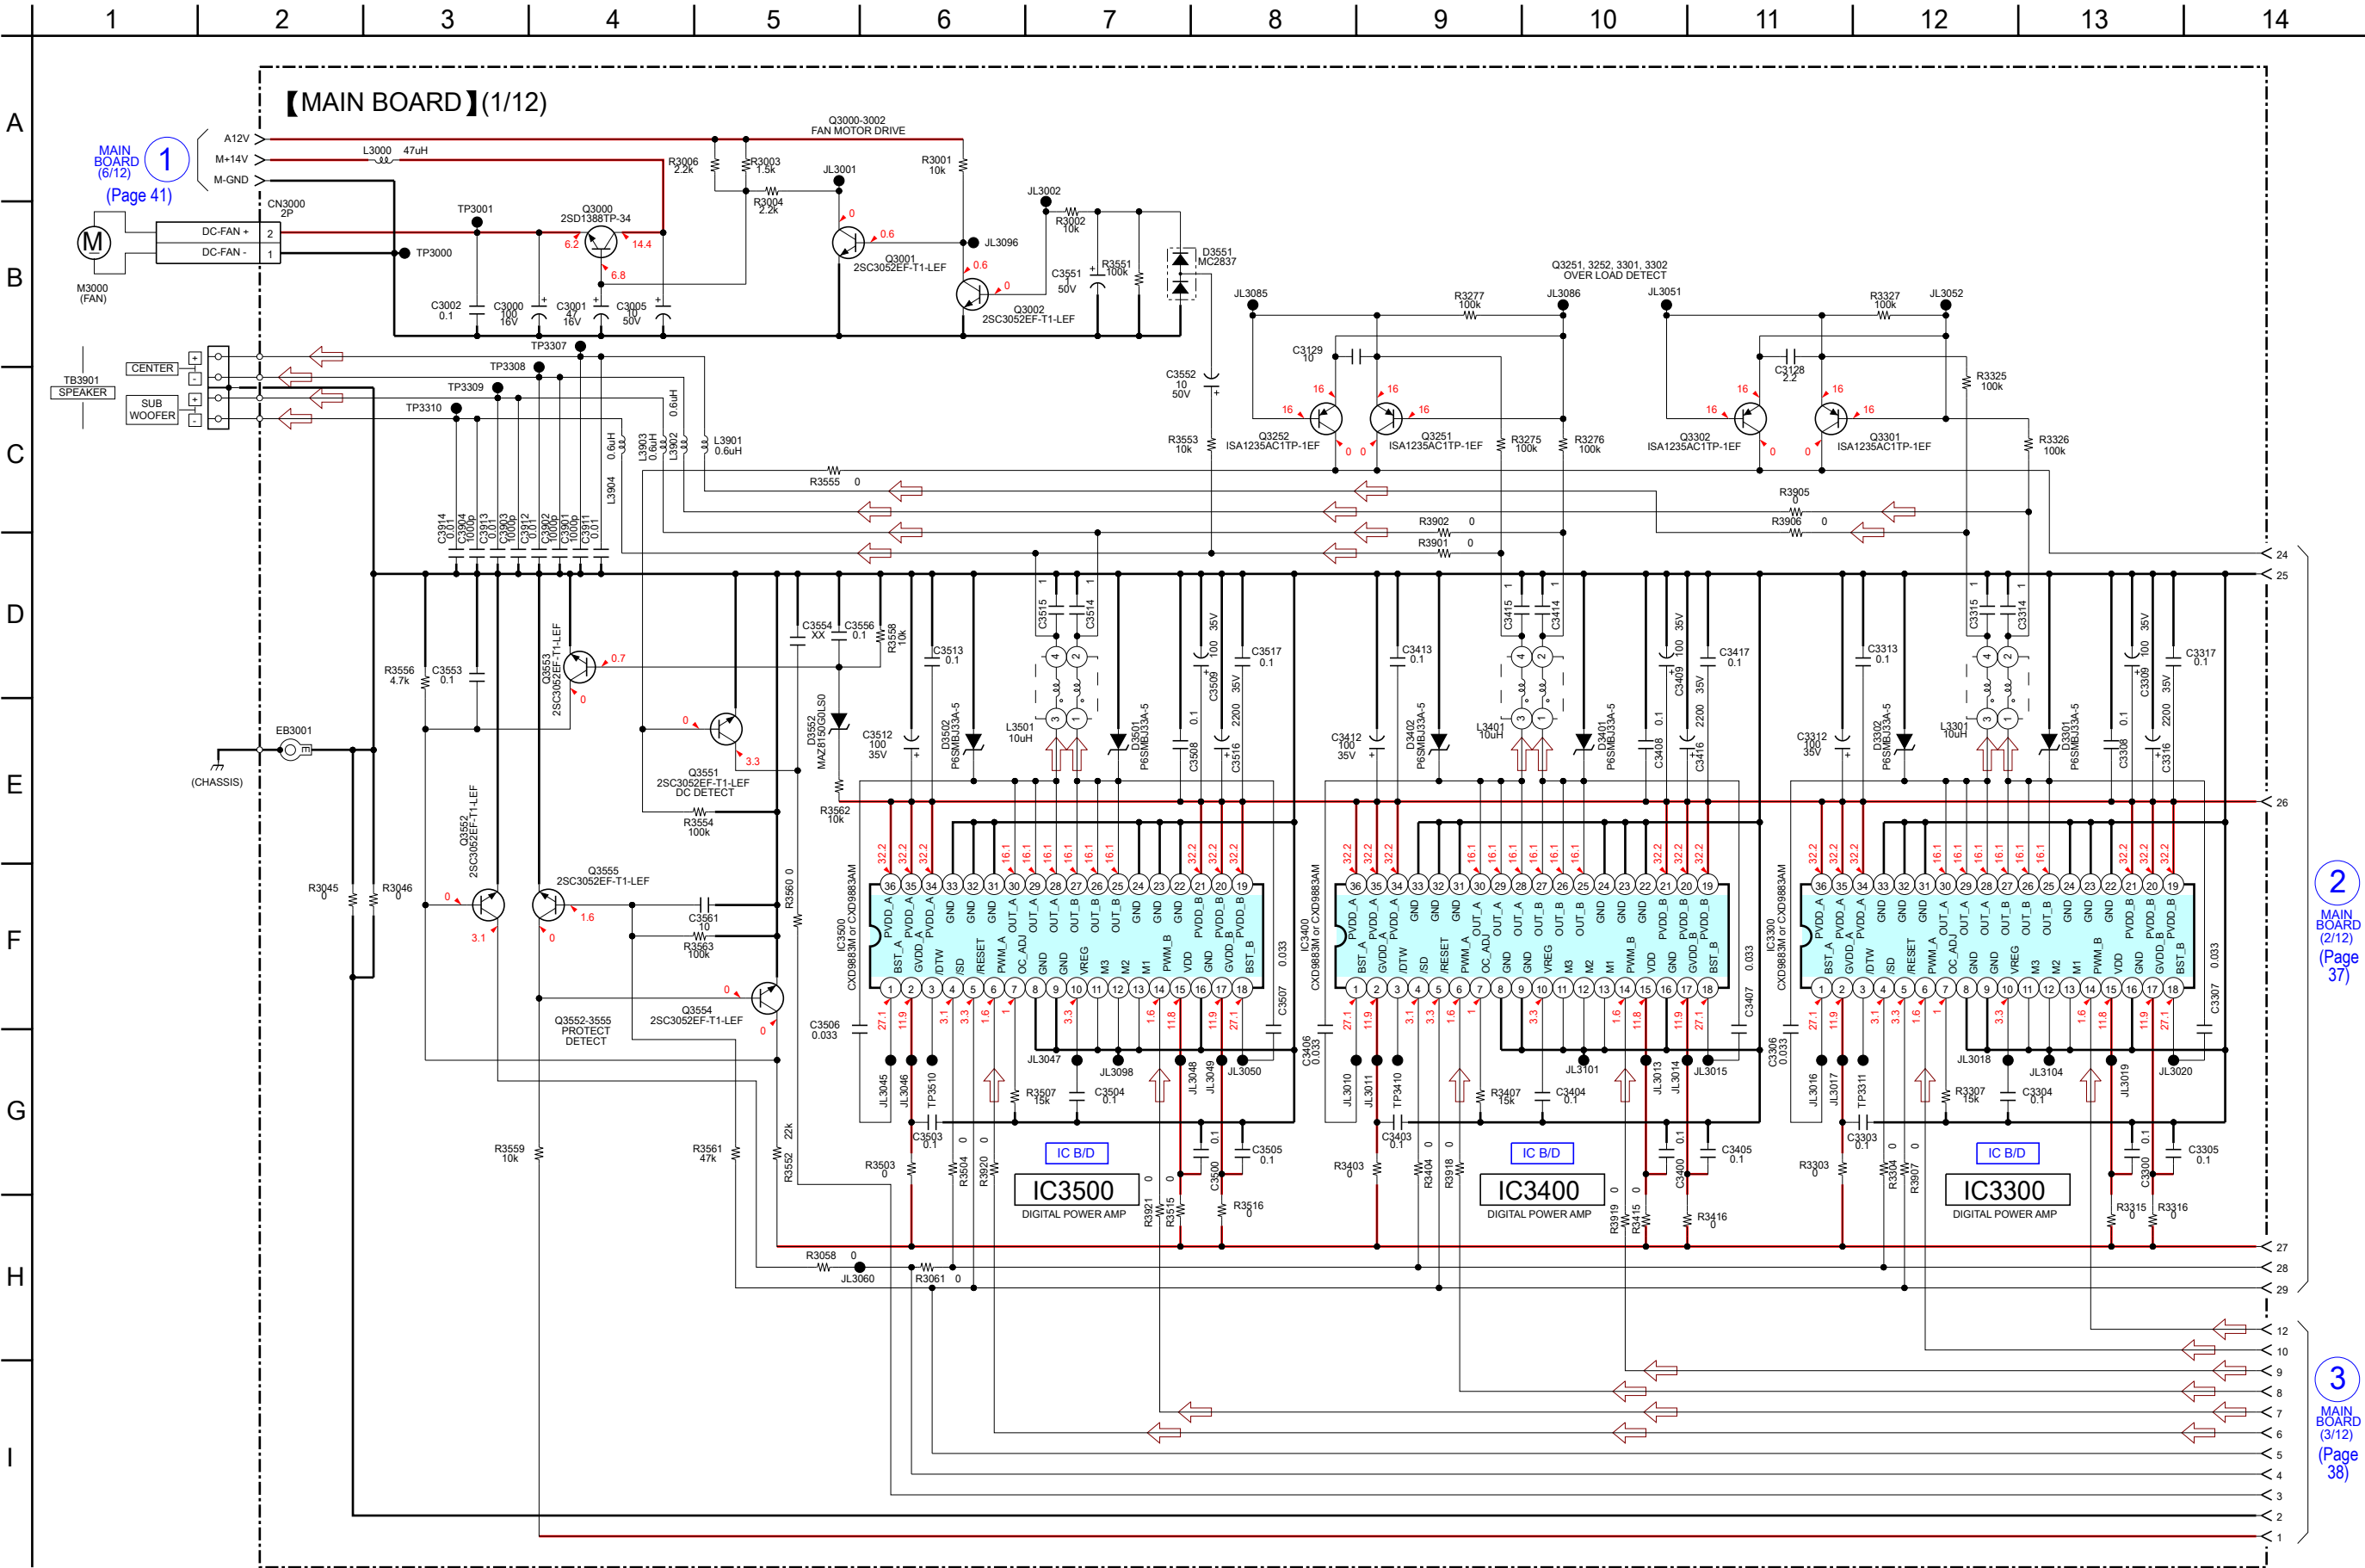


6-9. SCHEMATIC DIAGRAM - MAIN Board (2/12) - • See page 65 for IC Block Diagrams.

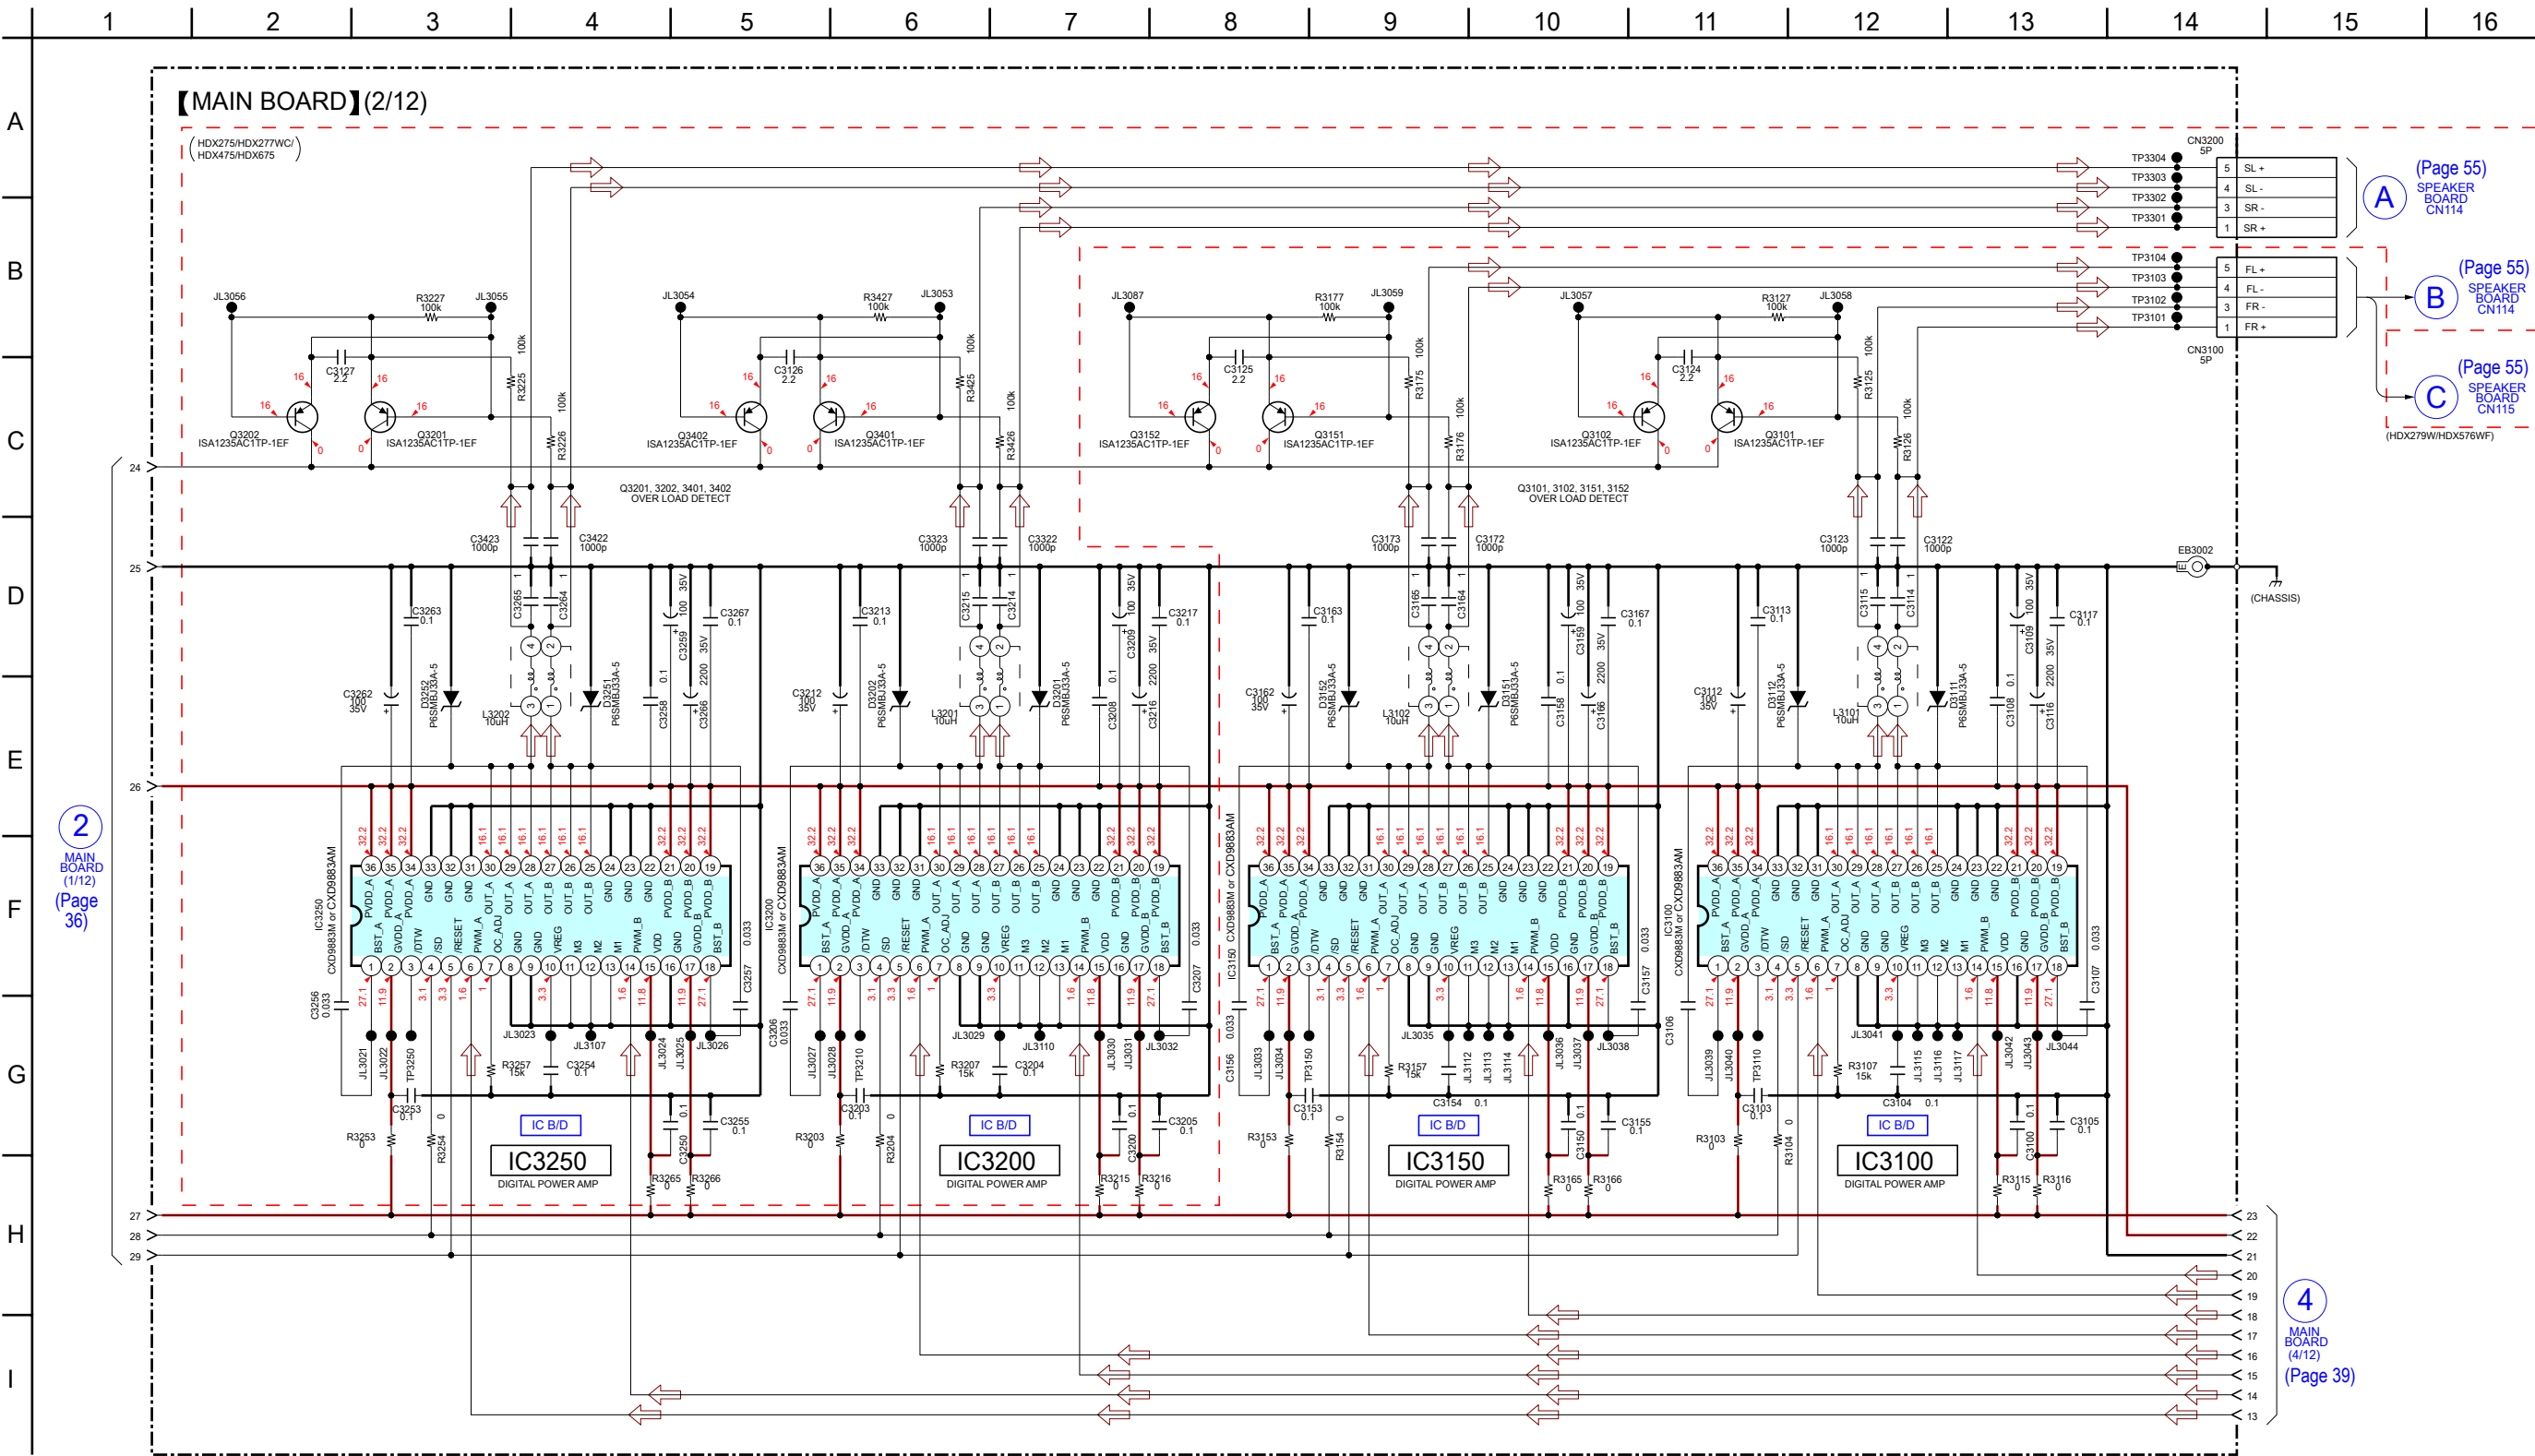


6-10. SCHEMATIC DIAGRAM - MAIN Board (3/12) - • See page 65 for IC Block Diagrams.

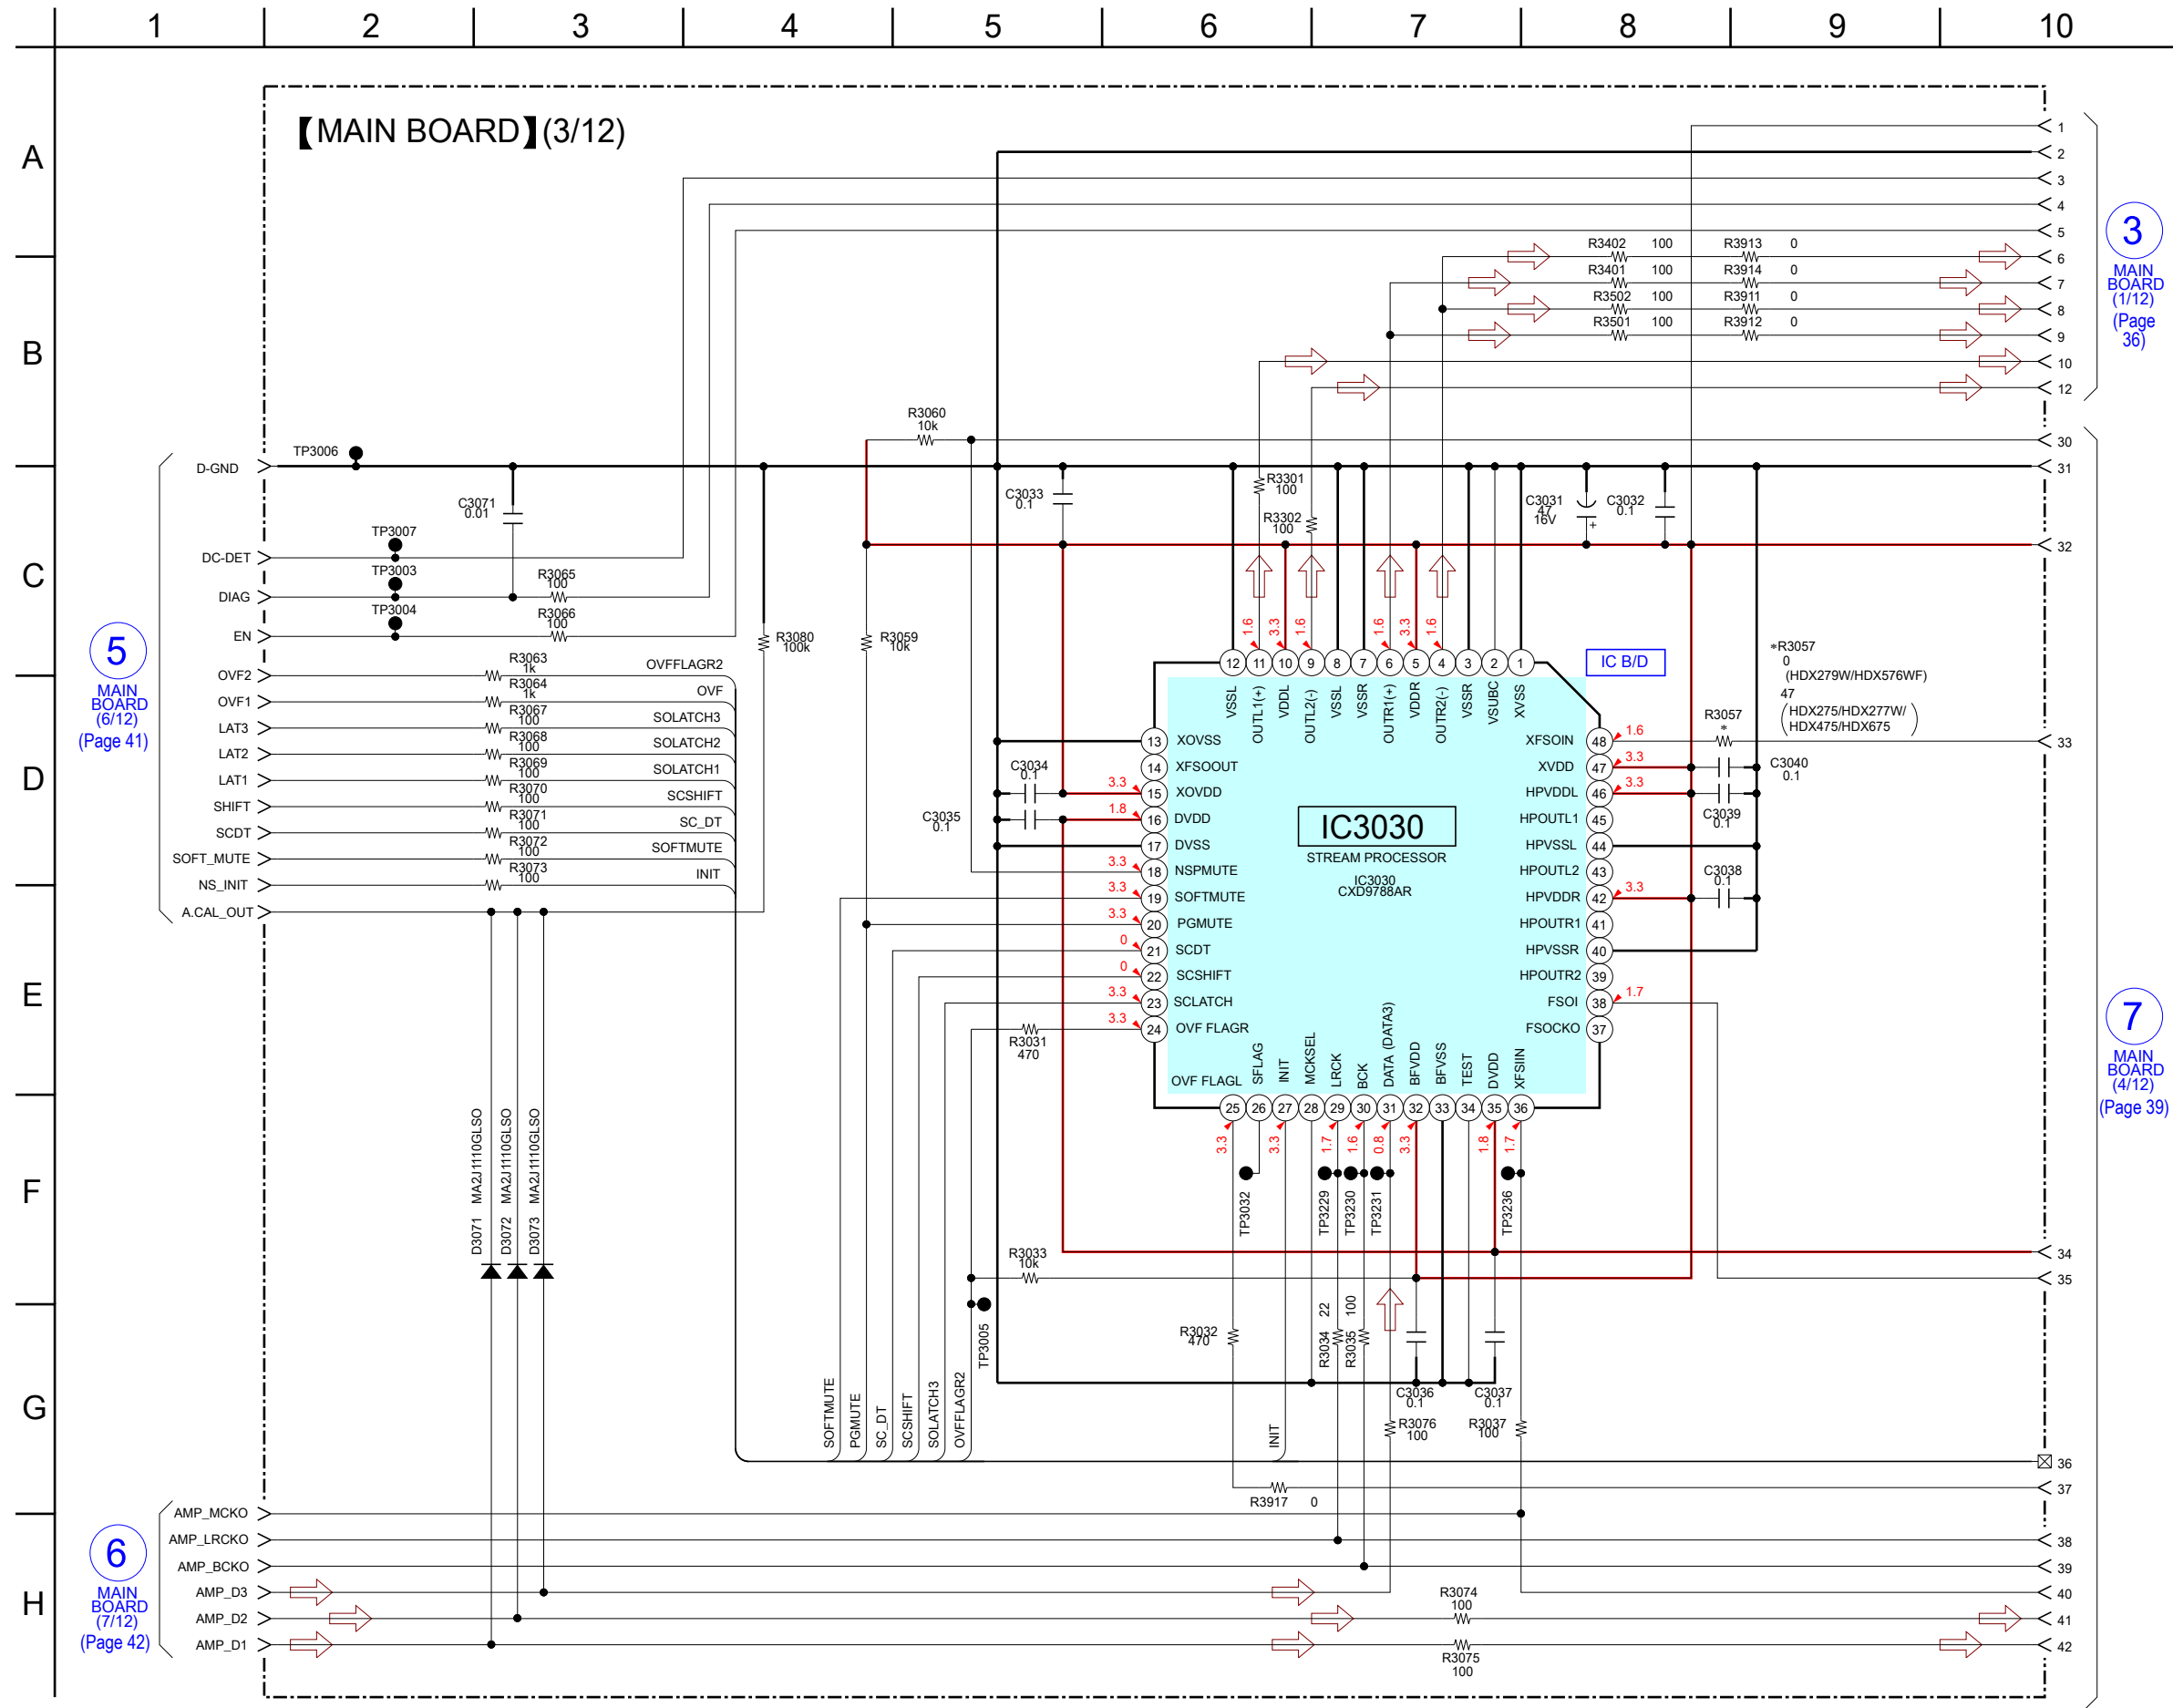


6-11. SCHEMATIC DIAGRAM - MAIN Board (4/12) - • See page 64 for Waveforms. • See page 65 for IC Block Diagrams.

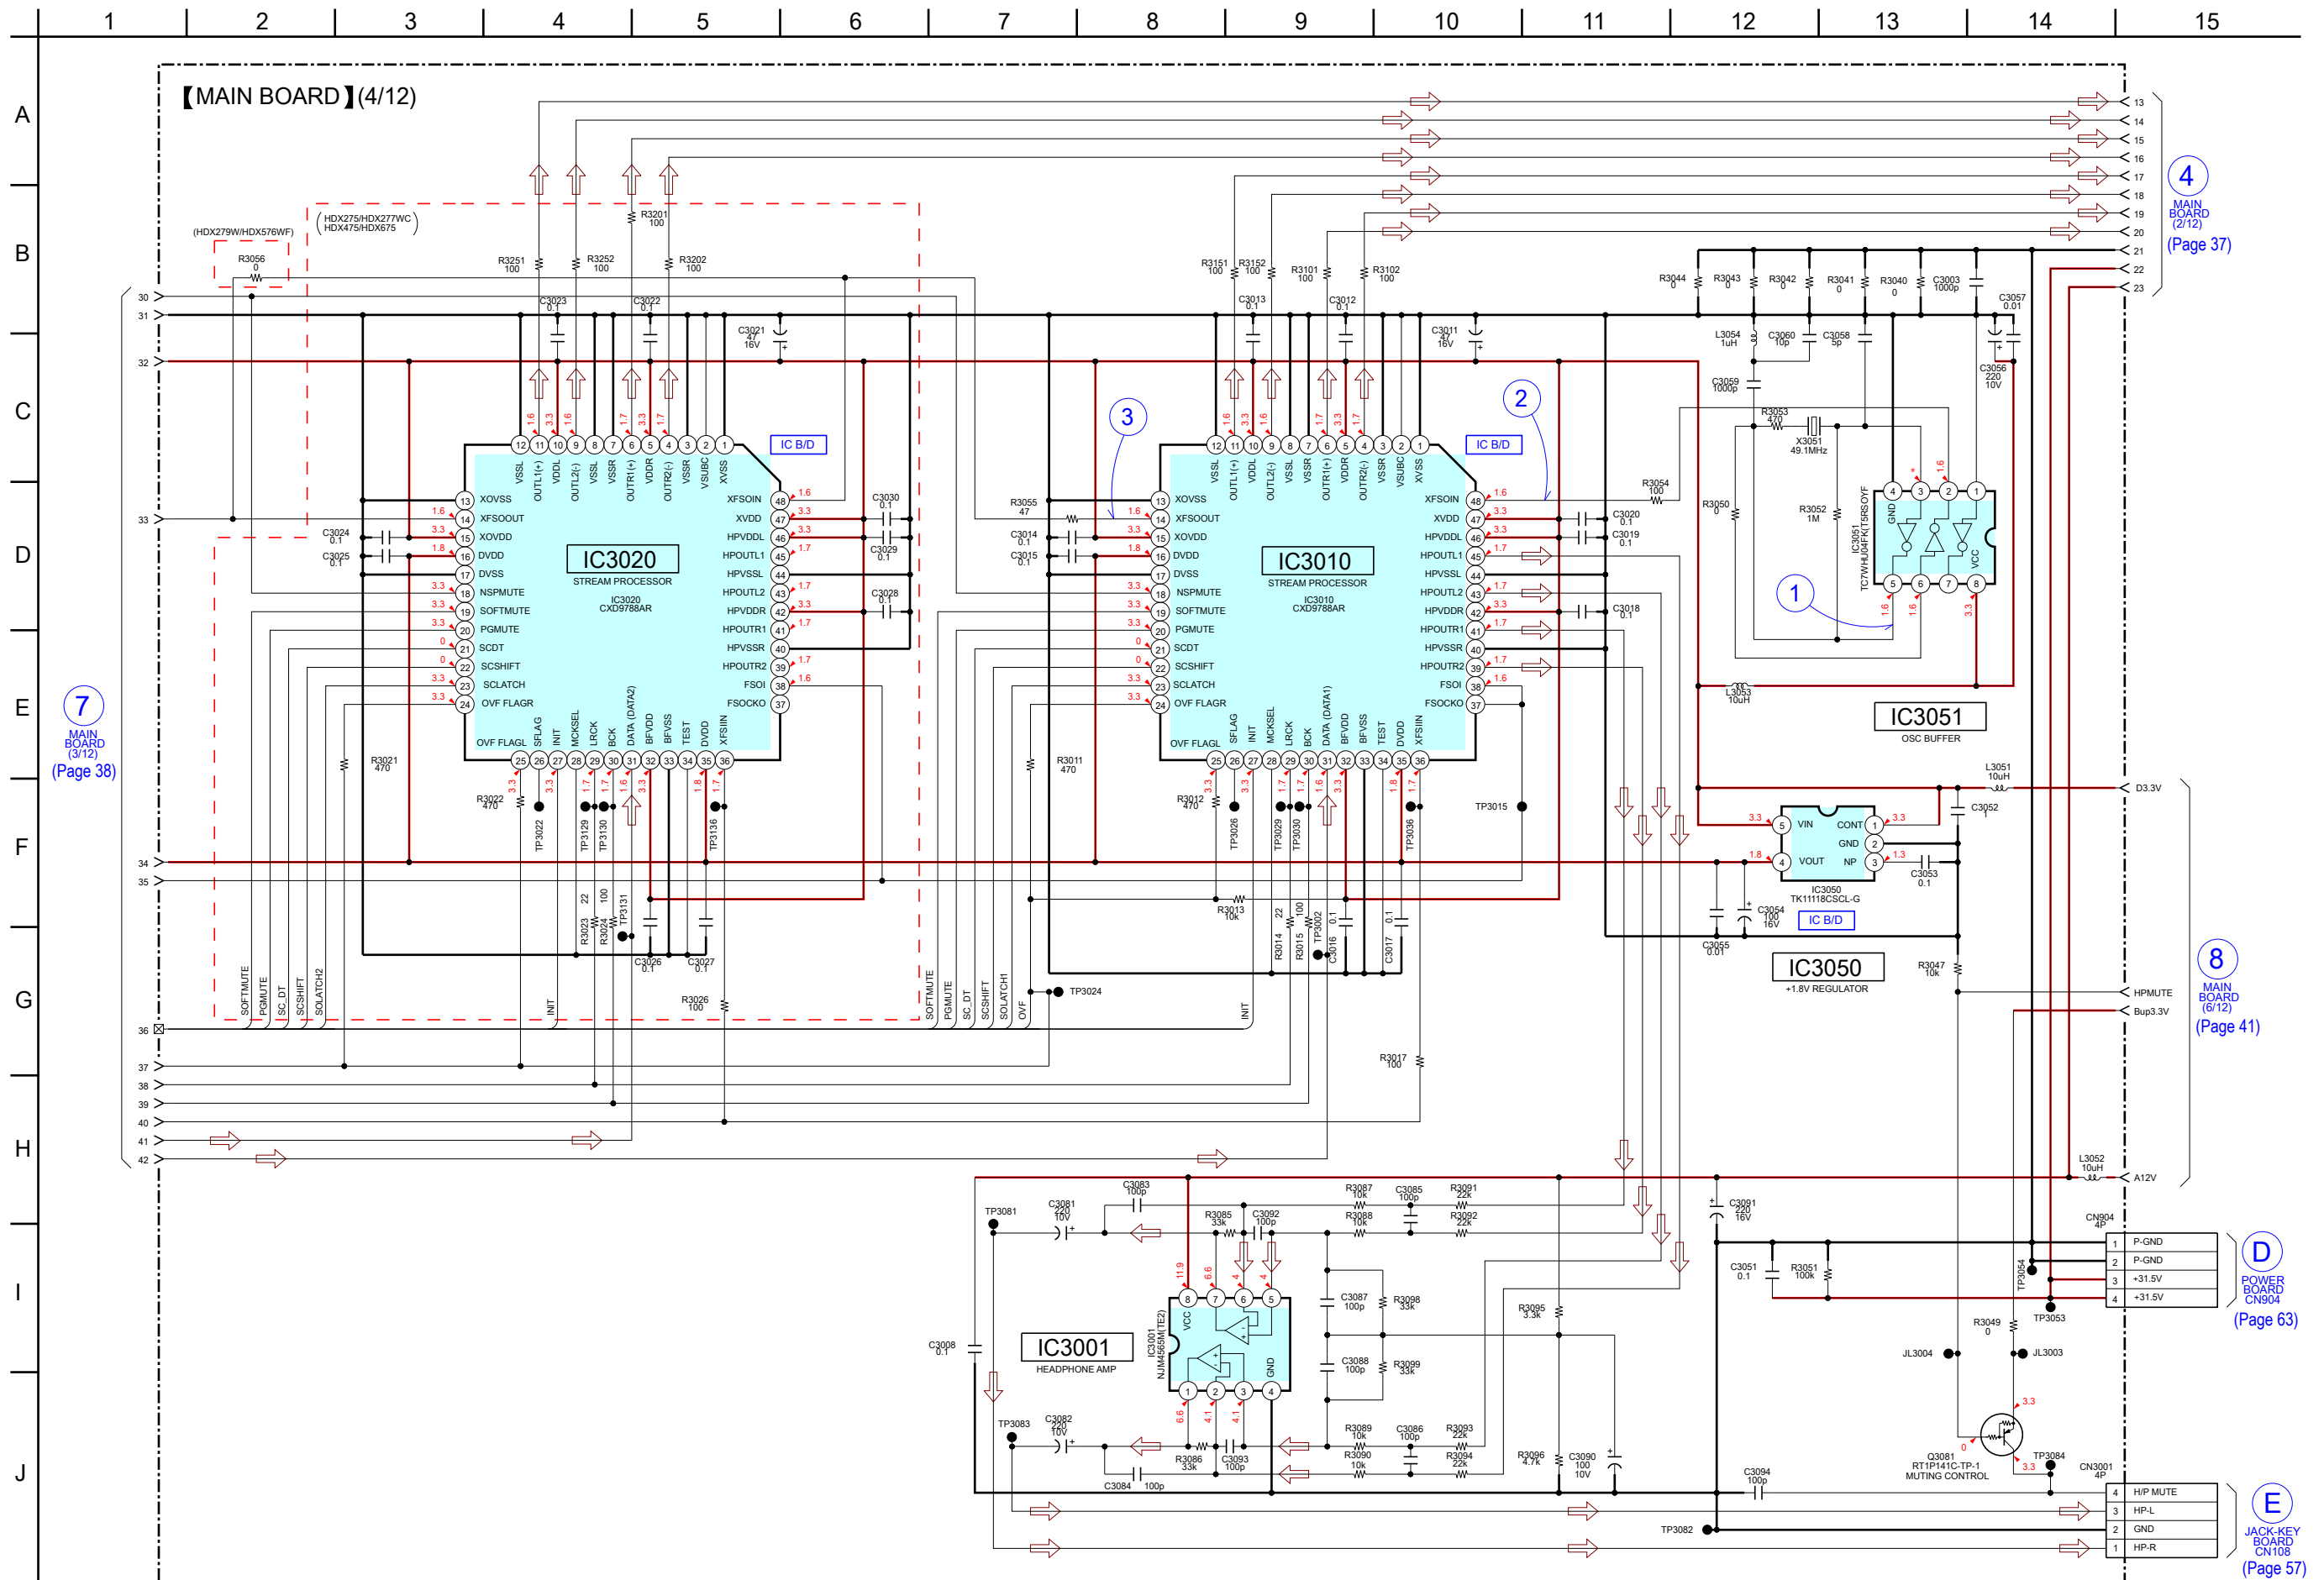

6-12. SCHEMATIC DIAGRAM - MAIN Board (5/12) - • See page 64 for Waveforms. • See page 65 for IC Block Diagrams. • See page 75 for IC Pin Function Description.

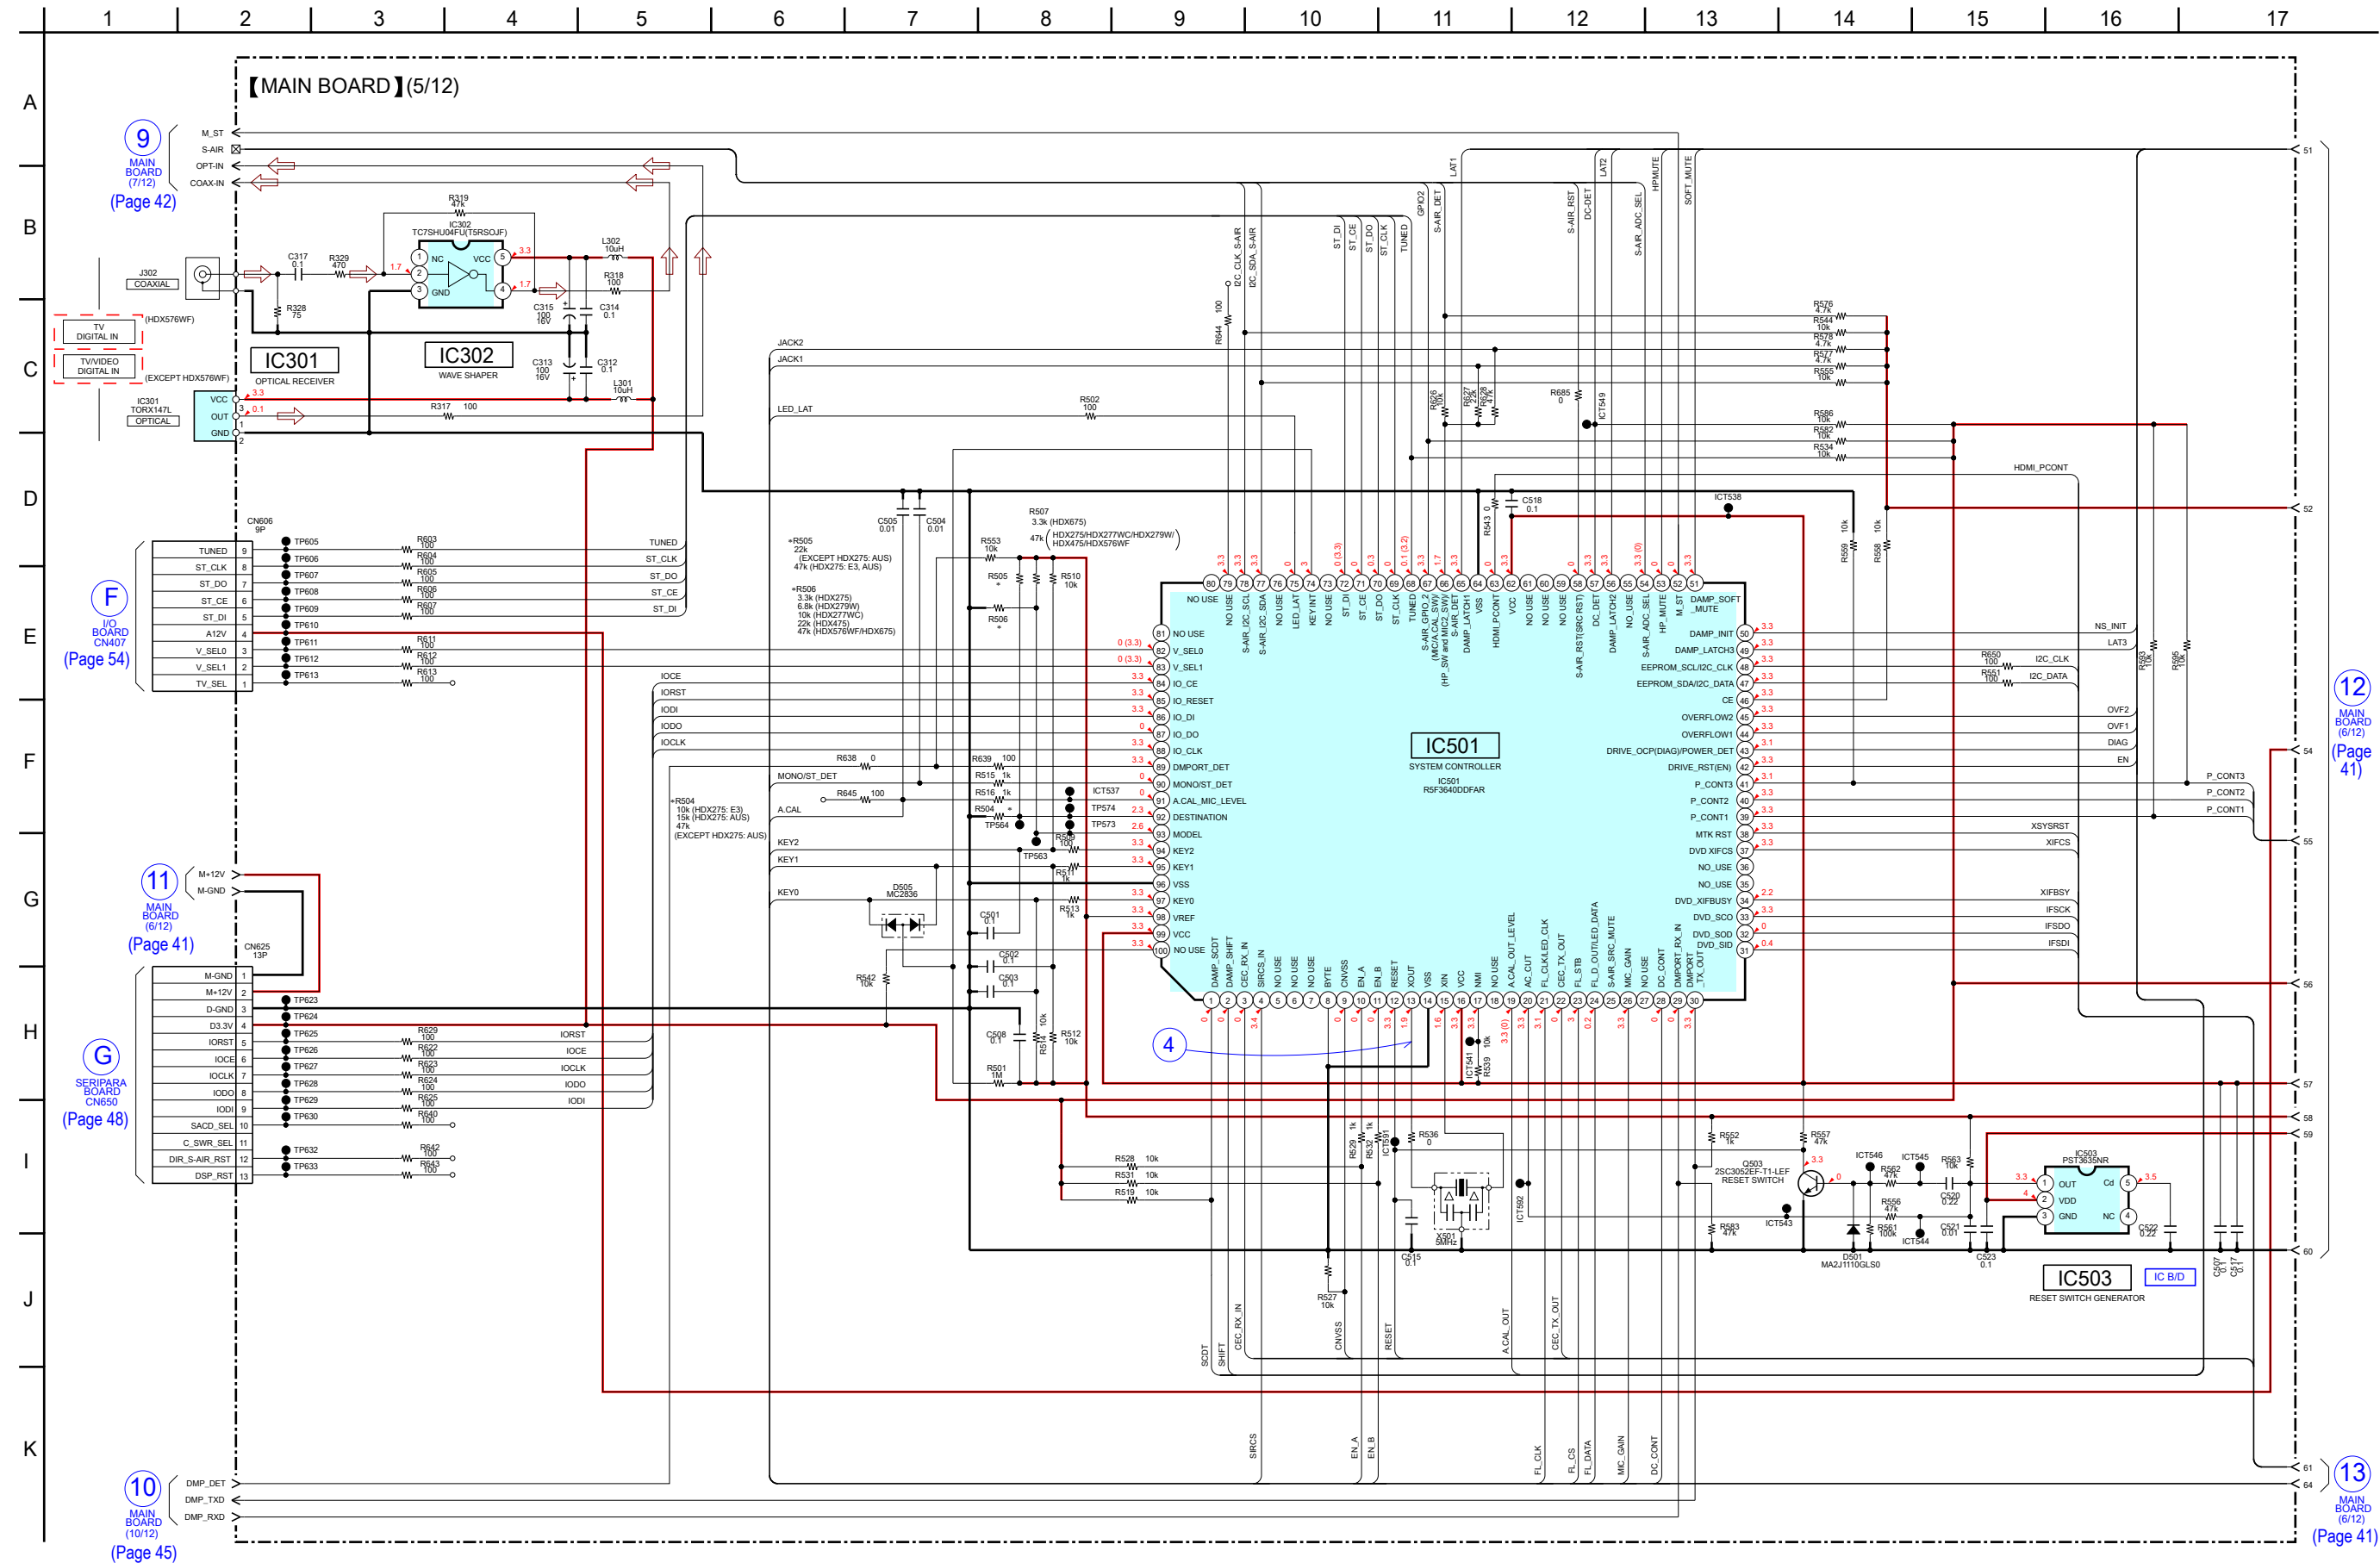


6-13. SCHEMATIC DIAGRAM - MAIN Board (6/12) - • See page 65 for IC Block Diagrams.

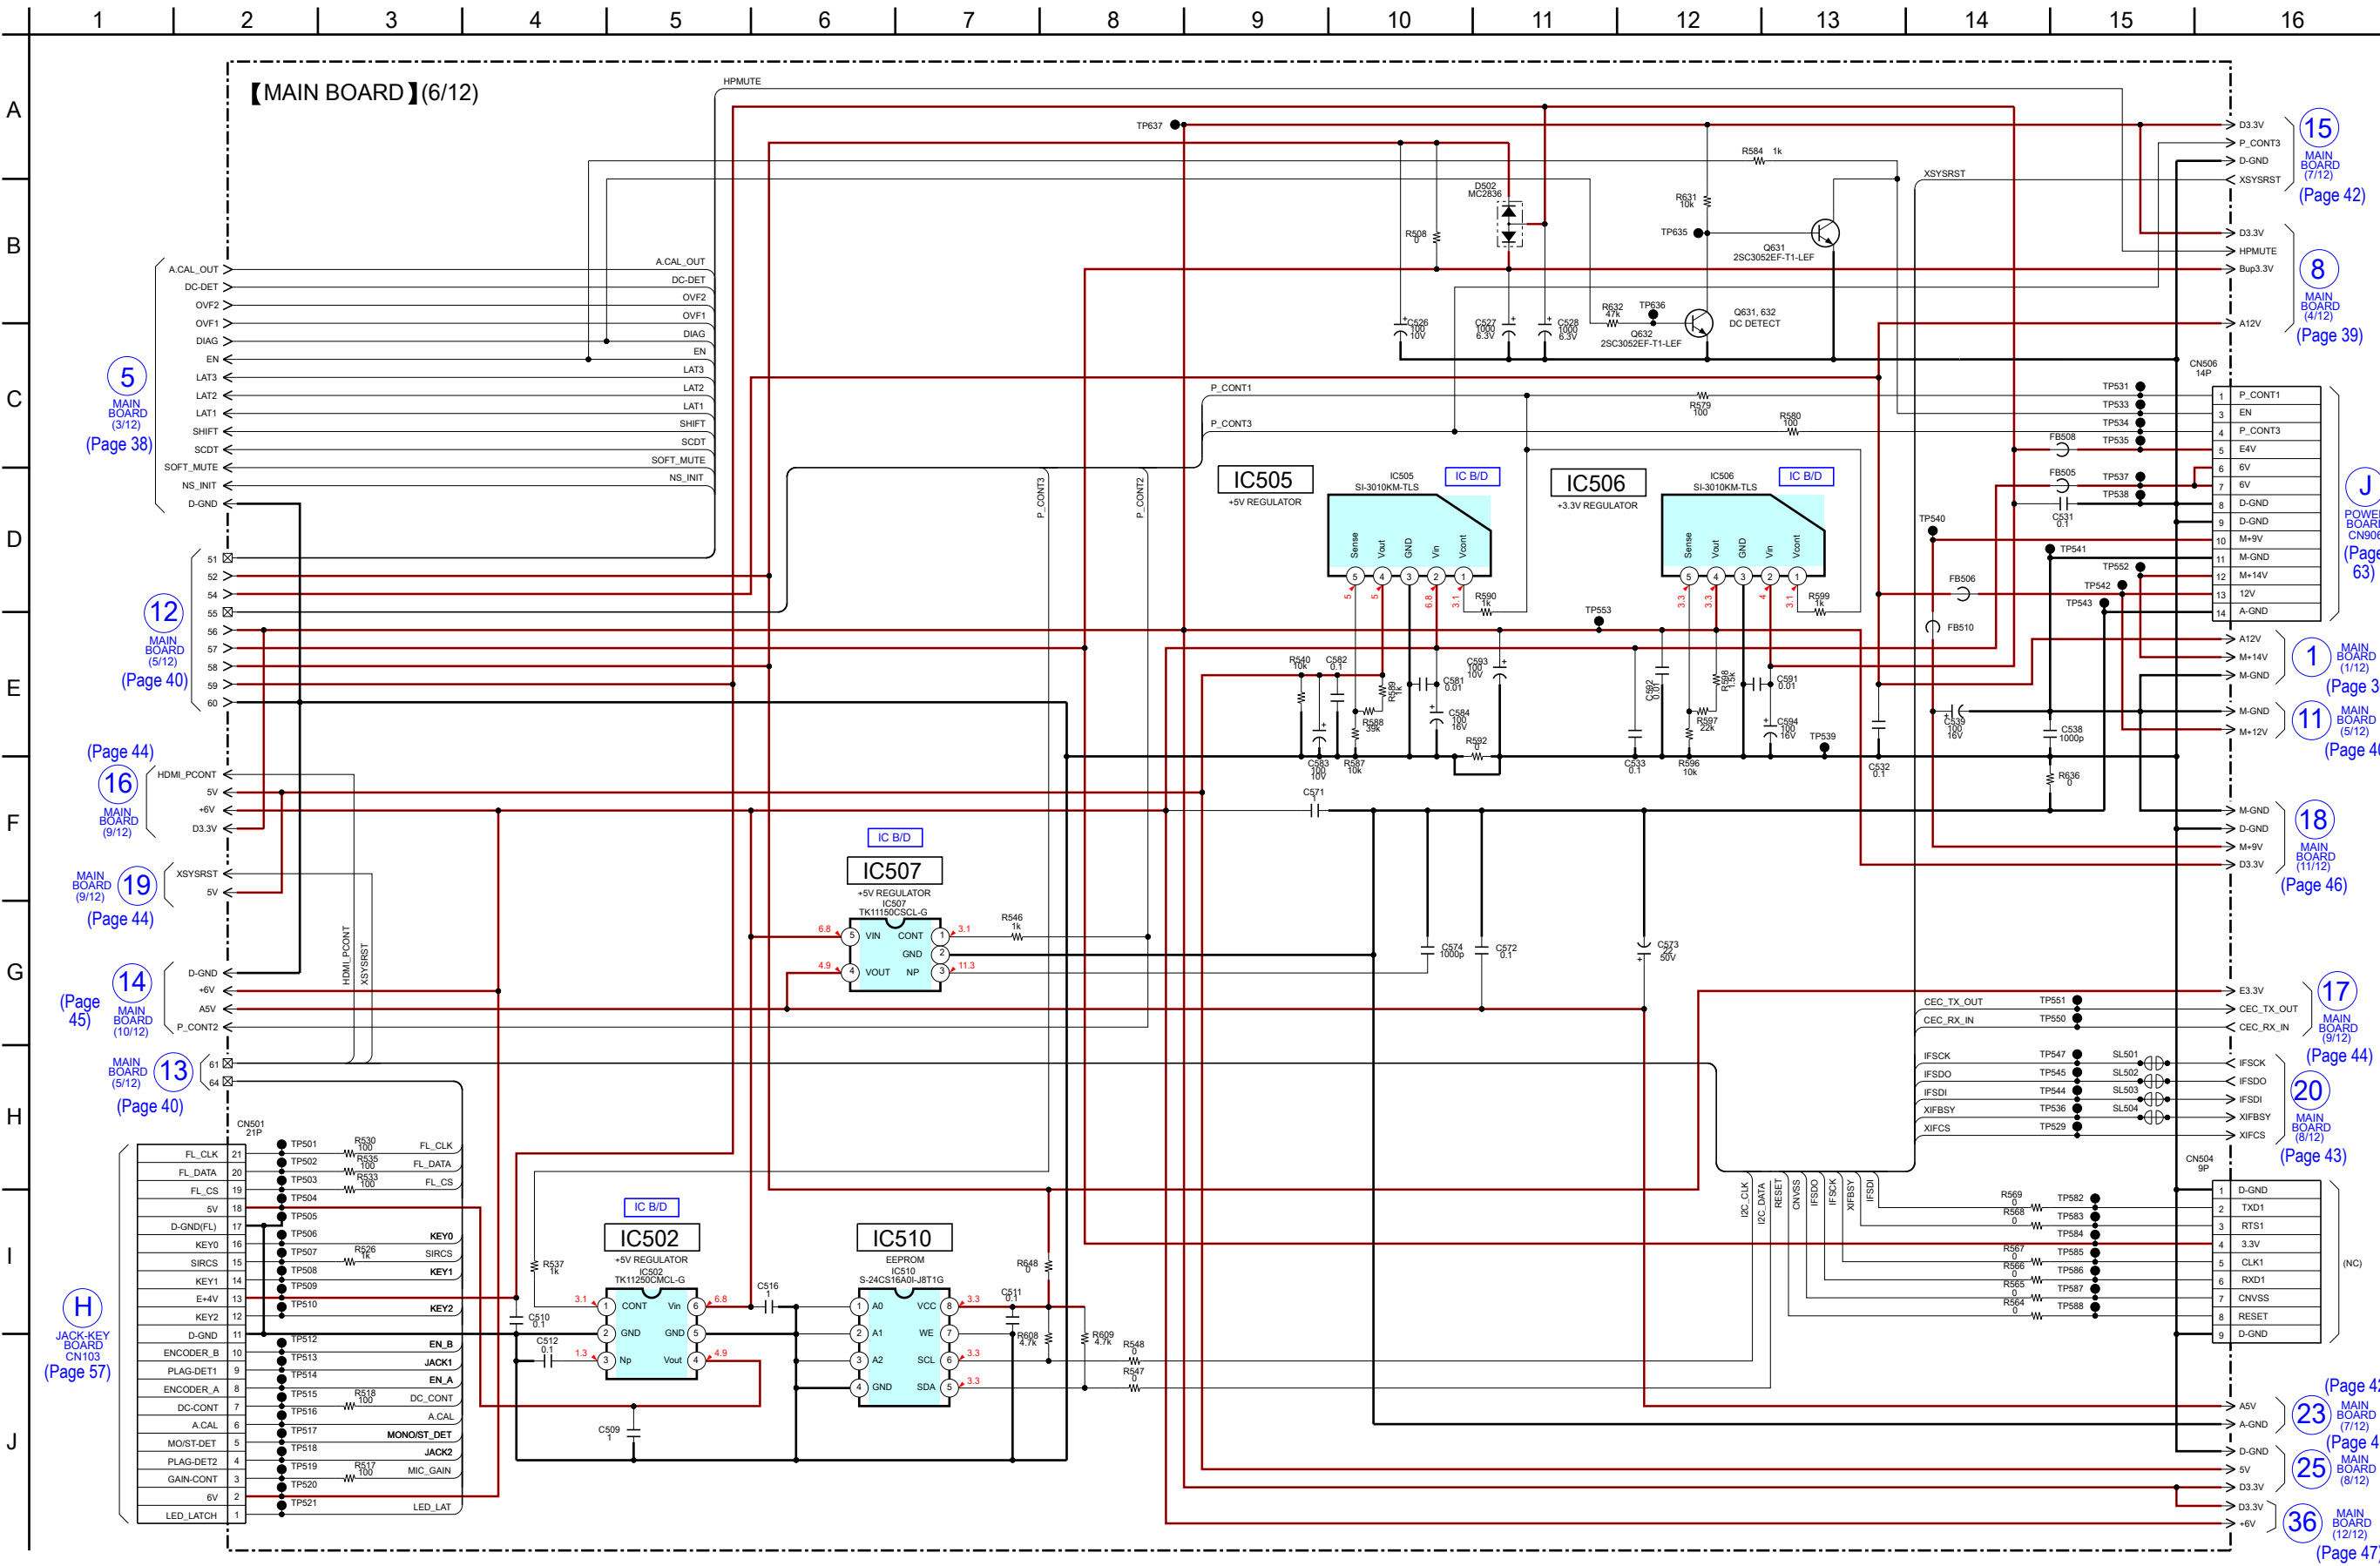


42




6-15. SCHEMATIC DIAGRAM - MAIN Board (8/12) - • See page 64 for Waveforms. • See page 65 for IC Block Diagrams. • See page 75 for IC Pin Function Description.

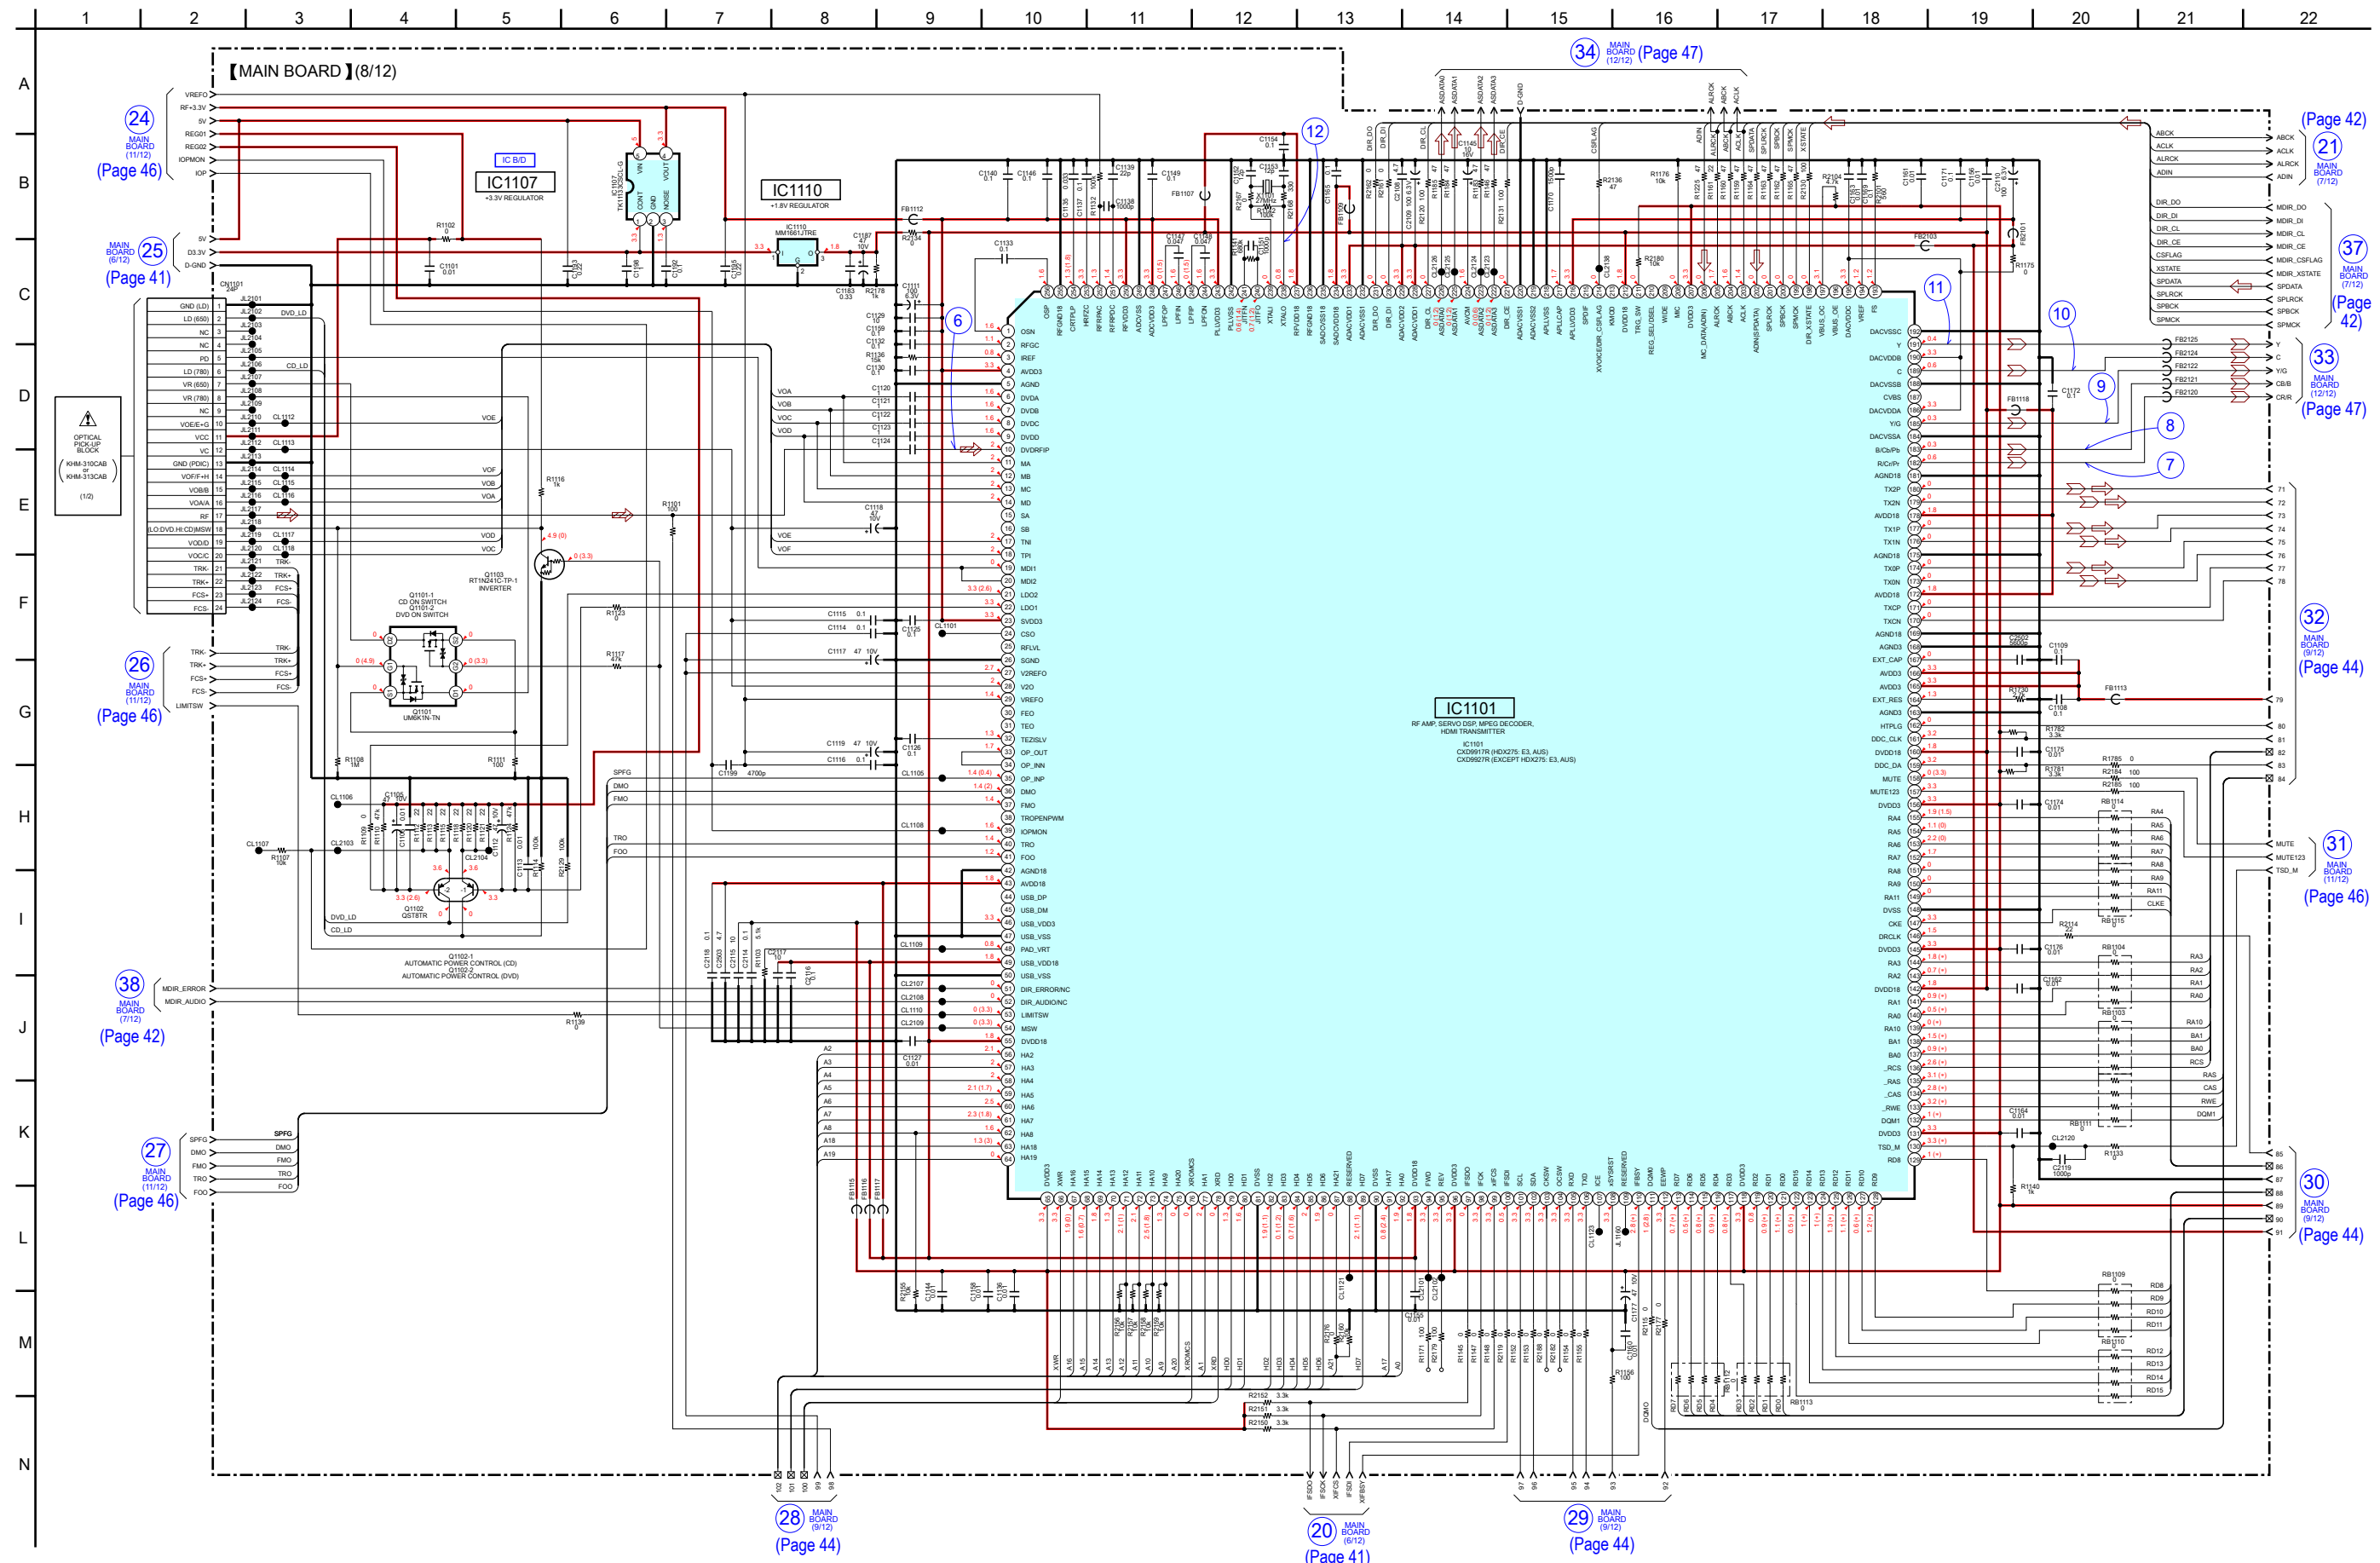


44 44

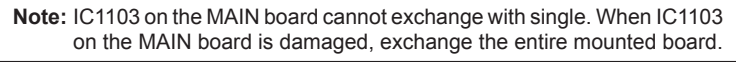


6-17. SCHEMATIC DIAGRAM - MAIN Board (10/12) - • See page 65 for IC Block Diagrams.

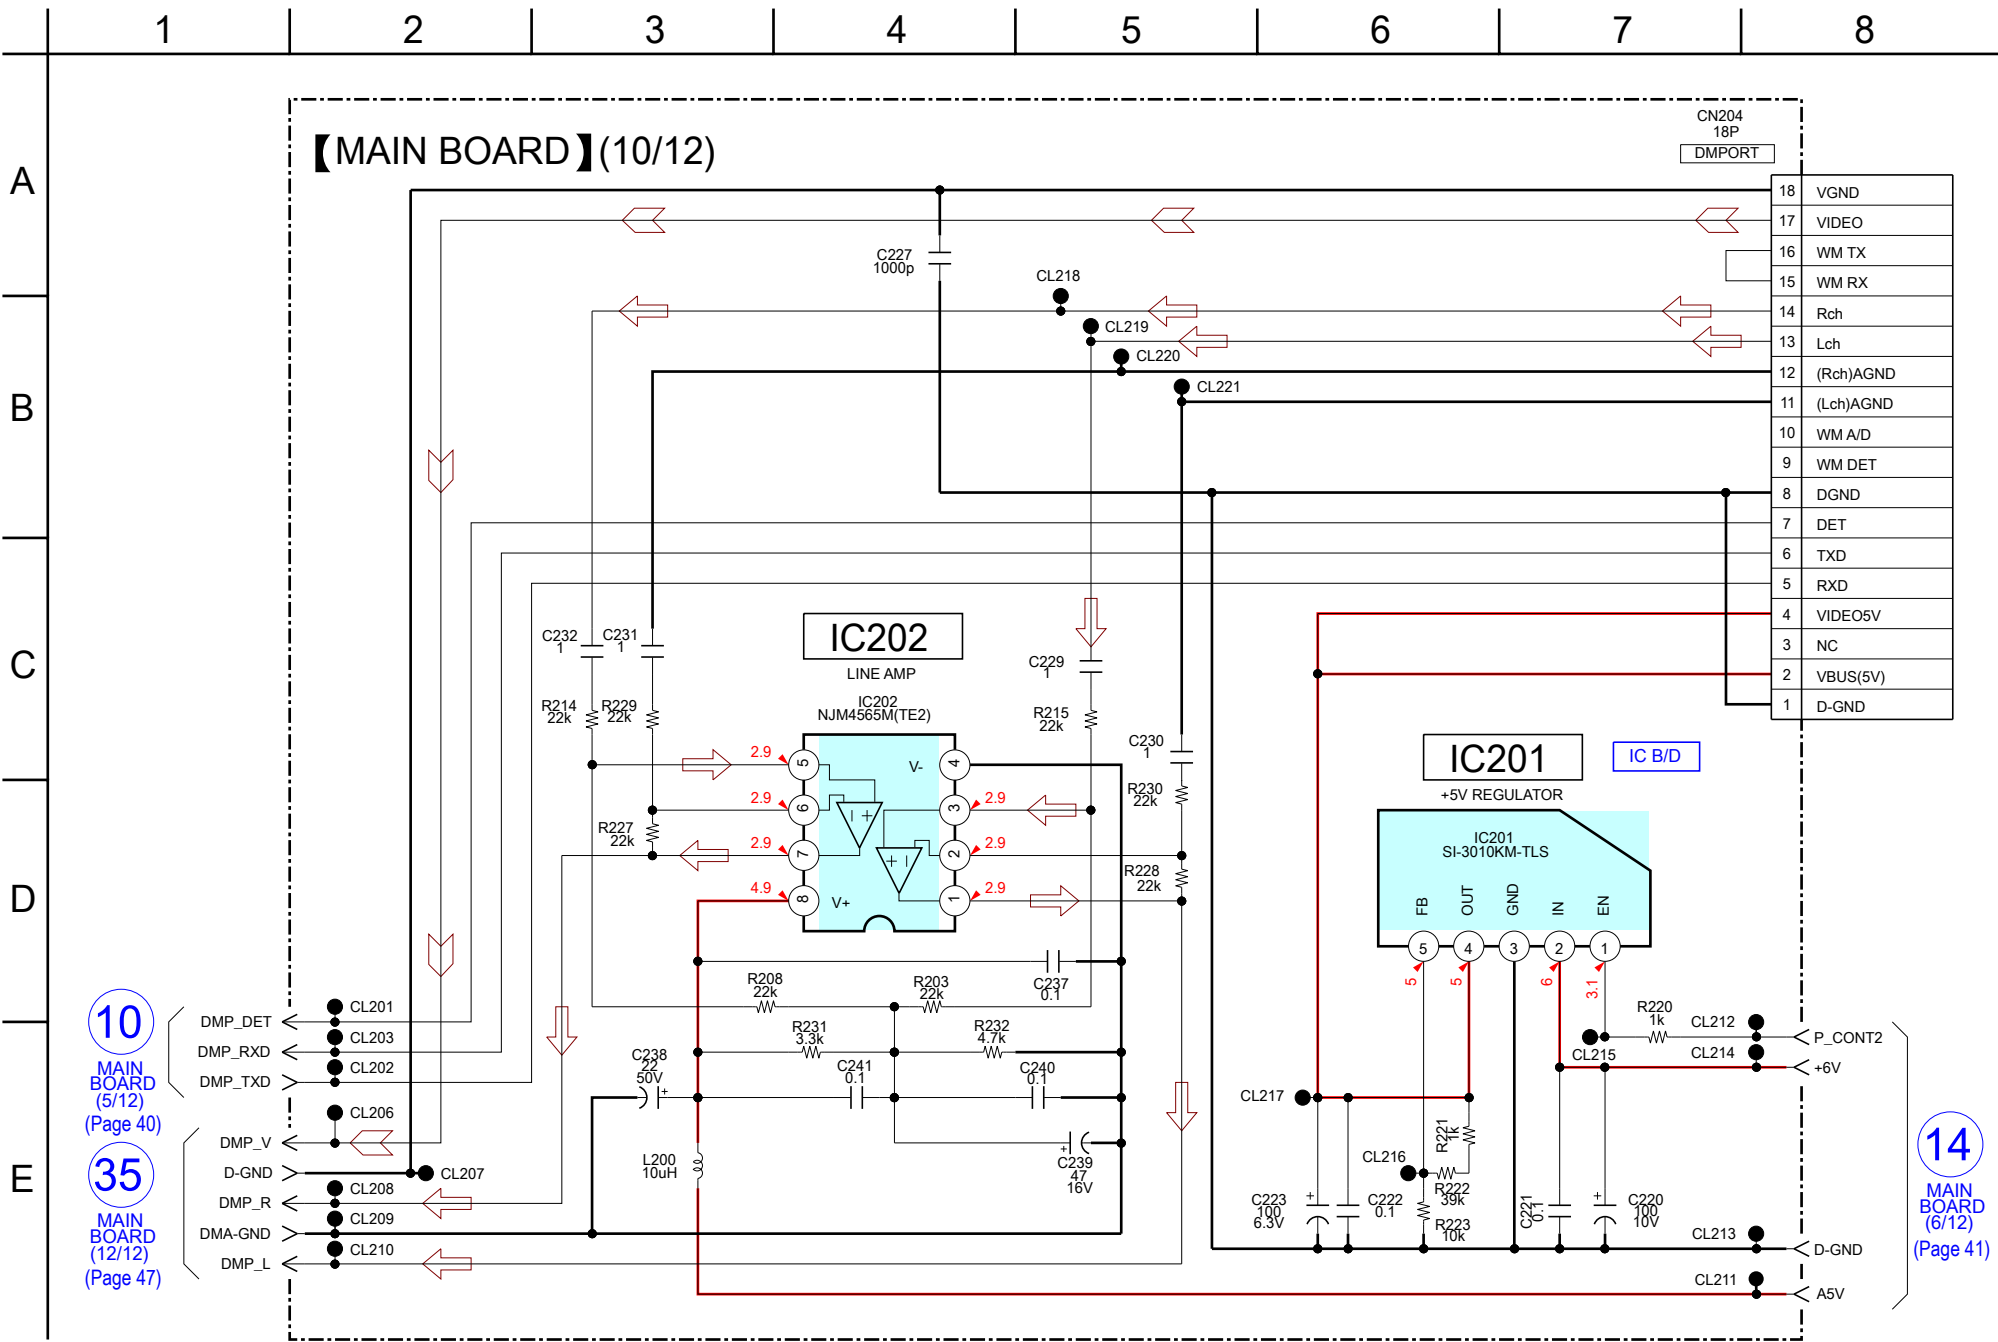

6-18. SCHEMATIC DIAGRAM - MAIN Board (11/12) -

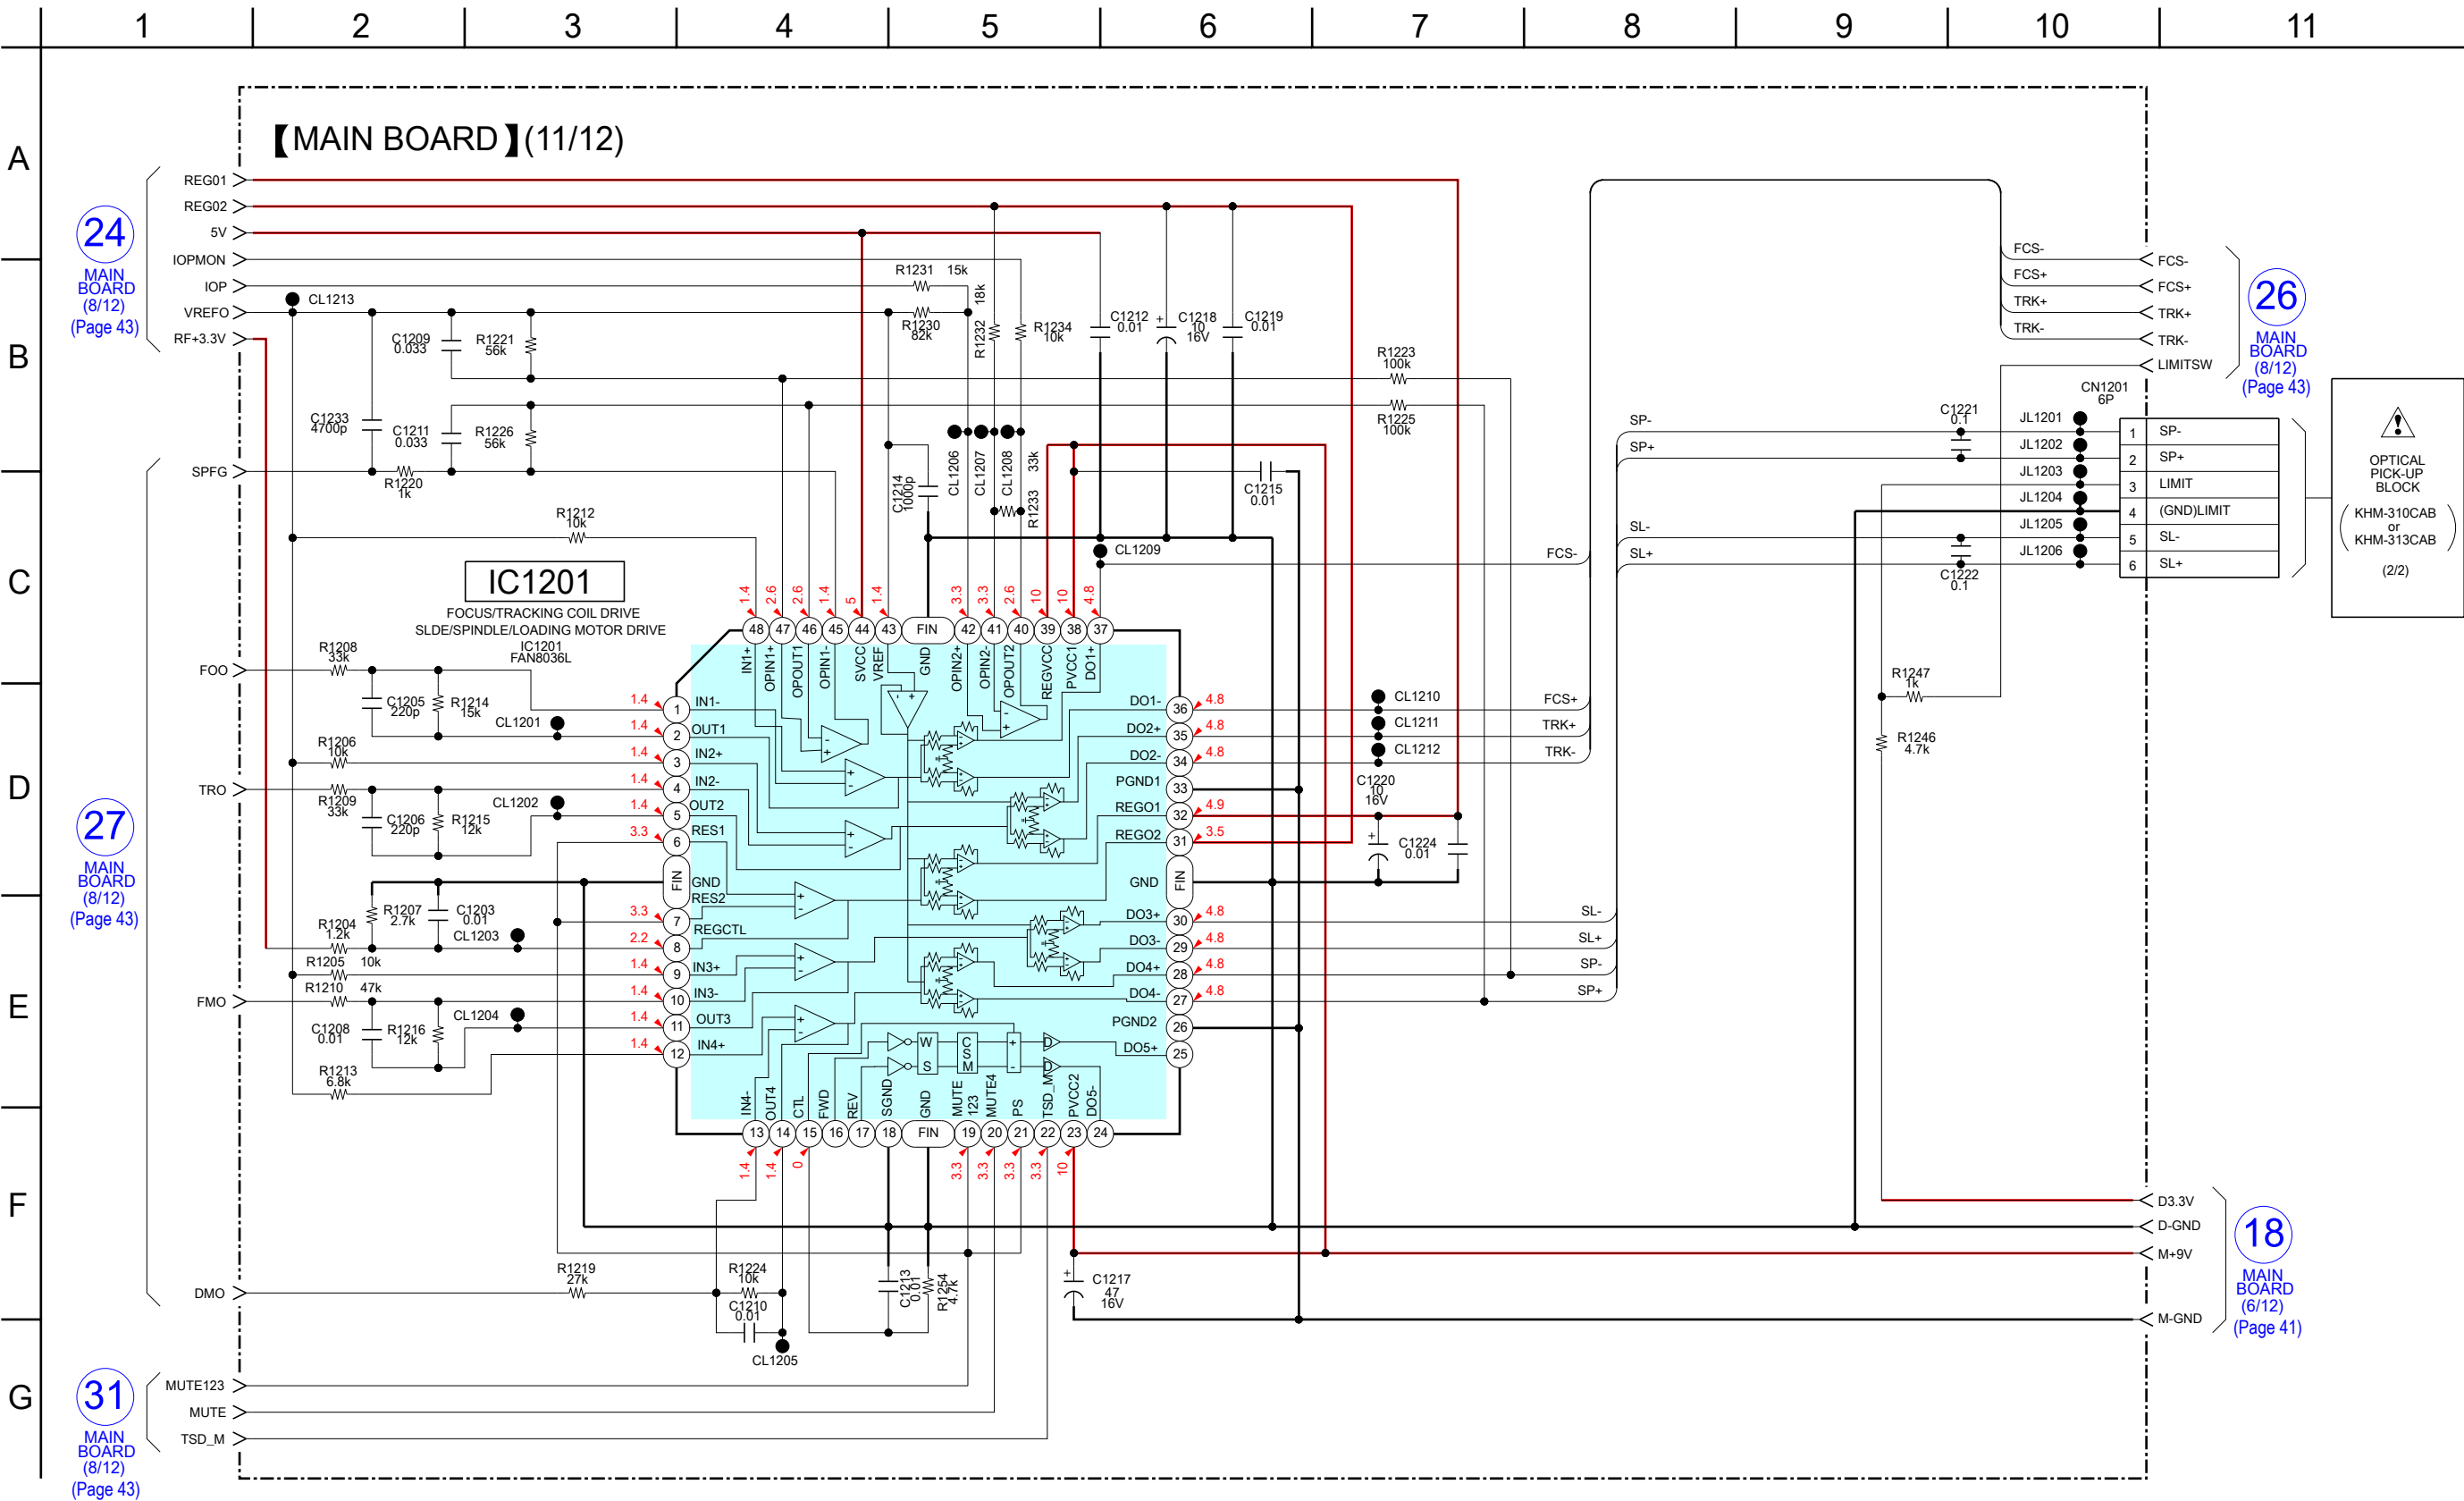


6-19. SCHEMATIC DIAGRAM - MAIN Board (12/12) -

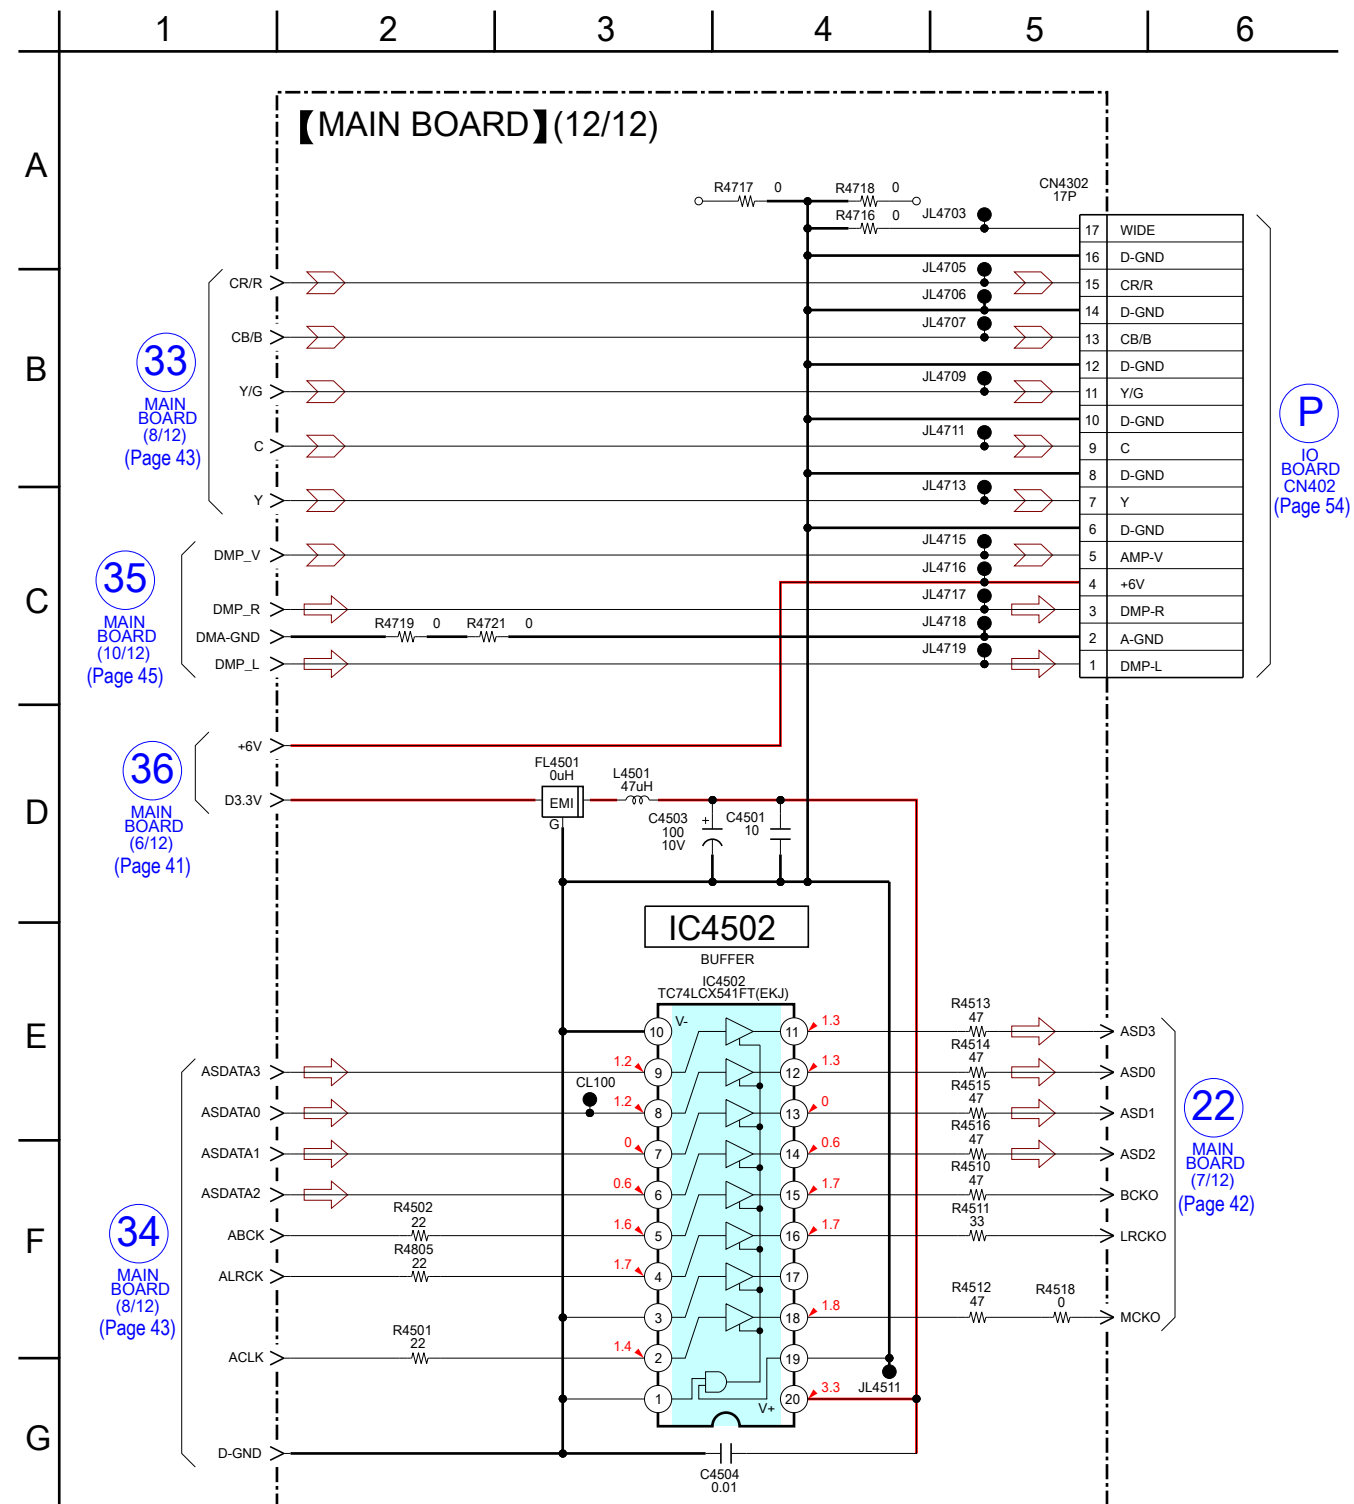

6-20. PRINTED WIRING BOARD - SERIPARA Board -

• See page 33 for Circuit Boards Location. •  : Uses unleaded solder.

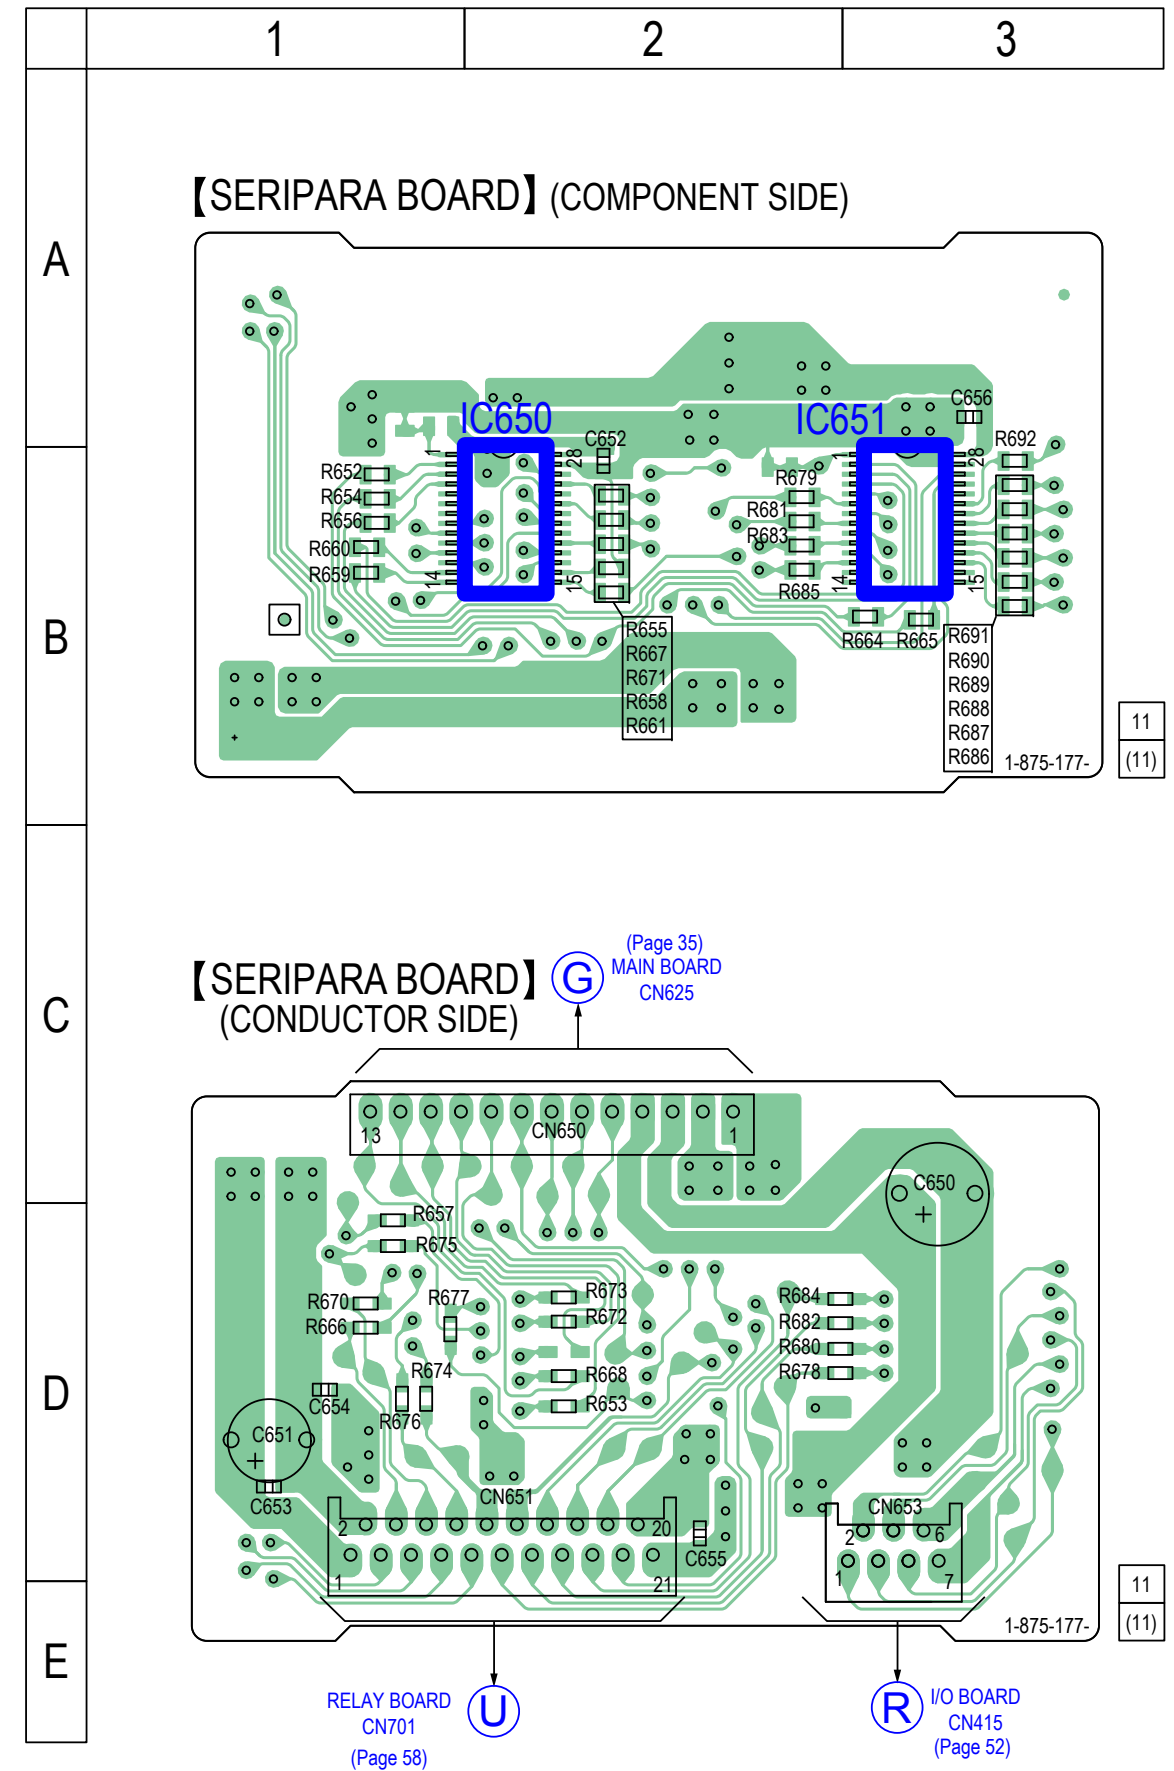


48




6-22. PRINTED WIRING BOARD - S-AIR CON Board (HDX275/HDX475/HDX675) -

• See page 33 for Circuit Boards Location. •  : Uses unleaded solder.

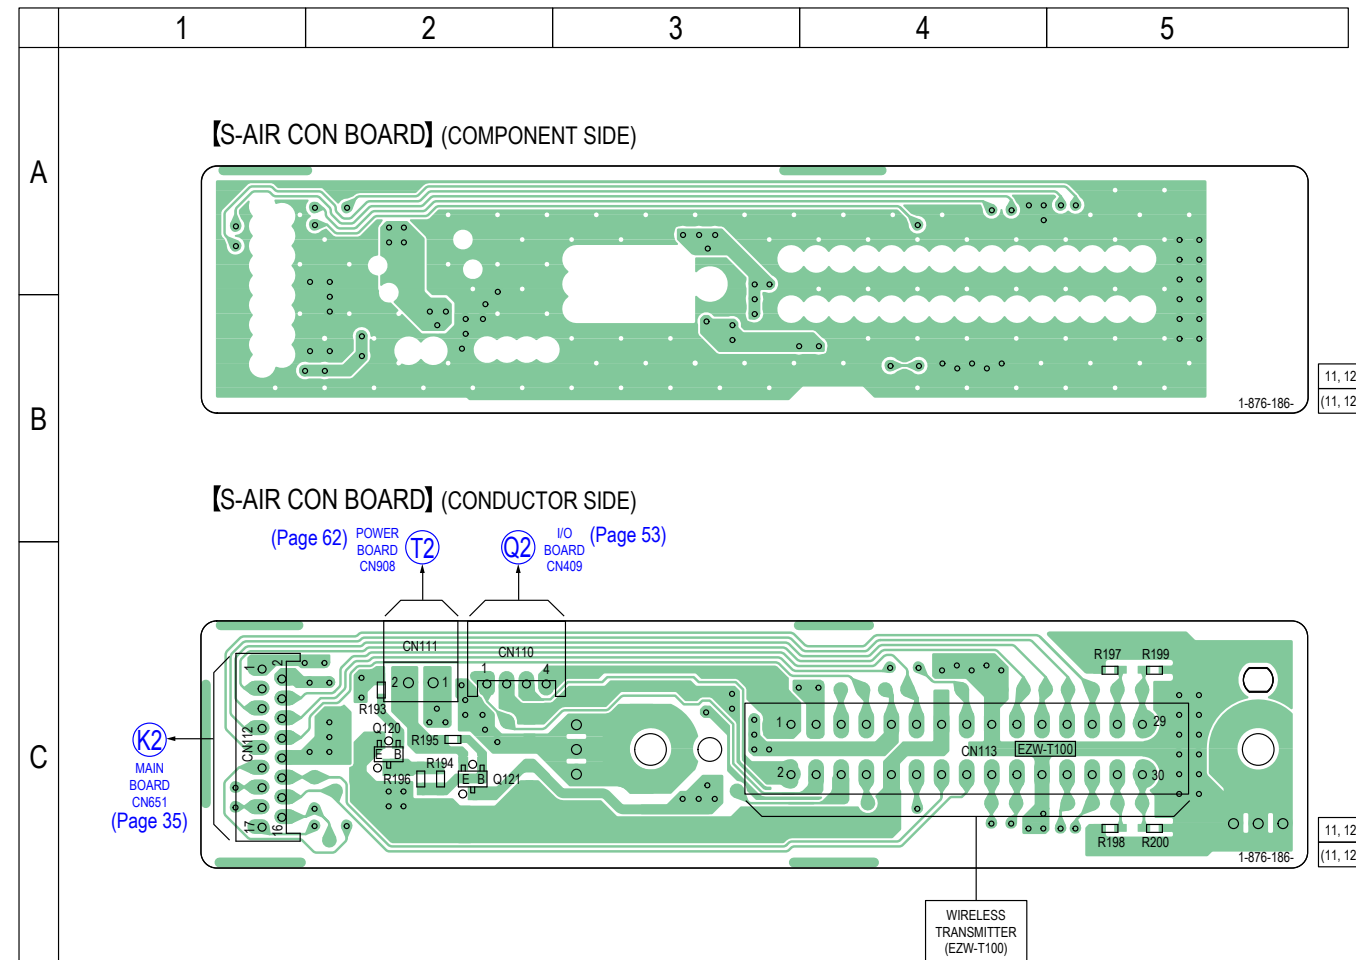


6-23. SCHEMATIC DIAGRAM - S-AIR CON Board (HDX275/HDX475/HDX675) -

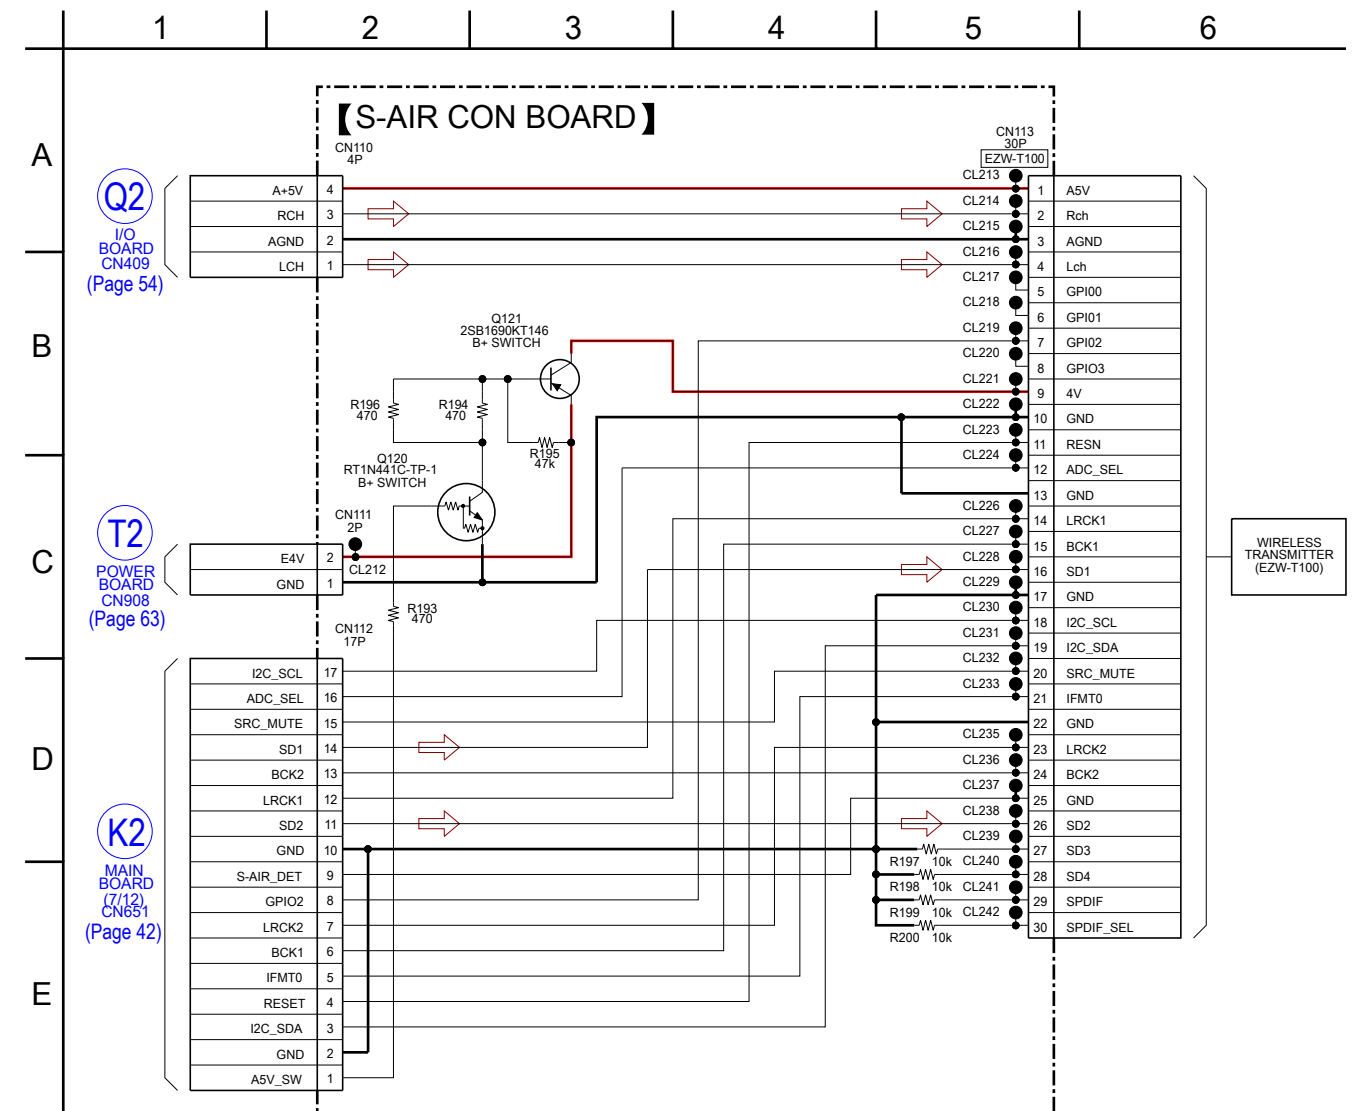


6-24. PRINTED WIRING BOARD - S-AIR INC Board (HDX277WC/HDX279W/HDX576WF) -
• See page 33 for Circuit Boards Location. •  : Uses unleaded solder.


• Semiconductor Location

Ref. No.	Location
D800	D-4
IC800	D-2
IC801	B-4
IC802	B-3
IC803	A-4
IC804	A-4
IC805	B-4
IC806	B-2

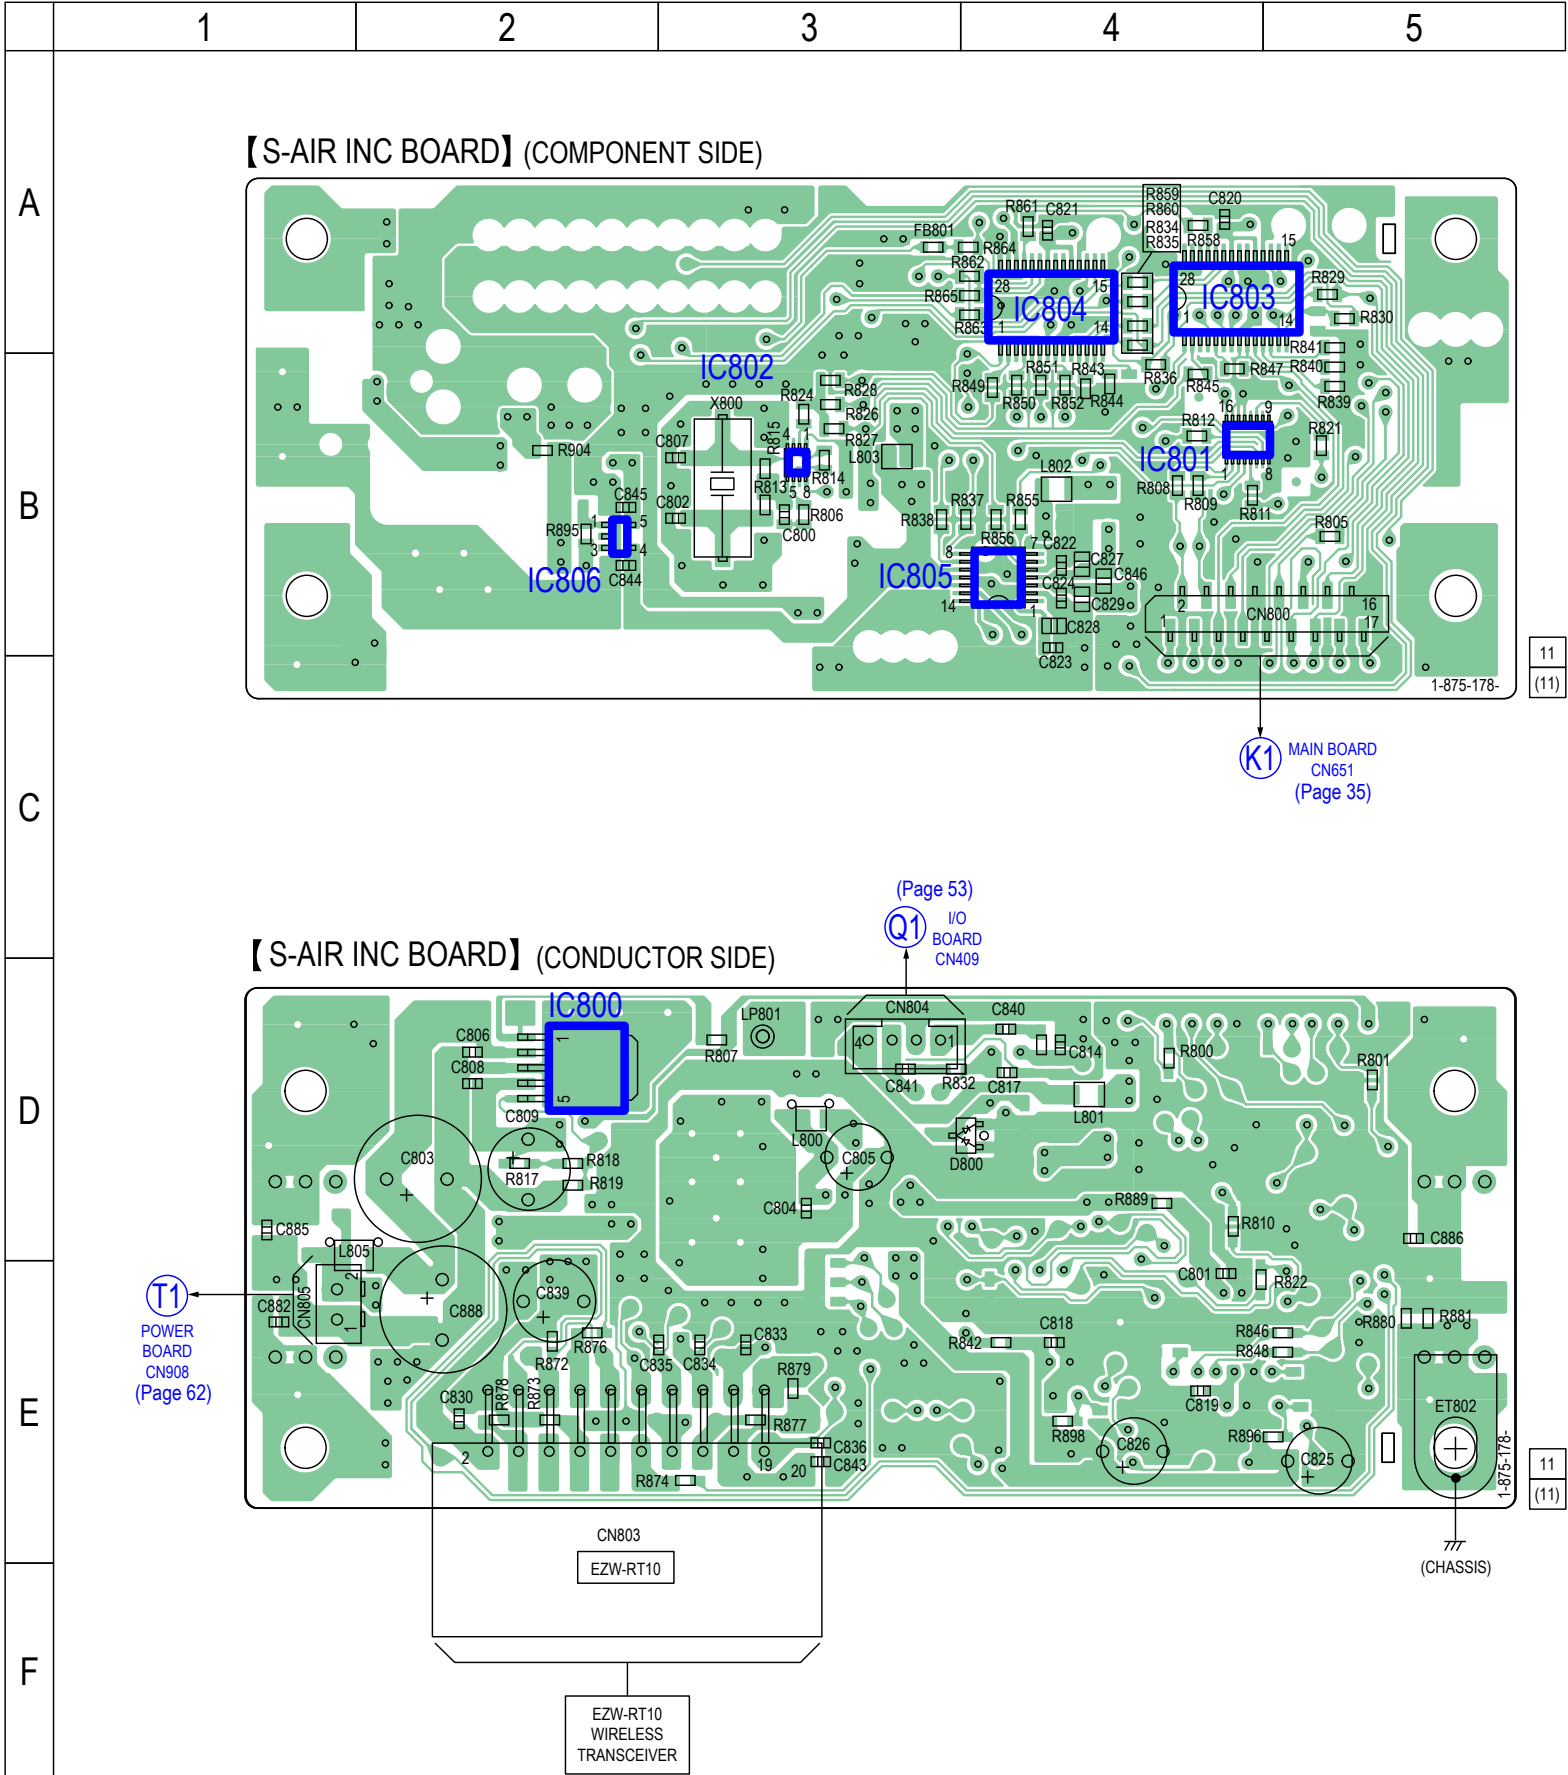

 


6-26. PRINTED WIRING BOARD - I/O Board (Component Side) - • See page 33 for Circuit Boards Location. •  : Uses unleaded solder.

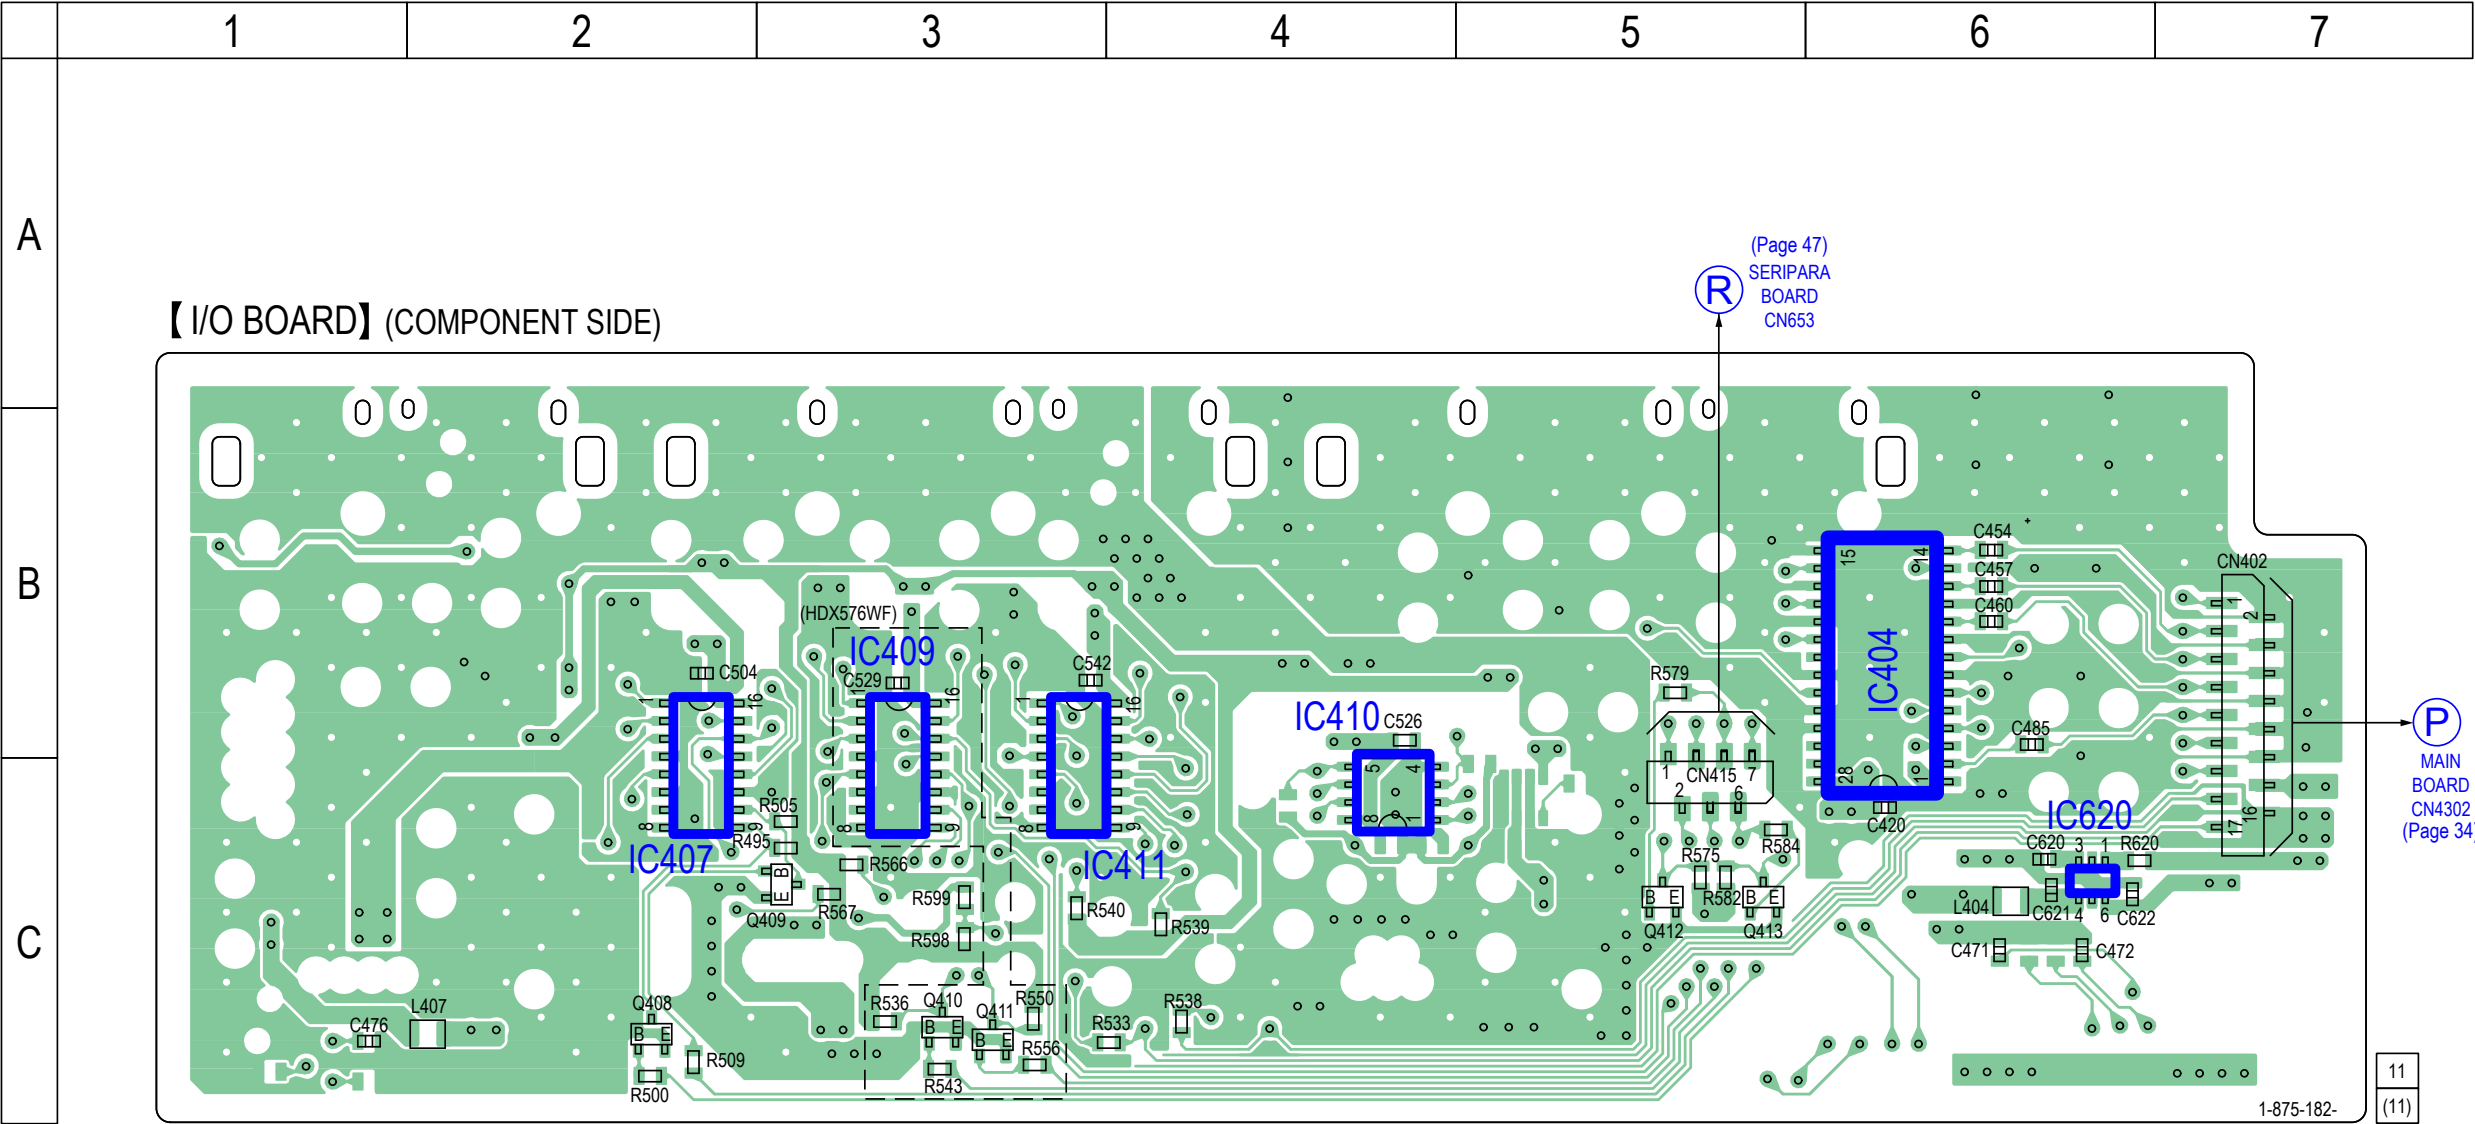

• Semiconductor Location

Ref. No.	Location
IC404	B-6
IC407	C-2
IC409	C-3
IC410	C-4
IC411	C-3
IC620	C-6
Q408	C-2
Q409	C-3
Q410	C-3
Q411	C-3
Q412	C-4
Q413	C-4

6-27. PRINTED WIRING BOARD - I/O Board (Conductor Side) - • See page 33 for Circuit Boards Location. •  : Uses unleaded solder.

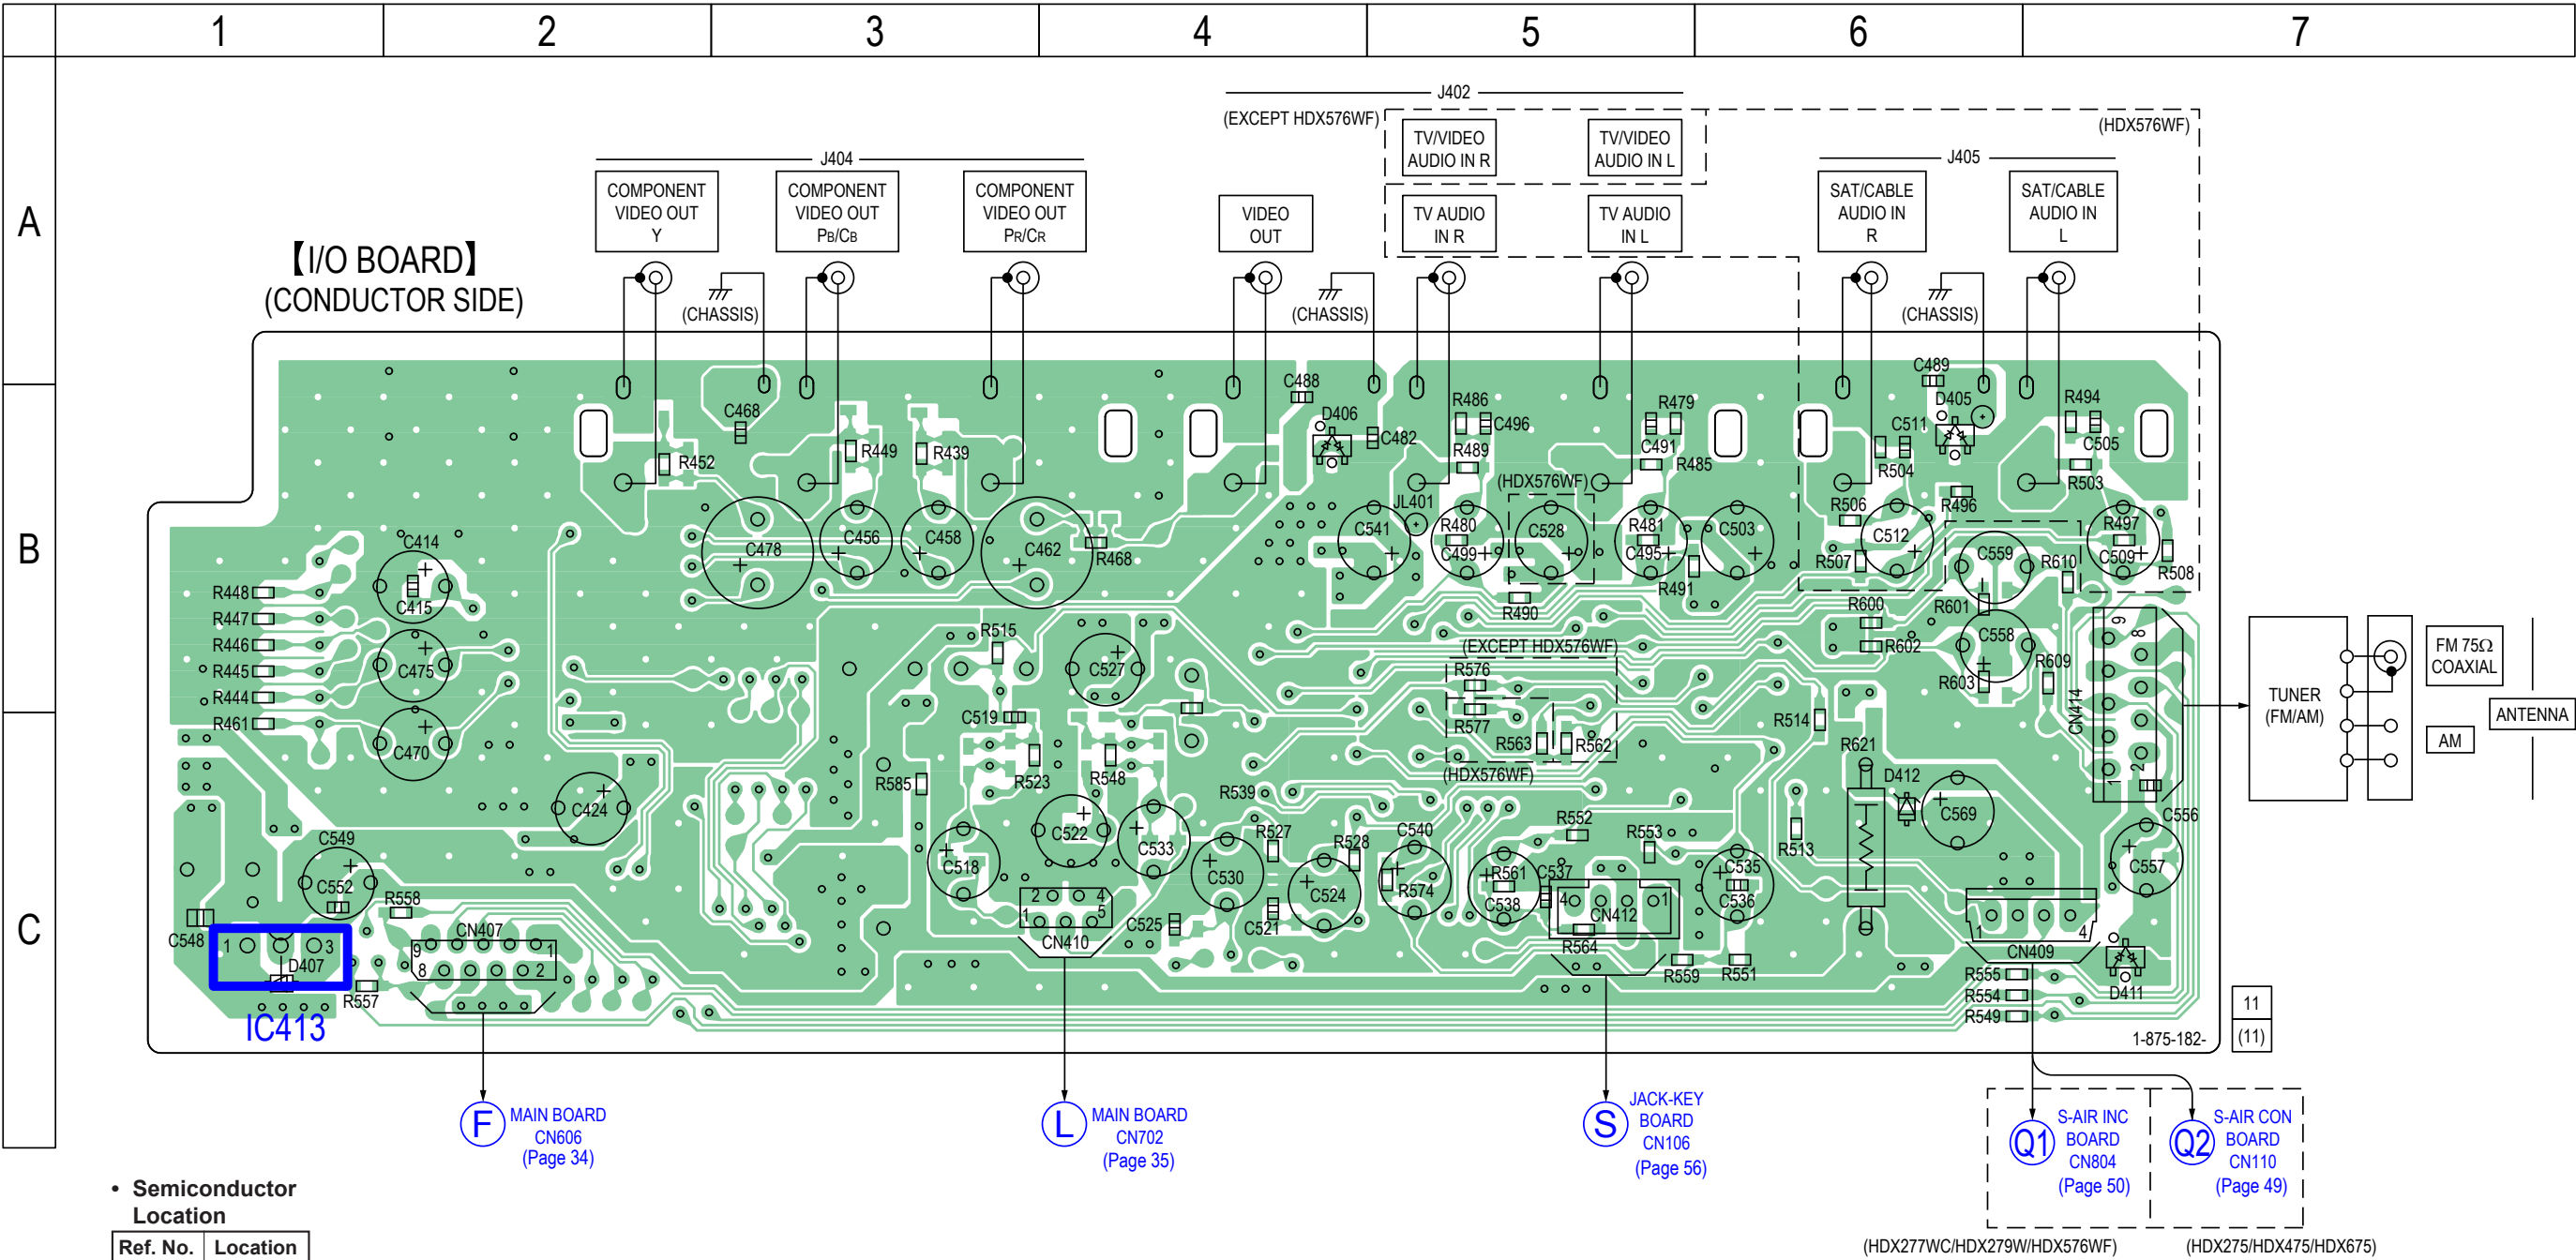

• Semiconductor Location


Ref. No.	Location
D405	B-6
D406	B-4
D407	C-1
D411	C-7
D412	C-6
IC413	C-1

54 54




6-29. PRINTED WIRING BOARD - SPEAKER Board -


• See page 33 for Circuit Boards Location. •  : Uses unleaded solder.

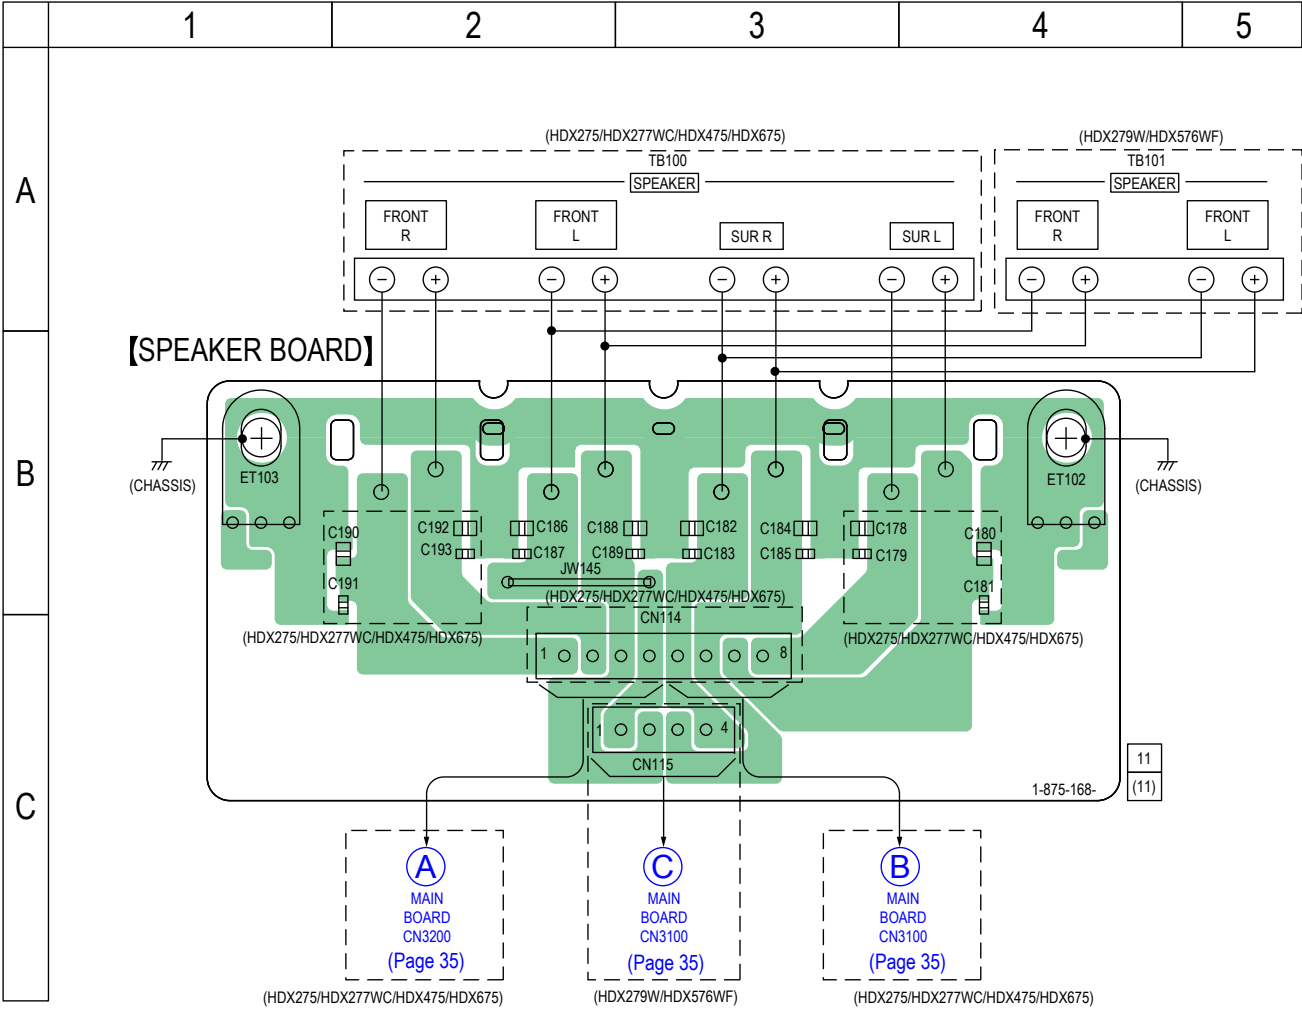

6-30. SCHEMATIC DIAGRAM - SPEAKER Board -

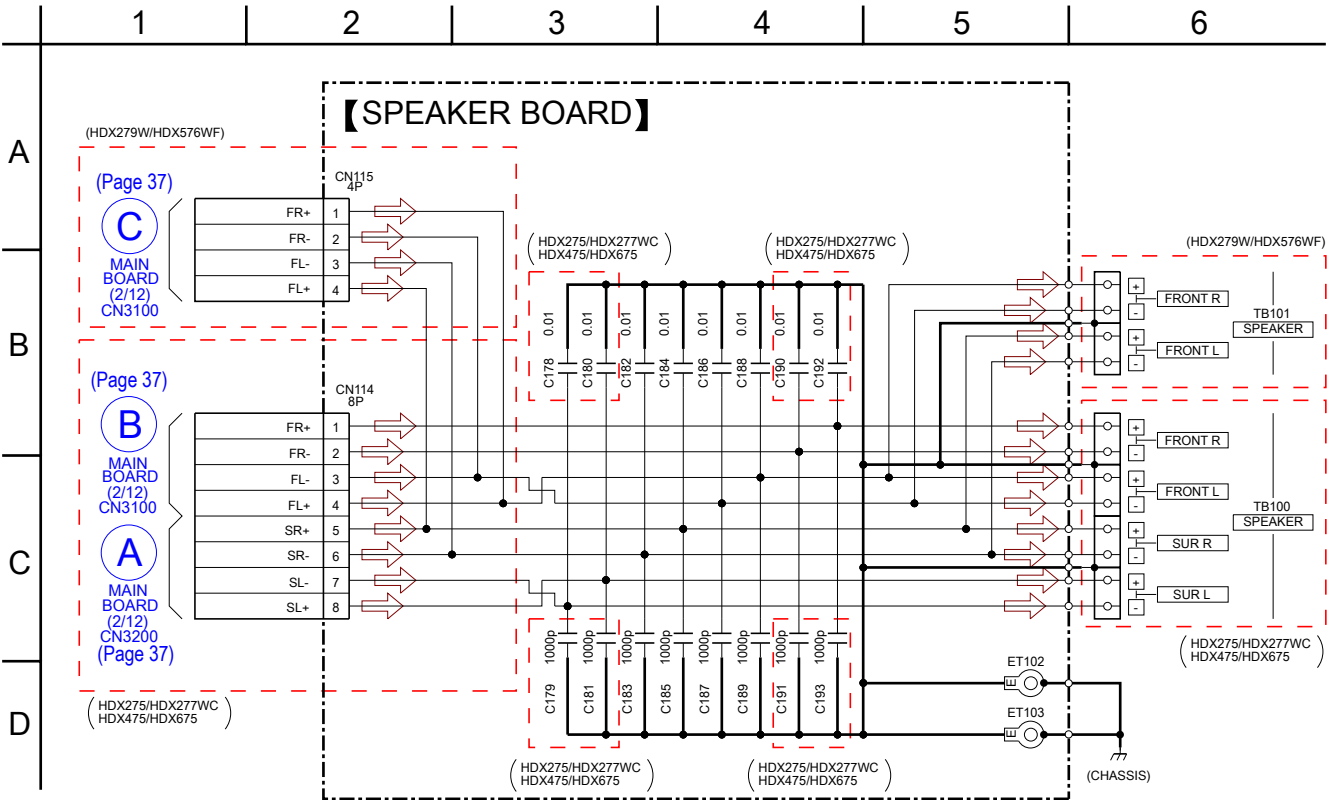


6-31. PRINTED WIRING BOARDS - JACK-KEY Section - • See page 33 for Circuit Boards Location. •  : Uses unleaded solder.

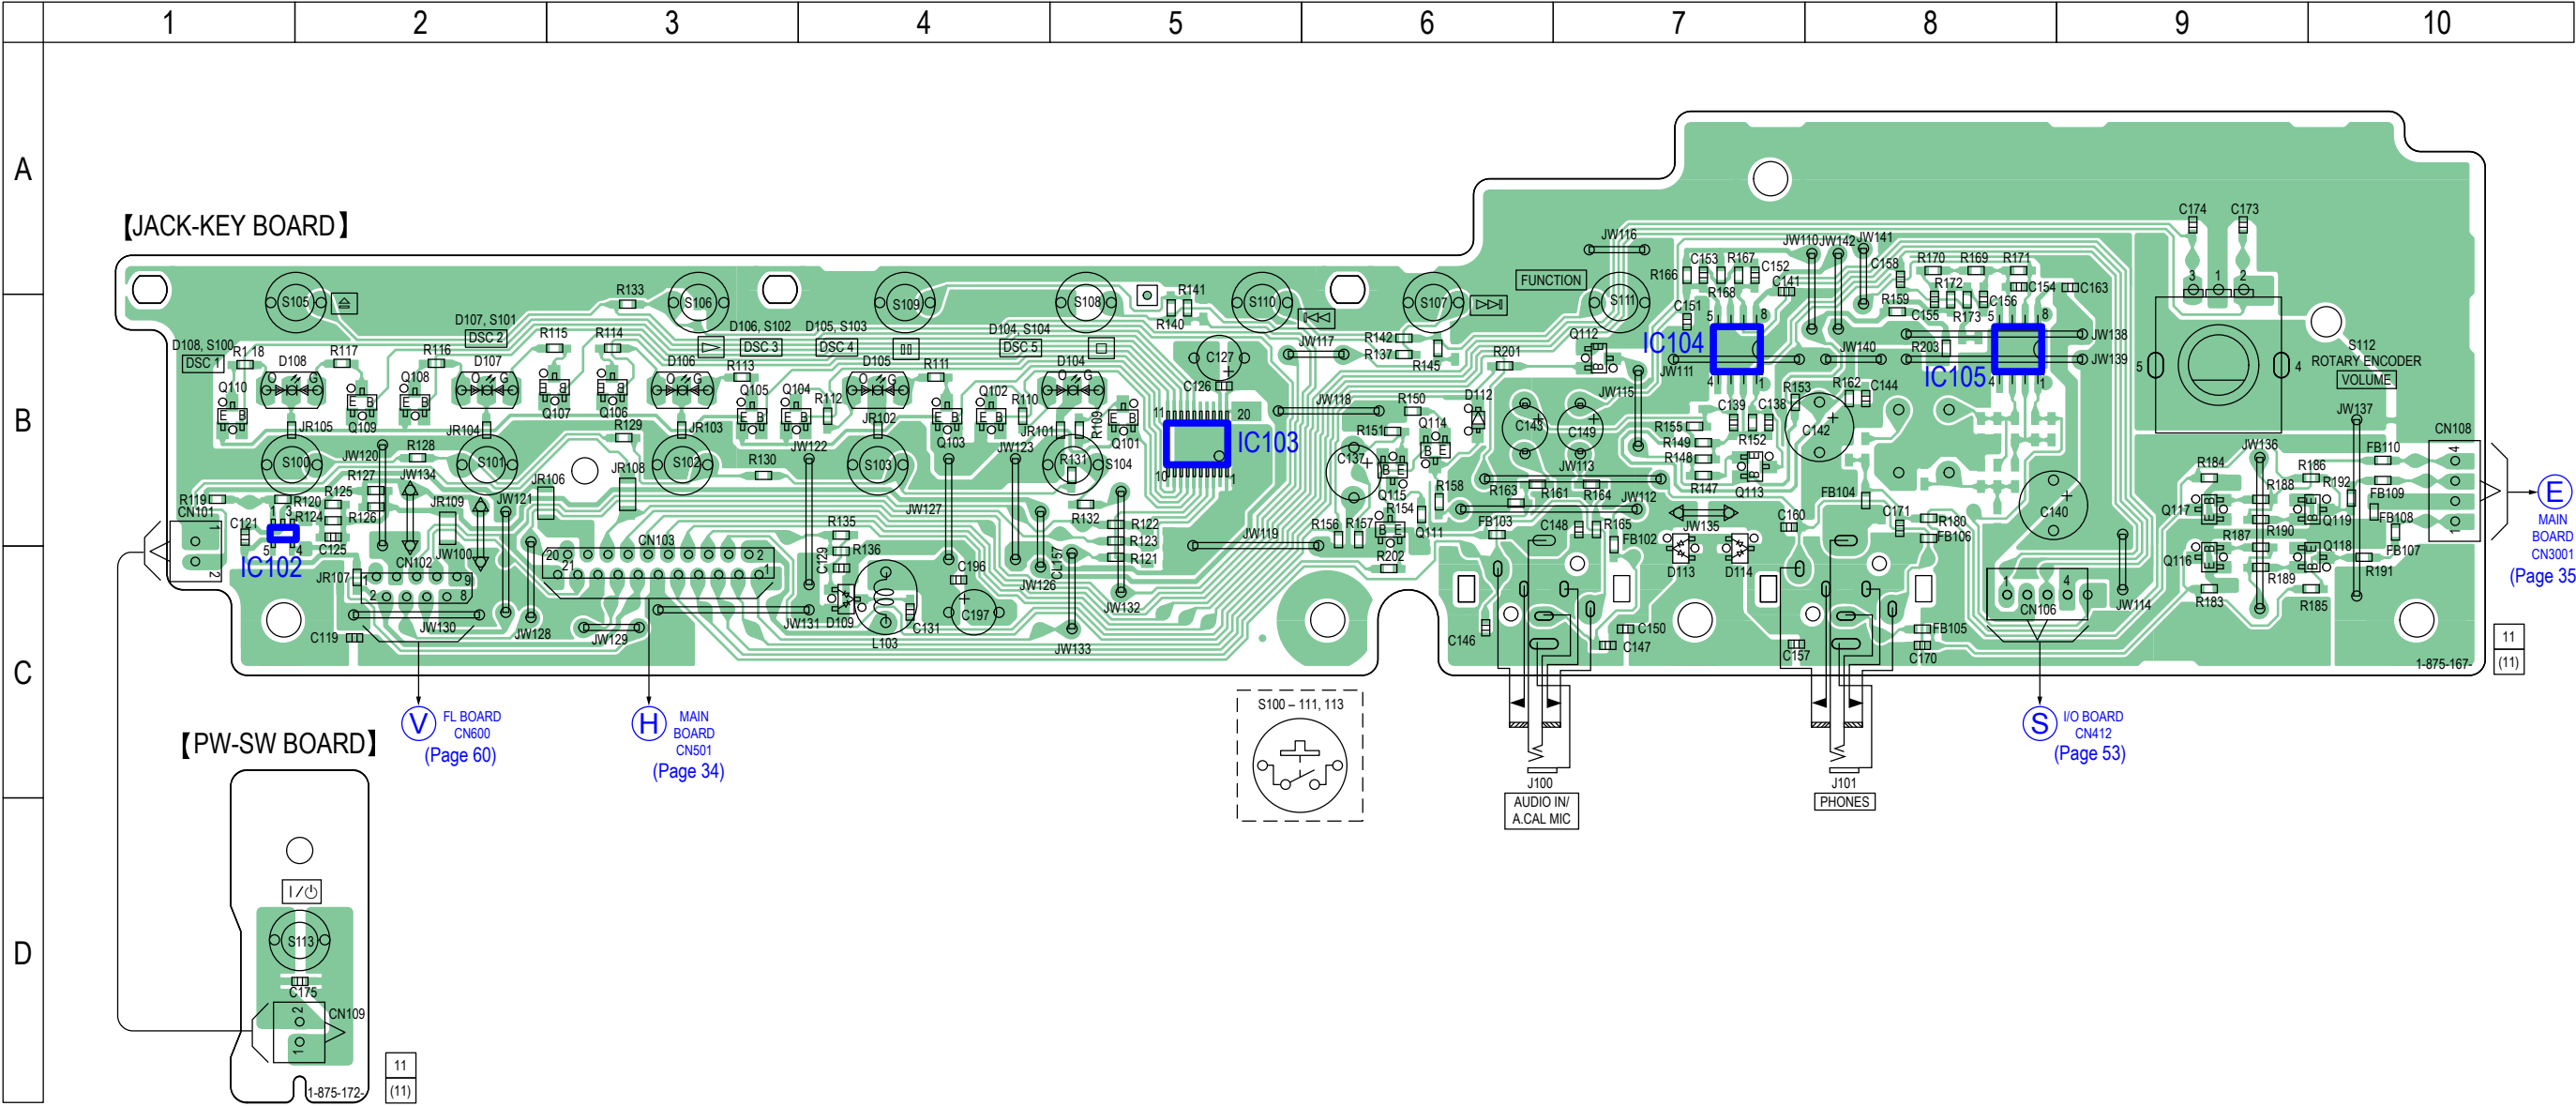


• Semiconductor Location

Ref. No.	Location	Ref. No.	Location
D104	B-5	Q103	B-4
D105	B-4	Q104	B-3
D106	B-3	Q105	B-3
D107	B-2	Q106	B-3
D108	B-1	Q107	B-3
D109	C-4	Q108	B-3
D112	B-6	Q109	B-3
D113	C-7	Q110	B-1
D114	C-7	Q111	B-6
		Q112	B-7
		Q113	B-7
IC102	B-1	Q114	B-6
IC103	B-5	Q115	B-6
IC104	B-7	Q116	C-9
IC105	B-8	Q117	B-9
Q101	B-5	Q118	C-10
Q102	B-4	Q119	B-10


6-32. SCHEMATIC DIAGRAM - JACK-KEY Section - • See page 65 for IC Block Diagrams.

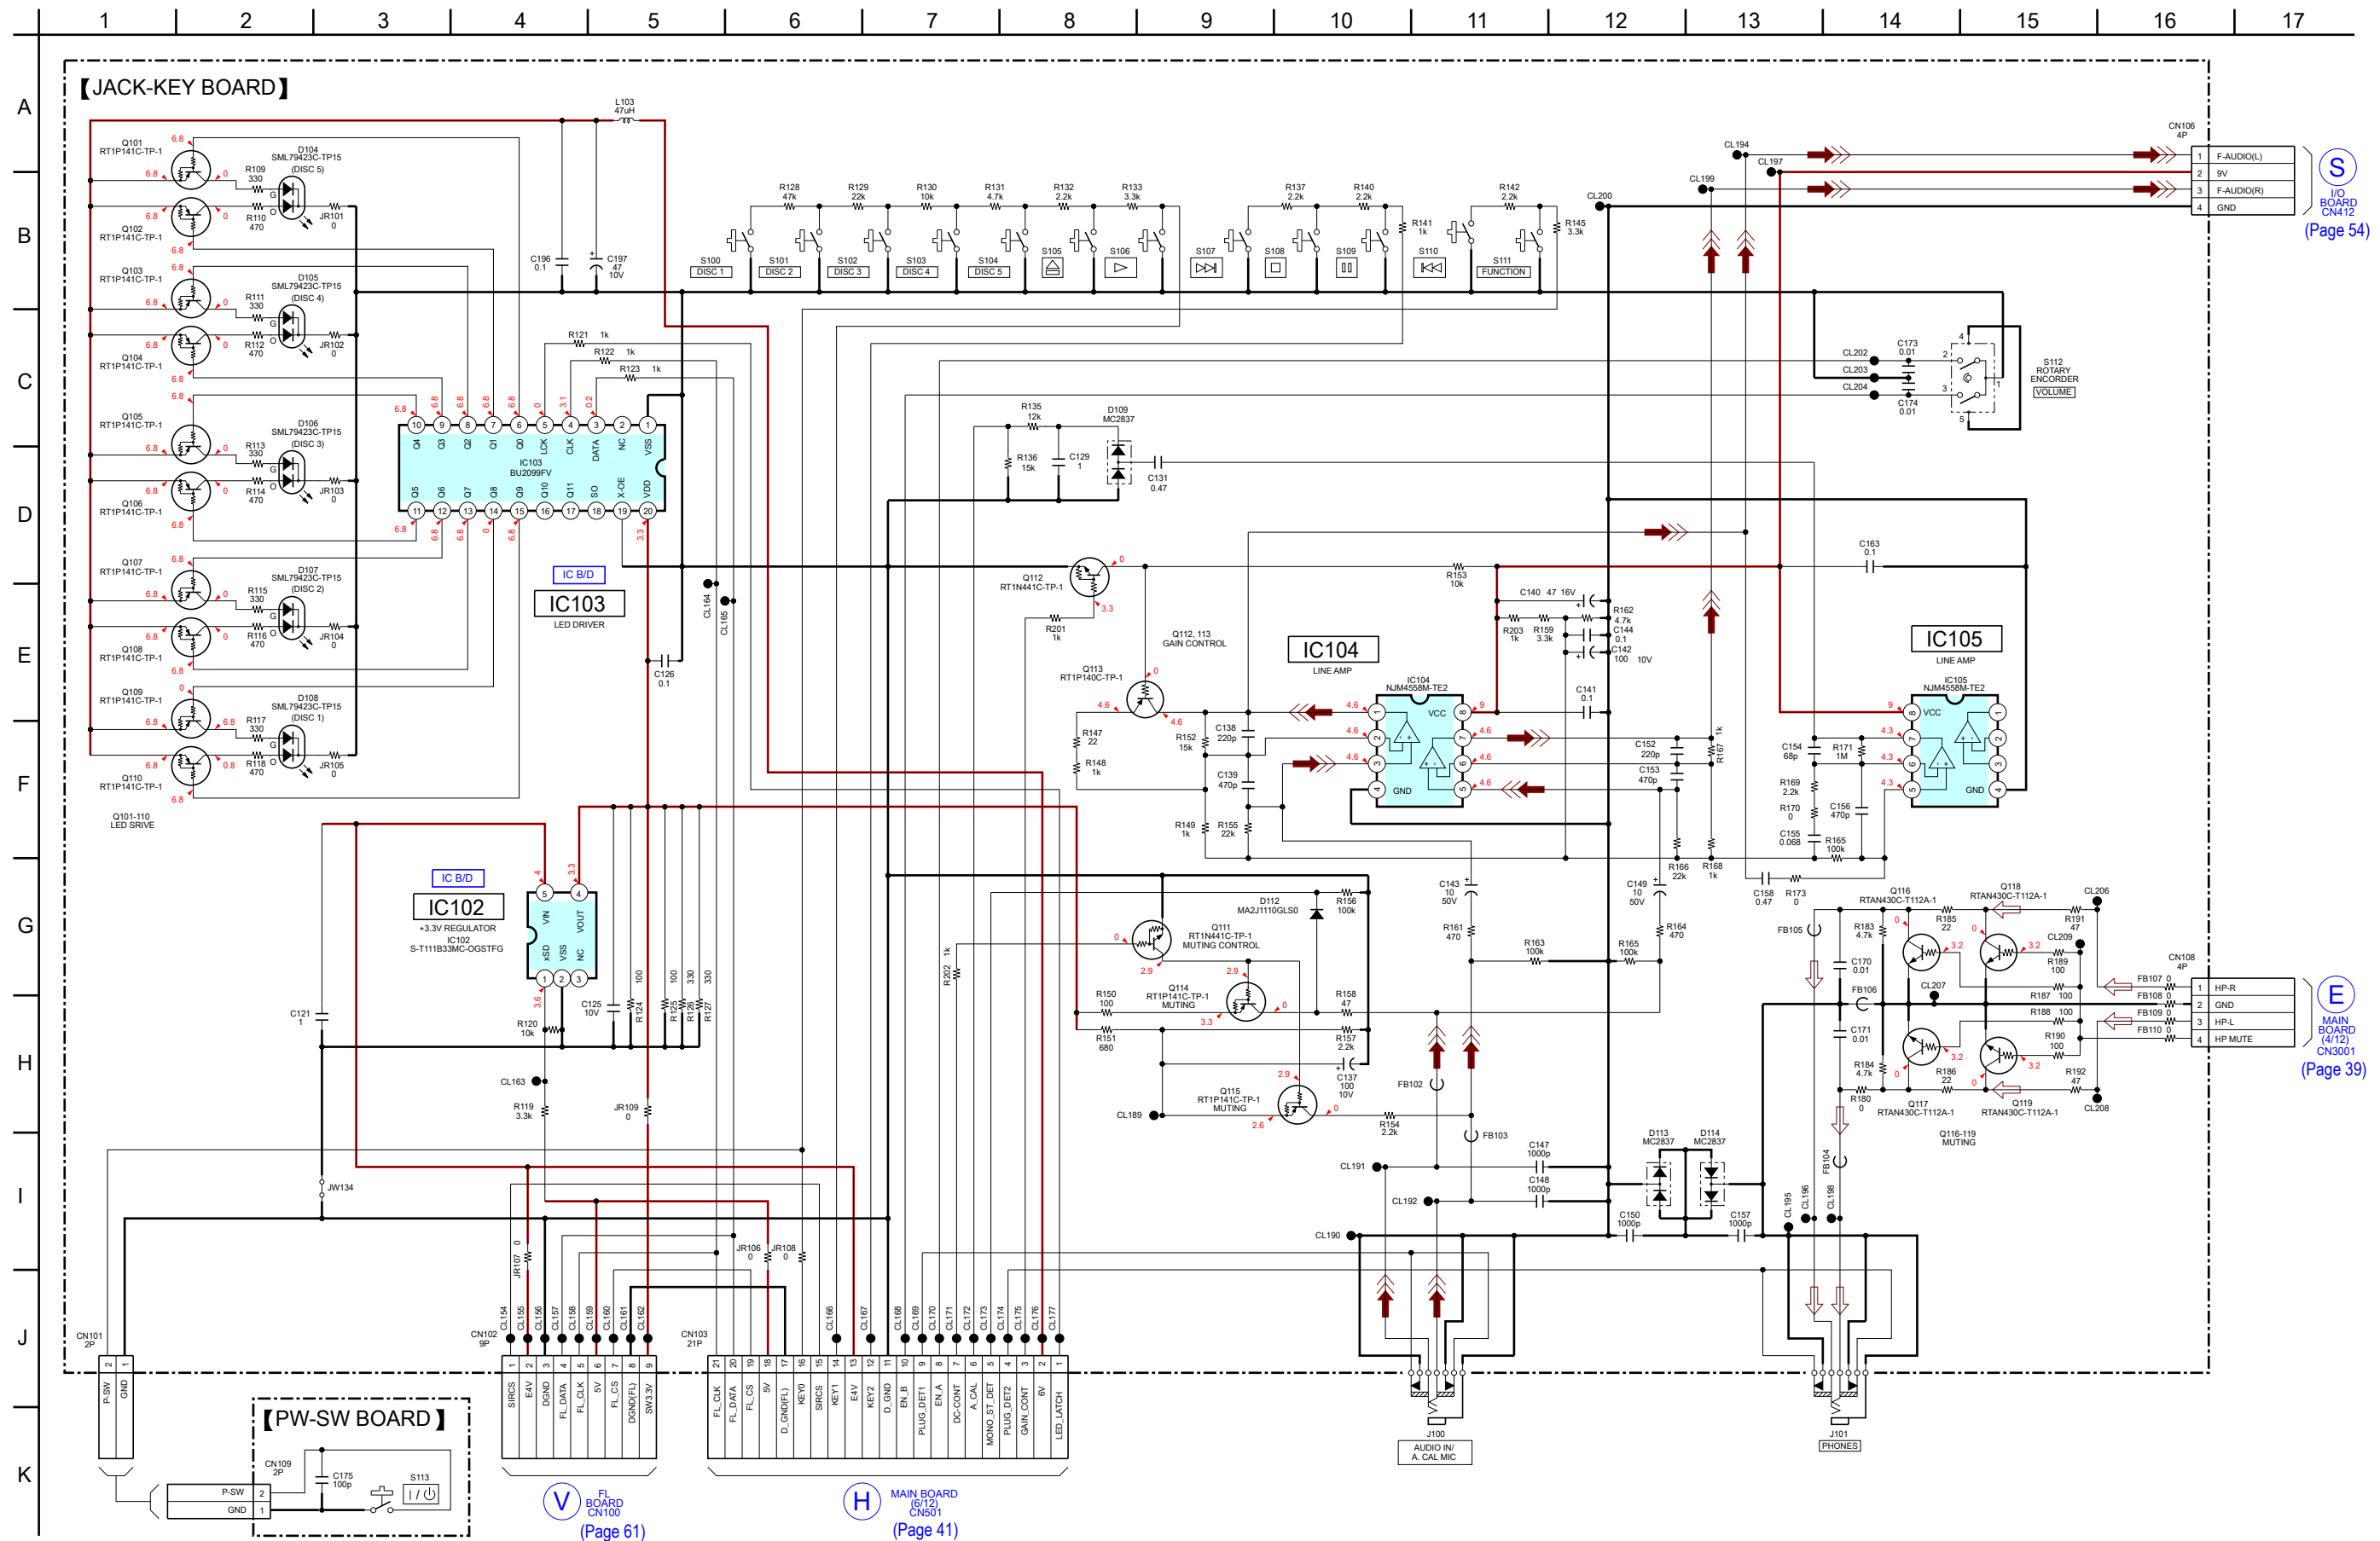

6-33. PRINTED WIRING BOARDS - RELAY Section - • See page 33 for Circuit Boards Location. •  : Uses unleaded solder.

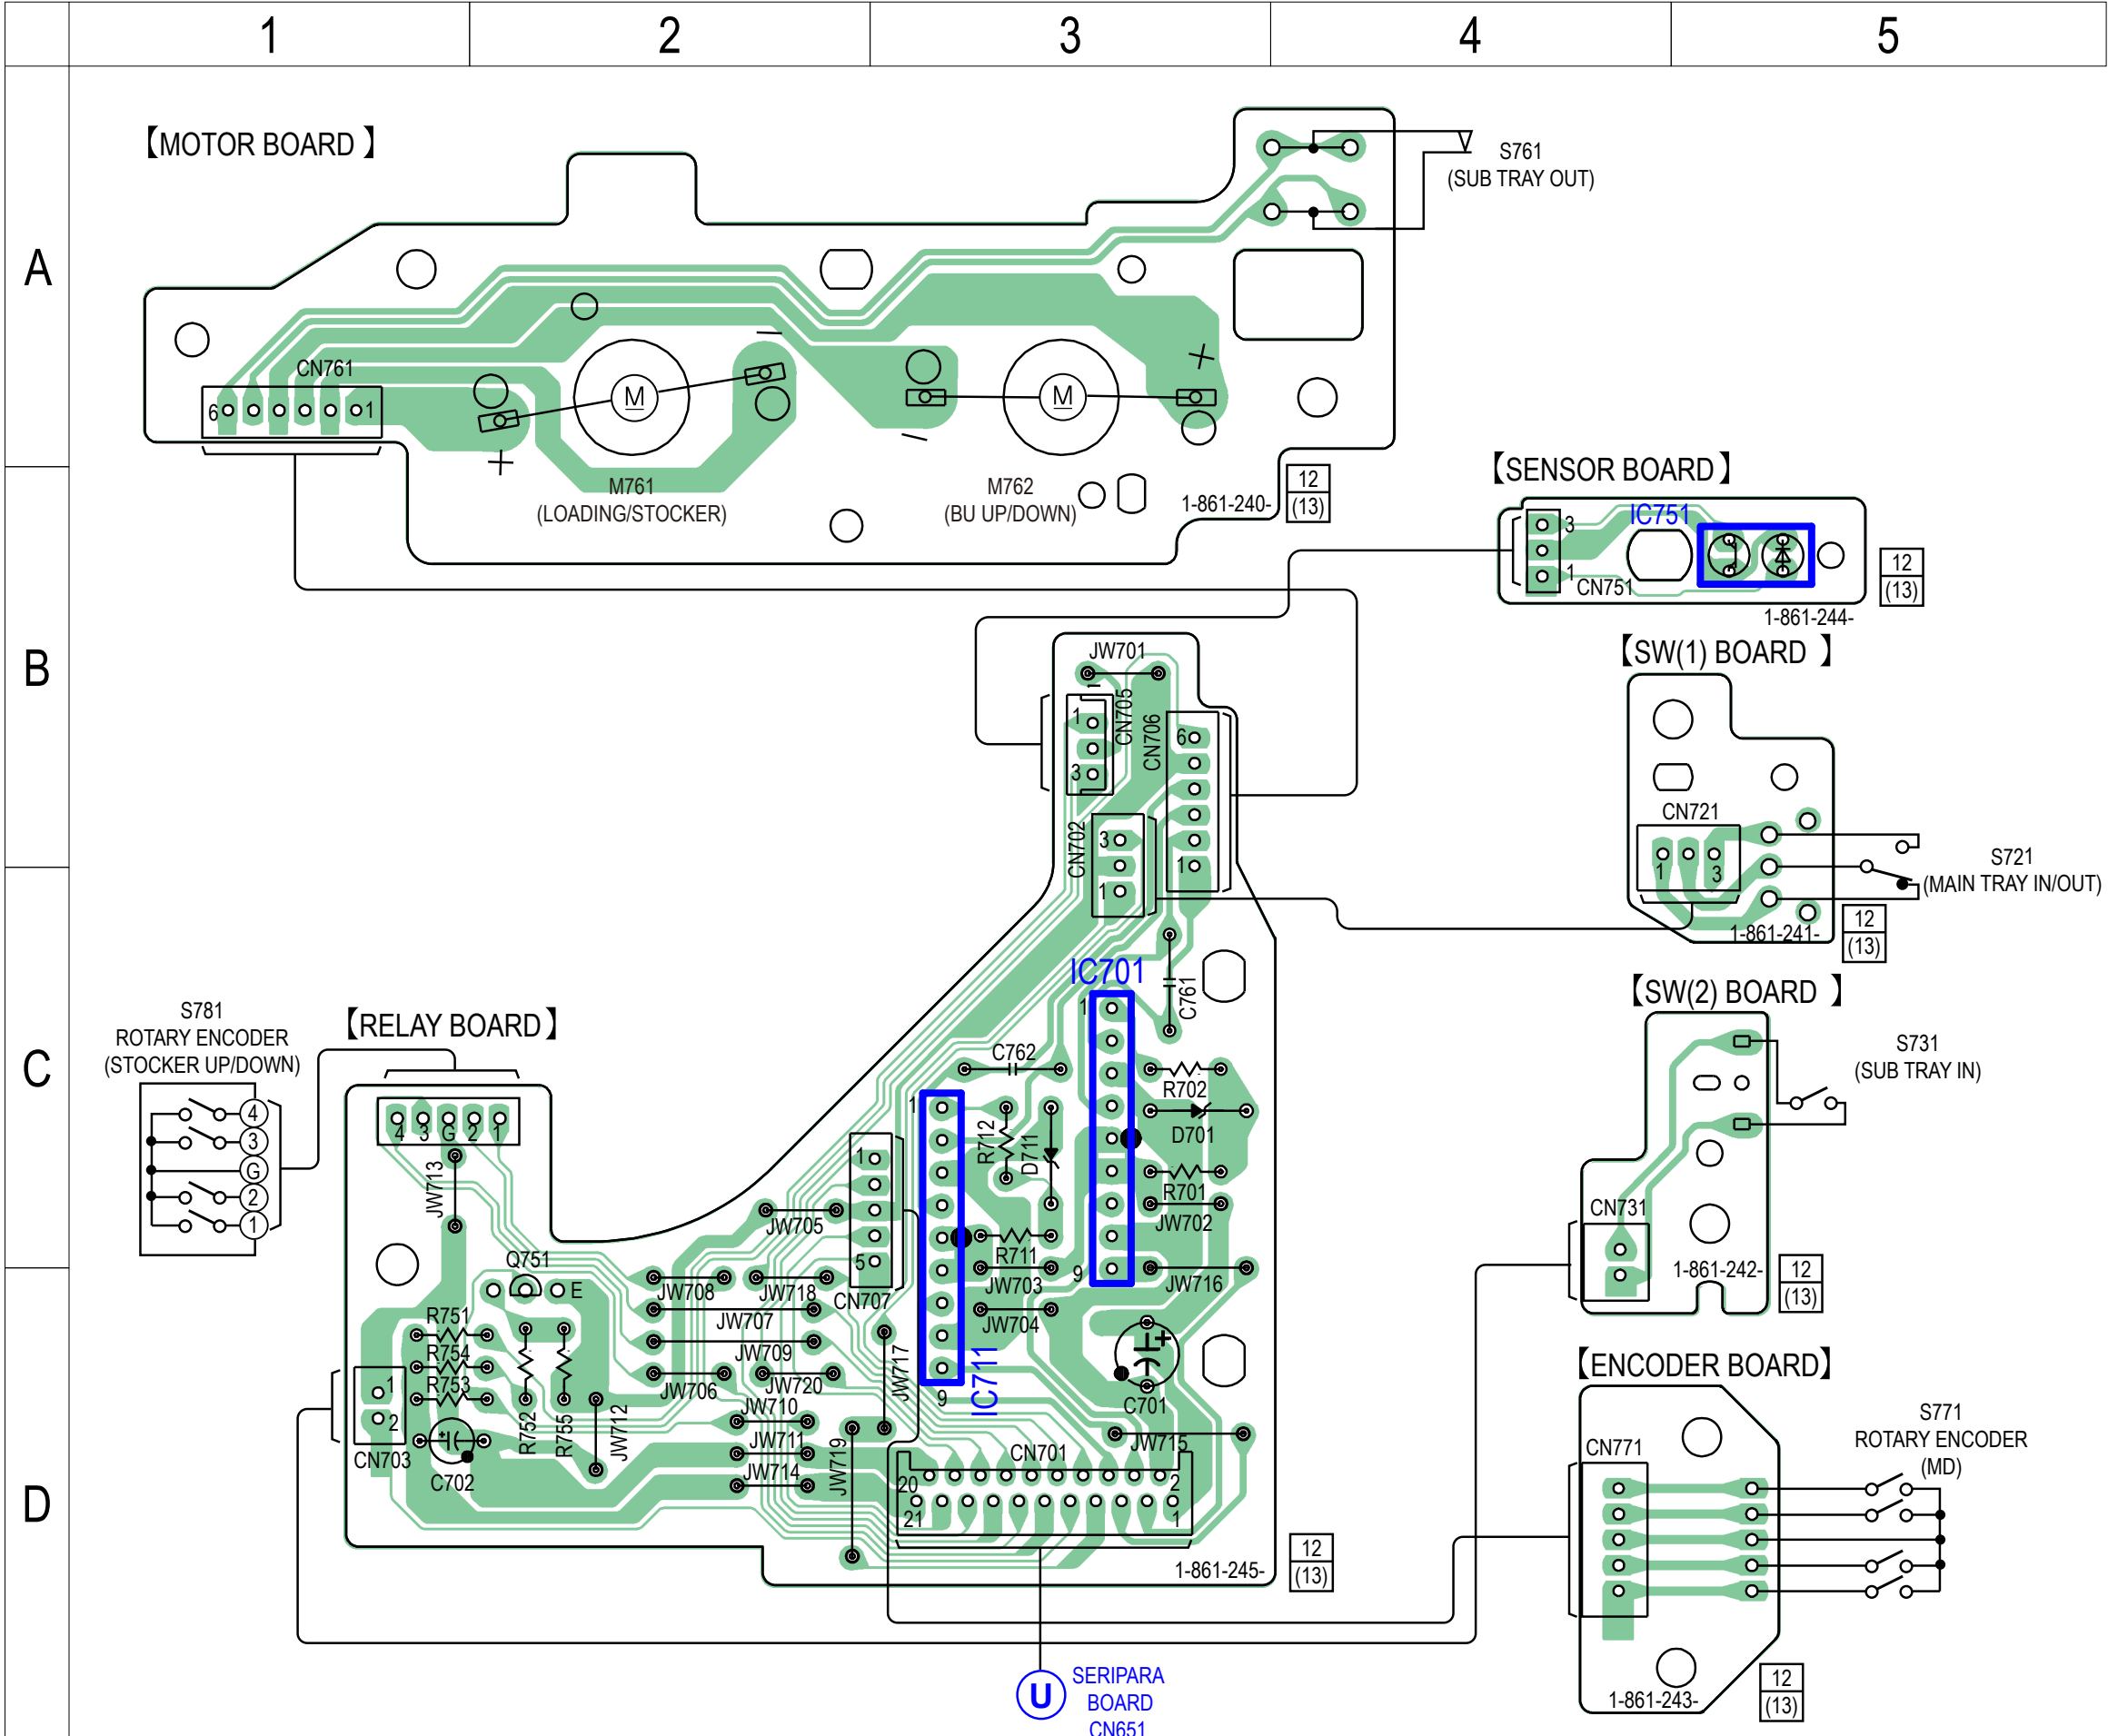


6-34. SCHEMATIC DIAGRAM - RELAY Section - • See page 65 for IC Block Diagrams.

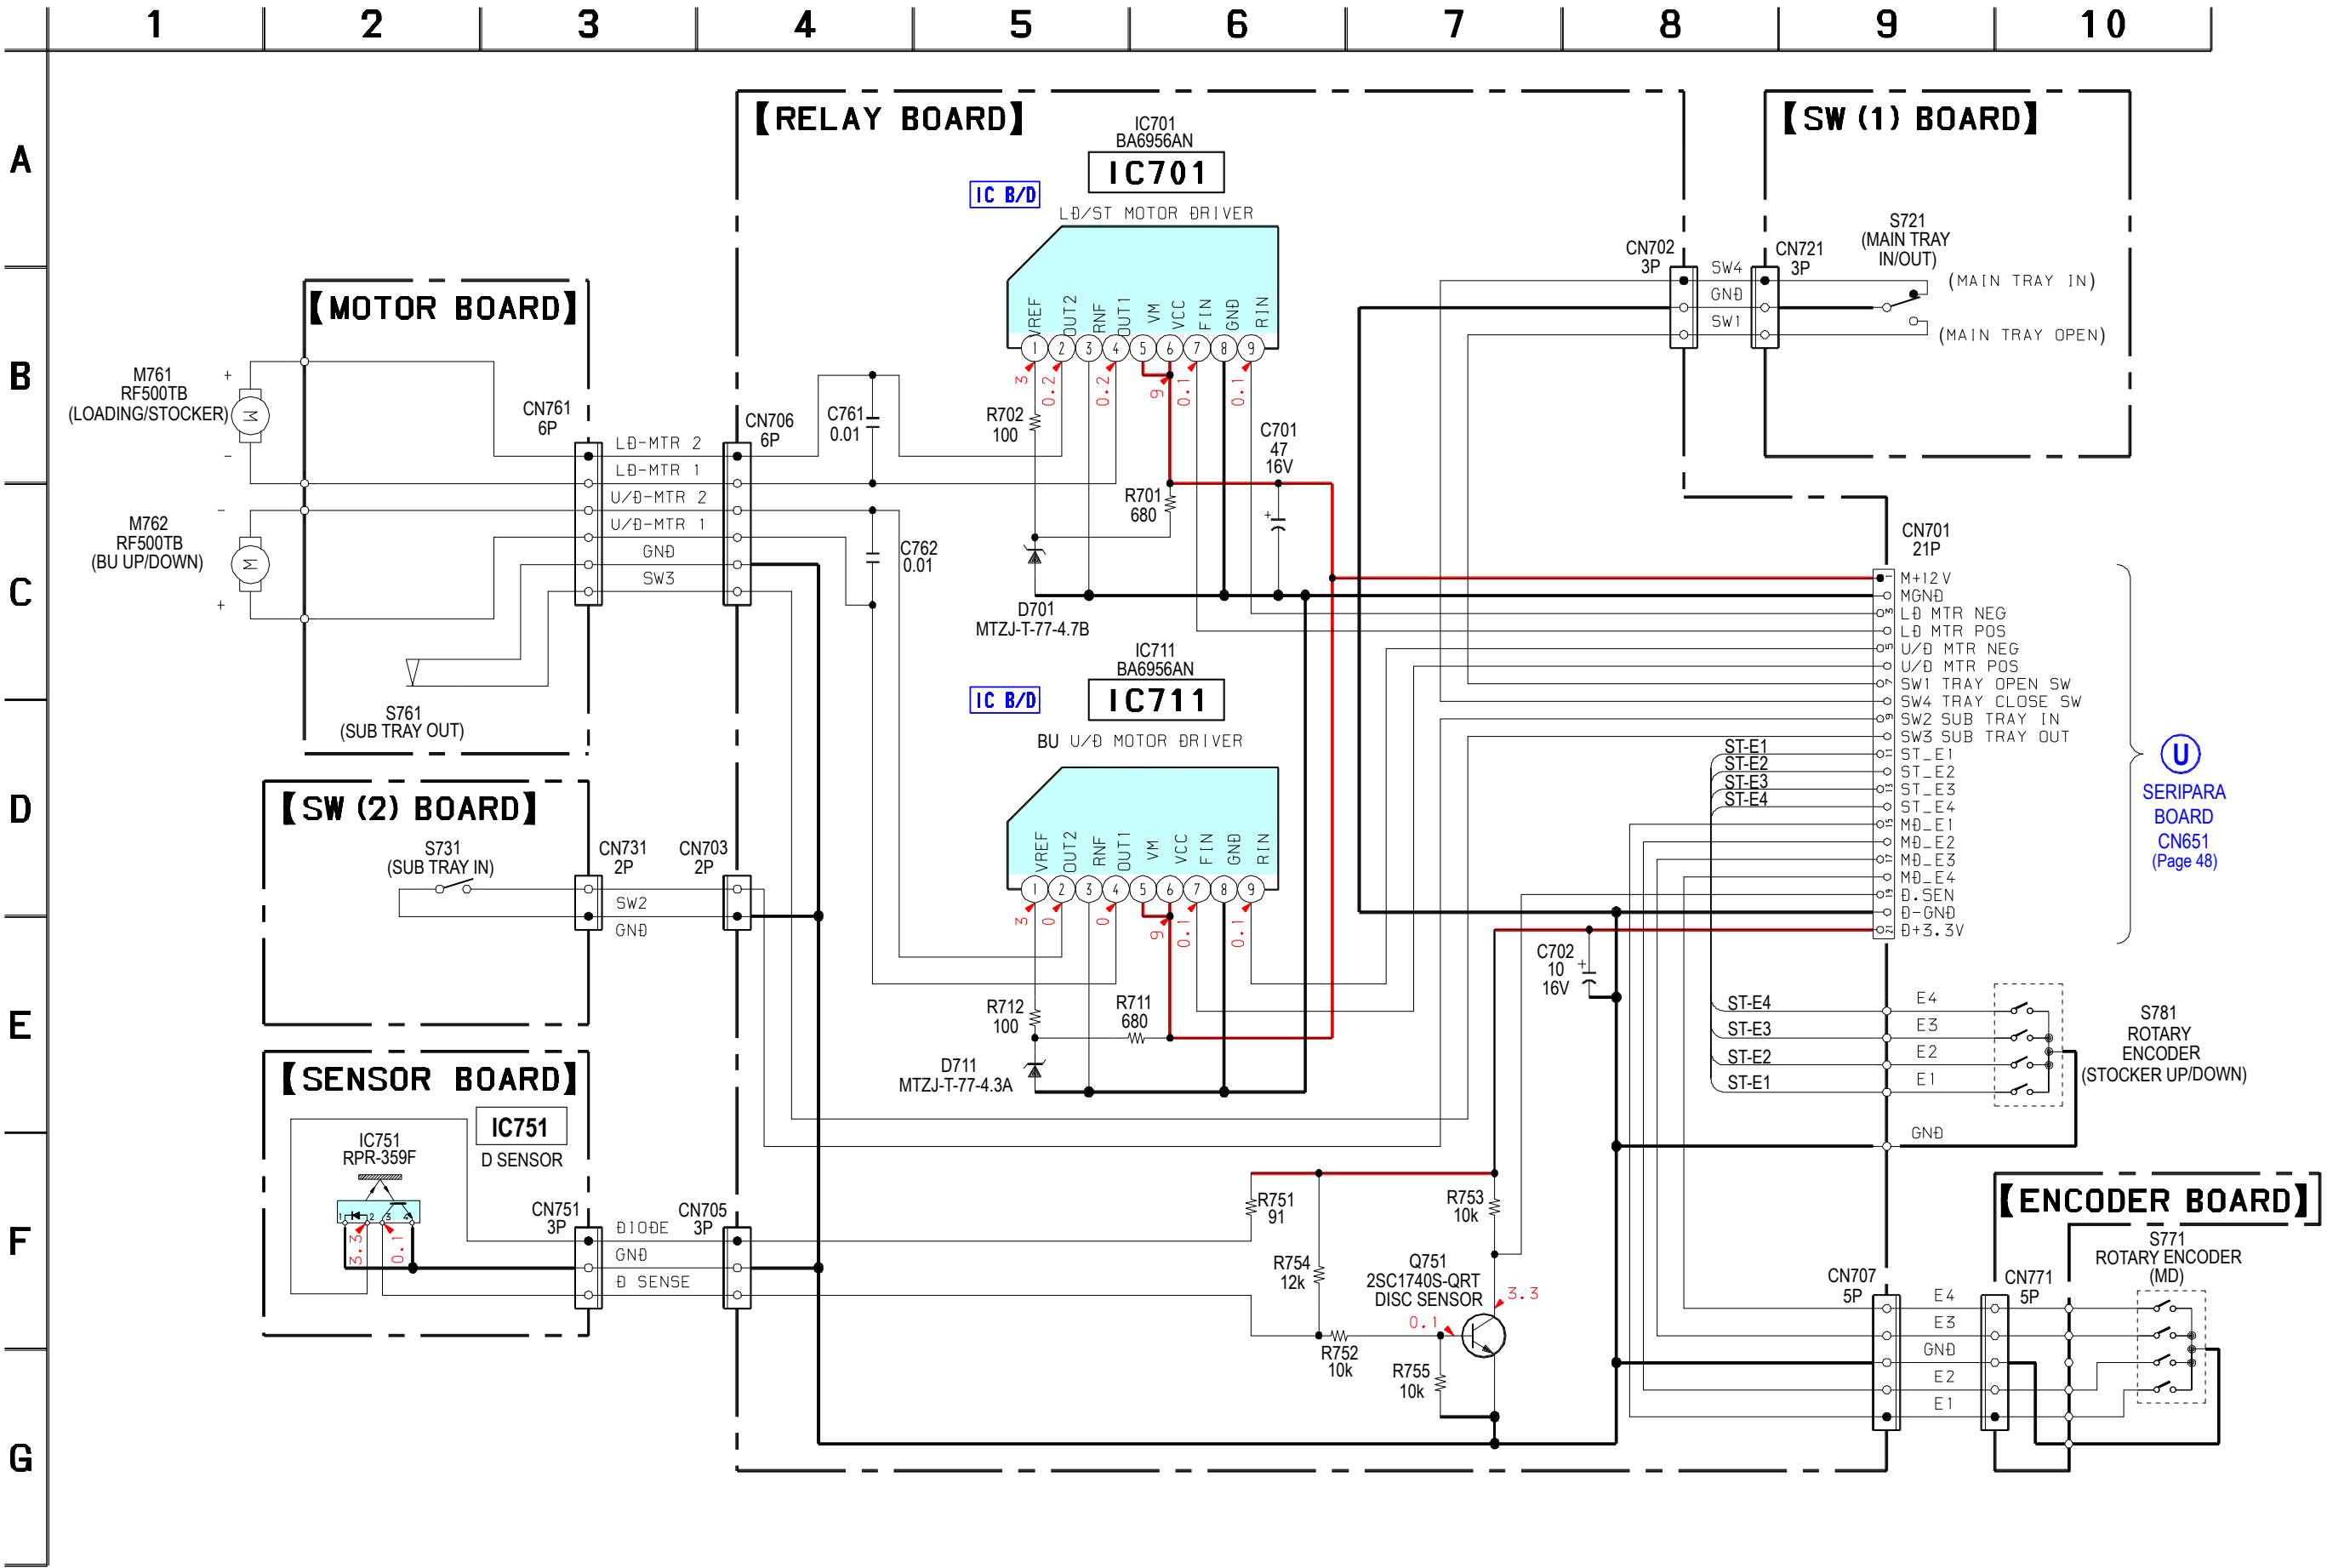


60

60


Ref. No.	Location
D100	B-4
D101	B-4
D102	B-5
D103	B-2
IC100	B-3
IC101	A-1
Q100	C-5

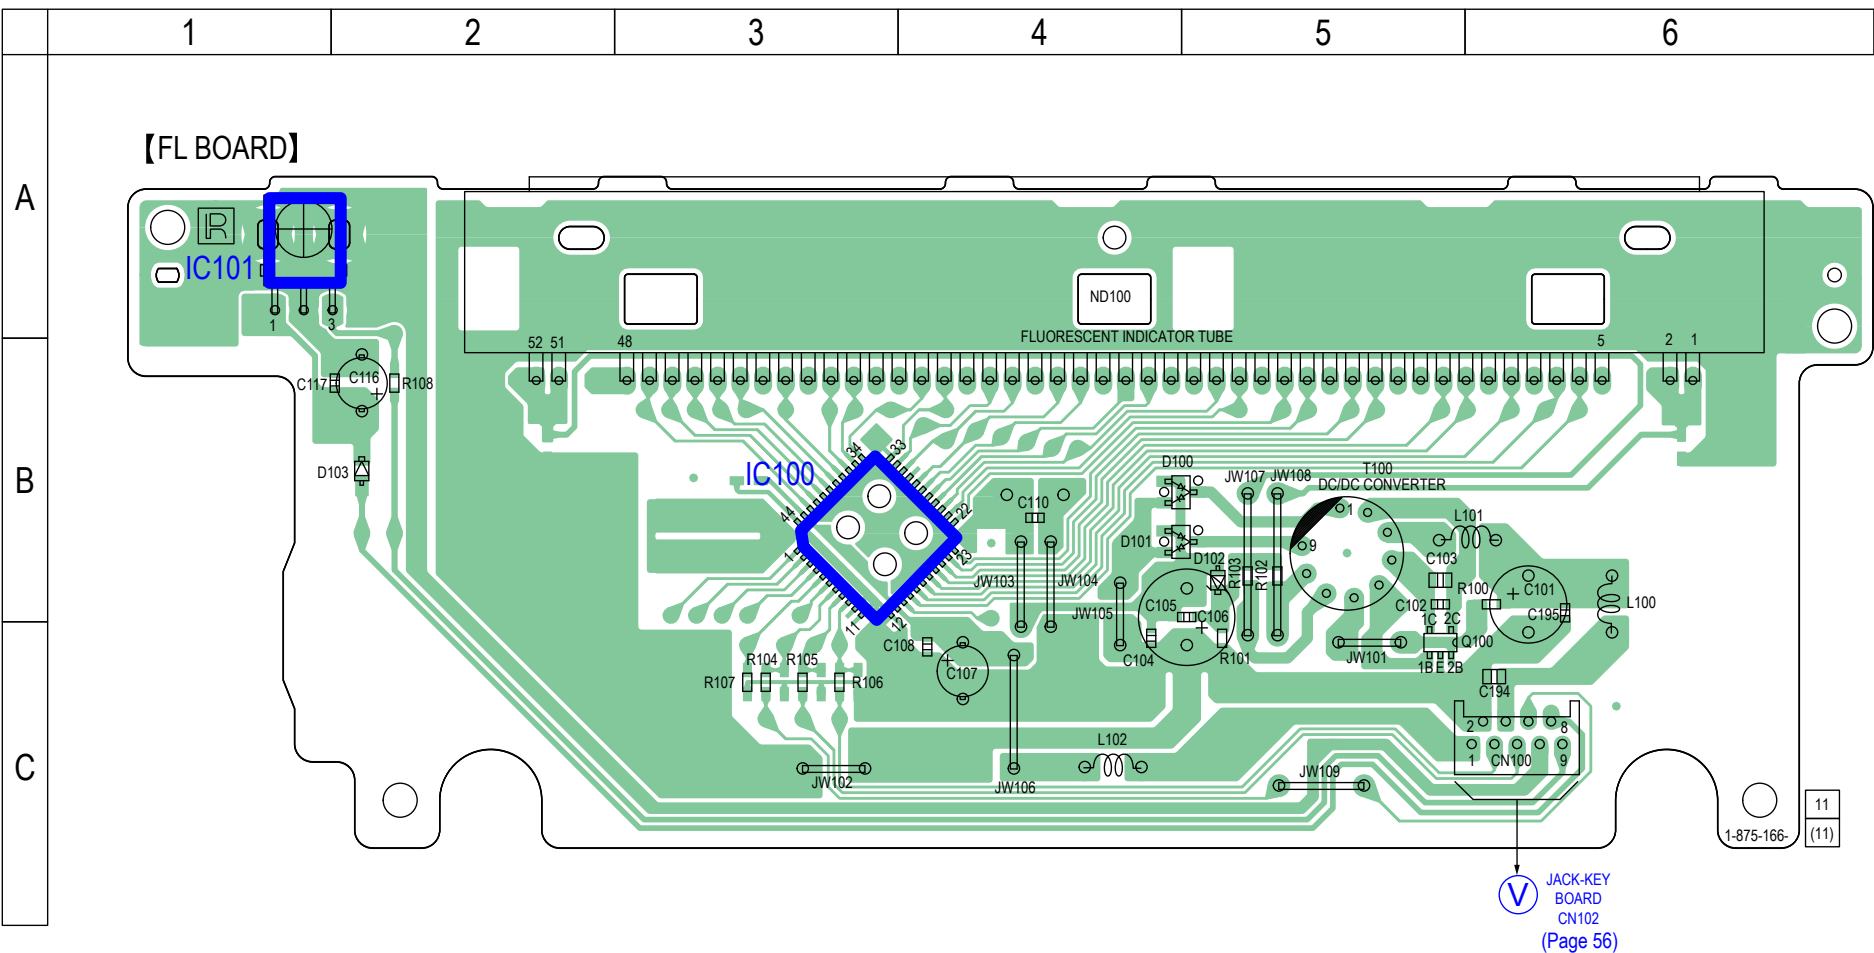

6-36. SCHEMATIC DIAGRAM - FL Board - • See page 64 for Waveforms. • See page 65 for IC Block Diagrams.

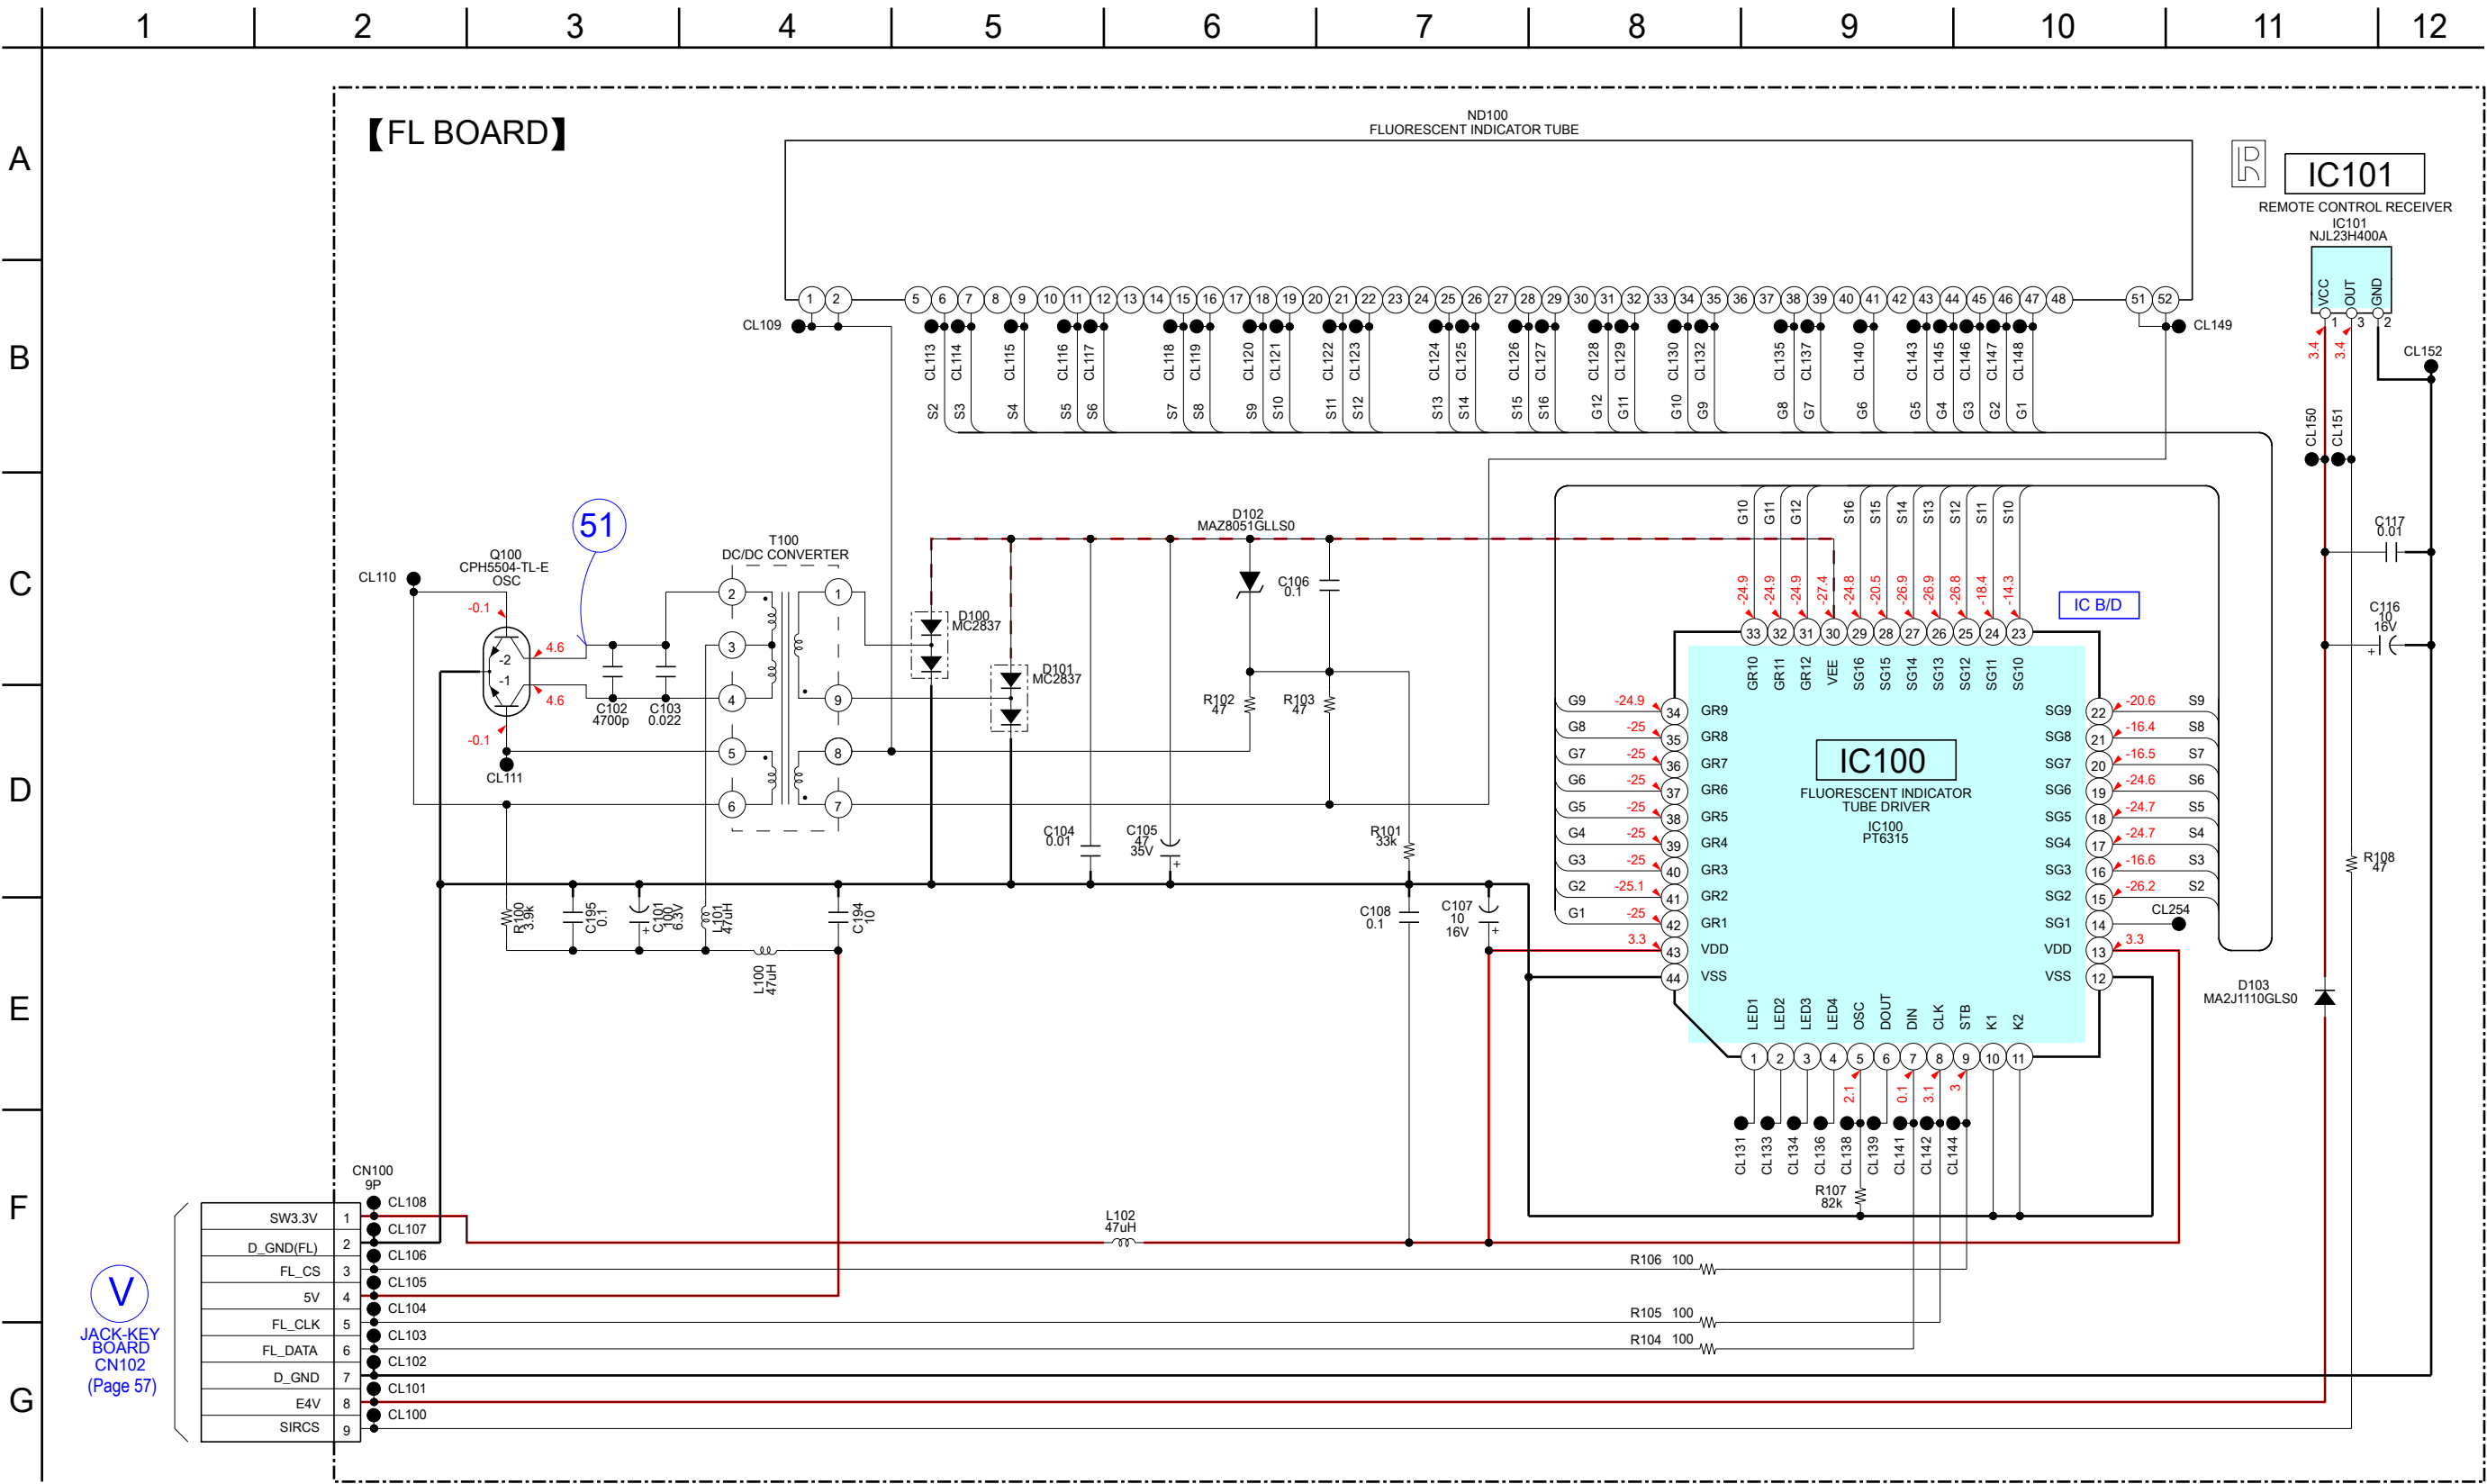


6-37. PRINTED WIRING BOARD - POWER Board - • See page 33 for Circuit Boards Location. •  : Uses unleaded solder.

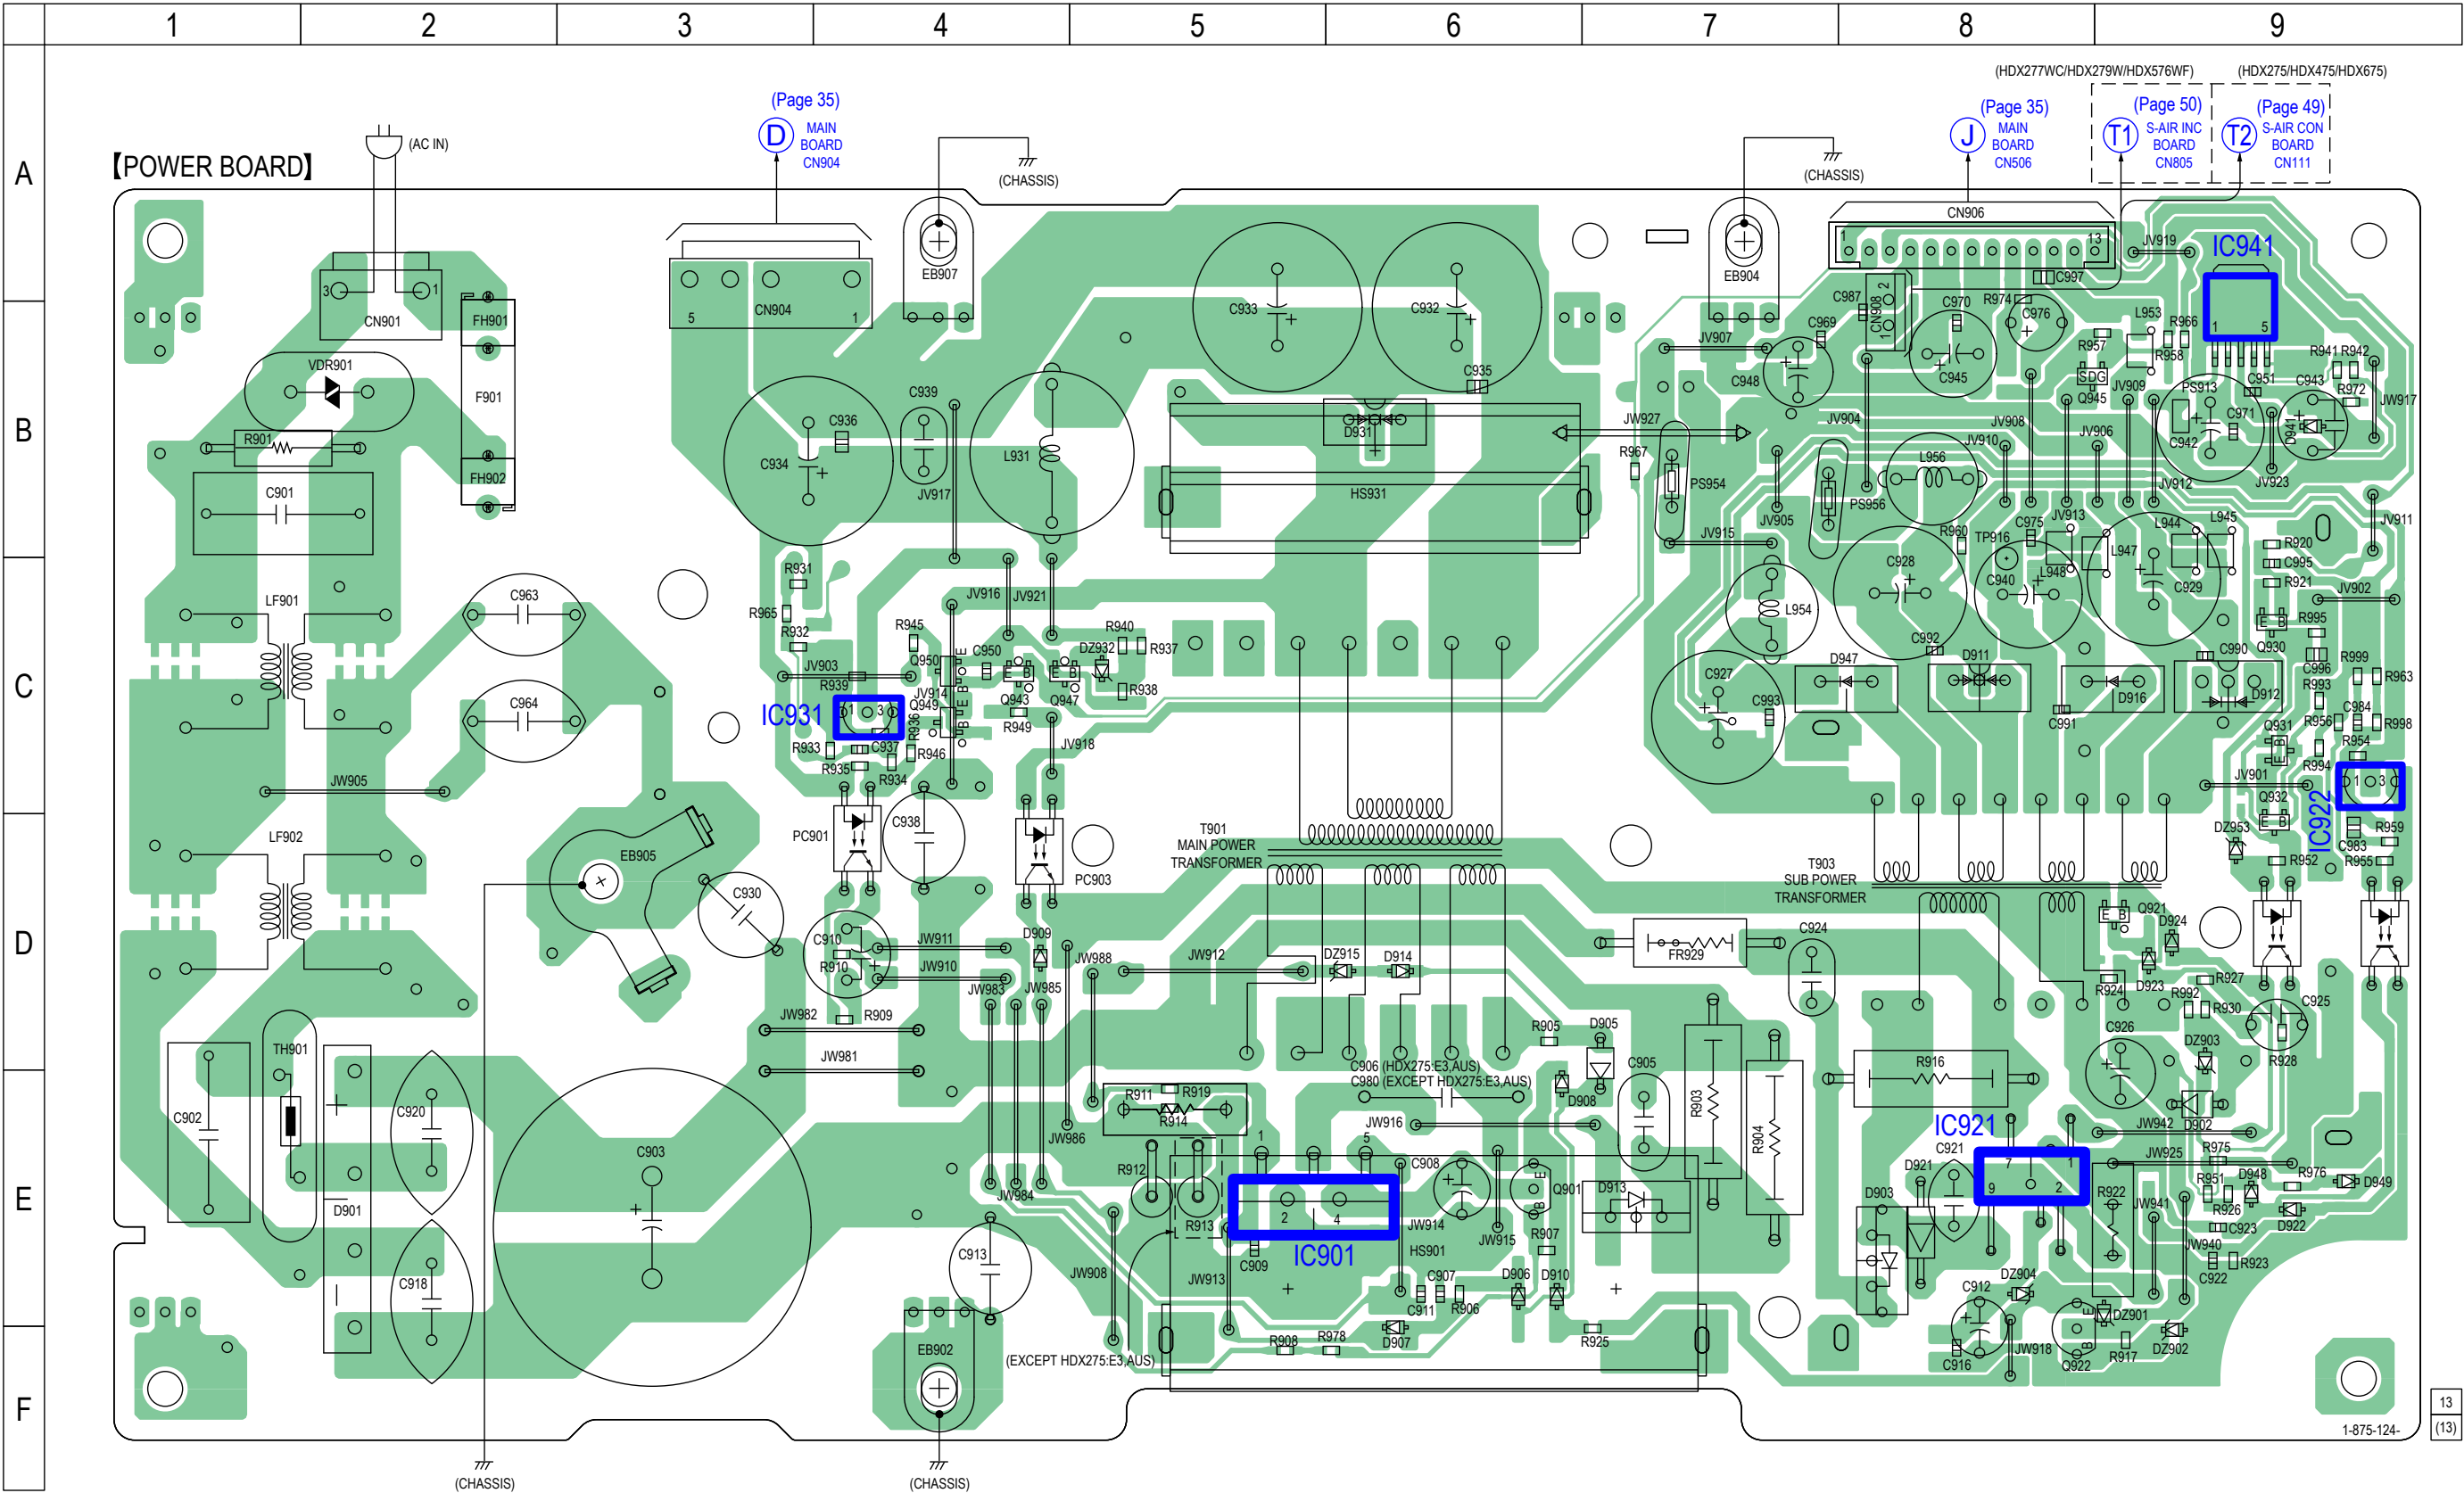


• Semiconductor Location

Ref. No.	Location	Ref. No.	Location	Ref. No.	Location	Ref. No.	Location	Ref. No.	Location	Ref. No.	Location	Ref. No.	Location	Ref. No.	Location	Ref. No.	Location
D901	E-2	D907	F-6	D912	C-9	D922	E-9	D947	C-8	DZ903	D-9	IC901	E-5	IC941	B-9	Q930	C-9
D902	E-9	D908	E-6	D913	C-7	D923	D-9	D948	E-9	DZ904	E-8	IC921	E-8	Q901	E-6	Q931	C-9
D903	E-8	D909	D-4	D914	D-6	D924	D-9	D949	E-9	DZ915	D-6	IC922	C-9	Q932	D-9	Q932	D-9
D905	D-7	D910	E-6	D916	C-9	D931	B-6	DZ901	E-9	DZ932	C-5	IC922	C-9	Q921	D-9	Q943	C-4
D906	E-6	D911	C-8	D921	E-8	D941	B-9	DZ902	F-9	DZ953	D-9	IC931	C-4	Q922	F-8	Q945	B-8
																Q947	C-4
																Q949	C-4
																Q950	C-4


6-38. SCHEMATIC DIAGRAM - POWER Board - • See page 65 for IC Block Diagrams.

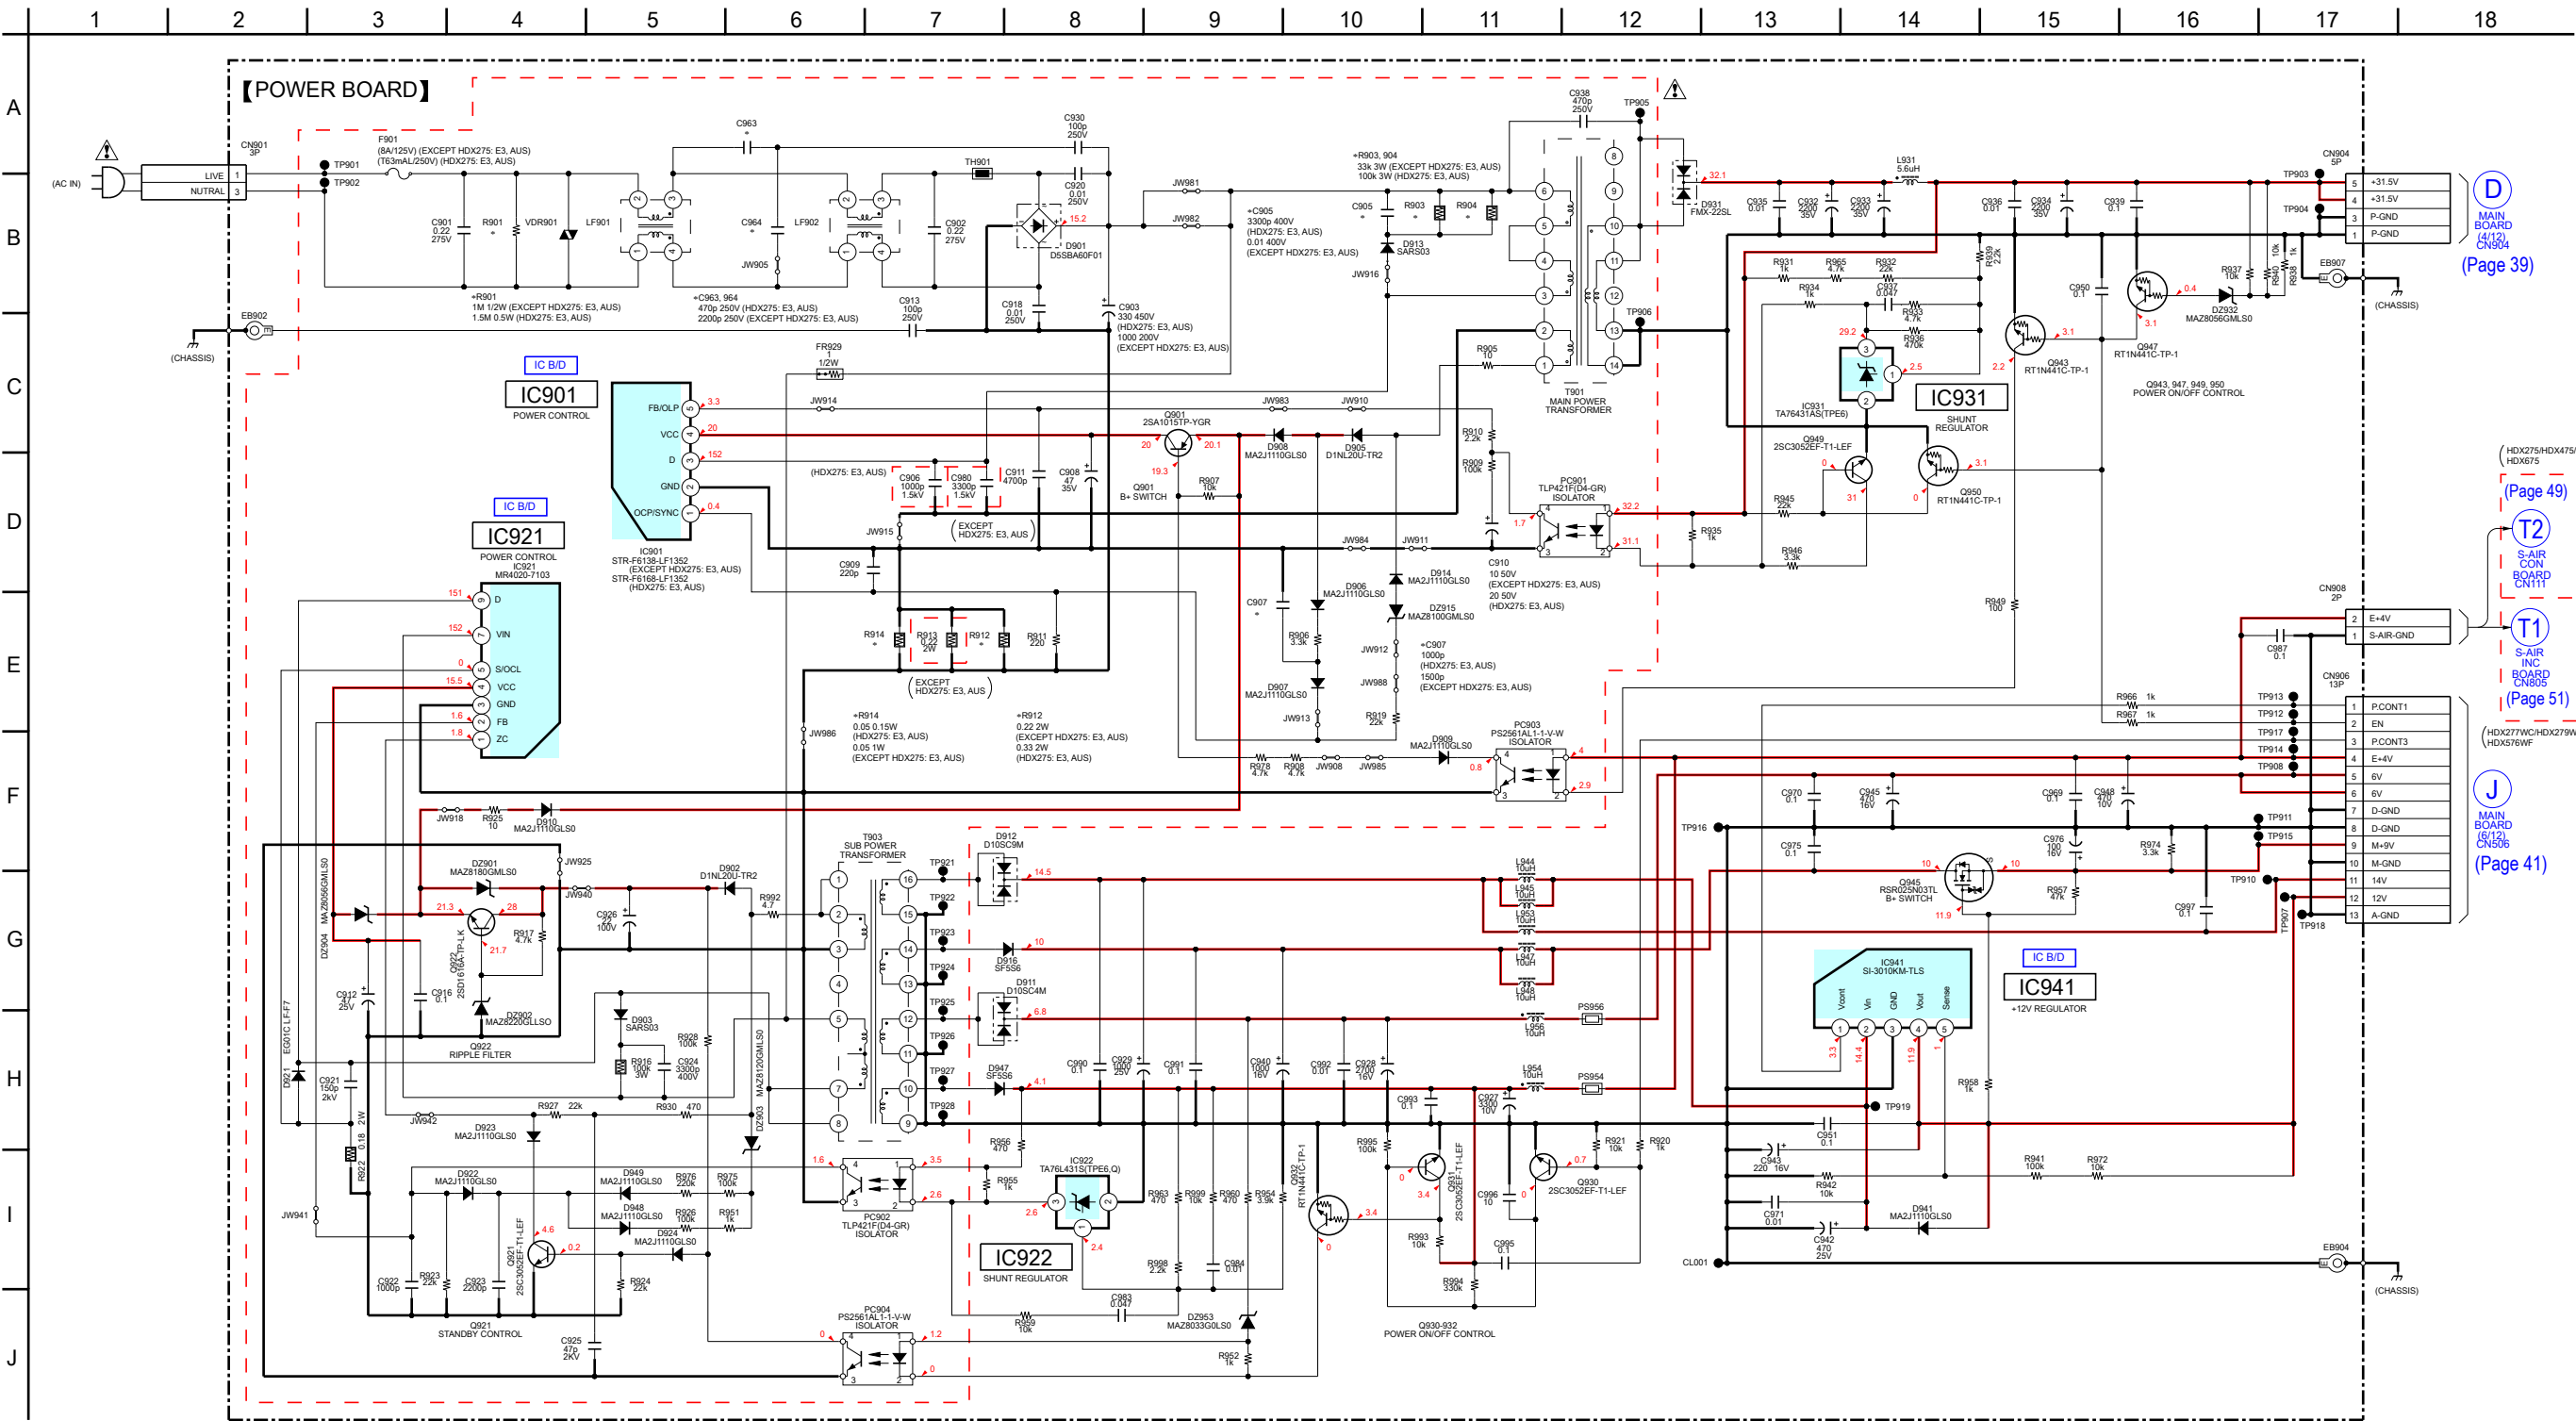


• Waveforms
– MAIN Board –

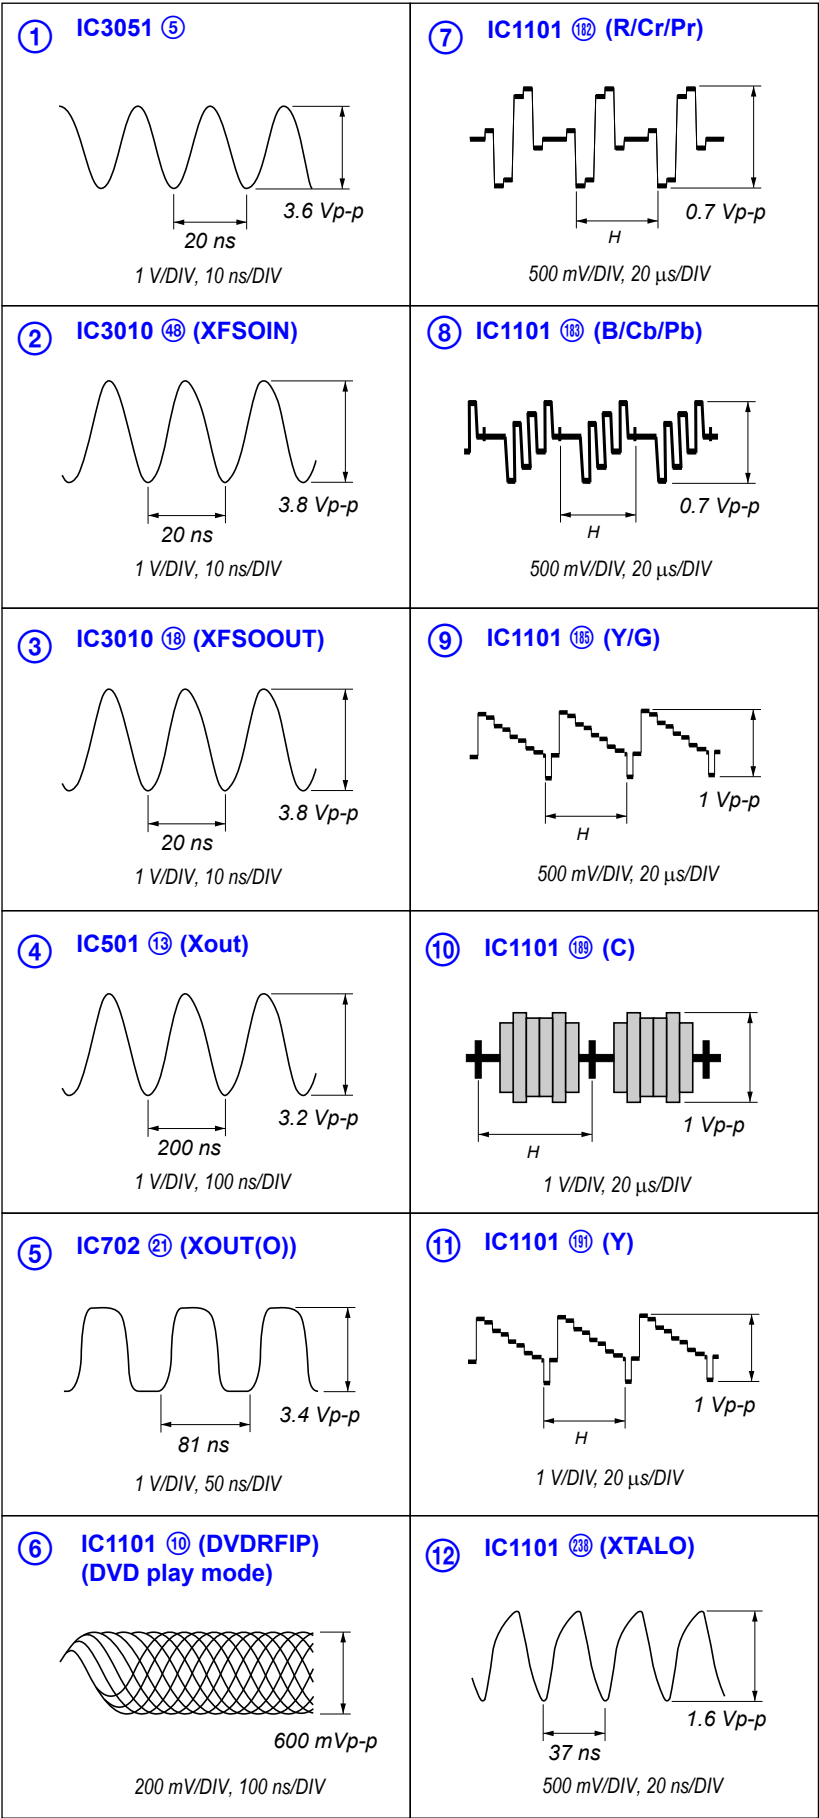


– S-AIR INC Board –

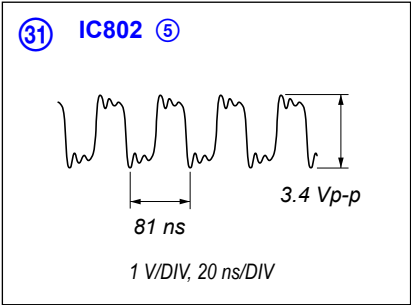

– I/O Board –

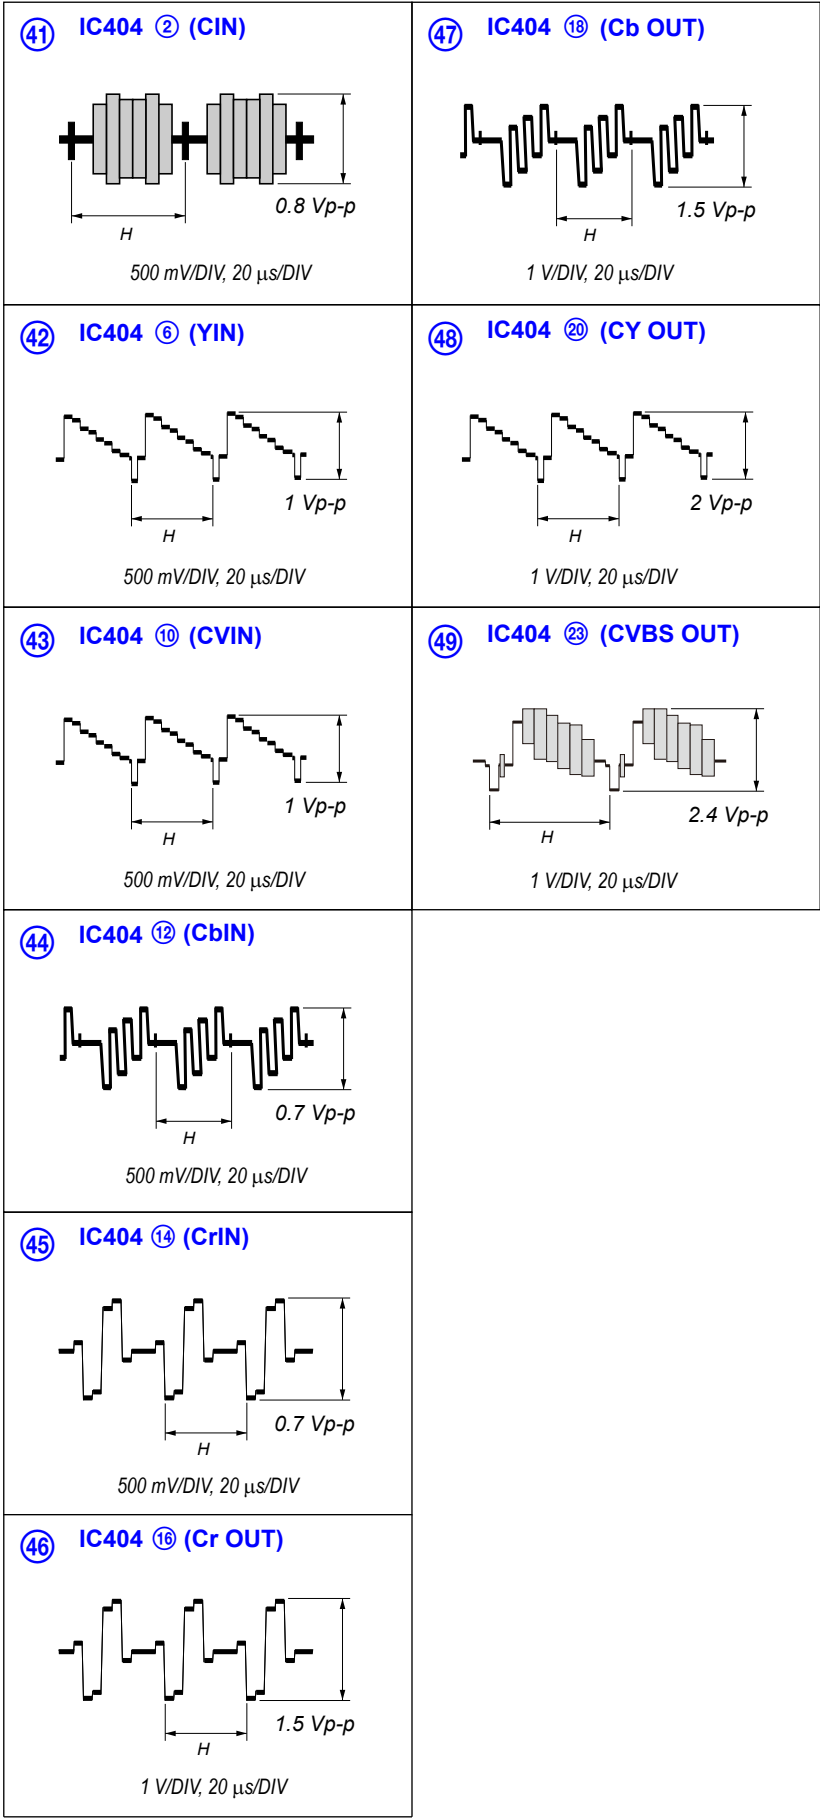


– FL Board –

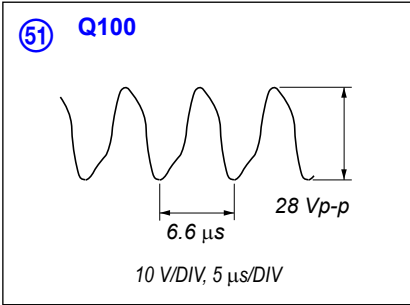


• IC Block Diagrams

– MAIN Board –


IC201, 505, 506 SI-3010KM-TLS

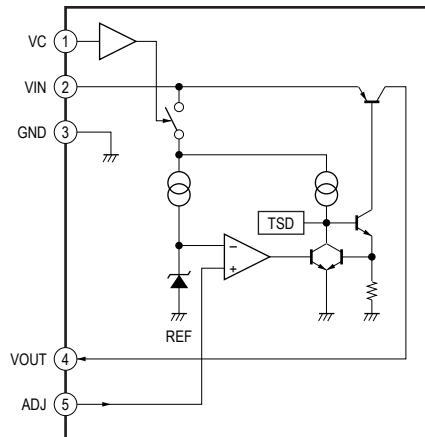


IC502 TK11250CMCL-G

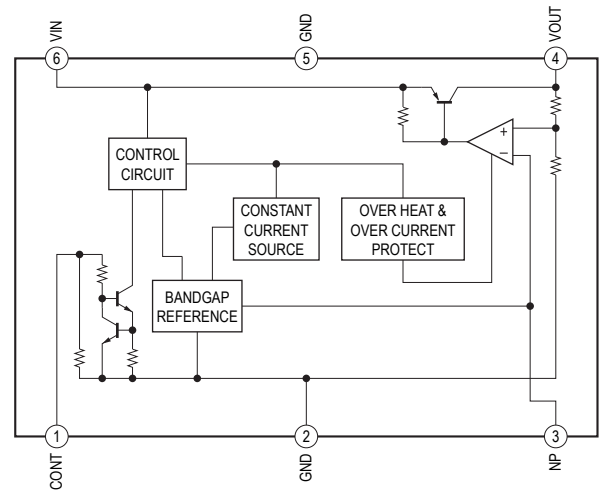


IC503 PST3635NR

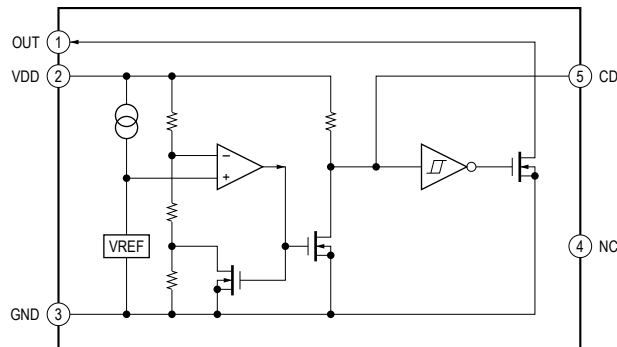


IC702 LC890561W-E

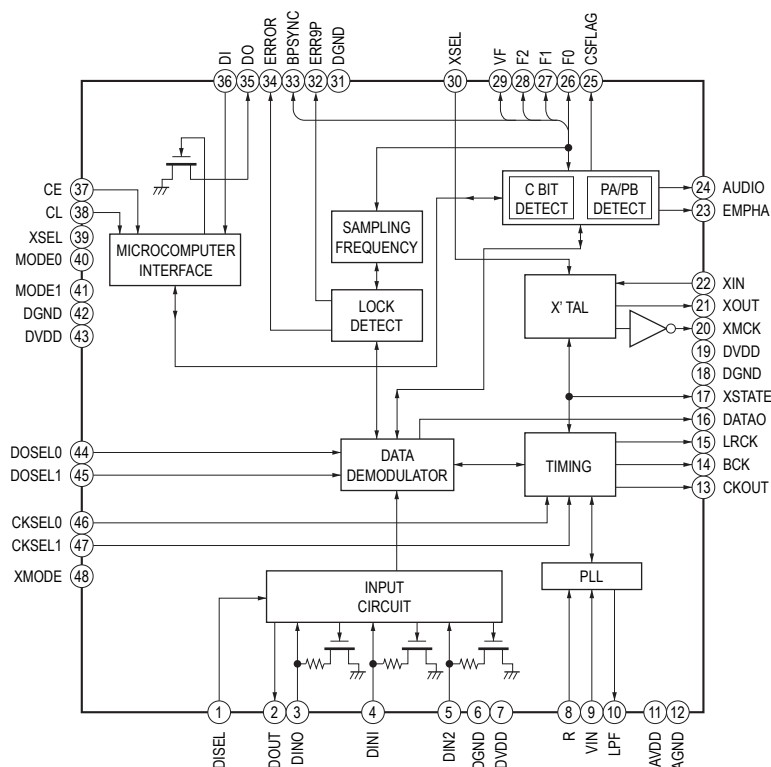


IC707 PCM1808PWR

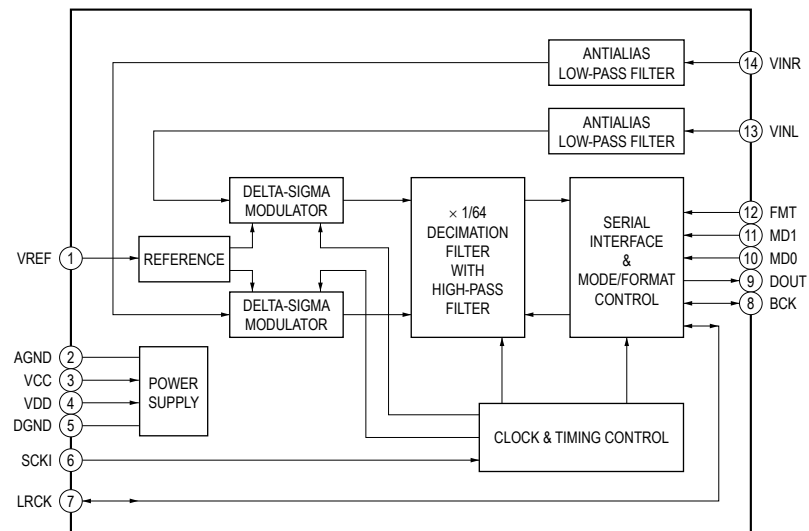


IC1105, 1107, 1708 TK11133CSCL-G IC1707, 507 TK11150CSCL-G IC3050 TK11118CSCL-G

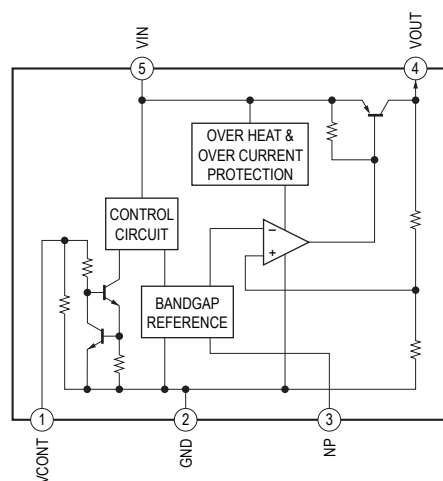

IC3003 TC7WH157FK (TE85R)

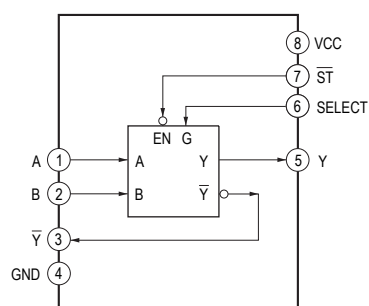


IC3100, 3150, 3200, 3250, 3300, 3400, 3500 CXD9883M

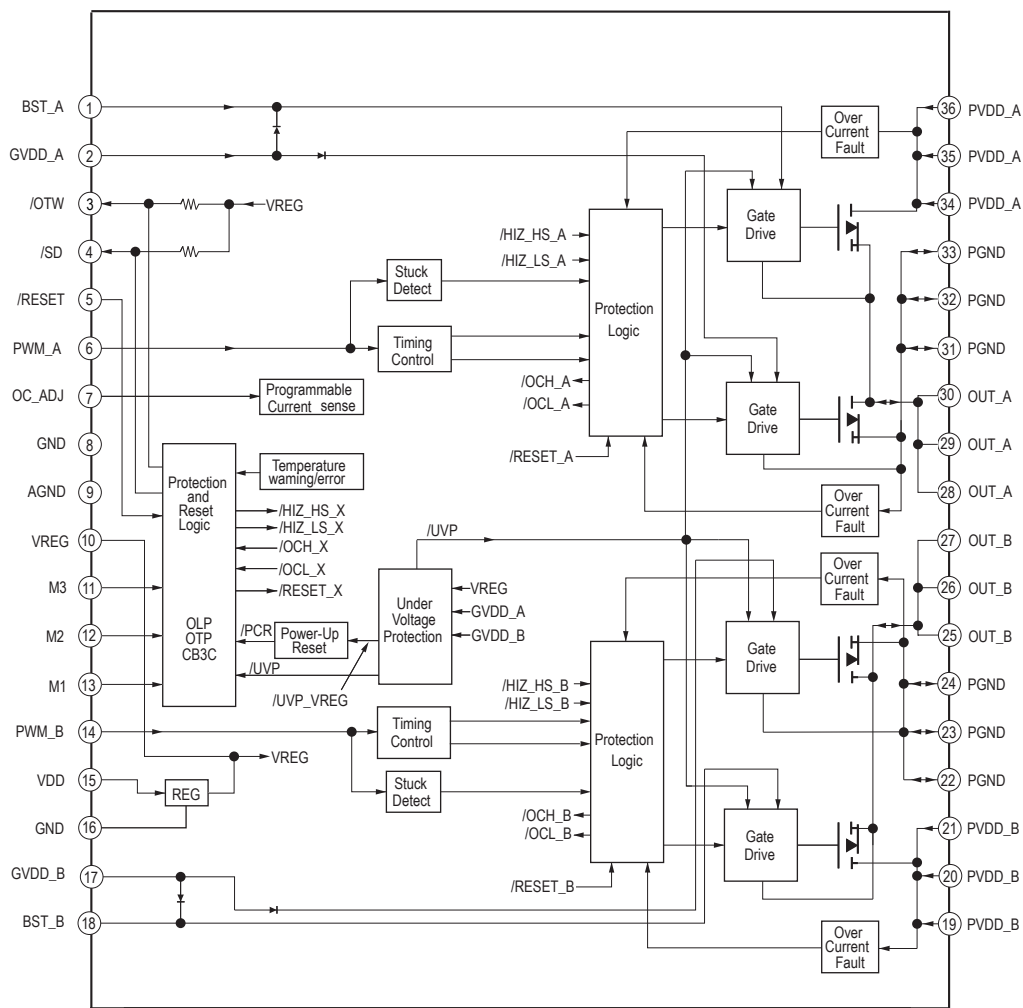


– SERIPARA Board –


IC650, 651 BH2210FV-E2

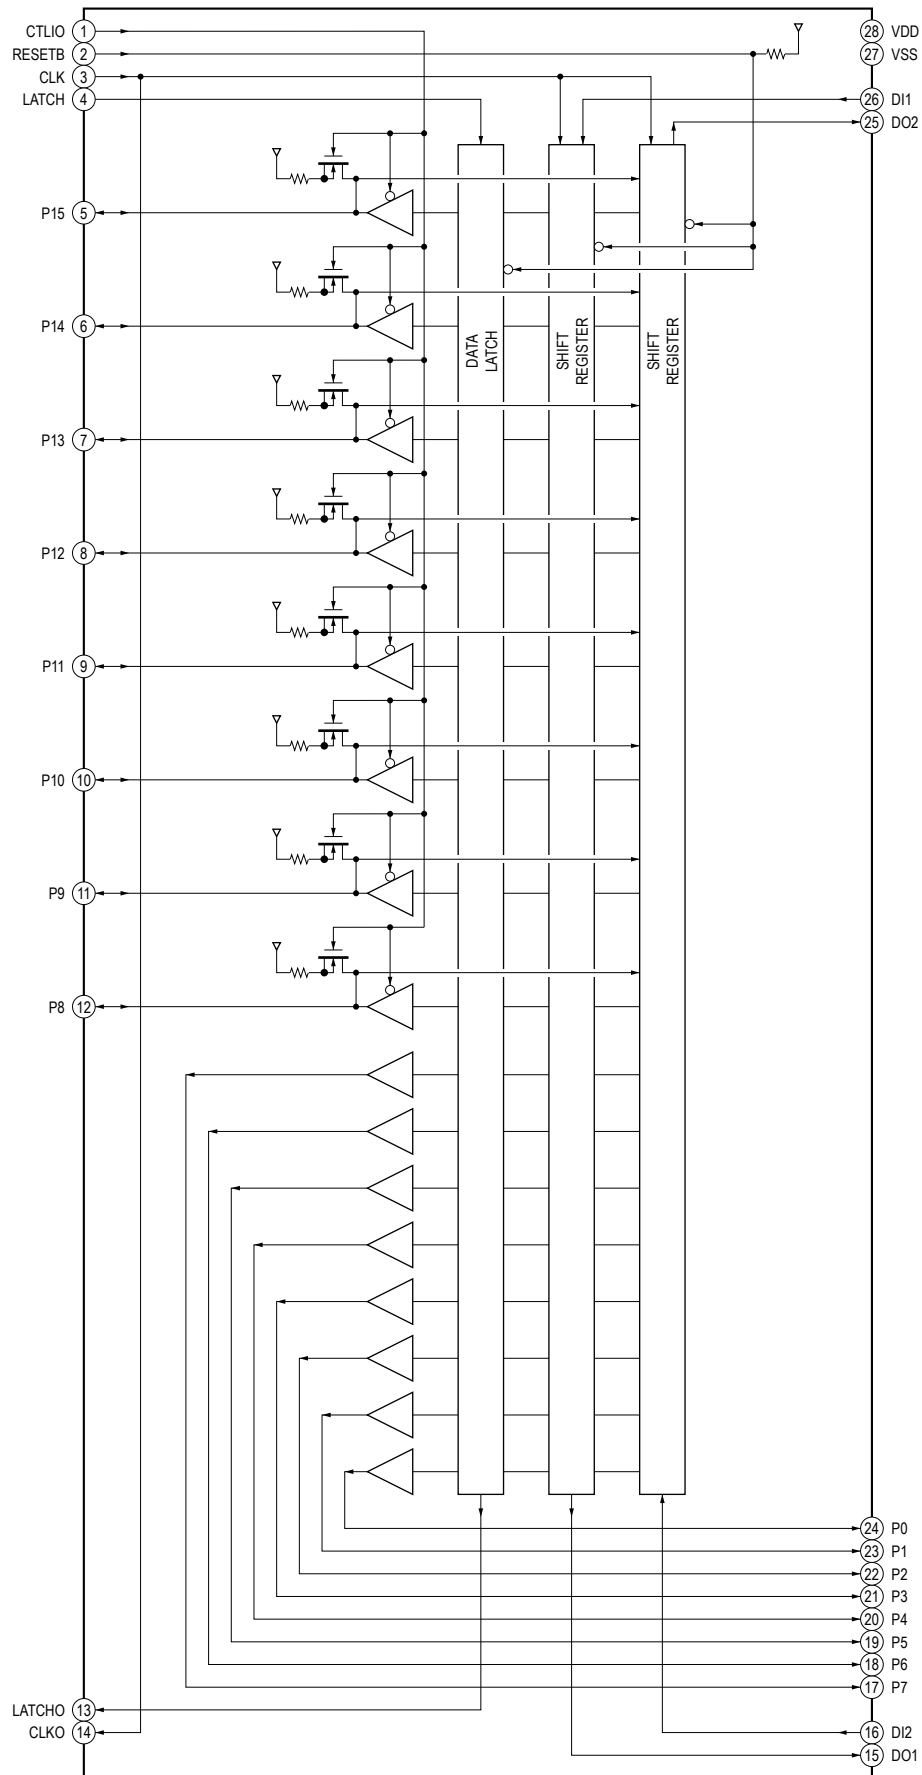


– S-AIR INC Board –
IC800 SI-3010KM-TLS

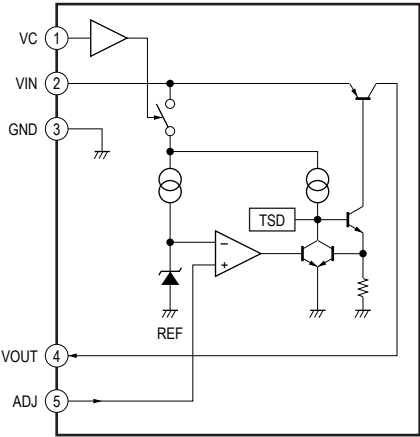


IC801 TC74VHC157FK (EL, K)

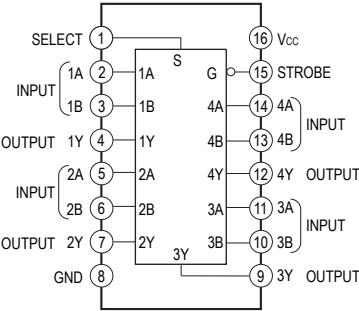


IC803, 804 SRC4182

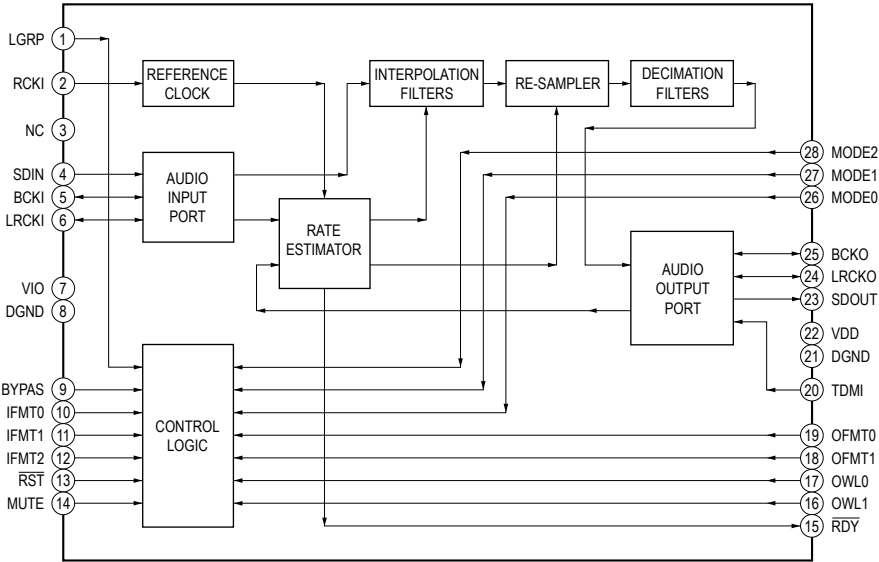


IC805 PCM1808PWR

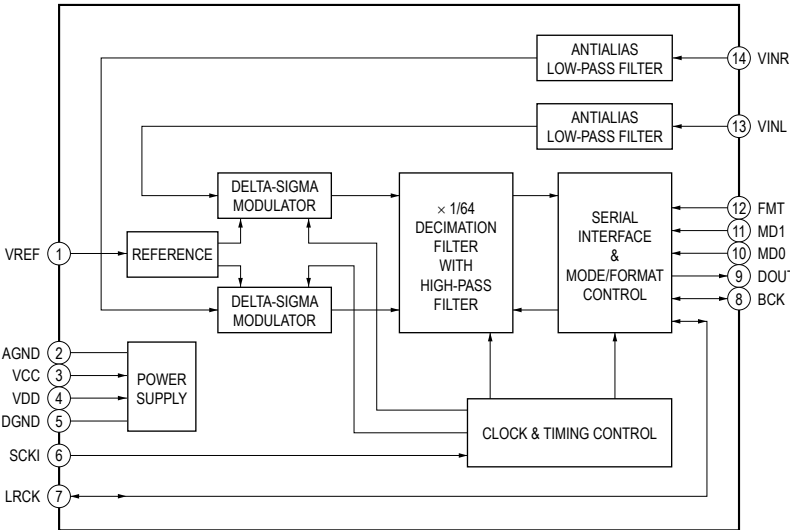


IC806 S-T111B33MC-OGSTFG

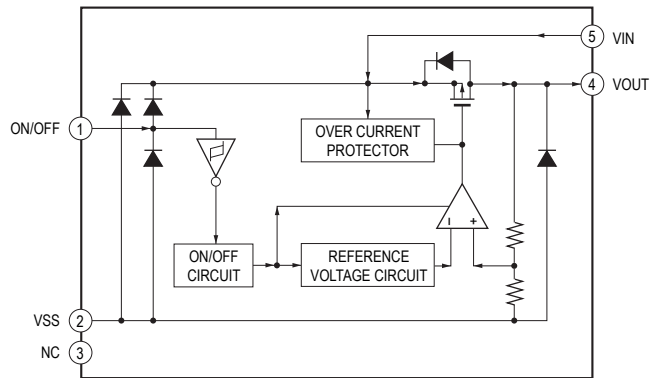

**– I/O Board –
IC404 MM1758AFBE**

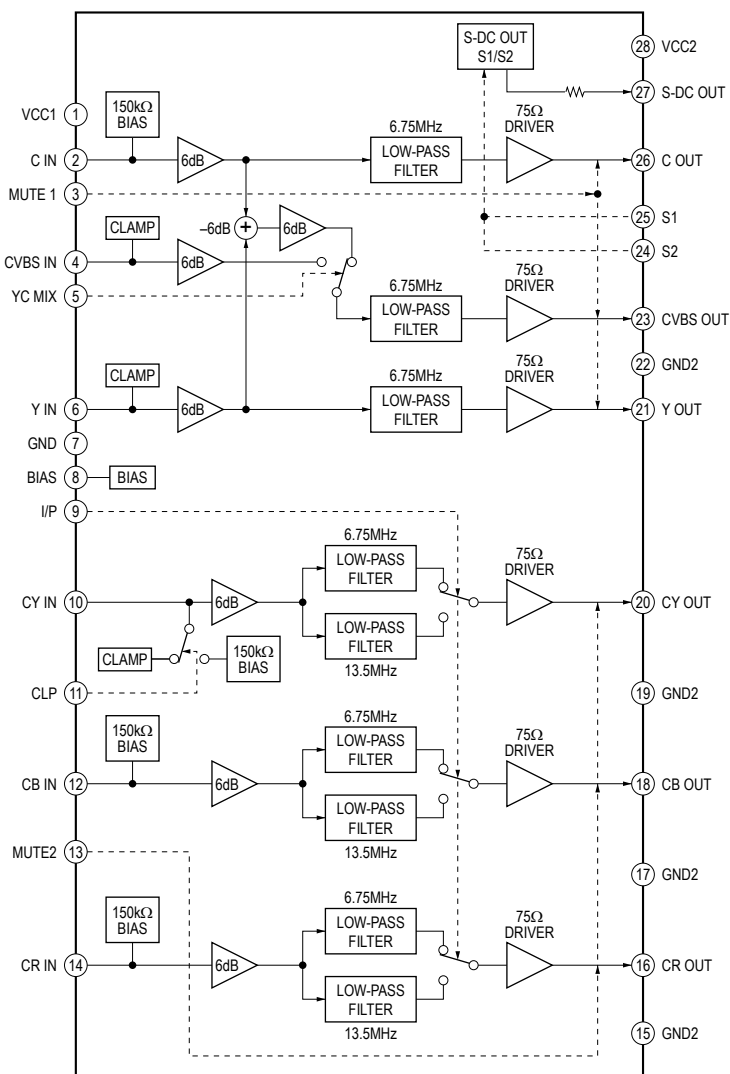


IC407, 409, 411 MC14052 BDR2

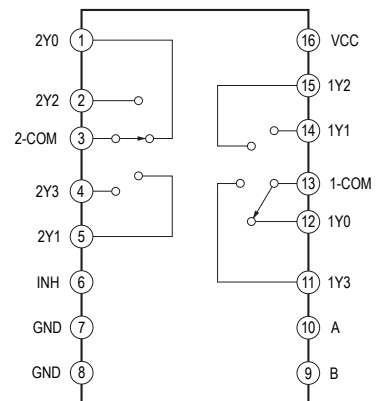


HCD-HDX275/HDX277WC/HDX279W/HDX475/HDX576WF/HDX675


IC620 TK11150CMCL-G
(HDX275/HDX475/HDX576WF/HDX675)
IC620 TK11250CMCL-G
(HDX277WC/HDX279W)

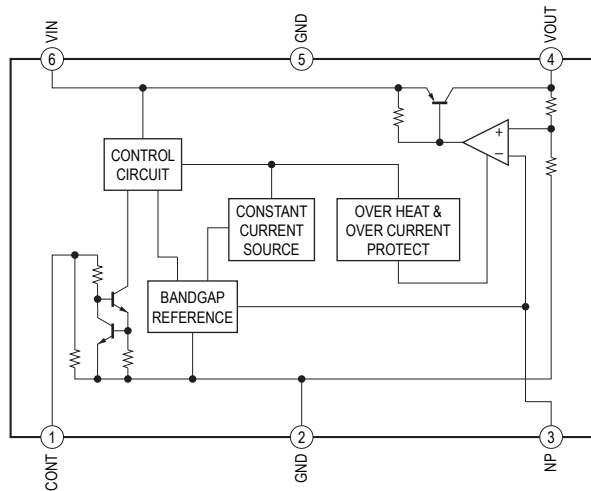


– JACK-KEY Board –
IC102 S-T111B33MC-OGSTFG

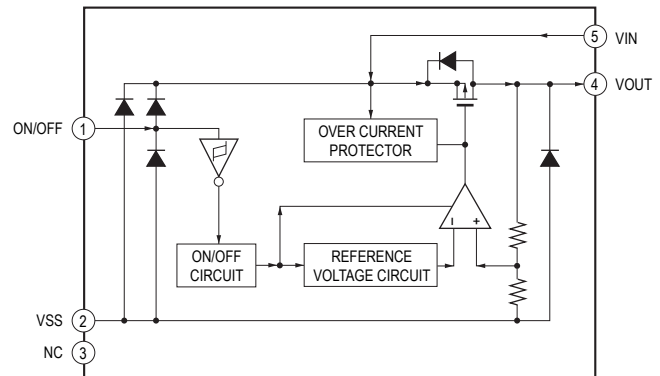


IC103 BU2099FV

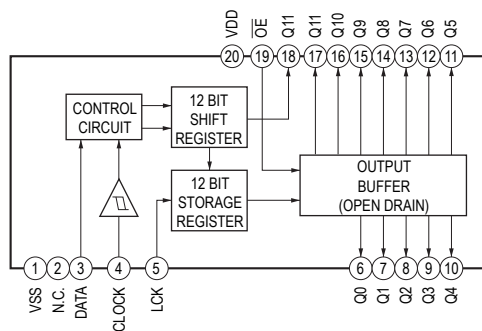

– RELAY Board –
IC701, 711 BA6956AN

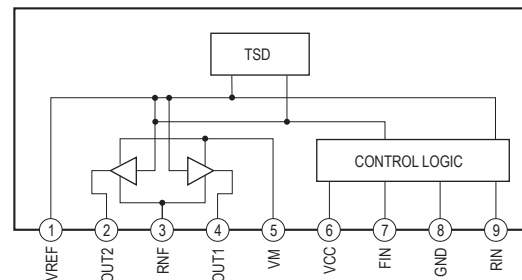


– FL Board –
IC100 PT6315

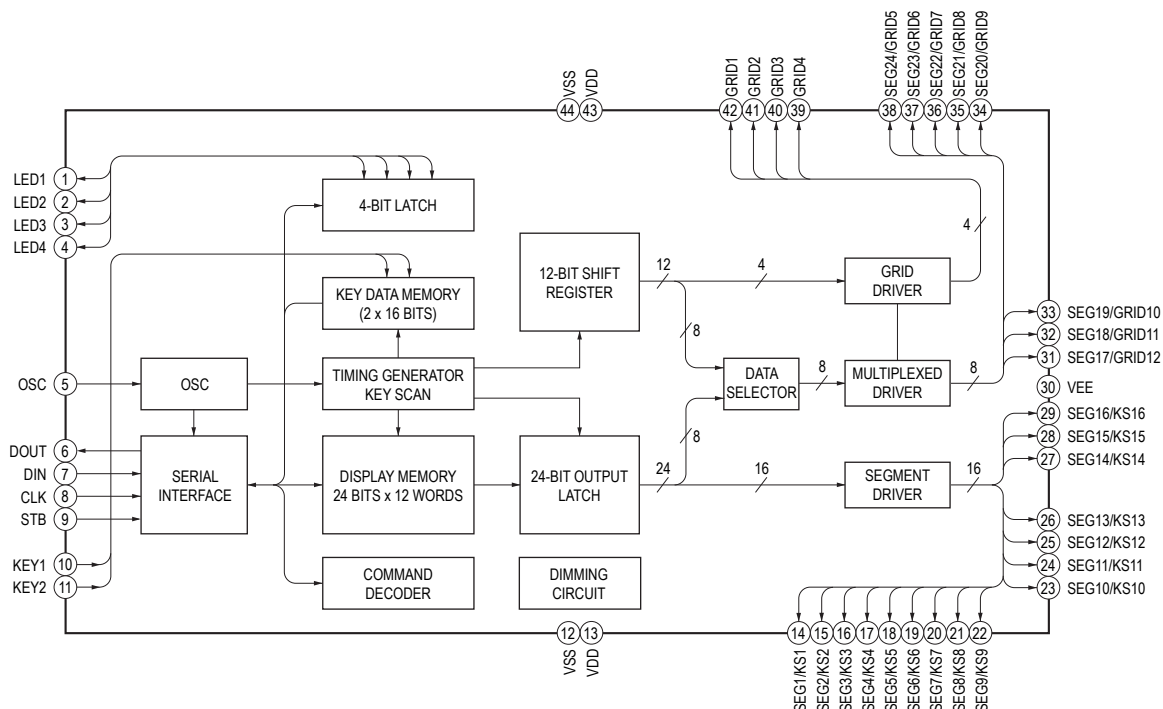


– POWER Board –

IC901 STR-F6138-LF1352


IC901 STR-F6168-LF1352

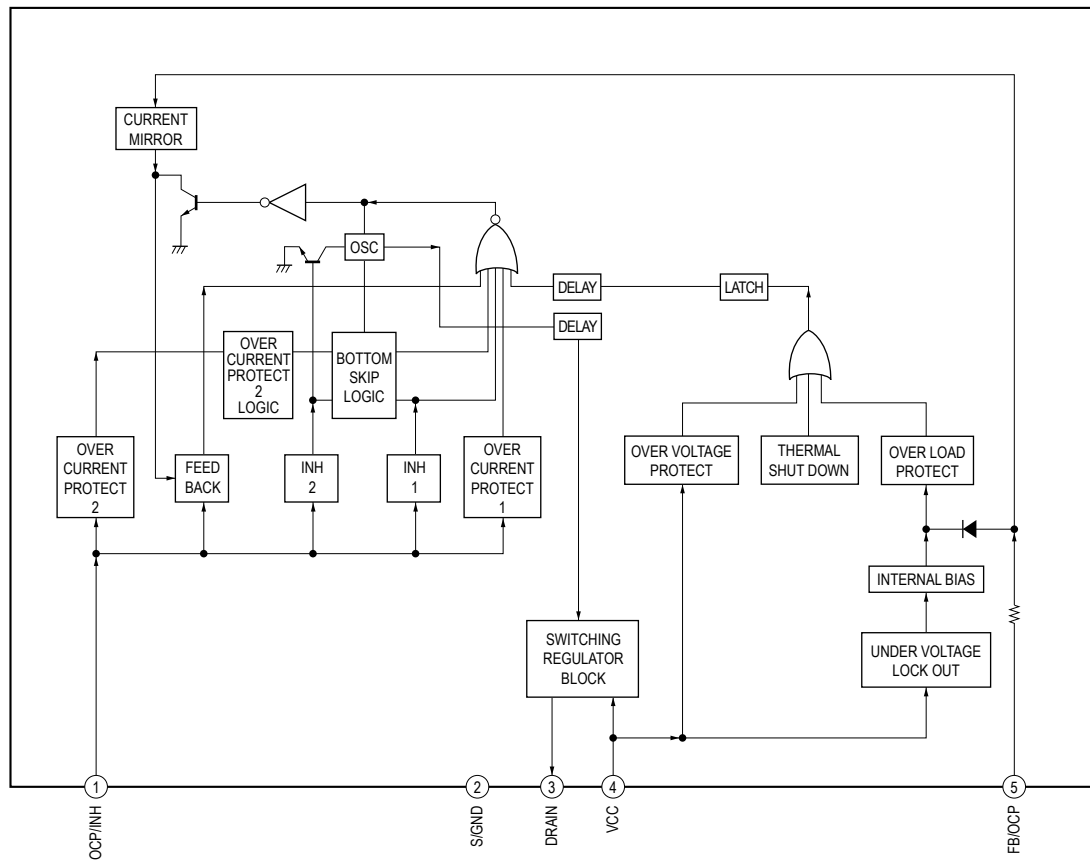

IC921 MR4020-7103

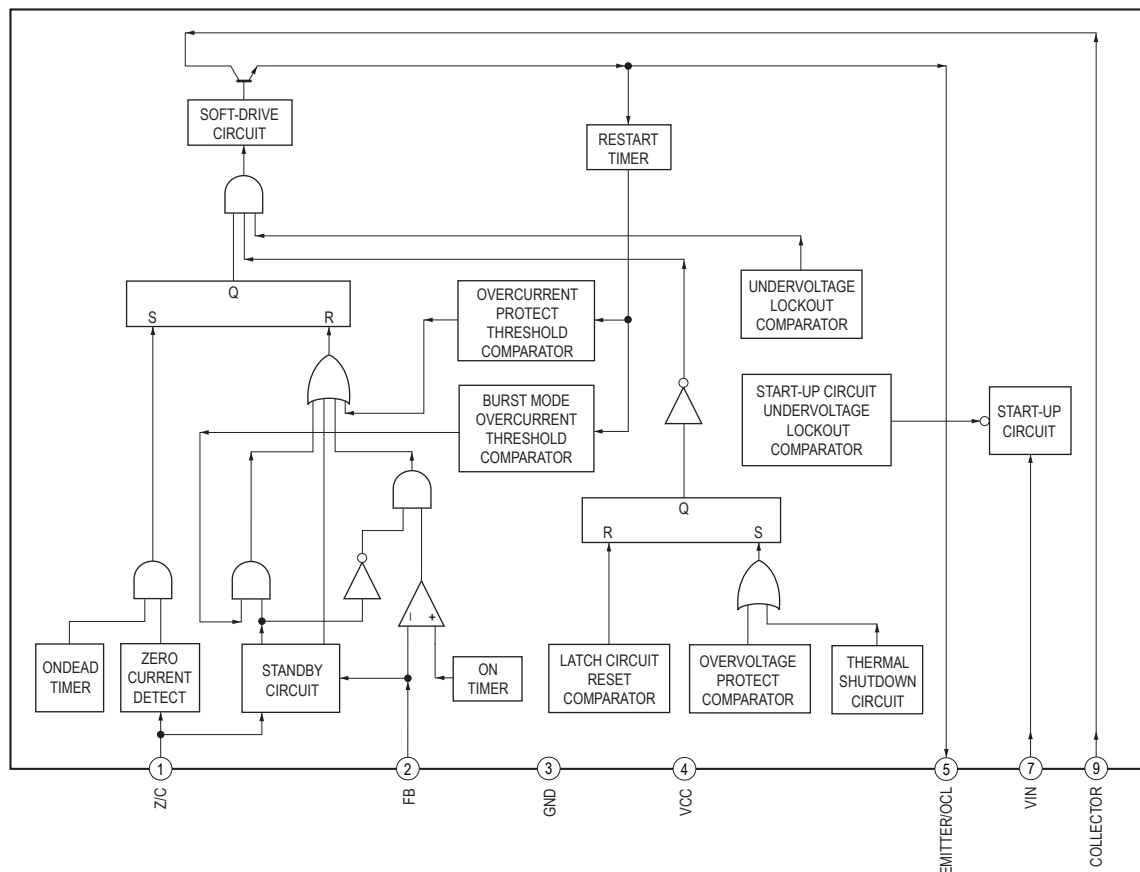

IC941 SI-3010KM-TLS

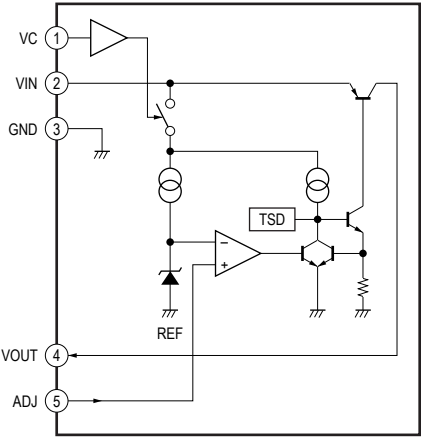

• IC Pin Function Description

MAIN BOARD IC501 R5F3640DDFAR (SYSTEM CONTROLLER)

Pin No.	Pin Name	I/O	Description
1	DAMP_SCD	O	Serial data output to the stream processor
2	DAMP_SHIFT	O	Serial data transfer clock signal output to the stream processor
3	CEC_RX_IN	I	CEC serial data input from the HDMI OUT connector
4	SIRCS_IN	I	SIRCS signal input from the remote control receiver
5	NO USE	O	Not used
6	NO USE	O	Not used
7	NO USE	O	Not used
8	BYTE	I	External data bus width selection signal input terminal Fixed at "L" in this set Not used
9	CNVSS	I	Processor mode switch input terminal (for test) Fixed at "L" in this set
10, 11	EN_A, EN_B	I	Jog dial pulse input from the rotary encoder (for VOLUME)
12	RESET	I	System reset signal input from the reset signal generator "L": reset For several hundreds msec. after the power supply rises, "L" is input, then it change to "H"
13	XOUT	O	Main system clock output terminal (5 MHz)
14	VSS	-	Ground terminal
15	XIN	I	Main system clock input terminal (5 MHz)
16	VCC	-	Power supply terminal (+3.3V)
17	NMI	I	Non-maskable interrupt input terminal Fixed at "H" in this set Not used
18	NO USE	O	Not used
19	A.CAL_OUT_LEVEL	I	Output level detect terminal for the auto calibration
20	AC_CUT	I	AC cut detection signal input terminal "L": AC cut on
21	FL_CLK/LED_CLK	O	Serial data transfer clock signal output to the LED driver and fluorescent indicator tube driver
22	CEC_TX_OUT	O	CEC serial data output to the HDMI OUT connector
23	FL-STB	O	Fluorescent indicator tube driver chip select signal output to the fluorescent indicator tube driver
24	FL_D_OUT/LED_DATA	O	Serial data output to the LED driver and fluorescent indicator tube driver
25	S-AIR_SRC_MUTE	O	Not used
26	MIC_GAIN	O	MIC gain control signal output terminal
27	NO USE	O	Not used
28	DC_CONT	O	Muting on/off control signal output terminal
29	DMPORT_RX_IN	I	Serial data input from the DMPORT connector
30	DMPORT_TX_OUT	O	Serial data output to the DMPORT connector
31	DVD_SID	O	Serial data output to the servo DSP
32	DVD_SOD	I	Serial data input from the servo DSP
33	DVD_SCO	I	Serial data transfer clock signal input from the servo DSP
34	DVD_XIFBUSY	O	Busy signal output to the servo DSP
35, 36	NO_USE	O	Not used
37	DVD XIFCS	I	Chip select signal input from the servo DSP
38	MTK_RST	O	Reset signal output to the servo DSP and flash memory "L": reset
39 to 41	P_CONT1 to P_CONT3	O	Power on/off control signal output terminal "H": power on
42	DRIVE_RST (EN)	O	Reset signal output to the digital power amplifier "L": reset
43	DRIVE_OCP(DIAG)/ POWER_DET	I	Shut down state input from the digital power amplifier "L": shut down
44, 45	OVERFLOW1, OVERFLOW2	I	Over flow status input from the stream processor
46	CE	I	Flash write CE Not used (Fixed to at "H" (E3.3V))
47	EEPROM_SDA/ I2C_DATA	I/O	I2C Two-way data bus with the EEPROM
48	EEPROM_SCL/ I2C_CLK	I/O	I2C data transfer clock signal input/output with the EEPROM
49	DAMP_LATCH3	O	Serial data latch pulse signal output to the stream processor
50	DAMP_INIT	O	Reset signal output to the stream processor "L": reset
51	DAMP_SOFT_MUTE	O	Soft muting on/off control signal output to the stream processor "L": muting on
52	M_ST	O	Audio selection signal output to the audio selector
53	HP_MUTE	O	Muting on/off control signal output terminal
54	S-AIR_ADC_SEL	O	Selection signal output to the data selector or EZW-T100

HCD-HDX275/HDX277WC/HDX279W/HDX475/HDX576WF/HDX675

Pin No.	Pin Name	I/O	Description
55	NO_USE	O	Not used
56	DAMP_LATCH2	O	Serial data latch pulse signal output to the stream processor (HCD-HDX275/HDX277WC/HDX475/HDX675)
57	DC_DET	I	DC offset detection signal input terminal
58	S-AIR_RST(SRC RST)	O	Reset signal output to the ASYNC sample rate converter and EZW-RT10 or EZW-T100 "L": reset
59	NO USE	O	Not used
60	NO USE	O	Not used
61	NO USE	O	Not used
62	VCC	-	Power supply terminal (+3.3V)
63	HDMI_PCONT	O	Power on/off control signal output terminal "H": power on
64	VSS	-	Ground terminal
65	DAMP_LATCH1	O	Serial data latch pulse signal output to the stream processor
66	(MIC/A.CAL_SW)/ (HP_SW and MIC2_SW)/S-AIR_DET	I	Connect detection signal input from the J100, J101 and EZW-RT10 or EZW-T100
67	S-AIR_GPIO_2	I	Interrupt signal input from the EZW-RT10 or EZW-T100
68	TUNED	I	Tuning detection signal input from the tuner (FM/AM) "L": tuned
69	ST_CLK	O	Serial data transfer clock signal output to the tuner (FM/AM)
70	ST_DO	I	Serial data input from the tuner (FM/AM)
71	ST_CE	O	Serial chip enable signal output to the tuner (FM/AM)
72	ST_DI	O	Serial data output to the tuner (FM/AM)
73	NO USE	O	Not used
74	KEY INT	I	Wake up signal input terminal
75	LED_LAT	O	Serial data latch pulse signal output to the LED driver
76	NO USE	O	Not used
77	S-AIR_I2C_SDA	I/O	I2C Two-way data bus with the EZW-RT10 or EZW-T100
78	S-AIR_I2C_SCL	I/O	I2C data transfer clock signal input/output to the EZW-RT10 or EZW-T100
79	NO USE	O	Not used
80	NO USE	O	Not used
81	NO USE	O	Not used
82, 83	V_SEL0, V_SEL1	O	Video signal input selection signal output terminal
84	IO_CE	O	Serial data latch pulse signal output to the changer control
85	IO_RESET	O	Reset signal output to the changer control "L": reset
86	IO_DI	O	Serial data output to the changer control
87	IO_DO	I	Serial data input from the changer control
88	IO_CLK	O	Serial data transfer clock signal output to the changer control
89	DMPORT_DET	I	Connect detection signal input from the DMPORT connector
90	MONO/ST_DET	I	MONO or STEREO detection signal input terminal
91	A.CAL_MIC_LEVEL	I	MIC level detection terminal for the AUDIO IN/A.CAL MIC jack
92	DESTINATION	I	Setting terminal for the destination
93	MODEL	I	Setting terminal for the model
94, 95	KEY2, KEY1	I	Front panel key input terminal (A/D input)
96	VSS	-	Ground terminal
97	KEY0	I	Front panel key input terminal (A/D input)
98	VREF	-	Reference voltage (+3.3V) terminal
99	VCC	-	Power supply terminal (+3.3V)
100	NO USE	O	Not used

**MAIN BOARD IC1101 CXD9917R (HCD-HDX275:E3, AUS), CXD9927R (EXCEPT HCD-HDX275:E3, AUS)
(RF AMP, SERVO DSP, MPEG DECODER, HDMI TRANSMITTER)**

Pin No.	Pin Name	I/O	Description
1	OSN	O	RF offset cancellation capacitor connecting terminal
2	RFGC	O	RF AGC loop capacitor connecting for DVD-ROM
3	IREF	I	Reference current input terminal
4	AVDD3	-	Power supply terminal (+3.3V)
5	AGND	-	Ground terminal
6	DVDA	I	AC coupled input path A
7	DVDB	I	AC coupled input path B
8	DVDC	I	AC coupled input path C
9	DVDD	I	AC coupled input path D
10	DVDRF IP	I	AC coupled DVD RF signal input from the optical pick-up block
11	MA	I	DC coupled main-beam RF signal input A
12	MB	I	DC coupled main-beam RF signal input B
13	MC	I	DC coupled main-beam RF signal input C
14	MD	I	DC coupled main-beam RF signal input D
15	SA	I	DC coupled sub-beam RF signal input A Not used
16	SB	I	DC coupled sub-beam RF signal input B Not used
17	TNI	I	3 beam satellite PD signal negative input from the optical pick-up block
18	TPI	I	3 beam satellite PD signal positive input from the optical pick-up block
19, 20	MDI1, MDI2	I	Laser power monitor input from the optical pick-up block
21	LDO2	O	Laser diode drive signal output to the optical pick-up block (for DVD)
22	LDO1	O	Laser diode drive signal output to the optical pick-up block (for CD)
23	SVDD3	-	Power supply terminal (+3.3V)
24	CSO	O	Central servo signal output terminal Not used
25	RFLVL	O	RFRP low pass output terminal Not used
26	SGND	-	Ground terminal
27	V2REFO	O	Reference voltage (+2.8V) output terminal Not used
28	V2O	O	Reference voltage (+2V) output to the optical pick-up block
29	VREFO	O	Reference voltage (+1.4V) output terminal
30	FEO	O	Focus error monitor output terminal Not used
31	TEO	O	Tracking error monitor output terminal Not used
32	TEZISLV	O	Reference voltage (+2V) output to the optical pick-up block
33	OP_OUT	O	Output from the internal operational amplifier Not used
34	OP_INN	I	Negative input to the internal operational amplifier Not used
35	OP_INP	I	Positive input to the internal operational amplifier Not used
36	DMO	O	Spindle motor control signal output to the motor driver
37	FMO	O	Sled motor control signal output to the motor driver
38	TROPENPWM	O	Loading motor control signal output terminal Not used
39	IOPMON	I	Power monitor terminal
40	TRO	O	Tracking coil control signal output to the coil driver
41	FOO	O	Focus coil control signal output to the coil driver
42	AGND18	-	Ground terminal
43	AVDD18	-	Power supply terminal (+1.8V)
44	USB_DP	-	Not used
45	USB_DM	-	Not used
46	USB_VDD3	-	Power supply terminal (+3.3V)
47	USB_VSS	-	Ground terminal
48	PAD_VRT	-	Not used
49	USB_VDD18	-	Power supply terminal (+1.8V)
50	USB_VSS	-	Ground terminal
51	DIR_ERROR	O	PLL lock error signal and data error flag output to the digital audio interface receiver
52	DIR_AUDIO	O	PCM audio data output to the digital audio interface receiver
53	LIMITSW	I	Limit detection switch input terminal
54	MSW	O	CD/DVD selection signal output terminal "L": CD, "H": DVD
55	DVDD18	-	Power supply terminal (+1.8V)

HCD-HDX275/HDX277WC/HDX279W/HDX475/HDX576WF/HDX675

Pin No.	Pin Name	I/O	Description
56 to 64	HA2 to HA8, HA18, HA19	O	Address signal output to the flash ROM
65	DVDD3	-	Power supply terminal (+3.3V)
66	XWR	O	Write enable signal output to the flash ROM
67 to 75	HA16 to HA9, HA20	O	Address signal output to the flash ROM
76	XROMCS	O	Chip select signal output to the flash ROM
77	HA1	O	Address signal output to the flash ROM
78	XRD	O	Read enable signal output to the flash ROM
79, 80	HD0, HD1	I/O	Two-way data bus terminal with the flash ROM
81	DVSS	-	Ground terminal
82 to 86	HD2 to HD6	I/O	Two-way data bus terminal with the flash ROM
87	HA21	O	Address signal output to the flash ROM
88	RESERVED	-	Not used
89	HD7	I/O	Two-way data bus terminal with the flash ROM
90	DVSS	-	Ground terminal
91, 92	HA17, HA0	O	Address signal output to the flash ROM
93	DVDD18	-	Power supply terminal (+1.8V)
94	FWD	O	Loading motor drive signal output terminal (forward direction) Not used
95	REV	O	Loading motor drive signal output terminal (reverse direction) Not used
96	DVDD3	-	Power supply terminal (+3.3V)
97	IFSDO	O	Serial data output to the system controller
98	IFCK	O	Serial data transfer clock signal output to the system controller
99	xFCS	O	Chip select signal output to the system controller
100	IFSDI	I	Serial data input from the system controller
101	SCL	O	Serial data transfer clock signal output to the EEPROM and HDMI transmitter
102	SDA	I/O	Two-way data bus with the EEPROM and HDMI transmitter
103	CKSW	I	Chucking detection switch input terminal Not used
104	OCSW	I	Disc table open/close detection switch input terminal Not used
105	RXD	I	Receive data input terminal for UART communication when data writing to flash memory
106	TXD	O	Transmit data output terminal for UART communication when data writing to flash memory
107	ICE	I	ICE mode enable signal input terminal Not used
108	xBYSRST	I	Reset signal input from the system controller "L": reset
109	RESERVED	-	Not used
110	IFBSY	I	Busy signal input from the system controller
111	DQM0	O	Data mask signal output to the SD-RAM
112	EEWP	O	Write protect signal output to the EEPROM
113 to 117	RD7 to RD3	I/O	Two-way data bus with the SD-RAM
118	DVDD3	-	Power supply terminal (+3.3V)
119 to 129	RD2 to RD0, RD15 to RD8	I/O	Two-way data bus with the SD-RAM
130	TSD_M	O	Thermal shut down signal output to the motor/coil driver
131	DVDD3	-	Power supply terminal (+3.3V)
132	DQM1	O	Data mask signal output to the SD-RAM
133	RWE	O	Write enable signal output to the SD-RAM
134	CAS	O	Column address strobe signal output to the SD-RAM
135	RAS	O	Row address strobe signal output to the SD-RAM
136	RCS	O	Chip select signal output to the SD-RAM
137, 138	BA0, BA1	O	Bank address signal output to the SD-RAM
139 to 141	RA10, RA0, RA1	O	Address signal output to the SD-RAM
142	DVDD18	-	Power supply terminal (+1.8V)
143, 144	RA2, RA3	O	Address signal output to the SD-RAM
145	DVDD3	-	Power supply terminal (+3.3V)
146	DRCLK	O	Serial data transfer clock signal output to the SD-RAM
147	CKE	O	Clock enable signal output to the SD-RAM
148	DVSS	-	Ground terminal
149 to 155	RA11, RA9 to RA4	O	Address signal output to the SD-RAM

Pin No.	Pin Name	I/O	Description
156	DVDD3	-	Power supply terminal (+3.3V)
157	MUTE123	O	Muting signal output to the motor/coil driver
158	MUTE	O	Muting signal output to the motor/coil driver
159	DDC_DA	O	Serial data transfer clock signal output to the HDMI OUT connector
160	DVDD18	-	Power supply terminal (+1.8V)
161	DDC_CLK	I/O	Two-way data bus with the HDMI OUT connector
162	HTPLG	I	HDMI hot-plug detection signal input terminal
163	AGND3	-	Ground terminal
164	EXT_RES	-	Not used
165, 166	AVDD3	-	Power supply terminal (+3.3V)
167	EXT_CAP	-	Not used
168, 169	AGND3, AGND18	-	Ground terminal
170	TXCN	O	TMDS clock signal (negative) output to the HDMI OUT connector
171	TXCP	O	TMDS clock signal (positive) output to the HDMI OUT connector
172	AVDD18	-	Power supply terminal (+1.8V)
173	TX0N	O	TMDS data (negative) output to the HDMI OUT connector
174	TX0P	O	TMDS data (positive) output to the HDMI OUT connector
175	AGND18	-	Ground terminal
176	TX1N	O	TMDS data (negative) output to the HDMI OUT connector
177	TX1P	O	TMDS data (positive) output to the HDMI OUT connector
178	AVDD18	-	Power supply terminal (+1.8V)
179	TX2N	O	TMDS data (negative) output to the HDMI OUT connector
180	TX2P	O	TMDS data (positive) output to the HDMI OUT connector
181	AGND18	-	Ground terminal
182, 183	R/Cr/Pr, B/Cb/Pb	O	Component video signal output to the video amplifier
184	DACVSSA	-	Ground terminal
185	Y/G	O	Component video signal output to the video amplifier
186	DACVDDA	-	Power supply terminal (+3.3V)
187	CVBS	O	Video signal output to the video amplifier Not used
188	DACVSSB	-	Ground terminal
189	C	O	Chroma signal output to the video amplifier
190	DACVDDB	-	Power supply terminal (+3.3V)
191	Y	O	Y signal output to the video amplifier
192	DACVSSC	-	Ground terminal
193	FS	-	Full scale adjustment terminal
194	VREF	-	For reference voltage terminal
195	DACVDDC	-	Power supply terminal (+3.3V)
196	VBUS_OE	-	Not used
197	VBUS_OC	-	Not used
198	DIR_XSTATE	I	Source clock switching monitor input from the digital audio interface receiver
199	SPMCK	O	Master clock signal output to the digital audio interface receiver
200	SPBCK	O	Bit clock signal output to the digital audio interface receiver
201	SPLRCK	O	L/R sampling clock signal output to the digital audio interface receiver
202	ADIN(Spdata)	I	Audio serial data input from the digital audio interface receiver
203	ACLK	O	Master clock signal output to the buffer
204	ABCK	O	Bit clock signal output to the buffer
205	ALRCK	O	L/R sampling clock signal output to the buffer
206	MC_DATA(ADIN)	I	Audio serial data input from the A/D converter
207	DVDD3	-	Power supply terminal (+3.3V)
208	MIC	-	Not used
209	WIDE	O	Normal/squeeze selection signal output to the video amplifier "L": normal, "H": squeeze Not used
210	REG_SEL/DSEL	-	Not used
211	TRG_SW	I	Trigger detection switch input terminal Not used
212	DVDD18	-	Power supply terminal (+1.8V)
213	KMOD	-	Not used

HCD-HDX275/HDX277WC/HDX279W/HDX475/HDX576WF/HDX675

Pin No.	Pin Name	I/O	Description
214	XVOICE/DIR_CSFCAG	I	Detection of MIC signal input from the digital audio interface receiver
215	SPDIF	O	SPDIF digital audio signal output terminal Not used
216	APLLVDD3	-	Power supply terminal (+3.3V)
217	APLLCAP	-	Connection terminal for an external capacitor
218	APLLVSS	-	Ground terminal
219, 220	ADACVSS2, ADACVSS1	-	Ground terminal
221	DIR_CE	-	Not used
222, 223	ASDATA3, ASDATA2	O	Audio serial data output to the buffer
224	AVCM	-	Not used
225, 226	ASDATA1, ASDATA0	O	Audio serial data output to the buffer
227	DIR_CL	-	Not used
228, 229	ADACVDD1, ADACVDD2	-	Power supply terminal (+3.3V)
230	DIR_DI	I	Serial data input from the digital audio interface receiver
231	DIR_DO	O	Serial data output to the digital audio interface receiver
232	ADACVSS1	-	Ground terminal
233	ADACVDD1	-	Power supply terminal (+3.3V)
234	SADCVDD18	-	Power supply terminal (+1.8V)
235	SADCVSS18	-	Ground terminal
236	RFGND18	-	Ground terminal
237	RFVDD18	-	Power supply terminal (+1.8V)
238	XTALO	O	System clock output terminal (27 MHz)
239	XTALI	I	System clock input terminal (27 MHz)
240	JITFO	O	Output terminal of the RF jitter meter
241	JITFN	I	Input terminal of the RF jitter meter
242	PLLSS	-	Ground terminal
243	PLLVDD3	-	Power supply terminal (+3.3V)
244	LPFON	O	Data PLL loop filter output terminal
245	LPFIP	I	Data PLL loop filter input terminal
246	LPFIN	I	Data PLL loop filter input terminal
247	LPFOP	O	Data PLL loop filter output terminal
248	ADCVDD3	-	Power supply terminal (+3.3V)
249	ADCVSS	-	Ground terminal
250	RFVDD3	-	Power supply terminal (+3.3V)
251	RFRPDC	O	RF ripple detect output terminal
252	RFRPAC	I	RF ripple detect input terminal
253	HRFZC	I	High frequency RF ripple zero crossing terminal
254	CRTPLP	O	Defect level filter capacitor connecting terminal
255	RFGND18	-	Ground terminal
256	OSP	O	RF offset cancellation capacitor connecting terminal

SECTION 7 EXPLODED VIEWS

Note:

- -XX and -X mean standardized parts, so they may have some difference from the original one.
- Items marked "*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- The mechanical parts with no reference number in the exploded views are not supplied.

- Color Indication of Appearance Parts Example:
KNOB, BALANCE (WHITE) . . . (RED)

↑ ↑
Parts Color Cabinet's Color




- Abbreviation
AUS : Australian model
CND : Canadian model
E3 : 240V AC area in E model

The components identified by mark Δ or dotted line with mark Δ are critical for safety. Replace only with part number specified.

Les composants identifiés par une marque Δ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

The components identified by mark Δ contain confidential information. Strictly follow the instructions whenever the components are repaired and/or replaced.


Les composants identifiés par la marque Δ contiennent des informations confidentielles. Suivre scrupuleusement les instructions chaque fois qu'un composant est remplacé et / ou réparé.

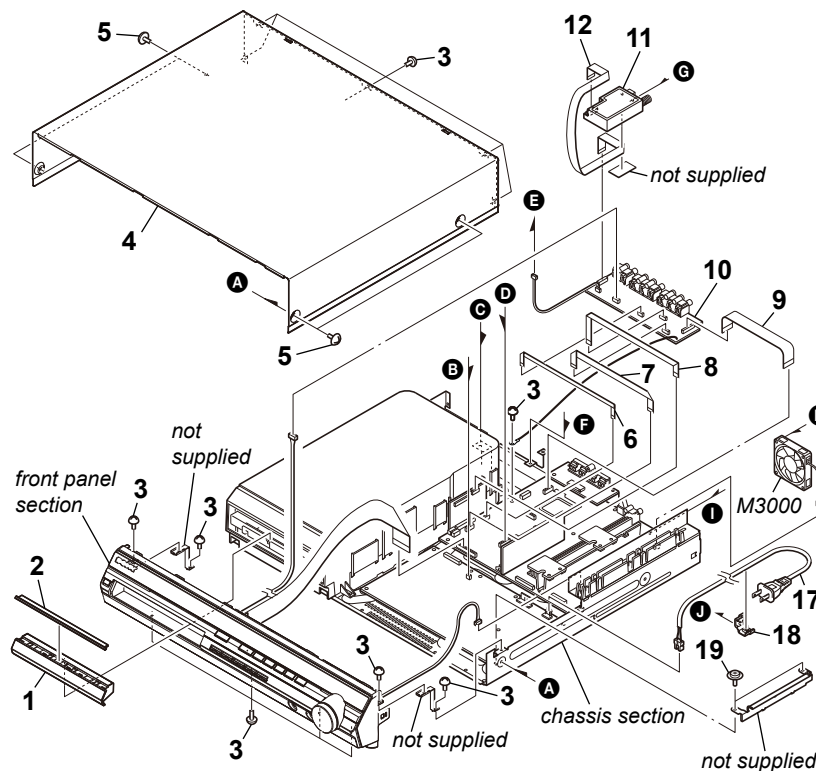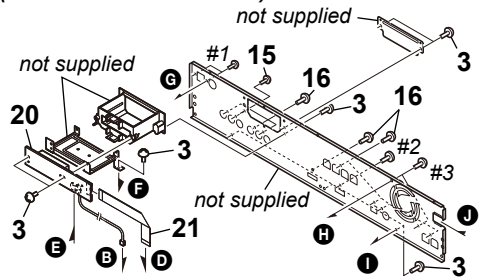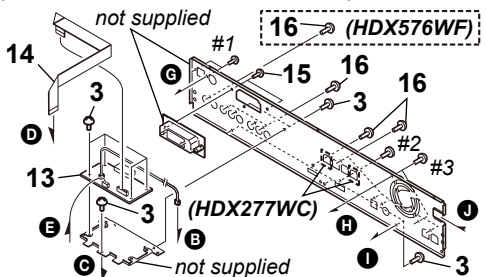7-1. CASE SECTION**(HDX275/HDX475/HDX675)****(HDX277WC/HDX279W/HDX576WF)**

Note: If wire (flat type) is replaced, install it after bending it in the same form as that before replacement.

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
1	3-278-568-01	PANEL (DCR), LOADING		14	1-828-352-11	WIRE (FLAT TYPE) (17 CORE) (HDX277WC/ HDX279W/HDX576WF)	
2	3-278-569-01	ORNAMENT, LOADING (HDX675)		15	3-077-331-11	+BV3 (3-CR) (HDX275/HDX277WC/HDX279W/ HDX475/HDX576WF/HDX675)	
2	3-278-569-11	ORNAMENT, LOADING (EXCEPT HDX675)		16	3-077-331-01	+BV3 (3-CR)	
3	3-077-331-21	+BV3 (3-CR)		Δ 17	1-834-966-21	CORD, POWER (E3)	
4	3-278-577-12	CASE (DCR)		Δ 17	1-834-967-21	CORD, POWER (AUS)	
5	3-363-099-22	SCREW (CASE 3 TP2)		Δ 17	1-834-978-11	CORD, POWER (US, CND)	
6	1-828-290-11	WIRE (FLAT TYPE) (5 CORE)		18	3-703-244-00	BUSHING (2104), CORD	
7	1-828-310-11	WIRE (FLAT TYPE) (9 CORE)		19	2-677-839-01	+PWH 3X8 (SUMITITE)	
8	1-828-301-11	WIRE (FLAT TYPE) (7 CORE)		20	A-1438-875-A	S-AIR CON PWB BOARD, COMPLETE (HDX275/HDX475/HDX675)	
9	1-828-347-11	WIRE (FLAT TYPE) (17 CORE)		21	1-828-350-11	WIRE (FLAT TYPE) (17 CORE) (HDX275/HDX475/ HDX675)	
10	A-1436-211-A	I/O BOARD, COMPLETE (HDX275/HDX475/HDX675)		M3000	1-787-396-11	D.C. FAN (50 SQUARE)	
10	A-1436-346-A	I/O BOARD, COMPLETE (HDX576WF)		#1	7-685-871-01	SCREW +BVTT 3X6 (S)	
10	A-1539-127-A	I/O BOARD, COMPLETE (HDX277WC/HDX279W)		#2	7-682-547-04	SCREW +B 3X6	
11	1-693-761-11	TUNER (FM/AM) (E3, AUS)		#3	7-685-647-79	SCREW +BVTP 3X10 TYPE2 IT-3	
11	1-693-762-11	TUNER (FM/AM) (US, CND)					
12	1-828-955-11	WIRE (FLAT TYPE) (9 CORE)					
13	A-1436-297-A	S-AIR INC BOARD, COMPLETE (HDX277WC/HDX279W/HDX576WF)					


7-3. CHASSIS SECTION

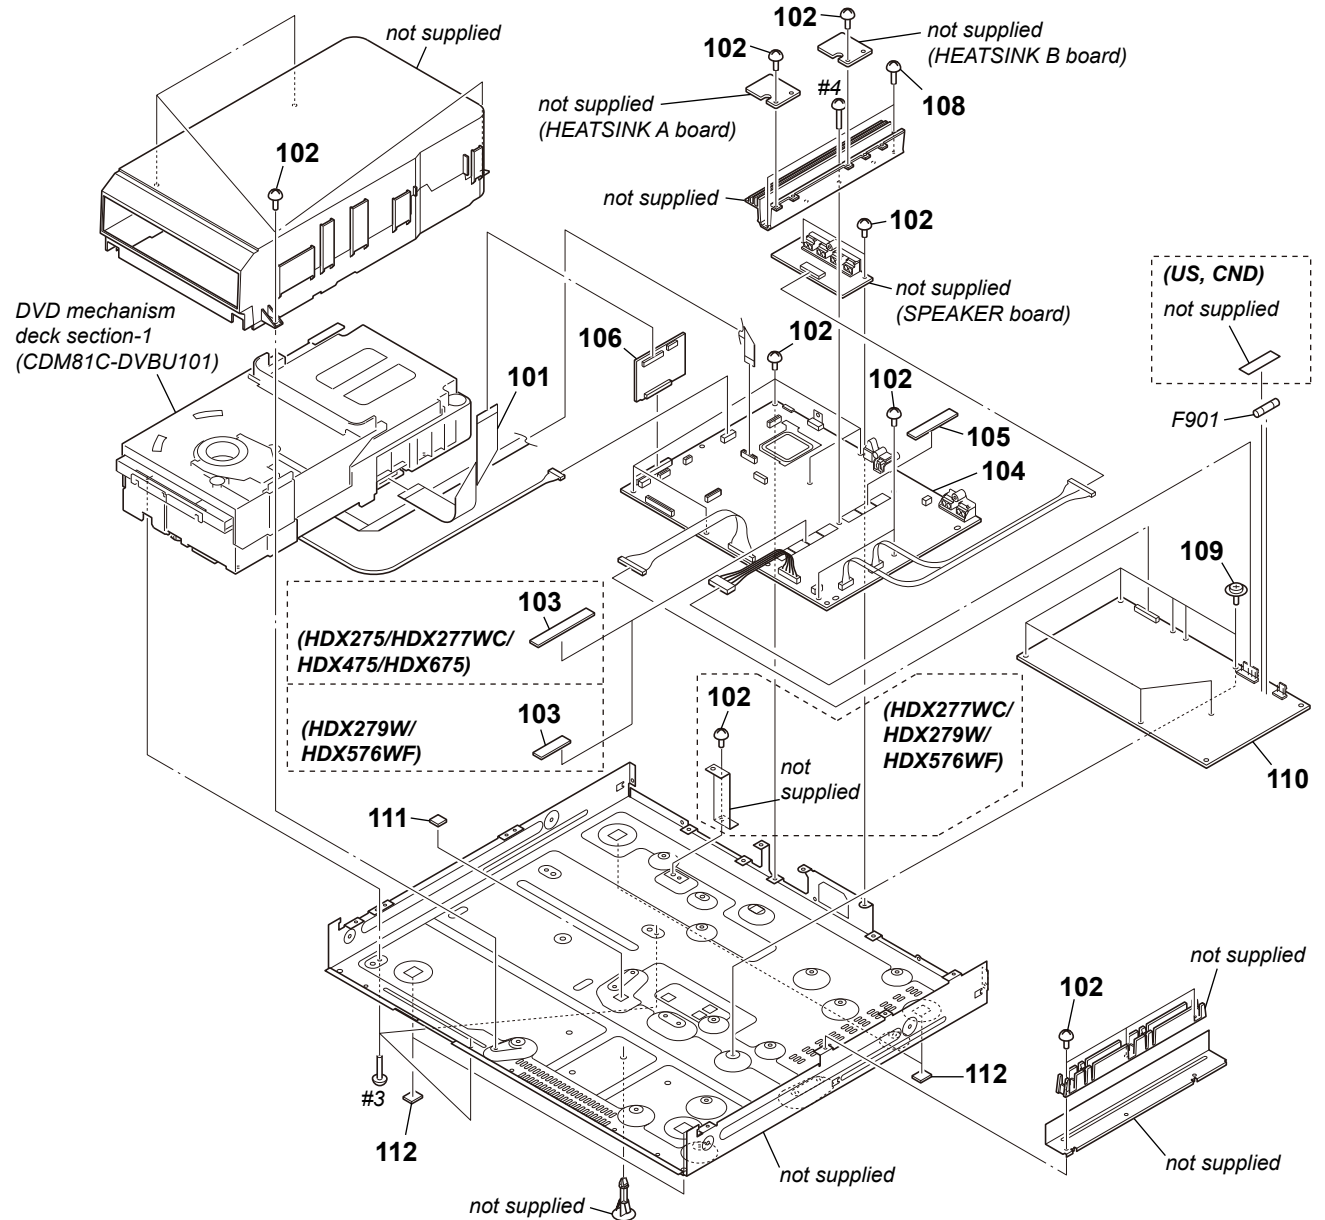

Note: If wire (flat type) is replaced, install it after bending it in the same form as that before replacement.


Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
101	1-828-369-11	WIRE (FLAT TYPE) (21 CORE)		104	A-1510-710-A	MAIN BOARD, COMPLETE (for SERVICE)	(HDX279W)
102	3-077-331-21	+BV3 (3-CR)		105	2-597-972-51	SHEET, RADIATION	
103	2-597-972-41	SHEET, RADIATION (HDX275/HDX277WC/HDX475/HDX675)		106	A-1436-213-A	SERIPARA BOARD, COMPLETE	
103	2-597-972-61	SHEET, RADIATION (HDX279W/HDX576WF)		108	3-077-331-11	+BV3 (3-CR)	
104	A-1436-234-A	MAIN BOARD, COMPLETE (for SERVICE)	(HDX275: US)	109	2-677-839-01	+PWH 3X8 (SUMITITE)	
104	A-1436-242-A	MAIN BOARD, COMPLETE (for SERVICE)	(HDX275: AUS)	110	A-1392-694-A	POWER BOARD, COMPLETE (HDX275: E3, AUS)	
104	A-1436-299-A	MAIN BOARD, COMPLETE (for SERVICE)	(HDX277WC)	110	A-1392-696-A	POWER BOARD, COMPLETE	(HDX275: US/HDX277WC/HDX279W/HDX475/HDX576WF/HDX675)
104	A-1436-334-A	MAIN BOARD, COMPLETE (for SERVICE)	(HDX475)	111	4-231-099-91	SHEET, RADIATION	
104	A-1436-348-A	MAIN BOARD, COMPLETE (for SERVICE)	(HDX576WF)	112	4-232-478-31	FOOT	
104	A-1436-356-A	MAIN BOARD, COMPLETE (for SERVICE)	(HDX675)	F901	1-533-311-12	FUSE, GLASS CYLINDRICAL (DIA.5) (8A/125V)	(US, CND)
104	A-1509-053-A	MAIN BOARD, COMPLETE (for SERVICE)	(HDX275: E3)	F901	1-576-233-51	FUSE (H.B.C.) (T6.3AH/125V) (E3, AUS)	
				#3	7-685-647-79	SCREW +BVTP 3X10 TYPE2 IT-3	
				#4	7-685-648-79	SCREW +BVTP 3X12 TYPE2 IT-3	

7-4. DVD MECHANISM DECK SECTION-1 (CDM81C-DVBU101)

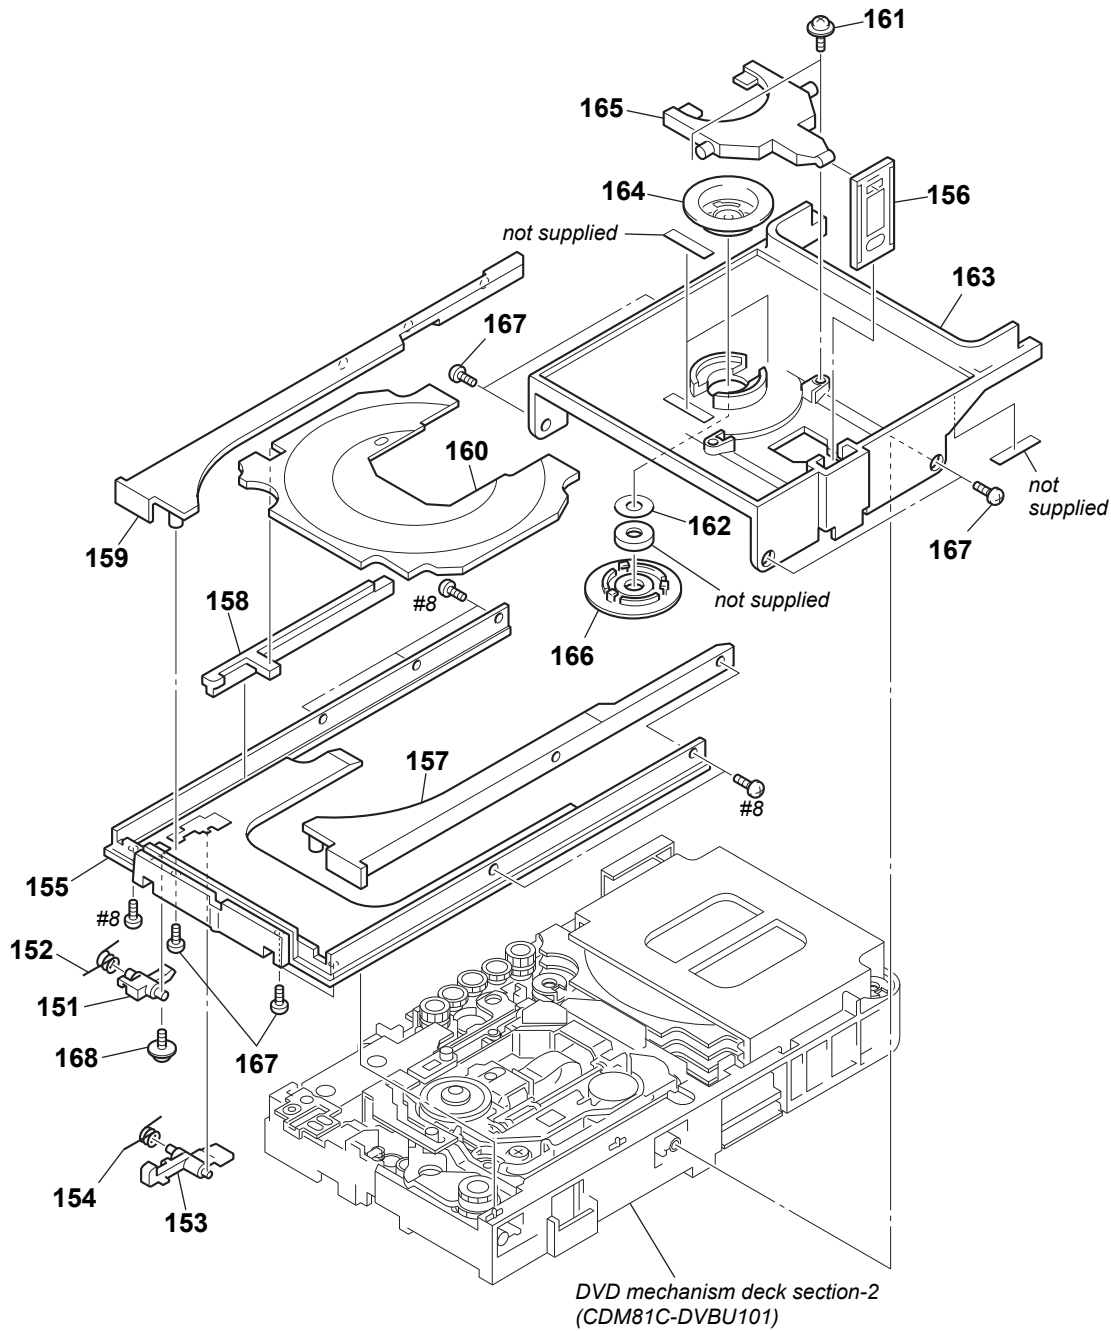


Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
151	4-251-849-01	LEVER (SW2)		161	4-985-672-01	SCREW (+PTPWH M2.6), FLOATING	
152	4-251-991-01	SPRING (SW2), TORSION		162	4-251-923-01	YOKE (310)	
153	4-251-860-01	LEVER (LOCK)		163	4-251-821-03	BRACKET (TOP)	
154	4-251-867-01	SPRING (LOCK), TORSION		164	4-251-922-01	PULLEY B (310), CHUCKING	
155	4-251-828-01	TRAY (MAIN)		165	4-251-824-01	LIFTER	
156	4-251-822-01	JOINT (LIFTER)		166	4-251-837-01	PULLEY A (310), CHUCKING	
157	4-251-857-01	COVER (R)		167	4-218-253-52	SCREW (M2.6), +BTTP	
158	4-251-830-01	SLIDER (ST)		168	4-674-137-11	SCREW (PTP 2X5)	
159	4-251-858-01	COVER (L)		#8	7-685-102-19	SCREW +P 2X4 NON-SLIT TYPE 2	
160	4-251-829-02	TRAY (SUB)					

7-5. DVD MECHANISM DECK SECTION-2 (CDM81C-DVBU101)

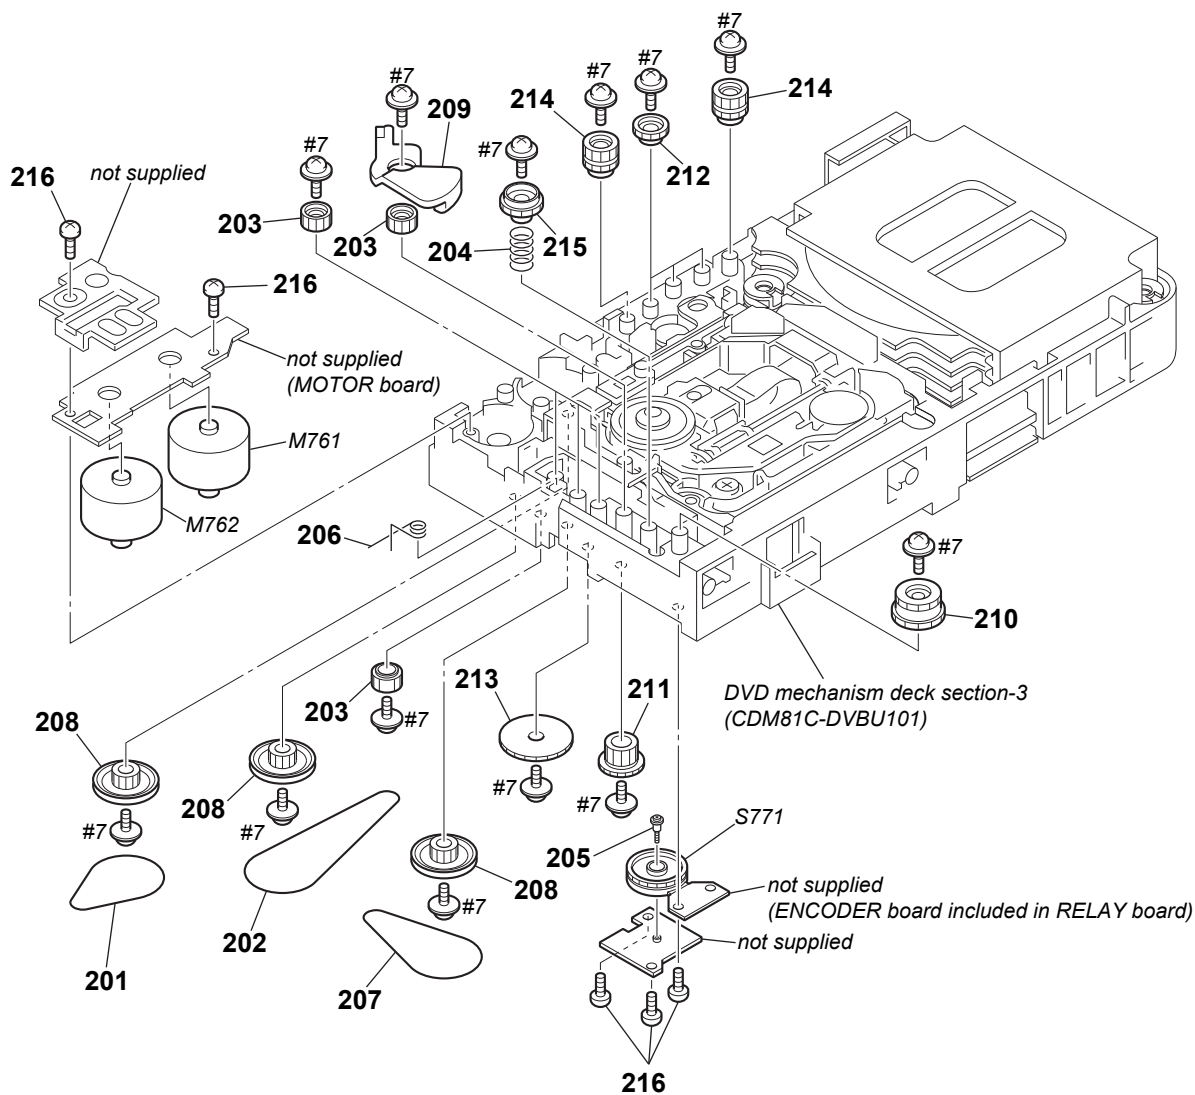


Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
201	4-251-868-01	BELT (SUB TRAY)		211	4-251-856-01	GEAR (BU2)	
202	4-251-869-01	BELT (MAIN TRAY)		212	4-251-841-01	GEAR (SUB TRAY 1)	
203	4-251-850-01	GEAR (MAIN TRAY 1)		213	4-251-854-01	GEAR (BU1)	
204	4-251-873-01	SPRING (MODE), COMPRESSION		214	4-251-842-02	GEAR (SUB TRAY 2)	
205	4-239-618-01	SCREW (+PWH, 2X6), STEP TAPPING		215	4-251-851-01	GEAR (MAIN TRAY 2)	
206	4-251-872-01	SPRING (LEVER), TORSION		216	4-218-253-52	SCREW (M2.6), +BTTP	
207	4-251-870-01	BELT (BU)		M761	A-4713-174-A	MOTOR (81) ASSY (LOADING/STOCKER)	
208	4-251-853-01	PULLEY (BU)		M762	A-4713-174-A	MOTOR (81) ASSY (BU UP/DOWN)	
209	4-251-834-01	LEVER (MAIN TRAY)		S771	1-478-552-11	ENCODER, ROTARY (MD)	
210	4-251-852-01	GEAR (MAIN TRAY 3)		#7	7-685-902-21	TAPPING +PWH 2.6X8 TYPE2 N-S	

7-6. DVD MECHANISM DECK SECTION-3 (CDM81C-DVBU101)

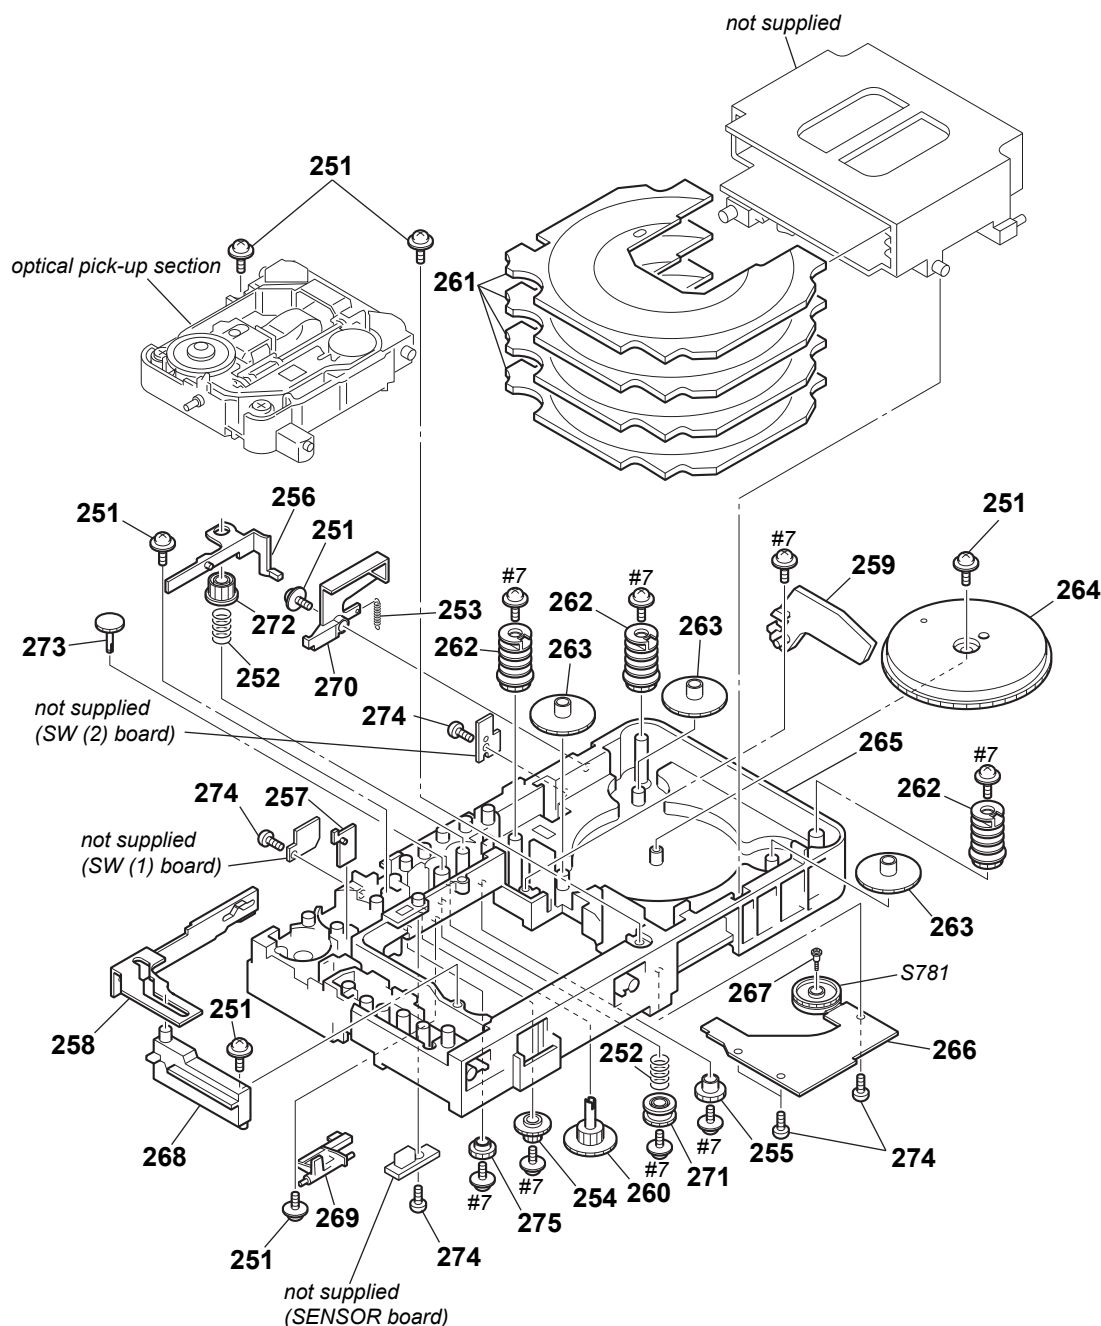

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
251	4-985-672-01	SCREW (+PTPWH M2.6), FLOATING		266	A-4750-232-A	RELAY BOARD, COMPLETE (including ENCODER board)	
252	4-251-873-01	SPRING (MODE), COMPRESSION		267	4-239-618-01	SCREW (+PWH, 2X6), STEP TAPPING	
253	4-251-874-02	SPRING (SW), TENSION		268	4-251-825-01	CAM (BU)	
254	4-251-844-01	GEAR (SS2)		269	4-251-832-01	LEVER (STOCKER)	
255	4-251-835-01	GEAR (STOCKER 1)		270	4-251-861-01	LEVER (SW)	
256	4-251-833-01	LEVER (SUB TRAY)		271	4-251-839-01	GEAR (STOCKER 4)	
257	4-251-843-01	LEVER (RELEASE)		272	4-251-840-01	GEAR (SUB TRAY)	
258	4-251-831-02	LEVER (MODE)		273	4-251-847-01	GEAR (SS4)	
259	4-251-862-01	SHUTTER (TRAY)		274	4-218-253-52	SCREW (M2.6), +BTTP	
260	4-251-845-01	GEAR (SS3)		275	4-251-841-01	GEAR (SUB TRAY 1)	
261	4-251-829-02	TRAY (SUB)		S781	1-478-551-11	ENCODER, ROTARY (STOCKER UP/DOWN)	
262	4-251-827-01	CAM (STOCKER)		#7	7-685-902-21	TAPPING +PWH 2.6X8 TYPE2 N-S	
263	4-251-836-01	GEAR (STOCKER 2)					
264	4-251-838-01	GEAR (STOCKER 3)					
265	4-251-823-01	CHASSIS (CDM81)					

7-7. OPTICAL PICK-UP SECTION

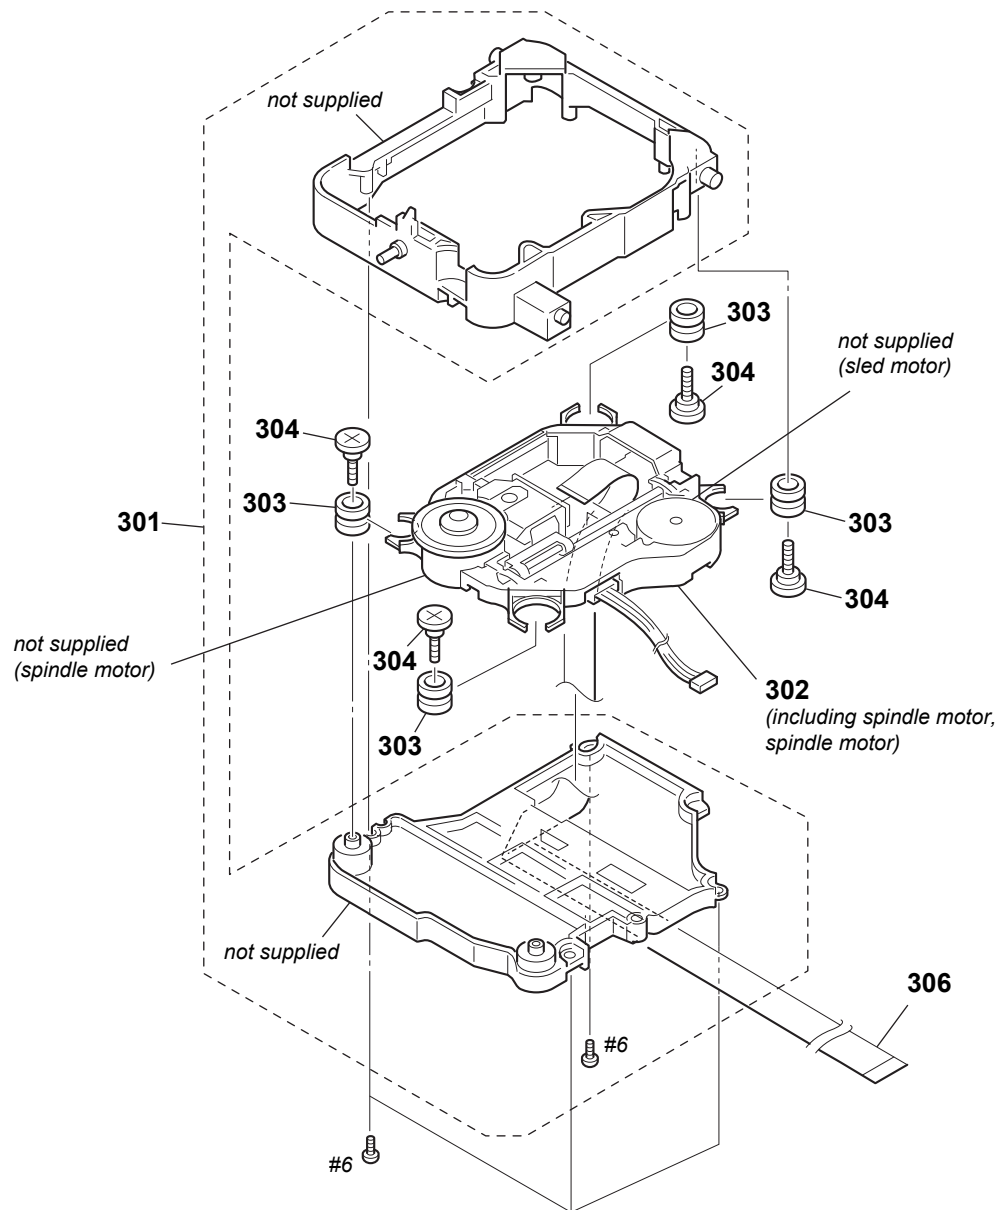

Note 1: If wire (flat type) is replaced, install it after bending it in the same form as that before replacement.

Note 2: Refer to the Servicing Notes "HOW TO IDENTIFY OPTICAL PICK-UP BLOCK" (page 7), if replacing the Ref. No. 302.

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
301	X-4956-097-1	HOLDER (310) ASSY		304	3-087-599-01	INSULATOR SCREW	
△ 302	8-820-291-02	OPTICAL PICK-UP BLOCK (KHM-310CAB/C2RP) (including sled motor, spindle motor)		305	4-218-253-52	SCREW (M2.6), +BTTP	
△ 302	8-820-322-04	OPTICAL PICK-UP BLOCK (KHM-313CAB/C2RP) (including sled motor, spindle motor)		306	1-828-774-51	WIRE (FLAT TYPE) (24 CORE)	
303	2-634-618-01	INSULATOR		#6	7-685-534-19	SCREW +BTP 2.6X8 TYPE2 N-S	

SECTION 8

ELECTRICAL PARTS LIST

ENCODER FL I/O

Note:

- Due to standardization, replacements in the parts list may be different from the parts specified in the diagrams or the components used on the set.
- -XX and -X mean standardized parts, so they may have some difference from the original one.
- Items marked “*” are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- CAPACITORS
uF: μ F
- COILS
uH: μ H

- RESISTORS
All resistors are in ohms.
METAL: Metal-film resistor.
METAL OXIDE: Metal oxide-film resistor.
F: nonflammable
- SEMICONDUCTORS
In each case, u: μ , for example:
uA. . . : μ A. . . , uPA. . . , μ PA. . . ,
uPB. . . : μ PB. . . , uPC. . . , μ PC. . . ,
uPD. . . : μ PD. . .
- Abbreviation
CND : Canadian model
AUS : Australian model
E3 : 240V AC area in E model

When indicating parts by reference number, please include the board name.

The components identified by mark \triangle or dotted line with mark \triangle are critical for safety.
Replace only with part number specified.

Les composants identifiés par une marque \triangle sont critiques pour la sécurité.
Ne les remplacer que par une pièce portant le numéro spécifié.

The components identified by mark \triangle contain confidential information.
Strictly follow the instructions whenever the components are repaired and/or replaced.

Les composants identifiés par la marque \triangle contiennent des informations confidentielles.
Suivre scrupuleusement les instructions chaque fois qu'un composant est remplacé et / ou réparé.

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
ENCODER BOARD (Included in RELAY board)				< FLUORESCENT INDICATOR TUBE >			
*****				< TRANSISTOR >			
*****				ND100	1-519-988-11	INDICATOR TUBE, FLUORESCENT	
*****				< RESISTOR >			
	A-1436-203-A	FL BOARD, COMPLETE	*****	Q100	6-550-065-01	TRANSISTOR CPH5504-TL-E	
	3-273-731-01	HOLDER (FL)		< TRANSFORMER >			
		< CAPACITOR >		T100	1-443-645-11	TRANSFORMER, DC CONVERTER	*****
C101	1-124-584-00	ELECT 100uF 20%	6.3V	A-1436-211-A	I/O BOARD, COMPLETE	(HDX275/HDX475/HDX675)	
C102	1-162-968-11	CERAMIC CHIP 0.0047uF 10%	50V	A-1436-346-A	I/O BOARD, COMPLETE (HDX576WF)		
C103	1-163-037-11	CERAMIC CHIP 0.022uF 10%	50V	A-1539-127-A	I/O BOARD, COMPLETE (HDX277WC/HDX279W)	*****	
C104	1-162-974-11	CERAMIC CHIP 0.01uF	50V	< CAPACITOR >			
C105	1-119-772-91	ELECT 47uF 20%	35V	C414	1-126-933-11	ELECT 100uF 20%	16V
C106	1-107-826-11	CERAMIC CHIP 0.1uF 10%	16V	C415	1-107-826-11	CERAMIC CHIP 0.1uF 10%	16V
C107	1-126-157-11	ELECT 10uF 20%	16V	C420	1-107-826-11	CERAMIC CHIP 0.1uF 10%	16V
C108	1-107-826-11	CERAMIC CHIP 0.1uF 10%	16V	C424	1-126-933-11	ELECT 100uF 20%	16V
C116	1-126-157-11	ELECT 10uF 20%	16V	C454	1-165-908-11	CERAMIC CHIP 1uF 10%	10V
C117	1-162-970-11	CERAMIC CHIP 0.01uF 10%	25V	C456	1-126-933-11	ELECT 100uF 20%	16V
C194	1-165-989-11	CERAMIC CHIP 10uF 10%	6.3V	C457	1-165-908-11	CERAMIC CHIP 1uF 10%	10V
C195	1-107-826-11	CERAMIC CHIP 0.1uF 10%	16V	C458	1-126-933-11	ELECT 100uF 20%	16V
		< CONNECTOR >		C460	1-165-908-11	CERAMIC CHIP 1uF 10%	10V
CN100	1-779-546-11	CONNECTOR, FFC (LIF (NON-ZIF)) 9P		C462	1-126-916-11	ELECT 1000uF 20%	6.3V
		< DIODE >		C468	1-162-964-11	CERAMIC CHIP 0.001uF 10%	50V
D100	6-501-579-01	DIODE MC2837					
D101	6-501-579-01	DIODE MC2837					
D102	6-501-729-01	DIODE MAZ8051GLLS0					
D103	6-501-817-01	DIODE MA2J1110GLS0					
		< IC >					
IC100	6-701-729-01	IC PT6315					
IC101	6-600-349-21	IC NJL23H400A					
		< COIL >					
L100	1-410-671-31	INDUCTOR 47uH					
L101	1-410-671-31	INDUCTOR 47uH					
L102	1-410-671-31	INDUCTOR 47uH					

Ref. No.	Part No.	Description	Remark			Ref. No.	Part No.	Description	Remark			
C470	1-126-964-11	ELECT	10uF	20%	50V	CN415	1-784-366-51	CONNECTOR, FFC/FPC 7P	< DIODE >			
C471	1-162-927-11	CERAMIC CHIP	100PF	5%	50V							
C472	1-162-927-11	CERAMIC CHIP	100PF	5%	50V							
C475	1-126-964-11	ELECT	10uF	20%	50V							
C476	1-162-927-11	CERAMIC CHIP	100PF	5%	50V	D405	6-501-579-01	DIODE MC2837 (HDX576WF)				
C478	1-126-916-11	ELECT	1000uF	20%	6.3V	D406	6-501-579-01	DIODE MC2837				
C482	1-162-966-11	CERAMIC CHIP	0.0022uF	10%	50V	D407	8-719-058-24	DIODE RB501V-40TE-17				
C485	1-165-908-11	CERAMIC CHIP	1uF	10%	10V	D411	6-501-579-01	DIODE MC2837				
C488	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V	D412	6-501-728-01	DIODE MAZ8051G0LS0				
C489	1-162-966-11	CERAMIC CHIP	0.0022uF	10%	50V (HDX576WF)	< IC >						
C491	1-162-960-11	CERAMIC CHIP	220PF	10%	50V	IC404	6-710-470-01	IC MM1758AFBE				
C495	1-104-662-91	ELECT	22uF	20%	25V	IC407	8-759-385-76	IC MC14052 BDR2				
C496	1-162-960-11	CERAMIC CHIP	220PF	10%	50V	IC409	8-759-385-76	IC MC14052 BDR2 (HDX576WF)				
C499	1-104-662-91	ELECT	22uF	20%	25V	IC410	8-759-100-96	IC uPC4558G2				
						IC411	8-759-385-76	IC MC14052 BDR2				
C503	1-126-933-11	ELECT	100uF	20%	16V	IC413	6-700-830-01	IC KIA7809API (HDX277WC/HDX279W/HDX675)				
C504	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	IC413	6-703-550-01	IC TA7809LS (HDX275/HDX475/HDX576WF)				
C505	1-162-960-11	CERAMIC CHIP	220PF	10%	50V (HDX576WF)	IC620	6-705-337-01	IC TK11150CMCL-G				
C509	1-104-662-91	ELECT	22uF	20%	25V (HDX576WF)	IC620	6-705-338-01	IC TK11250CMCL-G (HDX277WC/HDX279W)				
C511	1-162-960-11	CERAMIC CHIP	220PF	10%	50V (HDX576WF)	< JACK >						
C512	1-104-662-91	ELECT	22uF	20%	25V (HDX576WF)	J402	1-820-862-11	JACK, PIN 3P (VIDEO OUT/TV AUDIO IN)				
C518	1-126-160-11	ELECT	1uF	20%	50V	J404	1-817-601-11	JACK, PIN 3P (COMPONENT VIDEO OUT)				
C521	1-162-960-11	CERAMIC CHIP	220PF	10%	50V	J405	1-778-940-11	JACK 2P (HDX576WF) (SAT/CABLE AUDIO IN)				
C524	1-104-662-91	ELECT	22uF	20%	25V	< JUMPER RESISTOR/COIL >						
C525	1-162-960-11	CERAMIC CHIP	220PF	10%	50V	L404	1-216-295-91	SHORT CHIP 0 (HDX275/HDX475/HDX576WF/HDX675)				
C526	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	L404	1-469-525-91	INDUCTOR 10uH (HDX277WC/HDX279W)				
C527	1-126-933-11	ELECT	100uF	20%	16V	L407	1-469-525-91	INDUCTOR 10uH				
C528	1-126-933-11	ELECT	100uF	20%	16V (HDX576WF)	< TRANSISTOR >						
C529	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V (HDX576WF)	Q408	8-729-027-52	TRANSISTOR DTC124EKA-T146				
C530	1-104-662-91	ELECT	22uF	20%	25V	Q409	8-729-027-52	TRANSISTOR DTC124EKA-T146				
C533	1-126-160-11	ELECT	1uF	20%	50V	Q410	8-729-027-52	TRANSISTOR DTC124EKA-T146				
C535	1-162-960-11	CERAMIC CHIP	220PF	10%	50V	Q411	8-729-027-52	TRANSISTOR DTC124EKA-T146				
C536	1-104-662-91	ELECT	22uF	20%	25V							
C537	1-162-960-11	CERAMIC CHIP	220PF	10%	50V	Q412	8-729-027-52	TRANSISTOR DTC124EKA-T146				
C538	1-104-662-91	ELECT	22uF	20%	25V	Q413	8-729-027-52	TRANSISTOR DTC124EKA-T146				
C541	1-126-933-11	ELECT	100uF	20%	16V	< RESISTOR >						
C542	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	R439	1-218-285-11	METAL CHIP 75 5% 1/10W				
C548	1-127-573-11	CERAMIC CHIP	1uF	10%	16V	R444	1-218-827-11	METAL CHIP 150 0.5% 1/10W				
C549	1-126-947-11	ELECT	47uF	20%	35V	R445	1-218-827-11	METAL CHIP 150 0.5% 1/10W				
C552	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	R446	1-218-827-11	METAL CHIP 150 0.5% 1/10W				
C556	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	R447	1-218-827-11	METAL CHIP 150 0.5% 1/10W				
C557	1-126-933-11	ELECT	100uF	20%	16V							
C558	1-104-662-91	ELECT	22uF	20%	25V	R448	1-218-827-11	METAL CHIP 150 0.5% 1/10W				
C559	1-104-662-91	ELECT	22uF	20%	25V	R449	1-218-285-11	METAL CHIP 75 5% 1/10W				
C569	1-126-964-11	ELECT	10uF	20%	50V	R452	1-218-285-11	METAL CHIP 75 5% 1/10W				
C620	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	R461	1-218-285-11	METAL CHIP 75 5% 1/10W				
C621	1-165-908-11	CERAMIC CHIP	1uF	10%	10V	R468	1-218-285-11	METAL CHIP 75 5% 1/10W				
C622	1-165-908-11	CERAMIC CHIP	1uF	10%	10V							
< CONNECTOR >						R479	1-216-829-11	METAL CHIP 4.7K 5% 1/10W				
CN402	1-820-116-41	CONNECTOR, FFC/FPC 17P										
CN407	1-779-277-11	CONNECTOR, FFC (LIF (NON-ZIF)) 9P										
CN410	1-779-273-11	CONNECTOR, FFC (LIF (NON-ZIF)) 5P										
CN412	1-564-706-11	PIN, CONNECTOR (SMALL TYPE) 4P										
CN414	1-784-770-11	CONNECTOR, FFC 9P										
			</									

HCD-HDX275/HDX277WC/HDX279W/HDX475/HDX576WF/HDX675

I/O JACK-KEY

Ref. No.	Part No.	Description			Remark	Ref. No.	Part No.	Description			Remark
R494	1-216-829-11	METAL CHIP	4.7K	5%	1/10W (HDX576WF)	R598	1-216-841-11	METAL CHIP	47K	5%	1/10W
R495	1-216-833-11	METAL CHIP	10K	5%	1/10W	R599	1-216-841-11	METAL CHIP	47K	5%	1/10W
R496	1-216-841-11	METAL CHIP	47K	5%	1/10W (HDX576WF)	R600	1-216-845-11	METAL CHIP	100K	5%	1/10W
R497	1-216-841-11	METAL CHIP	47K	5%	1/10W (HDX576WF)	R601	1-216-845-11	METAL CHIP	100K	5%	1/10W
R500	1-216-821-11	METAL CHIP	1K	5%	1/10W	R602	1-216-845-11	METAL CHIP	100K	5%	1/10W
R503	1-216-829-11	METAL CHIP	4.7K	5%	1/10W (HDX576WF)	R603	1-216-845-11	METAL CHIP	100K	5%	1/10W
R504	1-216-829-11	METAL CHIP	4.7K	5%	1/10W (HDX576WF)	R609	1-216-864-11	SHORT CHIP	0		
R505	1-216-833-11	METAL CHIP	10K	5%	1/10W	R610	1-216-864-11	SHORT CHIP	0		
R506	1-216-829-11	METAL CHIP	4.7K	5%	1/10W (HDX576WF)	R620	1-216-821-11	METAL CHIP	1K	5%	1/10W
R507	1-216-841-11	METAL CHIP	47K	5%	1/10W (HDX576WF)	△ R621	1-215-865-51	METAL OXIDE	220	5%	1W F
R508	1-216-841-11	METAL CHIP	47K	5%	1/10W (HDX576WF)	*****					
R509	1-216-821-11	METAL CHIP	1K	5%	1/10W	A-1436-204-A	JACK-KEY BOARD, COMPLETE *****				
R513	1-216-864-11	SHORT CHIP	0			< CAPACITOR >					
R514	1-216-864-11	SHORT CHIP	0			C121	1-165-908-11	CERAMIC CHIP	1uF	10%	10V
R515	1-216-864-11	SHORT CHIP	0			C125	1-165-908-11	CERAMIC CHIP	1uF	10%	10V
R516	1-216-864-11	SHORT CHIP	0			C126	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
R523	1-216-817-11	METAL CHIP	470	5%	1/10W	C129	1-115-156-11	CERAMIC CHIP	1uF		10V
R527	1-216-841-11	METAL CHIP	47K	5%	1/10W	C131	1-125-891-11	CERAMIC CHIP	0.47uF	10%	10V
R528	1-216-841-11	METAL CHIP	47K	5%	1/10W	C137	1-104-658-91	ELECT	100uF	20%	10V
R533	1-216-827-11	METAL CHIP	3.3K	5%	1/10W	C138	1-162-960-11	CERAMIC CHIP	220PF	10%	50V
R536	1-216-833-11	METAL CHIP	10K	5%	1/10W (HDX576WF)	C139	1-164-315-11	CERAMIC CHIP	470PF	5%	50V
R538	1-216-827-11	METAL CHIP	3.3K	5%	1/10W	C140	1-124-589-11	ELECT	47uF	20%	16V
R539	1-216-841-11	METAL CHIP	47K	5%	1/10W	C141	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
R540	1-216-841-11	METAL CHIP	47K	5%	1/10W	C142	1-104-658-91	ELECT	100uF	20%	10V
R543	1-216-821-11	METAL CHIP	1K	5%	1/10W (HDX576WF)	C143	1-126-964-11	ELECT	10uF	20%	50V
R548	1-216-817-11	METAL CHIP	470	5%	1/10W	C144	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
R549	1-216-864-11	SHORT CHIP	0			C147	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V
R550	1-216-833-11	METAL CHIP	10K	5%	1/10W (HDX576WF)	C148	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V
R551	1-216-829-11	METAL CHIP	4.7K	5%	1/10W	C149	1-126-964-11	ELECT	10uF	20%	50V
R552	1-216-841-11	METAL CHIP	47K	5%	1/10W	C150	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V
R553	1-216-841-11	METAL CHIP	47K	5%	1/10W	C152	1-162-960-11	CERAMIC CHIP	220PF	10%	50V
R554	1-216-864-11	SHORT CHIP	0			C153	1-164-315-11	CERAMIC CHIP	470PF	5%	50V
R555	1-216-809-11	METAL CHIP	100	5%	1/10W	C154	1-162-925-11	CERAMIC CHIP	68PF	5%	50V
R556	1-216-821-11	METAL CHIP	1K	5%	1/10W (HDX576WF)	C155	1-110-563-11	CERAMIC CHIP	0.068uF	10%	16V
R557	1-216-809-11	METAL CHIP	100	5%	1/10W	C156	1-164-315-11	CERAMIC CHIP	470PF	5%	50V
R558	1-216-809-11	METAL CHIP	100	5%	1/10W	C157	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V
R559	1-216-829-11	METAL CHIP	4.7K	5%	1/10W	C158	1-125-891-11	CERAMIC CHIP	0.47uF	10%	10V
R561	1-216-829-11	METAL CHIP	4.7K	5%	1/10W	C163	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
R562	1-216-864-11	SHORT CHIP	0 (EXCEPT HDX576WF)			C170	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
R563	1-216-864-11	SHORT CHIP	0 (HDX576WF)			C171	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
R564	1-216-829-11	METAL CHIP	4.7K	5%	1/10W	C173	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
R566	1-216-841-11	METAL CHIP	47K	5%	1/10W	C174	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
R567	1-216-841-11	METAL CHIP	47K	5%	1/10W	C196	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
R575	1-216-833-11	METAL CHIP	10K	5%	1/10W	C197	1-126-947-11	ELECT	47uF	20%	35V
R576	1-216-864-11	SHORT CHIP	0 (EXCEPT HDX576WF)			< CONNECTOR >					
R577	1-216-864-11	SHORT CHIP	0 (HDX576WF)			CN102	1-779-277-11	CONNECTOR, FFC (LIF (NON-ZIF))	9P		
R579	1-216-821-11	METAL CHIP	1K	5%	1/10W	CN103	1-779-289-11	CONNECTOR, FFC (LIF (NON-ZIF))	21P		
R582	1-216-833-11	METAL CHIP	10K	5%	1/10W	< DIODE >					
R584	1-216-821-11	METAL CHIP	1K	5%	1/10W	D104	8-719-056-13	LED SML79423C-TP15 (DISC 5)			
R585	1-216-864-11	SHORT CHIP	0			D105	8-719-056-13	LED SML79423C-TP15 (DISC 4)			
						D106	8-719-056-13	LED SML79423C-TP15 (DISC 3)			
						D107	8-719-056-13	LED SML79423C-TP15 (DISC 2)			
						D108	8-719-056-13	LED SML79423C-TP15 (DISC 1)			
						D109	6-501-579-01	DIODE MC2837			
						D112	6-501-817-01	DIODE MA2J1110GLS0			

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
D113	6-501-579-01	DIODE MC2837		< RESISTOR >			
D114	6-501-579-01	DIODE MC2837		R109	1-216-815-11	METAL CHIP 330 5%	1/10W
< FERRITE BEAD/JUMPER RESISTOR >				R110	1-216-817-11	METAL CHIP 470 5%	1/10W
FB102	1-500-236-22	BEAD, FERRITE (CHIP) (1608)		R111	1-216-815-11	METAL CHIP 330 5%	1/10W
FB103	1-500-236-22	BEAD, FERRITE (CHIP) (1608)		R112	1-216-817-11	METAL CHIP 470 5%	1/10W
FB104	1-500-236-22	BEAD, FERRITE (CHIP) (1608)		R113	1-216-815-11	METAL CHIP 330 5%	1/10W
FB105	1-500-236-22	BEAD, FERRITE (CHIP) (1608)		R114	1-216-817-11	METAL CHIP 470 5%	1/10W
FB106	1-500-236-22	BEAD, FERRITE (CHIP) (1608)		R115	1-216-815-11	METAL CHIP 330 5%	1/10W
FB107	1-216-864-11	SHORT CHIP 0		R116	1-216-817-11	METAL CHIP 470 5%	1/10W
FB108	1-216-864-11	SHORT CHIP 0		R117	1-216-815-11	METAL CHIP 330 5%	1/10W
FB109	1-216-864-11	SHORT CHIP 0		R118	1-216-817-11	METAL CHIP 470 5%	1/10W
FB110	1-216-864-11	SHORT CHIP 0		R119	1-216-827-11	METAL CHIP 3.3K 5%	1/10W
< IC >				R120	1-216-833-11	METAL CHIP 10K 5%	1/10W
IC102	6-705-312-01	IC S-T111B33MC-OGSTFG		R121	1-216-821-11	METAL CHIP 1K 5%	1/10W
IC103	6-704-046-01	IC BU2099FV		R122	1-216-821-11	METAL CHIP 1K 5%	1/10W
IC104	8-759-100-96	IC uPC4558G2		R123	1-216-821-11	METAL CHIP 1K 5%	1/10W
IC105	8-759-100-96	IC uPC4558G2		R124	1-216-809-11	METAL CHIP 100 5%	1/10W
< JACK >				R125	1-216-809-11	METAL CHIP 100 5%	1/10W
J100	1-819-878-51	JACK (AUDIO IN/A.CAL MIC)		R126	1-216-815-11	METAL CHIP 330 5%	1/10W
J101	1-819-878-51	JACK (PHONES)		R127	1-216-815-11	METAL CHIP 330 5%	1/10W
< JUMPER RESISTOR >				R128	1-216-841-11	METAL CHIP 47K 5%	1/10W
JR101	1-216-864-11	SHORT CHIP 0		R129	1-216-837-11	METAL CHIP 22K 5%	1/10W
JR102	1-216-864-11	SHORT CHIP 0		R130	1-216-833-11	METAL CHIP 10K 5%	1/10W
JR103	1-216-864-11	SHORT CHIP 0		R131	1-216-829-11	METAL CHIP 4.7K 5%	1/10W
JR104	1-216-864-11	SHORT CHIP 0		R132	1-216-825-11	METAL CHIP 2.2K 5%	1/10W
JR105	1-216-864-11	SHORT CHIP 0		R133	1-216-827-11	METAL CHIP 3.3K 5%	1/10W
JR106	1-216-296-11	SHORT CHIP 0		R135	1-216-834-11	METAL CHIP 12K 5%	1/10W
JR107	1-216-864-11	SHORT CHIP 0		R136	1-216-835-11	METAL CHIP 15K 5%	1/10W
JR108	1-216-296-11	SHORT CHIP 0		R137	1-216-825-11	METAL CHIP 2.2K 5%	1/10W
JR109	1-216-296-11	SHORT CHIP 0		R140	1-216-825-11	METAL CHIP 2.2K 5%	1/10W
< COIL >				R141	1-216-821-11	METAL CHIP 1K 5%	1/10W
L103	1-410-671-31	INDUCTOR 47uH		R142	1-216-825-11	METAL CHIP 2.2K 5%	1/10W
< TRANSISTOR >				R145	1-216-827-11	METAL CHIP 3.3K 5%	1/10W
Q101	8-729-027-23	TRANSISTOR DTA114EKA-T146		R147	1-216-801-11	METAL CHIP 22 5%	1/10W
Q102	8-729-027-23	TRANSISTOR DTA114EKA-T146		R148	1-216-821-11	METAL CHIP 1K 5%	1/10W
Q103	8-729-027-23	TRANSISTOR DTA114EKA-T146		R149	1-216-821-11	METAL CHIP 1K 5%	1/10W
Q104	8-729-027-23	TRANSISTOR DTA114EKA-T146		R150	1-216-809-11	METAL CHIP 100 5%	1/10W
Q105	8-729-027-23	TRANSISTOR DTA114EKA-T146		R151	1-216-819-11	METAL CHIP 680 5%	1/10W
Q106	8-729-027-23	TRANSISTOR DTA114EKA-T146		R152	1-216-835-11	METAL CHIP 15K 5%	1/10W
Q107	8-729-027-23	TRANSISTOR DTA114EKA-T146		R153	1-216-833-11	METAL CHIP 10K 5%	1/10W
Q108	8-729-027-23	TRANSISTOR DTA114EKA-T146		R154	1-216-825-11	METAL CHIP 2.2K 5%	1/10W
Q109	8-729-027-23	TRANSISTOR DTA114EKA-T146		R155	1-216-837-11	METAL CHIP 22K 5%	1/10W
Q110	8-729-027-23	TRANSISTOR DTA114EKA-T146		R156	1-216-845-11	METAL CHIP 100K 5%	1/10W
Q111	8-729-038-28	TRANSISTOR RT1N441C-TP-1		R157	1-216-825-11	METAL CHIP 2.2K 5%	1/10W
Q112	8-729-038-28	TRANSISTOR RT1N441C-TP-1		R158	1-216-805-11	METAL CHIP 47 5%	1/10W
Q113	8-729-038-11	TRANSISTOR RT1P140C-TP-1		R159	1-218-859-11	METAL CHIP 3.3K 0.5%	1/10W
Q114	8-729-027-23	TRANSISTOR DTA114EKA-T146		R161	1-216-817-11	METAL CHIP 470 5%	1/10W
Q115	8-729-027-23	TRANSISTOR DTA114EKA-T146		R162	1-216-829-11	METAL CHIP 4.7K 5%	1/10W
Q116	6-551-953-01	TR RTAN430C-T112A-1		R163	1-216-845-11	METAL CHIP 100K 5%	1/10W
Q117	6-551-953-01	TR RTAN430C-T112A-1		R164	1-216-817-11	METAL CHIP 470 5%	1/10W
Q118	6-551-953-01	TR RTAN430C-T112A-1		R165	1-216-845-11	METAL CHIP 100K 5%	1/10W
Q119	6-551-953-01	TR RTAN430C-T112A-1		R166	1-216-837-11	METAL CHIP 22K 5%	1/10W
				R167	1-216-821-11	METAL CHIP 1K 5%	1/10W
				R168	1-216-821-11	METAL CHIP 1K 5%	1/10W
				R169	1-216-825-11	METAL CHIP 2.2K 5%	1/10W
				R170	1-216-864-11	SHORT CHIP 0	
				R171	1-216-857-11	METAL CHIP 1M 5%	1/10W
				R172	1-216-837-11	METAL CHIP 22K 5%	1/10W
				R173	1-216-864-11	SHORT CHIP 0	
				R180	1-216-864-11	SHORT CHIP 0	

HCD-HDX275/HDX277WC/HDX279W/HDX475/HDX576WF/HDX675

JACK-KEY **MAIN**

Ref. No.	Part No.	Description				Remark	Ref. No.	Part No.	Description				Remark
R183	1-216-829-11	METAL CHIP	4.7K	5%	1/10W		C239	1-126-947-11	ELECT	47uF	20%	35V	
							C240	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	
R184	1-216-829-11	METAL CHIP	4.7K	5%	1/10W		C241	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	
R185	1-216-801-11	METAL CHIP	22	5%	1/10W		C312	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	
R186	1-216-801-11	METAL CHIP	22	5%	1/10W								
R187	1-216-809-11	METAL CHIP	100	5%	1/10W		C313	1-126-933-11	ELECT	100uF	20%	16V	
R188	1-216-809-11	METAL CHIP	100	5%	1/10W		C314	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	
							C315	1-126-933-11	ELECT	100uF	20%	16V	
R189	1-216-809-11	METAL CHIP	100	5%	1/10W		C317	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	
R190	1-216-809-11	METAL CHIP	100	5%	1/10W		C501	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	
R191	1-216-805-11	METAL CHIP	47	5%	1/10W								
R192	1-216-805-11	METAL CHIP	47	5%	1/10W		C502	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	
R201	1-216-821-11	METAL CHIP	1K	5%	1/10W		C503	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	
							C504	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V	
R202	1-216-821-11	METAL CHIP	1K	5%	1/10W		C505	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V	
R203	1-216-821-11	METAL CHIP	1K	5%	1/10W		C507	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	
< SWITCH >							C508	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	
							C509	1-165-908-11	CERAMIC CHIP	1uF	10%	10V	
S100	1-762-875-21	SWITCH, KEYBOARD (DISC 1)					C510	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	
S101	1-762-875-21	SWITCH, KEYBOARD (DISC 2)					C511	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	
S102	1-762-875-21	SWITCH, KEYBOARD (DISC 3)					C512	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	
S103	1-762-875-21	SWITCH, KEYBOARD (DISC 4)											
S104	1-762-875-21	SWITCH, KEYBOARD (DISC 5)					C515	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	
							C516	1-165-908-11	CERAMIC CHIP	1uF	10%	10V	
S105	1-762-875-21	SWITCH, KEYBOARD (△)					C517	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	
S106	1-762-875-21	SWITCH, KEYBOARD (▷)					C518	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	
S107	1-762-875-21	SWITCH, KEYBOARD (▷▷)					C520	1-127-715-11	CERAMIC CHIP	0.22uF	10%	16V	
S108	1-762-875-21	SWITCH, KEYBOARD (□)											
S109	1-762-875-21	SWITCH, KEYBOARD (▢)					C521	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V	
							C522	1-127-715-11	CERAMIC CHIP	0.22uF	10%	16V	
S110	1-762-875-21	SWITCH, KEYBOARD (⏏)					C523	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	
S111	1-762-875-21	SWITCH, KEYBOARD (FUNCTION)					C526	1-104-658-91	ELECT	100uF	20%	10V	
S112	1-480-136-31	ENCODER, ROTARY (12 TYPE) (VOLUME)					C527	1-126-916-11	ELECT	1000uF	20%	6.3V	
*****							C528	1-126-916-11	ELECT	1000uF	20%	6.3V	
⏏	A-1436-234-A	MAIN BOARD, COMPLETE (for SERVICE) (HDX275: US)					C531	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	
⏏	A-1436-242-A	MAIN BOARD, COMPLETE (for SERVICE) (HDX275: AUS)					C532	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	
⏏	A-1436-299-A	MAIN BOARD, COMPLETE (for SERVICE) (HDX277WC)					C533	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	
⏏	A-1436-334-A	MAIN BOARD, COMPLETE (for SERVICE) (HDX475)					C538	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V	
⏏	A-1436-348-A	MAIN BOARD, COMPLETE (for SERVICE) (HDX576WF)					C539	1-126-933-11	ELECT	100uF	20%	16V	
							C571	1-165-908-11	CERAMIC CHIP	1uF	10%	10V	
⏏	A-1436-356-A	MAIN BOARD, COMPLETE (for SERVICE) (HDX675)					C572	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	
⏏	A-1509-053-A	MAIN BOARD, COMPLETE (for SERVICE) (HDX275: E3)					C573	1-126-965-91	ELECT	22uF	20%	50V	
⏏	A-1510-710-A	MAIN BOARD, COMPLETE (for SERVICE) (HDX279W)					C574	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V	
*****							C581	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V	
							C582	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	
							C583	1-104-658-91	ELECT	100uF	20%	10V	
							C584	1-126-933-11	ELECT	100uF	20%	16V	
							C591	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V	
							C592	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V	
							C593	1-104-658-91	ELECT	100uF	20%	10V	
	4-231-099-41	SHEET, RADIATION					C594	1-126-933-11	ELECT	100uF	20%	16V	
							C705	1-126-964-11	ELECT	10uF	20%	50V	
							C706	1-126-964-11	ELECT	10uF	20%	50V	
C220	1-128-995-21	ELECT CHIP	100uF	20%	10V		C707	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	
C221	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V		C708	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	
C222	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V		C709	1-126-923-91	ELECT	220uF	20%	10V	
C223	1-126-206-11	ELECT CHIP	100uF	20%	6.3V		C710	1-107-726-91	CERAMIC CHIP	0.01uF	10%	16V	
C227	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V		C711	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	
C229	1-165-908-11	CERAMIC CHIP	1uF	10%	10V		C712	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V	
C230	1-165-908-11	CERAMIC CHIP	1uF	10%	10V		C716	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V	
C231	1-165-908-11	CERAMIC CHIP	1uF	10%	10V		C717	1-126-964-11	ELECT	10uF	20%	50V	
C232	1-165-908-11	CERAMIC CHIP	1uF	10%	10V		C718	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	
C237	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V		C719	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	
C238	1-126-965-91	ELECT	22uF	20%	50V		C720	1-126-923-91	ELECT	220uF	20%	10V	

Ref. No.	Part No.	Description			Remark	Ref. No.	Part No.	Description			Remark
C721	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V	C1164	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C722	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	C1165	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C723	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	C1169	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C724	1-162-915-11	CERAMIC CHIP	10PF	0.5PF	50V	C1170	1-162-965-11	CERAMIC CHIP	0.0015uF	10%	50V
C725	1-162-915-11	CERAMIC CHIP	10PF	0.5PF	50V	C1171	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C727	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	C1172	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C772	1-164-315-11	CERAMIC CHIP	470PF	5%	50V	C1174	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C773	1-164-315-11	CERAMIC CHIP	470PF	5%	50V	C1175	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C1101	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V	C1176	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C1102	1-165-908-11	CERAMIC CHIP	1uF	10%	10V	C1177	1-126-947-11	ELECT	47uF	20%	35V
C1105	1-128-994-21	ELECT CHIP	47uF	20%	10V	C1179	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C1106	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V	C1180	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C1108	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	C1181	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C1109	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	C1182	1-127-715-11	CERAMIC CHIP	0.22uF	10%	16V
C1110	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	C1183	1-128-934-11	CERAMIC CHIP	0.33uF	20%	10V
C1111	1-126-206-11	ELECT CHIP	100uF	20%	6.3V	C1184	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C1112	1-128-994-21	ELECT CHIP	47uF	20%	10V	C1186	1-127-715-11	CERAMIC CHIP	0.22uF	10%	16V
C1113	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V	C1187	1-126-947-11	ELECT	47uF	20%	35V
C1114	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	C1190	1-104-658-91	ELECT	100uF	20%	10V
C1115	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	C1191	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C1116	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	C1192	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C1117	1-128-994-21	ELECT CHIP	47uF	20%	10V	C1193	1-127-715-11	CERAMIC CHIP	0.22uF	10%	16V
C1118	1-128-994-21	ELECT CHIP	47uF	20%	10V	C1195	1-127-715-11	CERAMIC CHIP	0.22uF	10%	16V
C1119	1-128-994-21	ELECT CHIP	47uF	20%	10V	C1197	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C1120	1-165-908-11	CERAMIC CHIP	1uF	10%	10V	C1198	1-165-908-11	CERAMIC CHIP	1uF	10%	10V
C1121	1-165-908-11	CERAMIC CHIP	1uF	10%	10V	C1199	1-162-968-11	CERAMIC CHIP	0.0047uF	10%	50V
C1122	1-165-908-11	CERAMIC CHIP	1uF	10%	10V	C1203	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C1123	1-165-908-11	CERAMIC CHIP	1uF	10%	10V	C1205	1-164-230-11	CERAMIC CHIP	220PF	5%	50V
C1124	1-165-908-11	CERAMIC CHIP	1uF	10%	10V	C1206	1-164-230-11	CERAMIC CHIP	220PF	5%	50V
C1125	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	C1208	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C1126	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	C1209	1-164-677-11	CERAMIC CHIP	0.033uF	10%	16V
C1127	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V	C1210	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C1129	1-165-989-11	CERAMIC CHIP	10uF	10%	6.3V	C1211	1-164-677-11	CERAMIC CHIP	0.033uF	10%	16V
C1130	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	C1212	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C1132	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	C1213	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C1133	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	C1214	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V
C1135	1-164-677-11	CERAMIC CHIP	0.033uF	10%	16V	C1215	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C1136	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V	C1217	1-126-947-11	ELECT	47uF	20%	35V
C1137	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	C1218	1-124-779-00	ELECT CHIP	10uF	20%	16V
C1138	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V	C1219	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C1139	1-162-919-11	CERAMIC CHIP	22PF	5%	50V	C1220	1-124-779-00	ELECT CHIP	10uF	20%	16V
C1140	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	C1221	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C1144	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V	C1222	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C1145	1-124-779-00	ELECT CHIP	10uF	20%	16V	C1224	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C1146	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	C1233	1-162-968-11	CERAMIC CHIP	0.0047uF	10%	50V
C1147	1-165-176-11	CERAMIC CHIP	0.047uF	10%	16V	C1725	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C1148	1-165-176-11	CERAMIC CHIP	0.047uF	10%	16V	C1726	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C1149	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	C1727	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C1151	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V	C1728	1-128-994-21	ELECT CHIP	47uF	20%	10V
C1152	1-162-916-11	CERAMIC CHIP	12PF	5%	50V	C1729	1-127-715-11	CERAMIC CHIP	0.22uF	10%	16V
C1153	1-162-916-11	CERAMIC CHIP	12PF	5%	50V	C1730	1-127-715-11	CERAMIC CHIP	0.22uF	10%	16V
C1154	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	C1731	1-127-715-11	CERAMIC CHIP	0.22uF	10%	16V
C1155	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V	C1732	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C1156	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V	C1733	1-127-715-11	CERAMIC CHIP	0.22uF	10%	16V
C1158	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V	C1734	1-165-908-11	CERAMIC CHIP	1uF	10%	10V
C1159	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V	C2100	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C1160	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V	C2108	1-127-760-11	CERAMIC CHIP	4.7uF	10%	6.3V
C1161	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V	C2109	1-126-206-11	ELECT CHIP	100uF	20%	6.3V
C1162	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V	C2110	1-126-206-11	ELECT CHIP	100uF	20%	6.3V
C1163	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V	C2114	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V

HCD-HDX275/HDX277WC/HDX279W/HDX475/HDX576WF/HDX675

MAIN

Ref. No.	Part No.	Description	Remark		
C2115	1-165-989-11	CERAMIC CHIP	10uF	10%	6.3V
C2116	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C2117	1-165-989-11	CERAMIC CHIP	10uF	10%	6.3V
C2118	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C2119	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V
C2130	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C2502	1-164-172-11	CERAMIC CHIP	0.0056uF	10%	25V
C2503	1-127-760-11	CERAMIC CHIP	4.7uF	10%	6.3V
C3000	1-126-382-11	ELECT	100uF	20%	16V
C3001	1-126-947-11	ELECT	47uF	20%	35V
C3002	1-115-339-11	CERAMIC CHIP	0.1uF	10%	50V
C3003	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V
C3005	1-126-795-11	ELECT	10uF	20%	50V
C3008	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C3011	1-126-947-11	ELECT	47uF	20%	35V
C3012	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C3013	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C3014	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C3015	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C3016	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C3017	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C3018	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C3019	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C3020	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C3021	1-126-947-11	ELECT	47uF	20%	35V
		(HDX275/HDX277WC/HDX475/HDX675)			
C3022	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
		(HDX275/HDX277WC/HDX475/HDX675)			
C3023	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
		(HDX275/HDX277WC/HDX475/HDX675)			
C3024	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
		(HDX275/HDX277WC/HDX475/HDX675)			
C3025	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
		(HDX275/HDX277WC/HDX475/HDX675)			
C3026	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
		(HDX275/HDX277WC/HDX475/HDX675)			
C3027	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
		(HDX275/HDX277WC/HDX475/HDX675)			
C3028	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
		(HDX275/HDX277WC/HDX475/HDX675)			
C3029	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
		(HDX275/HDX277WC/HDX475/HDX675)			
C3030	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
		(HDX275/HDX277WC/HDX475/HDX675)			
C3031	1-126-947-11	ELECT	47uF	20%	35V
C3032	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C3033	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C3034	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C3035	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C3036	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C3037	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C3038	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C3039	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C3040	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C3051	1-115-339-11	CERAMIC CHIP	0.1uF	10%	50V
C3052	1-165-908-11	CERAMIC CHIP	1uF	10%	10V
C3053	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C3054	1-126-933-11	ELECT	100uF	20%	16V
C3055	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C3056	1-126-923-91	ELECT	220uF	20%	10V
C3057	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C3058	1-162-910-11	CERAMIC CHIP	5PF	0.25PF	50V

Ref. No.	Part No.	Description	Remark		
C3059	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V
C3060	1-162-915-11	CERAMIC CHIP	10PF	0.5PF	50V
C3071	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C3072	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C3073	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C3081	1-126-923-91	ELECT	220uF	20%	10V
C3082	1-126-923-91	ELECT	220uF	20%	10V
C3083	1-162-927-11	CERAMIC CHIP	100PF	5%	50V
C3084	1-162-927-11	CERAMIC CHIP	100PF	5%	50V
C3085	1-162-927-11	CERAMIC CHIP	100PF	5%	50V
C3086	1-162-927-11	CERAMIC CHIP	100PF	5%	50V
C3087	1-162-927-11	CERAMIC CHIP	100PF	5%	50V
C3088	1-162-927-11	CERAMIC CHIP	100PF	5%	50V
C3090	1-104-658-91	ELECT	100uF	20%	10V
C3091	1-126-934-11	ELECT	220uF	20%	16V
C3092	1-162-927-11	CERAMIC CHIP	100PF	5%	50V
C3093	1-162-927-11	CERAMIC CHIP	100PF	5%	50V
C3094	1-162-927-11	CERAMIC CHIP	100PF	5%	50V
C3100	1-104-329-11	CERAMIC CHIP	0.1uF	10%	50V
C3103	1-107-725-11	CERAMIC CHIP	0.1uF	10%	16V
C3104	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C3105	1-107-725-11	CERAMIC CHIP	0.1uF	10%	16V
C3106	1-115-185-11	CERAMIC CHIP	0.033uF	10%	50V
C3107	1-115-185-11	CERAMIC CHIP	0.033uF	10%	50V
C3108	1-104-329-11	CERAMIC CHIP	0.1uF	10%	50V
C3109	1-112-246-11	ELECT	100uF	20%	35V
C3112	1-112-246-11	ELECT	100uF	20%	35V
C3113	1-104-329-11	CERAMIC CHIP	0.1uF	10%	50V
C3114	1-137-198-81	FILM	1uF	5%	50V
C3115	1-137-198-81	FILM	1uF	5%	50V
C3116	1-112-831-11	ELECT	2200uF	20%	35V
C3117	1-104-329-11	CERAMIC CHIP	0.1uF	10%	50V
C3122	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V
C3123	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V
C3124	1-164-505-11	CERAMIC CHIP	2.2uF		16V
C3125	1-164-505-11	CERAMIC CHIP	2.2uF		16V
C3126	1-164-505-11	CERAMIC CHIP	2.2uF		16V
		(HDX275/HDX277WC/HDX475/HDX675)			
C3127	1-164-505-11	CERAMIC CHIP	2.2uF		16V
		(HDX275/HDX277WC/HDX475/HDX675)			
C3128	1-164-505-11	CERAMIC CHIP	2.2uF		16V
C3129	1-117-370-11	CERAMIC CHIP	10uF		10V
C3150	1-104-329-11	CERAMIC CHIP	0.1uF	10%	50V
C3153	1-107-725-11	CERAMIC CHIP	0.1uF	10%	16V
C3154	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C3155	1-107-725-11	CERAMIC CHIP	0.1uF	10%	16V
C3156	1-115-185-11	CERAMIC CHIP	0.033uF	10%	50V
C3157	1-115-185-11	CERAMIC CHIP	0.033uF	10%	50V
C3158	1-104-329-11	CERAMIC CHIP	0.1uF	10%	50V
C3159	1-112-246-11	ELECT	100uF	20%	35V
C3162	1-112-246-11	ELECT	100uF	20%	35V
C3163	1-104-329-11	CERAMIC CHIP	0.1uF	10%	50V
C3164	1-137-198-81	FILM	1uF	5%	50V
C3165	1-137-198-81	FILM	1uF	5%	50V
C3166	1-112-831-11	ELECT	2200uF	20%	35V
C3167	1-104-329-11	CERAMIC CHIP	0.1uF	10%	50V
C3172	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V
C3173	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V
C3200	1-104-329-11	CERAMIC CHIP	0.1uF	10%	50V
		(HDX275/HDX277WC/HDX475/HDX675)			

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
C3203	1-107-725-11	CERAMIC CHIP 0.1uF 10% 16V (HDX275/HDX277WC/HDX475/HDX675)		C3315	1-137-198-81	FILM 1uF 5% 50V	
C3204	1-107-826-11	CERAMIC CHIP 0.1uF 10% 16V (HDX275/HDX277WC/HDX475/HDX675)		C3316	1-112-831-11	ELECT 2200uF 20% 35V	
C3205	1-107-725-11	CERAMIC CHIP 0.1uF 10% 16V (HDX275/HDX277WC/HDX475/HDX675)		C3317	1-104-329-11	CERAMIC CHIP 0.1uF 10% 50V	
C3206	1-115-185-11	CERAMIC CHIP 0.033uF 10% 50V (HDX275/HDX277WC/HDX475/HDX675)		C3322	1-162-964-11	CERAMIC CHIP 0.001uF 10% 50V (HDX275/HDX277WC/HDX475/HDX675)	
C3207	1-115-185-11	CERAMIC CHIP 0.033uF 10% 50V (HDX275/HDX277WC/HDX475/HDX675)		C3323	1-162-964-11	CERAMIC CHIP 0.001uF 10% 50V (HDX275/HDX277WC/HDX475/HDX675)	
C3208	1-104-329-11	CERAMIC CHIP 0.1uF 10% 50V (HDX275/HDX277WC/HDX475/HDX675)		C3400	1-104-329-11	CERAMIC CHIP 0.1uF 10% 50V	
C3209	1-112-246-11	ELECT 100uF 20% 35V (HDX275/HDX277WC/HDX475/HDX675)		C3403	1-107-725-11	CERAMIC CHIP 0.1uF 10% 16V	
C3212	1-112-246-11	ELECT 100uF 20% 35V (HDX275/HDX277WC/HDX475/HDX675)		C3404	1-107-826-11	CERAMIC CHIP 0.1uF 10% 16V	
C3213	1-104-329-11	CERAMIC CHIP 0.1uF 10% 50V (HDX275/HDX277WC/HDX475/HDX675)		C3405	1-107-725-11	CERAMIC CHIP 0.1uF 10% 16V	
C3214	1-137-198-81	FILM 1uF 5% 50V (HDX275/HDX277WC/HDX475/HDX675)		C3406	1-115-185-11	CERAMIC CHIP 0.033uF 10% 50V	
C3215	1-137-198-81	FILM 1uF 5% 50V (HDX275/HDX277WC/HDX475/HDX675)		C3407	1-115-185-11	CERAMIC CHIP 0.033uF 10% 50V	
C3216	1-112-831-11	ELECT 2200uF 20% 35V (HDX275/HDX277WC/HDX475/HDX675)		C3408	1-104-329-11	CERAMIC CHIP 0.1uF 10% 50V	
C3217	1-104-329-11	CERAMIC CHIP 0.1uF 10% 50V (HDX275/HDX277WC/HDX475/HDX675)		C3409	1-112-246-11	ELECT 100uF 20% 35V	
C3250	1-104-329-11	CERAMIC CHIP 0.1uF 10% 50V (HDX275/HDX277WC/HDX475/HDX675)		C3412	1-112-246-11	ELECT 100uF 20% 35V	
C3253	1-107-725-11	CERAMIC CHIP 0.1uF 10% 16V (HDX275/HDX277WC/HDX475/HDX675)		C3413	1-104-329-11	CERAMIC CHIP 0.1uF 10% 50V	
C3254	1-107-826-11	CERAMIC CHIP 0.1uF 10% 16V (HDX275/HDX277WC/HDX475/HDX675)		C3414	1-137-198-81	FILM 1uF 5% 50V	
C3255	1-107-725-11	CERAMIC CHIP 0.1uF 10% 16V (HDX275/HDX277WC/HDX475/HDX675)		C3415	1-137-198-81	FILM 1uF 5% 50V	
C3256	1-115-185-11	CERAMIC CHIP 0.033uF 10% 50V (HDX275/HDX277WC/HDX475/HDX675)		C3416	1-112-831-11	ELECT 2200uF 20% 35V	
C3257	1-115-185-11	CERAMIC CHIP 0.033uF 10% 50V (HDX275/HDX277WC/HDX475/HDX675)		C3417	1-104-329-11	CERAMIC CHIP 0.1uF 10% 50V	
C3258	1-104-329-11	CERAMIC CHIP 0.1uF 10% 50V (HDX275/HDX277WC/HDX475/HDX675)		C3422	1-162-964-11	CERAMIC CHIP 0.001uF 10% 50V (HDX275/HDX277WC/HDX475/HDX675)	
C3259	1-112-246-11	ELECT 100uF 20% 35V (HDX275/HDX277WC/HDX475/HDX675)		C3423	1-162-964-11	CERAMIC CHIP 0.001uF 10% 50V (HDX275/HDX277WC/HDX475/HDX675)	
C3262	1-112-246-11	ELECT 100uF 20% 35V (HDX275/HDX277WC/HDX475/HDX675)		C3500	1-104-329-11	CERAMIC CHIP 0.1uF 10% 50V	
C3263	1-104-329-11	CERAMIC CHIP 0.1uF 10% 50V (HDX275/HDX277WC/HDX475/HDX675)		C3503	1-107-725-11	CERAMIC CHIP 0.1uF 10% 16V	
C3264	1-137-198-81	FILM 1uF 5% 50V (HDX275/HDX277WC/HDX475/HDX675)		C3504	1-107-826-11	CERAMIC CHIP 0.1uF 10% 16V	
C3265	1-137-198-81	FILM 1uF 5% 50V (HDX275/HDX277WC/HDX475/HDX675)		C3505	1-107-725-11	CERAMIC CHIP 0.1uF 10% 16V	
C3266	1-112-831-11	ELECT 2200uF 20% 35V (HDX275/HDX277WC/HDX475/HDX675)		C3506	1-115-185-11	CERAMIC CHIP 0.033uF 10% 50V	
C3267	1-104-329-11	CERAMIC CHIP 0.1uF 10% 50V (HDX275/HDX277WC/HDX475/HDX675)		C3507	1-115-185-11	CERAMIC CHIP 0.033uF 10% 50V	
C3300	1-104-329-11	CERAMIC CHIP 0.1uF 10% 50V		C3508	1-104-329-11	CERAMIC CHIP 0.1uF 10% 50V	
C3303	1-107-725-11	CERAMIC CHIP 0.1uF 10% 16V		C3509	1-112-246-11	ELECT 100uF 20% 35V	
C3304	1-107-826-11	CERAMIC CHIP 0.1uF 10% 16V		C3512	1-112-246-11	ELECT 100uF 20% 35V	
C3305	1-107-725-11	CERAMIC CHIP 0.1uF 10% 16V		C3513	1-104-329-11	CERAMIC CHIP 0.1uF 10% 50V	
C3306	1-115-185-11	CERAMIC CHIP 0.033uF 10% 50V		C3514	1-137-198-81	FILM 1uF 5% 50V	
C3307	1-115-185-11	CERAMIC CHIP 0.033uF 10% 50V		C3515	1-137-198-81	FILM 1uF 5% 50V	
C3308	1-104-329-11	CERAMIC CHIP 0.1uF 10% 50V		C3516	1-112-831-11	ELECT 2200uF 20% 35V	
C3309	1-112-246-11	ELECT 100uF 20% 35V		C3517	1-104-329-11	CERAMIC CHIP 0.1uF 10% 50V	
C3312	1-112-246-11	ELECT 100uF 20% 35V		C3551	1-126-960-11	ELECT 1uF 20% 50V	
C3313	1-104-329-11	CERAMIC CHIP 0.1uF 10% 50V		C3552	1-126-964-11	ELECT 10uF 20% 50V	
C3314	1-137-198-81	FILM 1uF 5% 50V		C3553	1-115-339-11	CERAMIC CHIP 0.1uF 10% 50V	
				C3556	1-115-339-11	CERAMIC CHIP 0.1uF 10% 50V	
				C3561	1-165-989-11	CERAMIC CHIP 10uF 10% 6.3V	
				C3901	1-162-964-11	CERAMIC CHIP 0.001uF 10% 50V	
				C3902	1-162-964-11	CERAMIC CHIP 0.001uF 10% 50V	
				C3903	1-162-964-11	CERAMIC CHIP 0.001uF 10% 50V	
				C3904	1-162-964-11	CERAMIC CHIP 0.001uF 10% 50V	
				C3911	1-163-021-91	CERAMIC CHIP 0.01uF 10% 50V	
				C3912	1-163-021-91	CERAMIC CHIP 0.01uF 10% 50V	
				C3913	1-163-021-91	CERAMIC CHIP 0.01uF 10% 50V	
				C3914	1-163-021-91	CERAMIC CHIP 0.01uF 10% 50V	
				C4501	1-117-370-11	CERAMIC CHIP 10uF 10V	
				C4503	1-104-658-91	ELECT 100uF 20% 10V	
				C4504	1-162-970-11	CERAMIC CHIP 0.01uF 10% 25V	
				C9972	1-107-826-11	CERAMIC CHIP 0.1uF 10% 16V	
				< CONNECTOR >			
				CN204	1-817-615-21	CONNECTOR, SQUARE TYPE (RECE)	
				CN501	1-820-119-41	CONNECTOR, FFC/FPC 21P	
				CN504	1-784-861-51	CONNECTOR, FFC (LIF (NON-ZIF)) 9P	

HCD-HDX275/HDX277WC/HDX279W/HDX475/HDX576WF/HDX675

MAIN

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
CN606	1-820-112-41	CONNECTOR, FFC/FPC 9P		FB2121	1-469-118-21	FERRITE, EMI (SMD) (1608)	
CN625	1-573-845-11	CONNECTOR, BOARD TO BOARD 13P		FB2122	1-469-118-21	FERRITE, EMI (SMD) (1608)	
CN651	1-779-285-11	CONNECTOR, FFC (LIF (NON-ZIF)) 17P		FB2124	1-469-118-21	FERRITE, EMI (SMD) (1608)	
CN702	1-779-273-11	CONNECTOR, FFC (LIF (NON-ZIF)) 5P		FB2125	1-469-118-21	FERRITE, EMI (SMD) (1608)	
CN1101	1-815-763-32	CONNECTOR, FFC/FPC 24P		< FLUORESCENT INDICATOR TUBE >			
* CN1105	1-564-708-11	PIN, CONNECTOR (SMALL TYPE) 6P					
* CN1201	1-564-708-11	PIN, CONNECTOR (SMALL TYPE) 6P		FL4501	1-234-177-21	FILTER, CHIP EMI	
CN1701	1-820-735-31	HDMI CONNECTOR		< IC >			
CN3000	1-564-704-41	PIN, CONNECTOR (SMALL TYPE) 2P		IC201	6-712-613-01	IC SI-3010KM-TLS	
CN3001	1-564-706-11	PIN, CONNECTOR (SMALL TYPE) 4P		IC202	8-759-710-97	IC NJM4565M-D	
CN4302	1-820-116-41	CONNECTOR, FFC/FPC 17P		IC301	6-600-466-01	IC TORX147L (SONY) (TV DIGITAL IN OPTICAL)	
< DIODE >				IC302	6-706-492-01	IC TC7SHU04FU (T5RSOJF)	
D501	6-501-817-01	DIODE MA2J1110GLS0		IC501	A-1544-880-A	IC R5F3640DDFAR (for SERVICE)	
D502	6-500-334-01	DIODE MC2836-T112-1		IC502	6-705-338-01	IC TK11250CMCL-G	
D505	6-500-334-01	DIODE MC2836-T112-1		IC503	6-708-922-01	IC PST3635NR	
D701	6-501-579-01	DIODE MC2837		IC505	6-712-613-01	IC SI-3010KM-TLS	
D3071	6-501-817-01	DIODE MA2J1110GLS0		IC506	6-712-613-01	IC SI-3010KM-TLS	
D3072	6-501-817-01	DIODE MA2J1110GLS0		IC507	6-705-337-01	IC TK11150CSCL-G	
D3073	6-501-817-01	DIODE MA2J1110GLS0		IC510	6-709-450-01	IC S-24CS16A0I-J8T1G	
D3111	6-500-885-01	DIODE P6SMBJ33A-5		IC702	8-759-825-15	IC LC89056W-E	
D3112	6-500-885-01	DIODE P6SMBJ33A-5		IC707	6-710-554-01	IC PCM1808PWR	
D3151	6-500-885-01	DIODE P6SMBJ33A-5		IC1101	6-711-522-01	IC CXD9917R (HDX275: E3, AUS)	
D3152	6-500-885-01	DIODE P6SMBJ33A-5		IC1101	6-711-953-01	IC CXD9927R (EXCEPT HDX275: E3, AUS)	
D3201	6-500-885-01	DIODE P6SMBJ33A-5		IC1102	6-808-200-01	IC MX29LV320CBTC70-CHI1-0803UC	
D3202	6-500-885-01	DIODE P6SMBJ33A-5	(HDX275/HDX277WC/HDX475/HDX675)			(EXCEPT HDX275: E3, AUS)	
D3251	6-500-885-01	DIODE P6SMBJ33A-5	(HDX275/HDX277WC/HDX475/HDX675)	IC1102	6-808-201-01	IC MX29LV320CBTC70-CHI1-0803CE	
D3252	6-500-885-01	DIODE P6SMBJ33A-5	(HDX275/HDX277WC/HDX475/HDX675)			(HDX275: E3, AUS)	
D3301	6-500-885-01	DIODE P6SMBJ33A-5		IC1103	(Not supplied)	IC S-24CS64A0I-J8T1G	
D3302	6-500-885-01	DIODE P6SMBJ33A-5		IC1104	6-707-897-01	IC EDS6416AHTA-75-E	
D3401	6-500-885-01	DIODE P6SMBJ33A-5		IC1105	6-702-302-01	IC TK11133CSCL-G	
D3402	6-500-885-01	DIODE P6SMBJ33A-5		IC1107	6-702-302-01	IC TK11133CSCL-G	
D3501	6-500-885-01	DIODE P6SMBJ33A-5		IC1110	6-707-739-01	IC MM1661JTRE	
D3502	6-500-885-01	DIODE P6SMBJ33A-5		IC1201	6-704-524-01	IC FAN8036L	
D3551	6-501-579-01	DIODE MC2837		IC1705	8-759-592-47	IC TC7SZ08FU (TE85R)	
D3552	6-501-774-01	DIODE MAZ8150G0LS0		IC1706	8-759-592-47	IC TC7SZ08FU (TE85R)	
D9712	6-501-817-01	DIODE MA2J1110GLS0		IC1707	6-705-337-01	IC TK11150CSCL-G	
< FERRITE BEAD >				IC1708	6-702-302-01	IC TK11133CSCL-G	
FB505	1-469-365-21	INDUCTOR, FERRITE BEAD FBMJ2125		IC3001	8-759-710-97	IC NJM4565M-D	
FB506	1-469-324-21	FERRITE, EMI (SMD) (2012)		IC3003	8-759-680-48	IC TC7WH157FK (TE85R)	
FB508	1-469-365-21	INDUCTOR, FERRITE BEAD FBMJ2125		IC3010	6-707-939-01	IC CXD9843AR	
FB510	1-469-324-21	FERRITE, EMI (SMD) (2012)		IC3020	6-707-939-01	IC CXD9843AR	
FB1106	1-469-324-21	FERRITE, EMI (SMD) (2012)				(HDX275/HDX277WC/HDX475/HDX675)	
FB1107	1-469-324-21	FERRITE, EMI (SMD) (2012)		IC3030	6-707-939-01	IC CXD9843AR	
FB1108	1-469-324-21	FERRITE, EMI (SMD) (2012)		IC3050	6-702-300-01	IC TK11118CSCL-G	
FB1109	1-469-324-21	FERRITE, EMI (SMD) (2012)		IC3051	6-709-888-01	IC TC7WHU04FK (T5RSOYF)	
FB1111	1-469-670-21	FERRITE, EMI (SMD) (2012)		IC3100	6-708-921-01	IC CXD9883M	
FB1112	1-469-670-21	FERRITE, EMI (SMD) (2012)		IC3150	6-708-921-01	IC CXD9883M	
FB1113	1-469-670-21	FERRITE, EMI (SMD) (2012)		IC3200	6-708-921-01	IC CXD9883M	
FB1115	1-469-670-21	FERRITE, EMI (SMD) (2012)				(HDX275/HDX277WC/HDX475/HDX675)	
FB1116	1-469-670-21	FERRITE, EMI (SMD) (2012)		IC3250	6-708-921-01	IC CXD9883M	
FB1117	1-469-670-21	FERRITE, EMI (SMD) (2012)				(HDX275/HDX277WC/HDX475/HDX675)	
FB1118	1-469-670-21	FERRITE, EMI (SMD) (2012)		IC3300	6-708-921-01	IC CXD9883M	
FB2101	1-469-324-21	FERRITE, EMI (SMD) (2012)		IC3400	6-708-921-01	IC CXD9883M	
FB2103	1-469-324-21	FERRITE, EMI (SMD) (2012)		IC3500	6-708-921-01	IC CXD9883M	
FB2120	1-469-118-21	FERRITE, EMI (SMD) (1608)		IC4502	6-707-853-01	IC TC74LCX541FT (EKJ)	
< JACK >				< JACK >			
				J302	1-784-431-11	JACK, PIN 1P (TV DIGITAL IN COAXIAL)	

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
		< COIL >					
L200	1-469-525-91	INDUCTOR 10uH		Q3202	6-551-696-01	TRANSISTOR ISA1235AC1TP-1EF (HDX275/HDX277WC/HDX475/HDX675)	
L301	1-469-525-91	INDUCTOR 10uH		Q3251	6-551-696-01	TRANSISTOR ISA1235AC1TP-1EF	
L302	1-469-525-91	INDUCTOR 10uH		Q3252	6-551-696-01	TRANSISTOR ISA1235AC1TP-1EF	
L701	1-469-525-91	INDUCTOR 10uH		Q3301	6-551-696-01	TRANSISTOR ISA1235AC1TP-1EF	
L702	1-469-525-91	INDUCTOR 10uH					
L703	1-469-525-91	INDUCTOR 10uH		Q3302	6-551-696-01	TRANSISTOR ISA1235AC1TP-1EF	
L1701	1-457-374-21	COMMOM MODE CHOKE COIL (HDX275: E3, AUS)		Q3401	6-551-696-01	TRANSISTOR ISA1235AC1TP-1EF (HDX275/HDX277WC/HDX475/HDX675)	
* L1701	1-813-308-11	COMMON MODE CHOKE (EXCEPT HDX275: E3, AUS)		Q3402	6-551-696-01	TRANSISTOR ISA1235AC1TP-1EF (HDX275/HDX277WC/HDX475/HDX675)	
L1702	1-457-374-21	COMMOM MODE CHOKE COIL (HDX275: E3, AUS)		Q3551	8-729-620-07	TRANSISTOR 2SC3052EF-T1-LEF	
* L1702	1-813-308-11	COMMON MODE CHOKE (EXCEPT HDX275: E3, AUS)		Q3552	8-729-620-07	TRANSISTOR 2SC3052EF-T1-LEF	
L1703	1-457-374-21	COMMOM MODE CHOKE COIL (HDX275: E3, AUS)		Q3553	8-729-620-07	TRANSISTOR 2SC3052EF-T1-LEF	
* L1703	1-813-308-11	COMMON MODE CHOKE (EXCEPT HDX275: E3, AUS)		Q3554	8-729-620-07	TRANSISTOR 2SC3052EF-T1-LEF	
L1704	1-457-374-21	COMMOM MODE CHOKE COIL (HDX275: E3, AUS)		Q3555	8-729-620-07	TRANSISTOR 2SC3052EF-T1-LEF	
* L1704	1-813-308-11	COMMON MODE CHOKE (EXCEPT HDX275: E3, AUS)		Q9724	6-551-699-01	TRANSISTOR ISA1602AM1TP-1EF	
L3000	1-469-527-91	INDUCTOR 47uH		Q9726	8-729-620-13	TRANSISTOR 2SC4154TP-1EF	
L3051	1-469-525-91	INDUCTOR 10uH					
L3052	1-469-525-91	INDUCTOR 10uH		Q9728	8-729-620-13	TRANSISTOR 2SC4154TP-1EF	
L3053	1-469-525-91	INDUCTOR 10uH		Q9729	8-729-027-43	TRANSISTOR DTC114EKA-T146	
L3054	1-412-939-11	INDUCTOR 1uH					
L3101	1-457-579-11	INDUCTOR 10uH				< RESISTOR >	
L3102	1-457-579-11	INDUCTOR 10uH		R203	1-218-879-11	METAL CHIP 22K 0.5% 1/10W	
L3201	1-457-579-11	INDUCTOR 10uH (HDX275/HDX277WC/HDX475/HDX675)		R208	1-218-879-11	METAL CHIP 22K 0.5% 1/10W	
L3202	1-457-579-11	INDUCTOR 10uH (HDX275/HDX277WC/HDX475/HDX675)		R214	1-218-879-11	METAL CHIP 22K 0.5% 1/10W	
L3301	1-457-579-11	INDUCTOR 10uH		R215	1-218-879-11	METAL CHIP 22K 0.5% 1/10W	
L3401	1-457-579-11	INDUCTOR 10uH		R220	1-216-821-11	METAL CHIP 1K 5% 1/10W	
L3501	1-457-579-11	INDUCTOR 10uH		R221	1-218-847-11	METAL CHIP 1K 0.5% 1/10W	
L3901	1-457-078-11	AIR-CORE COIL		R222	1-218-885-11	METAL CHIP 39K 0.5% 1/10W	
L3902	1-457-077-11	AIR-CORE COIL		R223	1-218-871-11	METAL CHIP 10K 0.5% 1/10W	
L3903	1-457-078-11	AIR-CORE COIL		R227	1-218-879-11	METAL CHIP 22K 0.5% 1/10W	
L3904	1-457-077-11	AIR-CORE COIL		R228	1-218-879-11	METAL CHIP 22K 0.5% 1/10W	
L4501	1-469-527-91	INDUCTOR 47uH		R229	1-218-879-11	METAL CHIP 22K 0.5% 1/10W	
		< TRANSISTOR >		R230	1-218-879-11	METAL CHIP 22K 0.5% 1/10W	
Q503	8-729-620-07	TRANSISTOR 2SC3052EF-T1-LEF		R231	1-216-827-11	METAL CHIP 3.3K 5% 1/10W	
Q631	8-729-620-07	TRANSISTOR 2SC3052EF-T1-LEF		R232	1-216-829-11	METAL CHIP 4.7K 5% 1/10W	
Q632	8-729-620-07	TRANSISTOR 2SC3052EF-T1-LEF		R317	1-216-809-11	METAL CHIP 100 5% 1/10W	
Q1101	6-550-008-01	TRANSISTOR UM6K1N-TN		R318	1-216-809-11	METAL CHIP 100 5% 1/10W	
Q1102	6-550-653-01	TRANSISTOR QST8TR		R319	1-216-841-11	METAL CHIP 47K 5% 1/10W	
Q1103	8-729-027-52	TRANSISTOR DTC124EKA-T146		R328	1-218-285-11	METAL CHIP 75 5% 1/10W	
Q1701	6-550-008-01	TRANSISTOR UM6K1N-TN		R329	1-216-817-11	METAL CHIP 470 5% 1/10W	
Q3000	8-729-111-29	TRANSISTOR 2SD1616A-K		R501	1-216-857-11	METAL CHIP 1M 5% 1/10W	
Q3001	8-729-620-07	TRANSISTOR 2SC3052EF-T1-LEF		R502	1-216-809-11	METAL CHIP 100 5% 1/10W	
Q3002	8-729-620-07	TRANSISTOR 2SC3052EF-T1-LEF		R504	1-216-833-11	METAL CHIP 10K 5% 1/10W (HDX275: E3)	
Q3081	8-729-027-23	TRANSISTOR DTA114EKA-T146		R504	1-216-835-11	METAL CHIP 15K 5% 1/10W (HDX275: AUS)	
Q3101	6-551-696-01	TRANSISTOR ISA1235AC1TP-1EF		R504	1-216-841-11	METAL CHIP 47K 5% 1/10W (EXCEPT HDX275: E3, AUS)	
Q3102	6-551-696-01	TRANSISTOR ISA1235AC1TP-1EF		R505	1-216-837-11	METAL CHIP 22K 5% 1/10W (EXCEPT HDX275: E3, AUS)	
Q3151	6-551-696-01	TRANSISTOR ISA1235AC1TP-1EF		R505	1-216-841-11	METAL CHIP 47K 5% 1/10W (HDX275: E3, AUS)	
Q3152	6-551-696-01	TRANSISTOR ISA1235AC1TP-1EF		R506	1-216-827-11	METAL CHIP 3.3K 5% 1/10W (HDX275)	
Q3201	6-551-696-01	TRANSISTOR ISA1235AC1TP-1EF (HDX275/HDX277WC/HDX475/HDX675)		R506	1-218-867-11	METAL CHIP 6.8K 0.5% 1/10W (HDX279W)	
				R506	1-216-833-11	METAL CHIP 10K 5% 1/10W (HDX277WC)	
				R506	1-216-837-11	METAL CHIP 22K 5% 1/10W (HDX475)	
				R506	1-216-841-11	METAL CHIP 47K 5% 1/10W (HDX576WF/HDX675)	

Note: EEPROM (IC1103) on the MAIN board cannot exchange with single. When EEPROM (IC1103) on the MAIN board is damaged, exchange the entire mounted board.

HCD-HDX275/HDX277WC/HDX279W/HDX475/HDX576WF/HDX675

MAIN

Ref. No.	Part No.	Description	Remark			Ref. No.	Part No.	Description	Remark		
R507	1-216-827-11	METAL CHIP	3.3K	5%	1/10W (HDX675)	R584	1-216-821-11	METAL CHIP	1K	5%	1/10W
R507	1-216-841-11	METAL CHIP	47K	5%	1/10W (HDX275/HDX277WC/HDX279W/HDX475/ HDX576WF)	R586	1-216-833-11	METAL CHIP	10K	5%	1/10W
R508	1-216-864-11	SHORT CHIP	0			R587	1-218-871-11	METAL CHIP	10K	0.5%	1/10W
R509	1-216-809-11	METAL CHIP	100	5%	1/10W	R588	1-218-885-11	METAL CHIP	39K	0.5%	1/10W
R510	1-216-833-11	METAL CHIP	10K	5%	1/10W	R589	1-218-847-11	METAL CHIP	1K	0.5%	1/10W
R511	1-216-821-11	METAL CHIP	1K	5%	1/10W	R590	1-216-821-11	METAL CHIP	1K	5%	1/10W
R512	1-216-833-11	METAL CHIP	10K	5%	1/10W	R592	1-216-864-11	SHORT CHIP	0		
R513	1-216-821-11	METAL CHIP	1K	5%	1/10W	R593	1-216-833-11	METAL CHIP	10K	5%	1/10W
R514	1-216-833-11	METAL CHIP	10K	5%	1/10W	R595	1-216-833-11	METAL CHIP	10K	5%	1/10W
R515	1-216-821-11	METAL CHIP	1K	5%	1/10W	R596	1-218-871-11	METAL CHIP	10K	0.5%	1/10W
R516	1-216-821-11	METAL CHIP	1K	5%	1/10W	R597	1-218-879-11	METAL CHIP	22K	0.5%	1/10W
R517	1-216-809-11	METAL CHIP	100	5%	1/10W	R598	1-218-851-11	METAL CHIP	1.5K	0.5%	1/10W
R518	1-216-809-11	METAL CHIP	100	5%	1/10W	R599	1-216-821-11	METAL CHIP	1K	5%	1/10W
R519	1-216-833-11	METAL CHIP	10K	5%	1/10W	R603	1-216-809-11	METAL CHIP	100	5%	1/10W
R526	1-216-821-11	METAL CHIP	1K	5%	1/10W	R604	1-216-809-11	METAL CHIP	100	5%	1/10W
R527	1-216-833-11	METAL CHIP	10K	5%	1/10W	R605	1-216-809-11	METAL CHIP	100	5%	1/10W
R528	1-216-833-11	METAL CHIP	10K	5%	1/10W	R606	1-216-809-11	METAL CHIP	100	5%	1/10W
R529	1-216-821-11	METAL CHIP	1K	5%	1/10W	R607	1-216-809-11	METAL CHIP	100	5%	1/10W
R530	1-216-809-11	METAL CHIP	100	5%	1/10W	R608	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R531	1-216-833-11	METAL CHIP	10K	5%	1/10W	R609	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R532	1-216-821-11	METAL CHIP	1K	5%	1/10W	R611	1-216-809-11	METAL CHIP	100	5%	1/10W
R533	1-216-809-11	METAL CHIP	100	5%	1/10W	R612	1-216-809-11	METAL CHIP	100	5%	1/10W
R534	1-216-833-11	METAL CHIP	10K	5%	1/10W	R613	1-216-809-11	METAL CHIP	100	5%	1/10W
R535	1-216-809-11	METAL CHIP	100	5%	1/10W	R621	1-216-809-11	METAL CHIP	100	5%	1/10W
R536	1-216-864-11	SHORT CHIP	0			R622	1-216-809-11	METAL CHIP	100	5%	1/10W
R537	1-216-821-11	METAL CHIP	1K	5%	1/10W	R623	1-216-809-11	METAL CHIP	100	5%	1/10W
R539	1-216-833-11	METAL CHIP	10K	5%	1/10W	R624	1-216-809-11	METAL CHIP	100	5%	1/10W
R540	1-216-833-11	METAL CHIP	10K	5%	1/10W	R625	1-216-809-11	METAL CHIP	100	5%	1/10W
R542	1-216-833-11	METAL CHIP	10K	5%	1/10W	R626	1-216-833-11	METAL CHIP	10K	5%	1/10W
R543	1-216-864-11	SHORT CHIP	0			R627	1-216-837-11	METAL CHIP	22K	5%	1/10W
R544	1-216-833-11	METAL CHIP	10K	5%	1/10W	R628	1-216-841-11	METAL CHIP	47K	5%	1/10W
R546	1-216-821-11	METAL CHIP	1K	5%	1/10W	R629	1-216-809-11	METAL CHIP	100	5%	1/10W
R547	1-216-864-11	SHORT CHIP	0			R631	1-216-833-11	METAL CHIP	10K	5%	1/10W
R548	1-216-864-11	SHORT CHIP	0			R632	1-216-841-11	METAL CHIP	47K	5%	1/10W
R551	1-216-809-11	METAL CHIP	100	5%	1/10W	R636	1-216-864-11	SHORT CHIP	0		
R552	1-216-821-11	METAL CHIP	1K	5%	1/10W	R638	1-216-864-11	SHORT CHIP	0		
R553	1-216-833-11	METAL CHIP	10K	5%	1/10W	R639	1-216-809-11	METAL CHIP	100	5%	1/10W
R555	1-216-833-11	METAL CHIP	10K	5%	1/10W	R640	1-216-809-11	METAL CHIP	100	5%	1/10W
R556	1-216-841-11	METAL CHIP	47K	5%	1/10W	R641	1-216-809-11	METAL CHIP	100	5%	1/10W
R557	1-216-841-11	METAL CHIP	47K	5%	1/10W	R642	1-216-809-11	METAL CHIP	100	5%	1/10W
R558	1-216-833-11	METAL CHIP	10K	5%	1/10W	R643	1-216-809-11	METAL CHIP	100	5%	1/10W
R559	1-216-833-11	METAL CHIP	10K	5%	1/10W	R648	1-216-864-11	SHORT CHIP	0		
R561	1-216-845-11	METAL CHIP	100K	5%	1/10W	R650	1-216-809-11	METAL CHIP	100	5%	1/10W
R562	1-216-841-11	METAL CHIP	47K	5%	1/10W	R651	1-216-809-11	METAL CHIP	100	5%	1/10W
R563	1-216-833-11	METAL CHIP	10K	5%	1/10W	R652	1-216-809-11	METAL CHIP	100	5%	1/10W
R564	1-216-864-11	SHORT CHIP	0			R654	1-216-809-11	METAL CHIP	100	5%	1/10W
R565	1-216-864-11	SHORT CHIP	0			R655	1-216-809-11	METAL CHIP	100	5%	1/10W
R566	1-216-864-11	SHORT CHIP	0			R656	1-216-809-11	METAL CHIP	100	5%	1/10W
R567	1-216-864-11	SHORT CHIP	0			R657	1-216-809-11	METAL CHIP	100	5%	1/10W
R568	1-216-864-11	SHORT CHIP	0			R660	1-216-864-11	SHORT CHIP	0		
R569	1-216-864-11	SHORT CHIP	0			R661	1-216-864-11	SHORT CHIP	0		
R576	1-216-829-11	METAL CHIP	4.7K	5%	1/10W	R662	1-216-809-11	METAL CHIP	100	5%	1/10W
R577	1-216-829-11	METAL CHIP	4.7K	5%	1/10W	R663	1-216-809-11	METAL CHIP	100	5%	1/10W
R578	1-216-829-11	METAL CHIP	4.7K	5%	1/10W	R664	1-216-809-11	METAL CHIP	100	5%	1/10W
R579	1-216-809-11	METAL CHIP	100	5%	1/10W	R666	1-216-809-11	METAL CHIP	100	5%	1/10W
R580	1-216-809-11	METAL CHIP	100	5%	1/10W	R667	1-216-809-11	METAL CHIP	100	5%	1/10W
R582	1-216-833-11	METAL CHIP	10K	5%	1/10W	R683	1-216-809-11	METAL CHIP	100	5%	1/10W
R583	1-216-841-11	METAL CHIP	47K	5%	1/10W	R685	1-216-864-11	SHORT CHIP	0		
						R690	1-216-809-11	METAL CHIP	100	5%	1/10W
						R691	1-216-864-11	SHORT CHIP	0		

Ref. No.	Part No.	Description	Remark			Ref. No.	Part No.	Description	Remark		
R692	1-216-864-11	SHORT CHIP	0			R1101	1-216-809-11	METAL CHIP	100	5%	1/10W
R693	1-216-864-11	SHORT CHIP	0			R1102	1-216-864-11	SHORT CHIP	0		
R694	1-216-864-11	SHORT CHIP	0			R1103	1-218-864-11	METAL CHIP	5.1K	0.5%	1/10W
R695	1-216-864-11	SHORT CHIP	0			R1105	1-216-833-11	METAL CHIP	10K	5%	1/10W
R696	1-216-864-11	SHORT CHIP	0			R1106	1-216-833-11	METAL CHIP	10K	5%	1/10W
R697	1-216-864-11	SHORT CHIP	0			R1107	1-216-833-11	METAL CHIP	10K	5%	1/10W
R709	1-216-864-11	SHORT CHIP	0			R1108	1-216-857-11	METAL CHIP	1M	5%	1/10W
R710	1-216-833-11	METAL CHIP	10K	5%	1/10W	R1109	1-216-864-11	SHORT CHIP	0		
R713	1-216-839-11	METAL CHIP	33K	5%	1/10W	R1110	1-216-841-11	METAL CHIP	47K	5%	1/10W
R714	1-216-829-11	METAL CHIP	4.7K	5%	1/10W	R1111	1-216-809-11	METAL CHIP	100	5%	1/10W
R715	1-216-830-11	METAL CHIP	5.6K	5%	1/10W	R1112	1-211-977-11	METAL CHIP	22	0.5%	1/10W
R716	1-216-809-11	METAL CHIP	100	5%	1/10W	R1113	1-211-977-11	METAL CHIP	22	0.5%	1/10W
R717	1-216-809-11	METAL CHIP	100	5%	1/10W	R1114	1-216-845-11	METAL CHIP	100K	5%	1/10W
R718	1-216-809-11	METAL CHIP	100	5%	1/10W	R1115	1-211-977-11	METAL CHIP	22	0.5%	1/10W
R720	1-216-833-11	METAL CHIP	10K	5%	1/10W	R1116	1-216-821-11	METAL CHIP	1K	5%	1/10W
R721	1-216-864-11	SHORT CHIP	0			R1117	1-216-841-11	METAL CHIP	47K	5%	1/10W
R726	1-216-809-11	METAL CHIP	100	5%	1/10W	R1118	1-216-801-11	METAL CHIP	22	5%	1/10W
R729	1-216-809-11	METAL CHIP	100	5%	1/10W	R1120	1-216-801-11	METAL CHIP	22	5%	1/10W
R730	1-216-809-11	METAL CHIP	100	5%	1/10W	R1121	1-216-801-11	METAL CHIP	22	5%	1/10W
R731	1-216-821-11	METAL CHIP	1K	5%	1/10W	R1123	1-216-864-11	SHORT CHIP	0		
R732	1-216-815-11	METAL CHIP	330	5%	1/10W	R1124	1-216-841-11	METAL CHIP	47K	5%	1/10W
R733	1-216-857-11	METAL CHIP	1M	5%	1/10W	R1125	1-216-805-11	METAL CHIP	47	5%	1/10W
R734	1-216-809-11	METAL CHIP	100	5%	1/10W	R1132	1-216-845-11	METAL CHIP	100K	5%	1/10W
R735	1-216-809-11	METAL CHIP	100	5%	1/10W	R1133	1-216-864-11	SHORT CHIP	0		
R736	1-216-809-11	METAL CHIP	100	5%	1/10W	R1135	1-216-821-11	METAL CHIP	1K	5%	1/10W
R737	1-216-833-11	METAL CHIP	10K	5%	1/10W	R1136	1-216-835-11	METAL CHIP	15K	5%	1/10W
R738	1-216-809-11	METAL CHIP	100	5%	1/10W	R1139	1-216-864-11	SHORT CHIP	0		
R740	1-216-864-11	SHORT CHIP	0			R1140	1-216-821-11	METAL CHIP	1K	5%	1/10W
R741	1-216-864-11	SHORT CHIP	0			R1141	1-216-855-11	METAL CHIP	680K	5%	1/10W
R742	1-216-833-11	METAL CHIP	10K	5%	1/10W	R1142	1-216-845-11	METAL CHIP	100K	5%	1/10W
R743	1-216-809-11	METAL CHIP	100	5%	1/10W	R1145	1-216-864-11	SHORT CHIP	0		
R744	1-216-864-11	SHORT CHIP	0			R1146	1-216-805-11	METAL CHIP	47	5%	1/10W
R745	1-216-864-11	SHORT CHIP	0			R1147	1-216-864-11	SHORT CHIP	0		
R746	1-216-864-11	SHORT CHIP	0			R1148	1-216-864-11	SHORT CHIP	0		
R747	1-216-864-11	SHORT CHIP	0			R1151	1-216-833-11	METAL CHIP	10K	5%	1/10W
R748	1-216-864-11	SHORT CHIP	0			R1152	1-216-864-11	SHORT CHIP	0		
R749	1-216-864-11	SHORT CHIP	0			R1153	1-216-864-11	SHORT CHIP	0		
R750	1-216-809-11	METAL CHIP	100	5%	1/10W	R1154	1-216-864-11	SHORT CHIP	0		
R763	1-216-864-11	SHORT CHIP	0			R1155	1-216-864-11	SHORT CHIP	0		
R764	1-216-864-11	SHORT CHIP	0			R1156	1-216-809-11	METAL CHIP	100	5%	1/10W
R765	1-216-864-11	SHORT CHIP	0			R1159	1-216-805-11	METAL CHIP	47	5%	1/10W
R766	1-216-864-11	SHORT CHIP	0			R1160	1-216-805-11	METAL CHIP	47	5%	1/10W
R767	1-216-864-11	SHORT CHIP	0			R1161	1-216-801-11	METAL CHIP	22	5%	1/10W
R768	1-216-864-11	SHORT CHIP	0			R1162	1-216-805-11	METAL CHIP	47	5%	1/10W
R769	1-216-864-11	SHORT CHIP	0			R1163	1-216-805-11	METAL CHIP	47	5%	1/10W
R778	1-216-864-11	SHORT CHIP	0			R1164	1-216-805-11	METAL CHIP	47	5%	1/10W
R780	1-216-805-11	METAL CHIP	47	5%	1/10W	R1165	1-216-805-11	METAL CHIP	47	5%	1/10W
R781	1-216-805-11	METAL CHIP	47	5%	1/10W	R1171	1-216-809-11	METAL CHIP	100	5%	1/10W
R782	1-216-801-11	METAL CHIP	22	5%	1/10W	R1175	1-216-864-11	SHORT CHIP	0		
R783	1-216-801-11	METAL CHIP	22	5%	1/10W	R1176	1-216-833-11	METAL CHIP	10K	5%	1/10W
R784	1-216-801-11	METAL CHIP	22	5%	1/10W	R1183	1-216-805-11	METAL CHIP	47	5%	1/10W
R785	1-216-801-11	METAL CHIP	22	5%	1/10W	R1184	1-216-805-11	METAL CHIP	47	5%	1/10W
R787	1-216-809-11	METAL CHIP	100	5%	1/10W	R1185	1-216-805-11	METAL CHIP	47	5%	1/10W
R788	1-216-864-11	SHORT CHIP	0			R1191	1-216-821-11	METAL CHIP	1K	5%	1/10W
R790	1-216-864-11	SHORT CHIP	0			R1193	1-216-821-11	METAL CHIP	1K	5%	1/10W
R791	1-216-864-11	SHORT CHIP	0			R1198	1-216-809-11	METAL CHIP	100	5%	1/10W
R793	1-216-864-11	SHORT CHIP	0			R1204	1-216-822-11	METAL CHIP	1.2K	5%	1/10W
R794	1-216-864-11	SHORT CHIP	0			R1205	1-216-833-11	METAL CHIP	10K	5%	1/10W
R796	1-216-864-11	SHORT CHIP	0			R1206	1-216-833-11	METAL CHIP	10K	5%	1/10W
R797	1-216-864-11	SHORT CHIP	0			R1207	1-216-826-11	METAL CHIP	2.7K	5%	1/10W

HCD-HDX275/HDX277WC/HDX279W/HDX475/HDX576WF/HDX675

MAIN

Ref. No.	Part No.	Description			Remark	Ref. No.	Part No.	Description			Remark
R1208	1-216-839-11	METAL CHIP	33K	5%	1/10W	R2159	1-216-833-11	METAL CHIP	10K	5%	1/10W
R1209	1-216-839-11	METAL CHIP	33K	5%	1/10W	R2160	1-216-833-11	METAL CHIP	10K	5%	1/10W
R1210	1-216-841-11	METAL CHIP	47K	5%	1/10W	R2161	1-216-864-11	SHORT CHIP	0		
R1212	1-216-833-11	METAL CHIP	10K	5%	1/10W	R2162	1-216-864-11	SHORT CHIP	0		
R1213	1-218-867-11	METAL CHIP	6.8K	0.5%	1/10W	R2167	1-216-864-11	SHORT CHIP	0		
R1214	1-216-835-11	METAL CHIP	15K	5%	1/10W	R2168	1-216-815-11	METAL CHIP	330	5%	1/10W
R1215	1-216-834-11	METAL CHIP	12K	5%	1/10W	R2176	1-216-864-11	SHORT CHIP	0		
R1216	1-216-834-11	METAL CHIP	12K	5%	1/10W	R2177	1-216-864-11	SHORT CHIP	0		
R1219	1-216-838-11	METAL CHIP	27K	5%	1/10W	R2178	1-216-821-11	METAL CHIP	1K	5%	1/10W
R1220	1-216-821-11	METAL CHIP	1K	5%	1/10W	R2179	1-216-809-11	METAL CHIP	100	5%	1/10W
R1221	1-218-889-11	METAL CHIP	56K	0.5%	1/10W	R2180	1-216-833-11	METAL CHIP	10K	5%	1/10W
R1223	1-218-895-11	METAL CHIP	100K	0.5%	1/10W	R2182	1-216-864-11	SHORT CHIP	0		
R1224	1-216-833-11	METAL CHIP	10K	5%	1/10W	R2184	1-216-809-11	METAL CHIP	100	5%	1/10W
R1225	1-218-895-11	METAL CHIP	100K	0.5%	1/10W	R2185	1-216-809-11	METAL CHIP	100	5%	1/10W
R1226	1-218-889-11	METAL CHIP	56K	0.5%	1/10W	R2188	1-216-864-11	SHORT CHIP	0		
R1230	1-218-893-11	METAL CHIP	82K	0.5%	1/10W	R2201	1-216-864-11	SHORT CHIP	0		
R1231	1-218-875-11	METAL CHIP	15K	0.5%	1/10W	R2203	1-216-864-11	SHORT CHIP	0		
R1232	1-218-877-11	METAL CHIP	18K	0.5%	1/10W	R2746	1-216-864-11	SHORT CHIP	0		
R1233	1-218-883-11	METAL CHIP	33K	0.5%	1/10W	R3001	1-216-833-11	METAL CHIP	10K	5%	1/10W
R1234	1-216-833-11	METAL CHIP	10K	5%	1/10W	R3002	1-216-833-11	METAL CHIP	10K	5%	1/10W
R1246	1-216-829-11	METAL CHIP	4.7K	5%	1/10W	R3003	1-216-823-11	METAL CHIP	1.5K	5%	1/10W
R1247	1-216-821-11	METAL CHIP	1K	5%	1/10W	R3004	1-216-822-11	METAL CHIP	1.2K	5%	1/10W
R1254	1-216-829-11	METAL CHIP	4.7K	5%	1/10W	R3006	1-216-825-11	METAL CHIP	2.2K	5%	1/10W
R1730	1-216-826-11	METAL CHIP	2.7K	5%	1/10W	R3011	1-216-817-11	METAL CHIP	470	5%	1/10W
R1742	1-216-841-11	METAL CHIP	47K	5%	1/10W	R3012	1-216-817-11	METAL CHIP	470	5%	1/10W
R1743	1-216-864-11	SHORT CHIP	0			R3013	1-216-833-11	METAL CHIP	10K	5%	1/10W
R1747	1-216-864-11	SHORT CHIP	0			R3014	1-216-801-11	METAL CHIP	22	5%	1/10W
R1748	1-216-864-11	SHORT CHIP	0			R3015	1-216-809-11	METAL CHIP	100	5%	1/10W
R1749	1-216-824-11	METAL CHIP	1.8K	5%	1/10W	R3017	1-216-809-11	METAL CHIP	100	5%	1/10W
R1750	1-216-824-11	METAL CHIP	1.8K	5%	1/10W	R3021	1-216-817-11	METAL CHIP	470	5%	1/10W
R1751	1-216-864-11	SHORT CHIP	0					(HDX275/HDX277WC/HDX475/HDX675)			
R1752	1-216-864-11	SHORT CHIP	0			R3022	1-216-817-11	METAL CHIP	470	5%	1/10W
R1753	1-216-864-11	SHORT CHIP	0					(HDX275/HDX277WC/HDX475/HDX675)			
R1754	1-216-864-11	SHORT CHIP	0			R3023	1-216-801-11	METAL CHIP	22	5%	1/10W
R1781	1-216-827-11	METAL CHIP	3.3K	5%	1/10W			(HDX275/HDX277WC/HDX475/HDX675)			
R1782	1-216-827-11	METAL CHIP	3.3K	5%	1/10W	R3024	1-216-809-11	METAL CHIP	100	5%	1/10W
								(HDX275/HDX277WC/HDX475/HDX675)			
R1783	1-216-864-11	SHORT CHIP	0			R3026	1-216-809-11	METAL CHIP	100	5%	1/10W
R1784	1-216-864-11	SHORT CHIP	0					(HDX275/HDX277WC/HDX475/HDX675)			
R1785	1-216-864-11	SHORT CHIP	0			R3031	1-216-817-11	METAL CHIP	470	5%	1/10W
R1786	1-216-864-11	SHORT CHIP	0			R3032	1-216-817-11	METAL CHIP	470	5%	1/10W
R2101	1-218-841-11	METAL CHIP	560	0.5%	1/10W						
R2104	1-216-829-11	METAL CHIP	4.7K	5%	1/10W	R3033	1-216-833-11	METAL CHIP	10K	5%	1/10W
R2110	1-216-826-11	METAL CHIP	2.7K	5%	1/10W	R3034	1-216-801-11	METAL CHIP	22	5%	1/10W
R2114	1-216-801-11	METAL CHIP	22	5%	1/10W	R3035	1-216-809-11	METAL CHIP	100	5%	1/10W
R2115	1-216-864-11	SHORT CHIP	0			R3037	1-216-809-11	METAL CHIP	100	5%	1/10W
R2119	1-216-864-11	SHORT CHIP	0			R3040	1-216-864-11	SHORT CHIP	0		
R2120	1-216-809-11	METAL CHIP	100	5%	1/10W	R3041	1-216-864-11	SHORT CHIP	0		
R2129	1-216-845-11	METAL CHIP	100K	5%	1/10W	R3042	1-216-864-11	SHORT CHIP	0		
R2130	1-216-809-11	METAL CHIP	100	5%	1/10W	R3043	1-216-864-11	SHORT CHIP	0		
R2131	1-216-809-11	METAL CHIP	100	5%	1/10W	R3044	1-216-864-11	SHORT CHIP	0		
R2133	1-216-864-11	SHORT CHIP	0			R3045	1-216-864-11	SHORT CHIP	0		
R2134	1-216-864-11	SHORT CHIP	0			R3046	1-216-864-11	SHORT CHIP	0		
R2136	1-216-805-11	METAL CHIP	47	5%	1/10W	R3047	1-216-833-11	METAL CHIP	10K	5%	1/10W
R2150	1-216-827-11	METAL CHIP	3.3K	5%	1/10W	R3049	1-216-864-11	SHORT CHIP	0		
R2151	1-216-827-11	METAL CHIP	3.3K	5%	1/10W	R3050	1-216-864-11	SHORT CHIP	0		
R2152	1-216-827-11	METAL CHIP	3.3K	5%	1/10W	R3051	1-216-097-11	RES-CHIP	100K	5%	1/10W
R2155	1-216-833-11	METAL CHIP	10K	5%	1/10W	R3052	1-216-857-11	METAL CHIP	1M	5%	1/10W
R2156	1-216-833-11	METAL CHIP	10K	5%	1/10W	R3053	1-216-817-11	METAL CHIP	470	5%	1/10W
R2157	1-216-833-11	METAL CHIP	10K	5%	1/10W	R3054	1-216-809-11	METAL CHIP	100	5%	1/10W
R2158	1-216-833-11	METAL CHIP	10K	5%	1/10W	R3055	1-216-805-11	METAL CHIP	47	5%	1/10W
						R3056	1-216-864-11	SHORT CHIP	0 (HDX279W/HDX576WF)		

Ref. No.	Part No.	Description	Remark			Ref. No.	Part No.	Description	Remark		
R3057	1-216-805-11	METAL CHIP	47	5%	1/10W	R3201	1-216-809-11	METAL CHIP	100	5%	1/10W
		(HDX275/HDX277WC/HDX475/HDX675)						(HDX275/HDX277WC/HDX475/HDX675)			
R3057	1-216-864-11	SHORT CHIP	0			R3202	1-216-809-11	METAL CHIP	100	5%	1/10W
R3058	1-216-864-11	SHORT CHIP	0					(HDX275/HDX277WC/HDX475/HDX675)			
R3059	1-216-833-11	METAL CHIP	10K	5%	1/10W	R3203	1-216-864-11	SHORT CHIP	0		
R3060	1-216-833-11	METAL CHIP	10K	5%	1/10W			(HDX275/HDX277WC/HDX475/HDX675)			
R3061	1-216-864-11	SHORT CHIP	0			R3204	1-216-864-11	SHORT CHIP	0		
R3063	1-216-821-11	METAL CHIP	1K	5%	1/10W			(HDX275/HDX277WC/HDX475/HDX675)			
R3064	1-216-821-11	METAL CHIP	1K	5%	1/10W	R3207	1-216-835-11	METAL CHIP	15K	5%	1/10W
R3065	1-216-809-11	METAL CHIP	100	5%	1/10W			(HDX275/HDX277WC/HDX475/HDX675)			
R3066	1-216-809-11	METAL CHIP	100	5%	1/10W	R3215	1-216-864-11	SHORT CHIP	0		
								(HDX275/HDX277WC/HDX475/HDX675)			
R3067	1-216-809-11	METAL CHIP	100	5%	1/10W	R3216	1-216-864-11	SHORT CHIP	0		
R3068	1-216-809-11	METAL CHIP	100	5%	1/10W			(HDX275/HDX277WC/HDX475/HDX675)			
R3069	1-216-809-11	METAL CHIP	100	5%	1/10W	R3225	1-216-845-11	METAL CHIP	100K	5%	1/10W
R3070	1-216-809-11	METAL CHIP	100	5%	1/10W			(HDX275/HDX277WC/HDX475/HDX675)			
R3071	1-216-809-11	METAL CHIP	100	5%	1/10W	R3226	1-216-845-11	METAL CHIP	100K	5%	1/10W
								(HDX275/HDX277WC/HDX475/HDX675)			
R3072	1-216-809-11	METAL CHIP	100	5%	1/10W	R3227	1-216-845-11	METAL CHIP	100K	5%	1/10W
R3073	1-216-809-11	METAL CHIP	100	5%	1/10W			(HDX275/HDX277WC/HDX475/HDX675)			
R3074	1-216-809-11	METAL CHIP	100	5%	1/10W	R3251	1-216-809-11	METAL CHIP	100	5%	1/10W
R3075	1-216-809-11	METAL CHIP	100	5%	1/10W			(HDX275/HDX277WC/HDX475/HDX675)			
R3076	1-216-809-11	METAL CHIP	100	5%	1/10W						
R3077	1-216-809-11	METAL CHIP	100	5%	1/10W	R3252	1-216-809-11	METAL CHIP	100	5%	1/10W
R3078	1-216-809-11	METAL CHIP	100	5%	1/10W			(HDX275/HDX277WC/HDX475/HDX675)			
R3079	1-216-809-11	METAL CHIP	100	5%	1/10W	R3253	1-216-864-11	SHORT CHIP	0		
R3080	1-216-845-11	METAL CHIP	100K	5%	1/10W			(HDX275/HDX277WC/HDX475/HDX675)			
R3085	1-216-839-11	METAL CHIP	33K	5%	1/10W	R3254	1-216-864-11	SHORT CHIP	0		
								(HDX275/HDX277WC/HDX475/HDX675)			
R3086	1-216-839-11	METAL CHIP	33K	5%	1/10W	R3257	1-216-835-11	METAL CHIP	15K	5%	1/10W
R3087	1-216-833-11	METAL CHIP	10K	5%	1/10W			(HDX275/HDX277WC/HDX475/HDX675)			
R3088	1-216-833-11	METAL CHIP	10K	5%	1/10W	R3265	1-216-864-11	SHORT CHIP	0		
R3089	1-216-833-11	METAL CHIP	10K	5%	1/10W			(HDX275/HDX277WC/HDX475/HDX675)			
R3090	1-216-833-11	METAL CHIP	10K	5%	1/10W	R3266	1-216-864-11	SHORT CHIP	0		
								(HDX275/HDX277WC/HDX475/HDX675)			
R3091	1-216-837-11	METAL CHIP	22K	5%	1/10W	R3275	1-216-845-11	METAL CHIP	100K	5%	1/10W
R3092	1-216-837-11	METAL CHIP	22K	5%	1/10W	R3276	1-216-845-11	METAL CHIP	100K	5%	1/10W
R3093	1-216-837-11	METAL CHIP	22K	5%	1/10W	R3277	1-216-845-11	METAL CHIP	100K	5%	1/10W
R3094	1-216-837-11	METAL CHIP	22K	5%	1/10W	R3301	1-216-809-11	METAL CHIP	100	5%	1/10W
R3095	1-216-827-11	METAL CHIP	3.3K	5%	1/10W						
R3096	1-216-829-11	METAL CHIP	4.7K	5%	1/10W	R3302	1-216-809-11	METAL CHIP	100	5%	1/10W
R3097	1-216-809-11	METAL CHIP	100	5%	1/10W	R3303	1-216-864-11	SHORT CHIP	0		
R3098	1-216-839-11	METAL CHIP	33K	5%	1/10W	R3304	1-216-864-11	SHORT CHIP	0		
R3099	1-216-839-11	METAL CHIP	33K	5%	1/10W	R3307	1-216-835-11	METAL CHIP	15K	5%	1/10W
R3101	1-216-809-11	METAL CHIP	100	5%	1/10W	R3315	1-216-864-11	SHORT CHIP	0		
R3102	1-216-809-11	METAL CHIP	100	5%	1/10W						
R3103	1-216-864-11	SHORT CHIP	0			R3316	1-216-864-11	SHORT CHIP	0		
R3104	1-216-864-11	SHORT CHIP	0			R3325	1-216-845-11	METAL CHIP	100K	5%	1/10W
R3107	1-216-835-11	METAL CHIP	15K	5%	1/10W	R3326	1-216-845-11	METAL CHIP	100K	5%	1/10W
R3115	1-216-864-11	SHORT CHIP	0			R3327	1-216-845-11	METAL CHIP	100K	5%	1/10W
						R3401	1-216-809-11	METAL CHIP	100	5%	1/10W
R3116	1-216-864-11	SHORT CHIP	0								
R3125	1-216-845-11	METAL CHIP	100K	5%	1/10W	R3402	1-216-809-11	METAL CHIP	100	5%	1/10W
R3126	1-216-845-11	METAL CHIP	100K	5%	1/10W	R3403	1-216-864-11	SHORT CHIP	0		
R3127	1-216-845-11	METAL CHIP	100K	5%	1/10W	R3404	1-216-864-11	SHORT CHIP	0		
R3151	1-216-809-11	METAL CHIP	100	5%	1/10W	R3407	1-216-835-11	METAL CHIP	15K	5%	1/10W
						R3415	1-216-864-11	SHORT CHIP	0		
R3152	1-216-809-11	METAL CHIP	100	5%	1/10W						
R3153	1-216-864-11	SHORT CHIP	0			R3416	1-216-864-11	SHORT CHIP	0		
R3154	1-216-864-11	SHORT CHIP	0			R3425	1-216-845-11	METAL CHIP	100K	5%	1/10W
R3157	1-216-835-11	METAL CHIP	15K	5%	1/10W			(HDX275/HDX277WC/HDX475/HDX675)			
R3165	1-216-864-11	SHORT CHIP	0			R3426	1-216-845-11	METAL CHIP	100K	5%	1/10W
								(HDX275/HDX277WC/HDX475/HDX675)			
R3166	1-216-864-11	SHORT CHIP	0			R3427	1-216-845-11	METAL CHIP	100K	5%	1/10W
R3175	1-216-845-11	METAL CHIP	100K	5%	1/10W			(HDX275/HDX277WC/HDX475/HDX675)			
R3176	1-216-845-11	METAL CHIP	100K	5%	1/10W	R3501	1-216-809-11	METAL CHIP	100	5%	1/10W
R3177	1-216-845-11	METAL CHIP	100K	5%	1/10W						
						R3502	1-216-809-11	METAL CHIP	100	5%	1/10W
						R3503	1-216-864-11	SHORT CHIP	0		

HCD-HDX275/HDX277WC/HDX279W/HDX475/HDX576WF/HDX675

MAIN	MOTOR	POWER
------	-------	-------

Ref. No.	Part No.	Description	Remark			Ref. No.	Part No.	Description	Remark		
R3504	1-216-864-11	SHORT CHIP	0			RB1105	1-234-944-21	RES, NETWORK 47 (1005X4)			
R3507	1-216-835-11	METAL CHIP	15K	5%	1/10W	RB1106	1-234-944-21	RES, NETWORK 47 (1005X4)			
R3515	1-216-864-11	SHORT CHIP	0			RB1107	1-234-944-21	RES, NETWORK 47 (1005X4)			
R3516	1-216-864-11	SHORT CHIP	0			RB1108	1-234-944-21	RES, NETWORK 47 (1005X4)			
R3551	1-216-845-11	METAL CHIP	100K	5%	1/10W	RB1109	1-234-400-21	CONDUCTOR, NETWORK (1005X4)			
R3552	1-216-837-11	METAL CHIP	22K	5%	1/10W	RB1110	1-234-400-21	CONDUCTOR, NETWORK (1005X4)			
R3553	1-216-833-11	METAL CHIP	10K	5%	1/10W	RB1111	1-234-400-21	CONDUCTOR, NETWORK (1005X4)			
R3554	1-216-845-11	METAL CHIP	100K	5%	1/10W	RB1112	1-234-400-21	CONDUCTOR, NETWORK (1005X4)			
R3555	1-216-864-11	SHORT CHIP	0			RB1113	1-234-400-21	CONDUCTOR, NETWORK (1005X4)			
R3556	1-216-829-11	METAL CHIP	4.7K	5%	1/10W	RB1114	1-234-400-21	CONDUCTOR, NETWORK (1005X4)			
R3558	1-216-833-11	METAL CHIP	10K	5%	1/10W	RB1115	1-234-400-21	CONDUCTOR, NETWORK (1005X4)			
R3559	1-216-833-11	METAL CHIP	10K	5%	1/10W			< TERMINAL >			
R3560	1-216-864-11	SHORT CHIP	0								
R3561	1-216-841-11	METAL CHIP	47K	5%	1/10W	TB3901	1-780-453-11	TERMINAL BOARD (SPEAKER) 2P (SPEAKER CENTER/SUB WOOFER)			
R3562	1-216-833-11	METAL CHIP	10K	5%	1/10W			< VIBRATOR >			
R3563	1-216-845-11	METAL CHIP	100K	5%	1/10W						
R3901	1-216-296-11	SHORT CHIP	0			X501	1-795-058-21	VIBRATOR, CERAMIC (5MHz)			
R3902	1-216-296-11	SHORT CHIP	0			X701	1-795-692-11	QUARTZ CRYSTAL UNIT (12.288MHz)			
R3905	1-216-296-11	SHORT CHIP	0			X1101	1-795-630-11	VIBRATOR, CRYSTAL (27MHz)			
R3906	1-216-296-11	SHORT CHIP	0			X3051	1-795-660-21	QUARTZ CRYSTAL UNIT (49.1MHz)			
R3907	1-216-864-11	SHORT CHIP	0					*****			
R3911	1-216-864-11	SHORT CHIP	0					MOTOR BOARD			
R3912	1-216-864-11	SHORT CHIP	0					*****			
R3913	1-216-864-11	SHORT CHIP	0					< SWITCH >			
R3914	1-216-864-11	SHORT CHIP	0								
R3917	1-216-864-11	SHORT CHIP	0			S761	1-786-704-11	SWITCH, LEVER (SUB TRAY OUT)			
R3918	1-216-864-11	SHORT CHIP	0					*****			
R3919	1-216-864-11	SHORT CHIP	0								
R3920	1-216-864-11	SHORT CHIP	0			A-1392-694-A		POWER BOARD, COMPLETE (HDX275: E3, AUS)			
R3921	1-216-864-11	SHORT CHIP	0			A-1392-696-A		POWER BOARD, COMPLETE (HDX275: US/HDX277WC/HDX279W/HDX475/ HDX576WF/HDX675)			
R4501	1-216-801-11	METAL CHIP	22	5%	1/10W			*****			
R4502	1-216-801-11	METAL CHIP	22	5%	1/10W						
R4510	1-216-805-11	METAL CHIP	47	5%	1/10W						
R4511	1-216-803-11	METAL CHIP	33	5%	1/10W						
R4512	1-216-805-11	METAL CHIP	47	5%	1/10W	7-685-646-79		SCREW +BVTP 3X8 TYPE2 IT-3			
R4513	1-216-805-11	METAL CHIP	47	5%	1/10W	7-685-647-79		SCREW +BVTP 3X10 TYPE2 IT-3			
R4514	1-216-805-11	METAL CHIP	47	5%	1/10W			< CAPACITOR >			
R4515	1-216-805-11	METAL CHIP	47	5%	1/10W						
R4516	1-216-805-11	METAL CHIP	47	5%	1/10W	△ C901	1-165-529-11	MYLAR 0.22uF 10 275V			
R4518	1-216-864-11	SHORT CHIP	0			△ C902	1-165-529-11	MYLAR 0.22uF 10 275V			
R4716	1-216-864-11	SHORT CHIP	0			△ C903	1-112-330-11	ELECT (BLOCK) 1000uF 20% 200V (EXCEPT HDX275: E3, AUS)			
R4717	1-216-864-11	SHORT CHIP	0			△ C903	1-112-333-11	ELECT (BLOCK) 330uF 20% 450V (HDX275: E3, AUS)			
R4718	1-216-864-11	SHORT CHIP	0			△ C905	1-112-334-91	FILM 0.01uF 5% 400V (EXCEPT HDX275: E3, AUS)			
R4719	1-216-864-11	SHORT CHIP	0								
R4721	1-216-864-11	SHORT CHIP	0			△ C905	1-112-335-91	FILM 0.0033uF 5% 400V (HDX275: E3, AUS)			
R4805	1-216-801-11	METAL CHIP	22	5%	1/10W	△ C906	1-117-815-11	FILM 1000PF 3% 1.5KV (HDX275: E3, AUS)			
R9918	1-216-821-11	METAL CHIP	1K	5%	1/10W	△ C907	1-162-964-91	CERAMIC CHIP 0.001uF 10% 50V (HDX275: E3, AUS)			
R9920	1-216-864-11	SHORT CHIP	0			△ C907	1-162-965-91	CERAMIC CHIP 0.0015uF 10% 50V (EXCEPT HDX275: E3, AUS)			
R9922	1-216-833-11	METAL CHIP	10K	5%	1/10W	△ C908	1-104-962-91	ELECT 47uF 20% 35V			
R9924	1-216-821-11	METAL CHIP	1K	5%	1/10W	△ C909	1-162-960-91	CERAMIC CHIP 220PF 10% 50V			
R9928	1-216-837-11	METAL CHIP	22K	5%	1/10W	△ C910	1-107-906-91	ELECT 10uF 20% 50V (EXCEPT HDX275: E3, AUS)			
R9929	1-216-837-11	METAL CHIP	22K	5%	1/10W	△ C910	1-107-907-91	ELECT 22uF 20% 50V (HDX275: E3, AUS)			
R9934	1-216-833-11	METAL CHIP	10K	5%	1/10W	△ C911	1-162-968-91	CERAMIC CHIP 0.0047uF 10% 50V			
R9935	1-216-864-11	SHORT CHIP	0			△ C912	1-104-660-91	ELECT 47uF 20% 16V			
R9941	1-216-838-11	METAL CHIP	27K	5%	1/10W						
R9945	1-216-813-11	METAL CHIP	220	5%	1/10W						
		< COMPOSITION CIRCUIT BLOCK >									
RB1103	1-234-400-21	CONDUCTOR, NETWORK (1005X4)									
RB1104	1-234-400-21	CONDUCTOR, NETWORK (1005X4)									

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
△ C913	1-112-866-51	CERAMIC	100PF 10% 250V			< DIODE >	
△ C916	1-100-566-91	CERAMIC CHIP	0.1uF 10% 25V	△ D901	8-719-082-57	DIODE D5SBA60F01	
△ C918	1-112-887-51	CERAMIC	0.01uF 20% 250V	△ D902	8-719-063-74	DIODE D1NL20U-TR2	
△ C920	1-112-887-51	CERAMIC	0.01uF 20% 250V	△ D903	6-500-241-01	DIODE SARS03	
△ C921	1-117-220-81	CERAMIC	150PF 5% 2KV	△ D905	8-719-063-74	DIODE D1NL20U-TR2	
				△ D906	6-501-817-01	DIODE MA2J1110GLS0	
△ C922	1-162-964-91	CERAMIC CHIP	0.001uF 10% 50V				
△ C923	1-162-966-91	CERAMIC CHIP	0.0022uF 10% 50V	D907	6-501-817-01	DIODE MA2J1110GLS0	
△ C924	1-112-335-91	FILM	0.0033uF 5% 400V	△ D908	6-501-817-01	DIODE MA2J1110GLS0	
△ C925	1-107-974-81	CERAMIC	47PF 5% 2KV	△ D909	6-501-817-01	DIODE MA2J1110GLS0	
△ C926	1-128-560-91	ELECT	22uF 20% 100V	△ D910	6-501-817-01	DIODE MA2J1110GLS0	
				D911	8-719-510-12	DIODE D10SC4M	
C927	1-128-947-31	ELECT	3300uF 20% 10V				
C928	1-137-947-21	ELECT	2700uF 20% 16V	D912	8-719-510-41	DIODE D10SC9M	
C929	1-128-954-11	ELECT	1000uF 20% 25V	△ D913	6-500-241-01	DIODE SARS03	
△ C930	1-112-866-51	CERAMIC	100PF 10% 250V	△ D914	6-501-817-01	DIODE MA2J1110GLS0	
C932	1-100-924-21	ELECT	2200uF 20% 35V	D916	6-501-412-01	DIODE SF5S6	
				D921	6-502-234-01	DIODE EG01C LF-F7	
C933	1-100-924-21	ELECT	2200uF 20% 35V				
C934	1-112-831-11	ELECT	2200uF 20% 35V	△ D922	6-501-817-01	DIODE MA2J1110GLS0	
C935	1-163-021-91	CERAMIC CHIP	0.01uF 10% 50V	△ D923	6-501-817-01	DIODE MA2J1110GLS0	
C936	1-163-021-91	CERAMIC CHIP	0.01uF 10% 50V	△ D924	6-501-817-01	DIODE MA2J1110GLS0	
C937	1-100-756-91	CERAMIC CHIP	0.047uF 50V	D931	6-501-849-01	DIODE FMX-22SL	
				D941	6-501-817-01	DIODE MA2J1110GLS0	
△ C938	1-112-869-51	CERAMIC	470PF 10% 250V				
C939	1-136-165-00	FILM	0.1uF 5% 50V	D947	6-501-412-01	DIODE SF5S6	
C940	1-128-950-31	ELECT	1000uF 20% 16V	△ D948	6-501-817-01	DIODE MA2J1110GLS0	
C942	1-126-941-11	ELECT	470uF 20% 25V	△ D949	6-501-817-01	DIODE MA2J1110GLS0	
C943	1-126-934-11	ELECT	220uF 20% 16V	△ DZ901	6-501-782-01	DIODE MAZ8180GMLS0	
				△ DZ902	6-502-231-01	DIODE MAZ8220GMLS0	
C945	1-126-935-11	ELECT	470uF 20% 16V				
C948	1-126-925-91	ELECT	470uF 20% 10V	△ DZ903	6-501-768-01	DIODE MAZ8120GMLS0	
C950	1-107-826-11	CERAMIC CHIP	0.1uF 10% 16V	△ DZ904	6-501-734-01	DIODE MAZ8056GMLS0	
C951	1-100-566-91	CERAMIC CHIP	0.1uF 10% 25V	DZ915	6-501-760-01	DIODE MAZ8100GMLS0	
△ C963	1-112-869-51	CERAMIC	470PF 10% 250V (HDX275: E3, AUS)	DZ932	6-501-734-01	DIODE MAZ8056GMLS0	
				DZ953	6-501-713-01	DIODE MAZ8033G0LS0	
△ C963	1-112-871-51	CERAMIC	0.0022uF 20% 250V (EXCEPT HDX275: E3, AUS)			< FUSE HOLDER >	
△ C964	1-112-869-51	CERAMIC	470PF 10% 250V (HDX275: E3, AUS)	△ FH901	1-533-217-41	FUSE HOLDER	
△ C964	1-112-871-51	CERAMIC	0.0022uF 20% 250V (EXCEPT HDX275: E3, AUS)	△ FH902	1-533-217-41	FUSE HOLDER	
						< FUSIBLE RESISTOR >	
C969	1-100-566-91	CERAMIC CHIP	0.1uF 10% 25V	△ FR929	1-246-373-11	FUSIBLE 1 10% 1/2W F	
C970	1-100-566-91	CERAMIC CHIP	0.1uF 10% 25V			< IC >	
C971	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V	△ IC901	6-707-741-01	IC STR-F6138-LF1352 (EXCEPT HDX275: E3, AUS)	
C975	1-100-566-91	CERAMIC CHIP	0.1uF 10% 25V	△ IC901	6-707-742-01	IC STR-F6168-LF1352 (HDX275: E3, AUS)	
C976	1-126-933-11	ELECT	100uF 20% 16V	△ IC921	6-711-790-01	IC MR4020-7103	
△ C980	1-117-828-11	FILM	3300PF 3% 1.5KV (EXCEPT HDX275: E3, AUS)	IC922	6-707-743-01	IC TA76L431S (TPE6, Q)	
				IC931	8-759-648-34	IC TA76431AS (TPE6)	
C983	1-104-760-11	CERAMIC CHIP	0.047uF 10% 50V	IC941	6-712-613-01	IC SI-3010KM-TLS	
						< COIL >	
C984	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V	L931	1-457-438-11	INDUCTOR 5.6uH	
C987	1-100-566-91	CERAMIC CHIP	0.1uF 10% 25V	L944	1-414-398-11	INDUCTOR 10uH	
C990	1-100-566-91	CERAMIC CHIP	0.1uF 10% 25V	L945	1-414-398-11	INDUCTOR 10uH	
C991	1-100-566-91	CERAMIC CHIP	0.1uF 10% 25V	L947	1-414-398-11	INDUCTOR 10uH	
C992	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V	L948	1-414-398-11	INDUCTOR 10uH	
		< CONNECTOR >					
△ CN901	1-564-321-11	PIN, CONNECTOR (3.96mm PITCH) 2P		L953	1-414-398-11	INDUCTOR 10uH	
CN904	1-785-102-11	PIN, CONNECTOR (3.96mm PITCH) 4P		L954	1-457-578-11	INDUCTOR 10uH	
* CN906	1-564-715-11	PIN, CONNECTOR (SMALL TYPE) 13P		L956	1-457-578-11	INDUCTOR 10uH	
CN908	1-564-505-11	PLUG, CONNECTOR 2P					

HCD-HDX275/HDX277WC/HDX279W/HDX475/HDX576WF/HDX675

POWER

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
< LINE FILTER >				△ R919	1-216-837-91	METAL CHIP 22K 5%	1/10W
△ LF901	1-457-054-21	COIL, LINE FILTER (HDX275: E3, AUS)		R920	1-216-821-11	METAL CHIP 1K 5%	1/10W
△ LF901	1-457-449-11	COIL, LINE FILTER (EXCEPT HDX275: E3, AUS)		R921	1-216-833-11	METAL CHIP 10K 5%	1/10W
△ LF902	1-457-054-21	COIL, LINE FILTER (HDX275: E3, AUS)		△ R922	1-244-317-71	METAL 0.18 5%	2W F
△ LF902	1-457-449-11	COIL, LINE FILTER (EXCEPT HDX275: E3, AUS)		△ R923	1-218-879-91	METAL CHIP 22K 0.5%	1/10W
< PHOTO COUPLER >				△ R924	1-216-837-91	METAL CHIP 22K 5%	1/10W
△ PC901	6-600-438-01	PHOTO COUPLER TLP421F (D4-GRJ)		△ R925	1-216-797-91	METAL CHIP 10 5%	1/10W
△ PC902	6-600-438-01	PHOTO COUPLER TLP421F (D4-GRJ)		△ R926	1-218-895-91	METAL CHIP 100K 0.5%	1/10W
△ PC903	6-600-276-01	PHOTO COUPLER PS2561AL1-1-V-W		△ R927	1-216-837-91	METAL CHIP 22K 5%	1/10W
△ PC904	6-600-276-01	PHOTO COUPLER PS2561AL1-1-V-W		△ R928	1-216-845-91	METAL CHIP 100K 5%	1/10W
< THERMISTOR >				△ R930	1-216-817-91	METAL CHIP 470 5%	1/10W
△ PS954	1-802-595-11	THERMISTOR, POSITIVE MF-R250		R931	1-218-847-11	METAL CHIP 1K 0.5%	1/10W
△ PS956	1-802-596-11	THERMISTOR, POSITIVE MF-R300		R932	1-218-879-11	METAL CHIP 22K 0.5%	1/10W
< TRANSISTOR >				R933	1-216-829-11	METAL CHIP 4.7K 5%	1/10W
△ Q901	8-729-231-15	TRANSISTOR 2SA1015TP-YGR		R934	1-216-821-11	METAL CHIP 1K 5%	1/10W
△ Q921	8-729-620-07	TRANSISTOR 2SC3052EF-T1-LEF		R935	1-216-821-11	METAL CHIP 1K 5%	1/10W
△ Q922	6-550-702-01	TRANSISTOR 2SC3243-TP-E		R936	1-216-853-11	METAL CHIP 470K 5%	1/10W
Q930	8-729-620-07	TRANSISTOR 2SC3052EF-T1-LEF		R937	1-218-871-11	METAL CHIP 10K 0.5%	1/10W
Q931	8-729-620-07	TRANSISTOR 2SC3052EF-T1-LEF		R938	1-218-847-11	METAL CHIP 1K 0.5%	1/10W
Q932	8-729-038-28	TRANSISTOR RT1N441C-TP-1		R939	1-218-855-11	METAL CHIP 2.2K 0.5%	1/10W
Q943	8-729-038-28	TRANSISTOR RT1N441C-TP-1		R940	1-218-871-11	METAL CHIP 10K 0.5%	1/10W
Q945	6-550-718-01	FET RSR025N03TL		R941	1-218-895-11	METAL CHIP 100K 0.5%	1/10W
Q947	8-729-038-28	TRANSISTOR RT1N441C-TP-1		R942	1-218-871-11	METAL CHIP 10K 0.5%	1/10W
Q949	8-729-620-07	TRANSISTOR 2SC3052EF-T1-LEF		R945	1-216-837-11	METAL CHIP 22K 5%	1/10W
Q950	8-729-038-28	TRANSISTOR RT1N441C-TP-1		R946	1-216-827-11	METAL CHIP 3.3K 5%	1/10W
< RESISTOR >				R949	1-216-809-11	METAL CHIP 100 5%	1/10W
△ R901	1-219-759-91	METAL 1M 5% 1/2W F		R951	1-218-847-11	METAL CHIP 1K 0.5%	1/10W
△ R901	1-240-938-91	METAL 1.5M 5% 0.5W F	(EXCEPT HDX275: E3, AUS)	R952	1-216-821-11	METAL CHIP 1K 5%	1/10W
△ R903	1-215-926-51	METAL OXIDE 33K 5% 3W F	(EXCEPT HDX275: E3, AUS)	R954	1-218-861-11	METAL CHIP 3.9K 0.5%	1/10W
△ R903	1-215-929-51	METAL OXIDE 100K 5% 3W F	(HDX275: E3, AUS)	R955	1-216-821-11	METAL CHIP 1K 5%	1/10W
△ R904	1-215-926-51	METAL OXIDE 33K 5% 3W F	(EXCEPT HDX275: E3, AUS)	R956	1-216-817-11	METAL CHIP 470 5%	1/10W
△ R904	1-215-929-51	METAL OXIDE 100K 5% 3W F	(HDX275: E3, AUS)	R957	1-216-841-11	METAL CHIP 47K 5%	1/10W
△ R905	1-216-797-91	METAL CHIP 10 5% 1/10W		R958	1-216-821-11	METAL CHIP 1K 5%	1/10W
△ R906	1-216-827-91	METAL CHIP 3.3K 5% 1/10W		R959	1-218-871-11	METAL CHIP 10K 0.5%	1/10W
△ R907	1-216-833-91	METAL CHIP 10K 5% 1/10W		R960	1-216-817-11	METAL CHIP 470 5%	1/10W
△ R908	1-216-829-91	METAL CHIP 4.7K 5% 1/10W		R963	1-218-839-11	METAL CHIP 470 0.5%	1/10W
△ R909	1-216-845-91	METAL CHIP 100K 5% 1/10W		R965	1-218-863-11	METAL CHIP 4.7K 0.5%	1/10W
△ R910	1-216-825-91	METAL CHIP 2.2K 5% 1/10W		R966	1-216-821-11	METAL CHIP 1K 5%	1/10W
△ R911	1-216-813-91	METAL CHIP 220 5% 1/10W		R967	1-216-821-11	METAL CHIP 1K 5%	1/10W
△ R912	1-216-361-61	METAL OXIDE 0.22 5% 2W F	(EXCEPT HDX275: E3, AUS)	R972	1-218-871-11	METAL CHIP 10K 0.5%	1/10W
△ R912	1-216-363-61	METAL OXIDE 0.33 5% 2W F	(HDX275: E3, AUS)	R974	1-216-827-11	METAL CHIP 3.3K 5%	1/10W
△ R913	1-216-361-61	METAL OXIDE 0.22 5% 2W F	(EXCEPT HDX275: E3, AUS)	△ R975	1-218-895-91	METAL CHIP 100K 0.5%	1/10W
△ R914	1-220-891-11	METAL 0.1 10% 5W F	(HDX275: E3, AUS)	△ R976	1-218-903-91	METAL CHIP 220K 0.5%	1/10W
△ R914	1-243-669-11	METAL 0.05 5% 5W F	(EXCEPT HDX275: E3, AUS)	△ R978	1-216-829-91	METAL CHIP 4.7K 5%	1/10W
△ R916	1-215-929-51	METAL OXIDE 100K 5% 3W F		△ R992	1-216-793-91	METAL CHIP 4.7 5%	1/10W
△ R917	1-216-829-91	METAL CHIP 4.7K 5% 1/10W		R993	1-216-833-11	METAL CHIP 10K 5%	1/10W
< TRANSFORMER >				R994	1-216-851-11	METAL CHIP 330K 5%	1/10W
△ T901	1-443-649-11	TRANSFORMER, CONVERTER	(EXCEPT HDX275: E3, AUS)	R995	1-216-845-11	METAL CHIP 100K 5%	1/10W
△ T901	1-443-874-11	TRANSFORMER, CONVERTER	(HDX275: E3, AUS)	R998	1-218-855-11	METAL CHIP 2.2K 0.5%	1/10W
△ T903	1-445-320-11	TRANSFORMER, CONVERTER		R999	1-218-871-11	METAL CHIP 10K 0.5%	1/10W
< THERMISTOR >				△ TH901	1-805-841-21	THERMISTOR, NTC (EXCEPT HDX275: E3, AUS)	

HCD-HDX275/HDX277WC/HDX279W/HDX475/HDX576WF/HDX675

POWER

PW-SW

RELAY

S-AIR CON

S-AIR INC

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
△ TH901	1-805-842-21	THERMISTOR, NTC (HDX275: E3, AUS)		CN112	1-779-554-21	CONNECTOR, FFC (LIF (NON-ZIF)) 17P	
		< VARISTOR >		CN113	1-821-744-11	CONNECTOR, CARD EDGE 30P	
△ VDR901	1-805-482-11	VARISTOR				< TRANSISTOR >	
*****				Q120	8-729-038-28	TRANSISTOR RT1N441C-TP-1	
		PW-SW BOARD		Q121	6-550-363-01	TRANSISTOR 2SB1690KT146	
		*****				< RESISTOR >	
		< CAPACITOR >		R193	1-216-817-11	METAL CHIP 470 5% 1/10W	
				R194	1-216-817-11	METAL CHIP 470 5% 1/10W	
				R195	1-216-841-11	METAL CHIP 47K 5% 1/10W	
C175	1-162-927-11	CERAMIC CHIP 100PF 5% 50V		R196	1-216-817-11	METAL CHIP 470 5% 1/10W	
		< SWITCH >		R197	1-216-833-11	METAL CHIP 10K 5% 1/10W	
S113	1-762-875-21	SWITCH, KEYBOARD (I/C)		R198	1-216-833-11	METAL CHIP 10K 5% 1/10W	
*****				R199	1-216-833-11	METAL CHIP 10K 5% 1/10W	
				R200	1-216-833-11	METAL CHIP 10K 5% 1/10W	

A-4750-232-A		RELAY BOARD, COMPLETE		A-1436-297-A		S-AIR INC BOARD, COMPLETE	
		(Including ENCODER board)				(HDX277WC/HDX279W/HDX576WF)	
		*****				*****	
		< CAPACITOR >				< CAPACITOR >	
C701	1-126-786-11	ELECT 47uF 20% 16V		C800	1-162-970-11	CERAMIC CHIP 0.01uF 10% 25V	
C702	1-126-791-11	ELECT 10uF 20% 35V		C801	1-107-826-11	CERAMIC CHIP 0.1uF 10% 16V	
C761	1-162-306-11	CERAMIC 0.01uF 20% 16V		C802	1-162-917-11	CERAMIC CHIP 15PF 5% 50V	
C762	1-162-306-11	CERAMIC 0.01uF 20% 16V		C803	1-126-926-11	ELECT 1000uF 20% 10V	
		< CONNECTOR >		C804	1-107-826-11	CERAMIC CHIP 0.1uF 10% 16V	
CN701	1-779-558-11	CONNECTOR, FFC (LIF (NON-ZIF)) 21P		C805	1-126-964-11	ELECT 10uF 20% 50V	
		< DIODE >		C806	1-162-970-11	CERAMIC CHIP 0.01uF 10% 25V	
D701	8-719-921-40	DIODE MTZJ-4.7C		C807	1-162-918-11	CERAMIC CHIP 18PF 5% 50V	
D711	8-719-982-10	DIODE MTZJ-4.3A		C808	1-162-970-11	CERAMIC CHIP 0.01uF 10% 25V	
		< IC >		C809	1-126-925-91	ELECT 470uF 20% 10V	
IC701	8-759-598-69	IC BA6956AN		C814	1-162-927-11	CERAMIC CHIP 100PF 5% 50V	
IC711	8-759-598-69	IC BA6956AN		C817	1-162-927-11	CERAMIC CHIP 100PF 5% 50V	
		< TRANSISTOR >		C818	1-107-826-11	CERAMIC CHIP 0.1uF 10% 16V	
				C819	1-107-826-11	CERAMIC CHIP 0.1uF 10% 16V	
				C820	1-107-826-11	CERAMIC CHIP 0.1uF 10% 16V	
Q751	8-729-119-78	TRANSISTOR 2SC2785-HFE		C821	1-107-826-11	CERAMIC CHIP 0.1uF 10% 16V	
		< RESISTOR >		C822	1-107-826-11	CERAMIC CHIP 0.1uF 10% 16V	
				C823	1-107-826-11	CERAMIC CHIP 0.1uF 10% 16V	
				C824	1-107-826-11	CERAMIC CHIP 0.1uF 10% 16V	
				C825	1-126-964-11	ELECT 10uF 20% 50V	
R701	1-249-415-11	CARBON 680 5% 1/4W		C826	1-126-964-11	ELECT 10uF 20% 50V	
R702	1-247-807-31	CARBON 100 5% 1/4W		C827	1-165-989-11	CERAMIC CHIP 10uF 10% 6.3V	
R711	1-249-415-11	CARBON 680 5% 1/4W		C828	1-165-989-11	CERAMIC CHIP 10uF 10% 6.3V	
R712	1-247-807-31	CARBON 100 5% 1/4W		C829	1-165-989-11	CERAMIC CHIP 10uF 10% 6.3V	
R751	1-247-806-11	CARBON 91 5% 1/4W		C830	1-107-826-11	CERAMIC CHIP 0.1uF 10% 16V	
R752	1-249-429-11	CARBON 10K 5% 1/4W		C833	1-162-923-11	CERAMIC CHIP 47PF 5% 50V	
R753	1-249-429-11	CARBON 10K 5% 1/4W		C834	1-162-923-11	CERAMIC CHIP 47PF 5% 50V	
R754	1-249-430-11	CARBON 12K 5% 1/4W		C835	1-162-923-11	CERAMIC CHIP 47PF 5% 50V	
R755	1-249-429-11	CARBON 10K 5% 1/4W		C836	1-162-923-11	CERAMIC CHIP 47PF 5% 50V	
*****				C839	1-137-649-31	ELECT 220uF 20% 10V	
A-1438-875-A		S-AIR CON BOARD, COMPLETE		C840	1-165-908-11	CERAMIC CHIP 1uF 10% 10V	
		(HDX275/HDX475/HDX675)		C841	1-165-908-11	CERAMIC CHIP 1uF 10% 10V	
		*****		C843	1-164-315-11	CERAMIC CHIP 470PF 5% 50V	
		< CONNECTOR >		C844	1-165-908-11	CERAMIC CHIP 1uF 10% 10V	
				C845	1-165-908-11	CERAMIC CHIP 1uF 10% 10V	
* CN110	1-564-720-11	PIN, CONNECTOR (SMALL TYPE) 4P		C846	1-165-989-11	CERAMIC CHIP 10uF 10% 6.3V	
* CN111	1-564-517-11	PLUG, CONNECTOR 2P		C882	1-162-927-11	CERAMIC CHIP 100PF 5% 50V	
				C885	1-162-927-11	CERAMIC CHIP 100PF 5% 50V	

HCD-HDX275/HDX277WC/HDX279W/HDX475/HDX576WF/HDX675

S-AIR INC

SENSOR

SERIPARA

Ref. No.	Part No.	Description	Remark		
C886	1-162-927-11	CERAMIC CHIP 100PF	5%	50V	
C888	1-126-926-11	ELECT 1000uF	20%	10V	
< CONNECTOR >					
CN800	1-820-116-41	CONNECTOR, FFC/FPC 17P			
CN803	1-821-747-11	CONNECTOR, CARD EDGE 20P (L)			
CN804	1-564-706-11	PIN, CONNECTOR (SMALL TYPE) 4P			
< DIODE >					
D800	6-501-579-01	DIODE MC2837			
< FERRITE BEAD >					
FB801	1-543-949-22	BEAD, FERRITE (CHIP) (1608)			
< IC >					
IC800	6-712-613-01	IC SI-3010KM-TLS			
IC801	6-711-418-01	IC TC74VHC157FK (EL, K)			
IC802	6-709-888-01	IC TC7WHU04FK (T5RSOYF			
IC803	6-707-800-01	IC SRC4182			
IC804	6-707-800-01	IC SRC4182			
IC805	6-710-554-01	IC PCM1808PWR			
IC806	6-705-312-01	IC S-T111B33MC-OGSTFG			
< COIL >					
L800	1-469-525-91	INDUCTOR 10uH			
L801	1-469-525-91	INDUCTOR 10uH			
L802	1-469-525-91	INDUCTOR 10uH			
L803	1-469-525-91	INDUCTOR 10uH			
L805	1-414-398-11	INDUCTOR 10uH			
< RESISTOR >					
R800	1-216-797-11	METAL CHIP 10	5%	1/10W	
R801	1-216-797-11	METAL CHIP 10	5%	1/10W	
R805	1-216-864-11	SHORT CHIP 0			
R806	1-216-821-11	METAL CHIP 1K	5%	1/10W	
R807	1-216-821-11	METAL CHIP 1K	5%	1/10W	
R808	1-216-809-11	METAL CHIP 100	5%	1/10W	
R809	1-216-809-11	METAL CHIP 100	5%	1/10W	
R810	1-216-809-11	METAL CHIP 100	5%	1/10W	
R811	1-216-809-11	METAL CHIP 100	5%	1/10W	
R812	1-216-813-11	METAL CHIP 220	5%	1/10W	
R813	1-216-827-11	METAL CHIP 3.3K	5%	1/10W	
R814	1-216-845-11	METAL CHIP 100K	5%	1/10W	
R815	1-216-845-11	METAL CHIP 100K	5%	1/10W	
R817	1-218-851-11	METAL CHIP 1.5K	0.5%	1/10W	
R818	1-218-879-11	METAL CHIP 22K	0.5%	1/10W	
R819	1-218-871-11	METAL CHIP 10K	0.5%	1/10W	
R821	1-216-809-11	METAL CHIP 100	5%	1/10W	
R822	1-216-809-11	METAL CHIP 100	5%	1/10W	
R824	1-216-809-11	METAL CHIP 100	5%	1/10W	
R826	1-216-805-11	METAL CHIP 47	5%	1/10W	
R827	1-216-805-11	METAL CHIP 47	5%	1/10W	
R828	1-216-805-11	METAL CHIP 47	5%	1/10W	
R829	1-216-809-11	METAL CHIP 100	5%	1/10W	
R830	1-216-809-11	METAL CHIP 100	5%	1/10W	
R831	1-216-809-11	METAL CHIP 100	5%	1/10W	
R832	1-216-809-11	METAL CHIP 100	5%	1/10W	
R834	1-216-809-11	METAL CHIP 100	5%	1/10W	
R835	1-216-809-11	METAL CHIP 100	5%	1/10W	
R836	1-216-809-11	METAL CHIP 100	5%	1/10W	

Ref. No.	Part No.	Description			Remark
R837	1-216-813-11	METAL CHIP	220	5%	1/10W
R838	1-216-809-11	METAL CHIP	100	5%	1/10W
R839	1-216-809-11	METAL CHIP	100	5%	1/10W
R840	1-216-809-11	METAL CHIP	100	5%	1/10W
R841	1-216-809-11	METAL CHIP	100	5%	1/10W
R842	1-216-809-11	METAL CHIP	100	5%	1/10W
R843	1-216-809-11	METAL CHIP	100	5%	1/10W
R844	1-216-809-11	METAL CHIP	100	5%	1/10W
R845	1-216-864-11	SHORT CHIP	0		
R846	1-216-809-11	METAL CHIP	100	5%	1/10W
R847	1-216-809-11	METAL CHIP	100	5%	1/10W
R848	1-216-809-11	METAL CHIP	100	5%	1/10W
R849	1-216-864-11	SHORT CHIP	0		
R850	1-216-864-11	SHORT CHIP	0		
R851	1-216-864-11	SHORT CHIP	0		
R852	1-216-864-11	SHORT CHIP	0		
R855	1-216-809-11	METAL CHIP	100	5%	1/10W
R856	1-216-864-11	SHORT CHIP	0		
R858	1-216-809-11	METAL CHIP	100	5%	1/10W
R859	1-216-809-11	METAL CHIP	100	5%	1/10W
R860	1-216-813-11	METAL CHIP	220	5%	1/10W
R861	1-216-809-11	METAL CHIP	100	5%	1/10W
R862	1-216-809-11	METAL CHIP	100	5%	1/10W
R863	1-216-813-11	METAL CHIP	220	5%	1/10W
R864	1-216-813-11	METAL CHIP	220	5%	1/10W
R865	1-216-813-11	METAL CHIP	220	5%	1/10W
R872	1-216-833-11	METAL CHIP	10K	5%	1/10W
R873	1-216-833-11	METAL CHIP	10K	5%	1/10W
R874	1-216-809-11	METAL CHIP	100	5%	1/10W
R876	1-216-809-11	METAL CHIP	100	5%	1/10W
R877	1-216-833-11	METAL CHIP	10K	5%	1/10W
R878	1-216-833-11	METAL CHIP	10K	5%	1/10W
R879	1-216-833-11	METAL CHIP	10K	5%	1/10W
R880	1-216-797-11	METAL CHIP	10	5%	1/10W
R881	1-216-797-11	METAL CHIP	10	5%	1/10W
R889	1-216-864-11	SHORT CHIP	0		
R895	1-216-827-11	METAL CHIP	3.3K	5%	1/10W
R896	1-216-864-11	SHORT CHIP	0		
R898	1-216-864-11	SHORT CHIP	0		
R904	1-216-864-11	SHORT CHIP	0		
< VIBRATOR >					
X800	1-795-843-11	VIBRATOR, CRYSTAL (12.288MHz)			

SENSOR BOARD					

< IC >					
IC751	8-759-989-76	IC RPR-359F			

A-1436-213-A		SERIPARA BOARD, COMPLETE			

< CAPACITOR >					
C650	1-124-584-00	ELECT	100uF	20%	6.3V
C651	1-126-933-11	ELECT	100uF	20%	16V
C652	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C653	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C654	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V

HCD-HDX275/HDX277WC/HDX279W/HDX475/HDX576WF/HDX675

SERIPARA

SPEAKER

SW (1)

SW (2)

Ref. No.	Part No.	Description	Remark		
C655	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C656	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
< CONNECTOR >					
CN650	1-764-865-41	CONNECTOR, BOARD TO BOARD 13P			
CN651	1-779-558-11	CONNECTOR, FFC (LIF (NON-ZIF)) 21P			
CN653	1-779-544-21	CONNECTOR, FFC (LIF (NON-ZIF)) 7P			
< IC >					
IC650	6-707-095-01	IC BH2210FV-E2			
IC651	6-707-095-01	IC BH2210FV-E2			
< RESISTOR >					
R652	1-216-813-11	METAL CHIP	220	5%	1/10W
R653	1-216-809-11	METAL CHIP	100	5%	1/10W
R654	1-216-813-11	METAL CHIP	220	5%	1/10W
R655	1-216-809-11	METAL CHIP	100	5%	1/10W
R656	1-216-813-11	METAL CHIP	220	5%	1/10W
R657	1-216-813-11	METAL CHIP	220	5%	1/10W
R658	1-216-833-11	METAL CHIP	10K	5%	1/10W
R659	1-216-809-11	METAL CHIP	100	5%	1/10W
R660	1-216-809-11	METAL CHIP	100	5%	1/10W
R661	1-216-809-11	METAL CHIP	100	5%	1/10W
R664	1-216-813-11	METAL CHIP	220	5%	1/10W
R665	1-216-809-11	METAL CHIP	100	5%	1/10W
R666	1-216-809-11	METAL CHIP	100	5%	1/10W
R667	1-216-809-11	METAL CHIP	100	5%	1/10W
R668	1-216-809-11	METAL CHIP	100	5%	1/10W
R670	1-216-809-11	METAL CHIP	100	5%	1/10W
R671	1-216-809-11	METAL CHIP	100	5%	1/10W
R672	1-216-809-11	METAL CHIP	100	5%	1/10W
R673	1-216-809-11	METAL CHIP	100	5%	1/10W
R674	1-216-809-11	METAL CHIP	100	5%	1/10W
R675	1-216-809-11	METAL CHIP	100	5%	1/10W
R676	1-216-809-11	METAL CHIP	100	5%	1/10W
R677	1-216-809-11	METAL CHIP	100	5%	1/10W
R678	1-216-809-11	METAL CHIP	100	5%	1/10W
R679	1-216-809-11	METAL CHIP	100	5%	1/10W
R680	1-216-809-11	METAL CHIP	100	5%	1/10W
R681	1-216-809-11	METAL CHIP	100	5%	1/10W
R682	1-216-809-11	METAL CHIP	100	5%	1/10W
R683	1-216-809-11	METAL CHIP	100	5%	1/10W
R684	1-216-809-11	METAL CHIP	100	5%	1/10W
R685	1-216-809-11	METAL CHIP	100	5%	1/10W
R686	1-216-809-11	METAL CHIP	100	5%	1/10W
R687	1-216-809-11	METAL CHIP	100	5%	1/10W
R688	1-216-809-11	METAL CHIP	100	5%	1/10W
R689	1-216-809-11	METAL CHIP	100	5%	1/10W
R690	1-216-809-11	METAL CHIP	100	5%	1/10W
R691	1-216-809-11	METAL CHIP	100	5%	1/10W
R692	1-216-809-11	METAL CHIP	100	5%	1/10W

SPEAKER BOARD

< CAPACITOR >

C178	1-163-021-91	CERAMIC CHIP 0.01uF 10% 50V (HDX275/HDX277WC/HDX475/HDX675)
C179	1-162-964-11	CERAMIC CHIP 0.001uF 10% 50V

Ref. No.	Part No.	Description	Remark
		(HDX275/HDX277WC/HDX475/HDX675)R	
C180	1-163-021-91	CERAMIC CHIP 0.01uF 10% 50V	
		(HDX275/HDX277WC/HDX475/HDX675)	
C181	1-162-964-11	CERAMIC CHIP 0.001uF 10% 50V	
		(HDX275/HDX277WC/HDX475/HDX675)	
C182	1-163-021-91	CERAMIC CHIP 0.01uF 10% 50V	
C183	1-162-964-11	CERAMIC CHIP 0.001uF 10% 50V	
C184	1-163-021-91	CERAMIC CHIP 0.01uF 10% 50V	
C185	1-162-964-11	CERAMIC CHIP 0.001uF 10% 50V	
C186	1-163-021-91	CERAMIC CHIP 0.01uF 10% 50V	
C187	1-162-964-11	CERAMIC CHIP 0.001uF 10% 50V	
C188	1-163-021-91	CERAMIC CHIP 0.01uF 10% 50V	
C189	1-162-964-11	CERAMIC CHIP 0.001uF 10% 50V	
C190	1-163-021-91	CERAMIC CHIP 0.01uF 10% 50V	
		(HDX275/HDX277WC/HDX475/HDX675)	
C191	1-162-964-11	CERAMIC CHIP 0.001uF 10% 50V	
		(HDX275/HDX277WC/HDX475/HDX675)	
C192	1-163-021-91	CERAMIC CHIP 0.01uF 10% 50V	
		(HDX275/HDX277WC/HDX475/HDX675)	
C193	1-162-964-11	CERAMIC CHIP 0.001uF 10% 50V	
		(HDX275/HDX277WC/HDX475/HDX675)	
		< CONNECTOR >	
* CN114	1-564-523-11	PLUG, CONNECTOR 8P	
		(HDX275/HDX277WC/HDX475/HDX675)	
* CN115	1-564-519-11	PLUG, CONNECTOR 4P (HDX279W/HDX576WF)	
		< TERMINAL >	
TB100	1-780-454-11	TERMINAL BOARD (SPEAKER) 4P	
		(SPEAKER FRONT R/L SUR R/L)	
		(HDX275/HDX277WC/HDX475/HDX675)	
TB101	1-780-576-11	TAMINAL BOARD (SPEAKER) 2P	
		(SPEAKER FRONT R/L) (HDX279W/HDX576WF)	

SW (1) BOARD

< SWITCH >

S721 1-786-084-11 SWITCH, DETECTION (MAIN TRAY IN/OUT)

SW (2) BOARD

< SWITCH >

S731 1-786-382-11 SWITCH, PUSH (1 KEY) (SUB TRAY IN)

HCD-HDX275/HDX277WC/HDX279W/HDX475/HDX576WF/HDX675

Ref. No.	Part No.	Description	Remark
		MISCELLANEOUS *****	
6	1-828-290-11	WIRE (FLAT TYPE) (5 CORE)	
7	1-828-310-11	WIRE (FLAT TYPE) (9 CORE)	
8	1-828-301-11	WIRE (FLAT TYPE) (7 CORE)	
9	1-828-347-11	WIRE (FLAT TYPE) (17 CORE)	
11	1-693-761-11	TUNER (FM/AM) (E3, AUS)	
11	1-693-762-11	TUNER (FM/AM) (US, CND)	
12	1-828-955-11	WIRE (FLAT TYPE) (9 CORE)	
14	1-828-352-11	WIRE (FLAT TYPE) (17 CORE) (HDX277WC/HDX279W/HDX576WF)	
△ 17	1-834-966-21	CORD, POWER (E3)	
△ 17	1-834-967-21	CORD, POWER (AUS)	
△ 17	1-834-978-11	CORD, POWER (US, CND)	
21	1-828-350-11	WIRE (FLAT TYPE) (17 CORE) (HDX275/HDX475/HDX675)	
62	1-828-306-11	WIRE (FLAT TYPE) (9 CORE)	
63	1-828-374-11	WIRE (FLAT TYPE) (21 CORE)	
101	1-828-369-11	WIRE (FLAT TYPE) (21 CORE)	
△ 302	8-820-291-02	OPTICAL PICK-UP BLOCK (KHM-310CAB/C2RP) (including sled motor, spindle motor)	
△ 302	8-820-322-04	OPTICAL PICK-UP BLOCK (KHM-313CAB/C2RP) (including sled motor, spindle motor)	
306	1-828-774-51	WIRE (FLAT TYPE) (24 CORE)	
△ F901	1-533-311-12	FUSE, GLASS CYLINDRICAL (DIA.5) (8A/125V) (HDX275: US/HDX277WC/HDX279W/HDX475/ HDX576WF/HDX675)	
△ F901	1-576-233-51	FUSE (H.B.C.) (T6.3AH/125V) (HDX275: E3, AUS)	
M3000	1-787-396-11	D.C. FAN (50 SQUARE)	
M761	A-4713-174-A	MOTOR (81) ASSY (LOADING/STOCKER)	
M762	A-4713-174-A	MOTOR (81) ASSY (BU UP/DOWN)	
S771	1-478-552-11	ENCODER, ROTARY (MD)	
S781	1-478-551-11	ENCODER, ROTARY (STOCKER UP/DOWN)	

Note 1: If wire (flat type) is replaced, install it after bending it in the same form as that before replacement.

Note 2: Refer to the Servicing Notes "HOW TO IDENTIFY OPTICAL PICK-UP BLOCK" (page 7), if replacing the Ref. No. 302.

MEMO

REVISION HISTORY

Checking the version allows you to jump to the revised page.

Also, clicking the version at the top of the revised page allows you to jump to the next revised page.

[illegible]