

Errata

Title & Document Type: 547A Current Tracer Operating and Service Manual

Manual Part Number: 00547-90006

Revision Date: January 1978

About this Manual

We've added this manual to the Agilent website in an effort to help you support your product. This manual provides the best information we could find. It may be incomplete or contain dated information, and the scan quality may not be ideal. If we find a better copy in the future, we will add it to the Agilent website.

HP References in this Manual

This manual may contain references to HP or Hewlett-Packard. Please note that Hewlett-Packard's former test and measurement, life sciences, and chemical analysis businesses are now part of Agilent Technologies. The HP XXXX referred to in this document is now the Agilent XXXX. For example, model number HP8648A is now model number Agilent 8648A. We have made no changes to this manual copy.

Support for Your Product

Agilent no longer sells or supports this product. You will find any other available product information on the Agilent Test & Measurement website:

www.agilent.com


Search for the model number of this product, and the resulting product page will guide you to any available information. Our service centers may be able to perform calibration if no repair parts are needed, but no other support from Agilent is available.



Agilent Technologies

OPERATING AND SERVICE MANUAL

CURRENT TRACER 547A

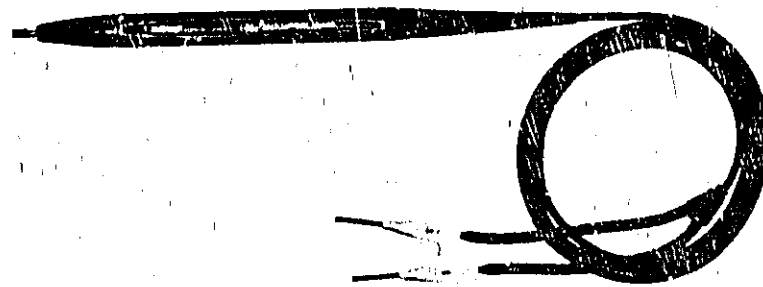

HEWLETT  PACKARD

CERTIFICATION

Hewlett-Packard Company certifies that this instrument met its published specifications at the time of shipment from the factory. Hewlett-Packard Company further certifies that its calibration measurements are traceable to the United States National Bureau of Standards, to the extent allowed by the Bureau's calibration facility, and to the calibration facilities of other International Standards Organization members.

WARRANTY AND ASSISTANCE

This Hewlett-Packard product is warranted against defects in materials and workmanship for a period of one year from the date of shipment. Hewlett-Packard will, at its option, repair or replace products which prove to be defective during the warranty period provided they are returned to Hewlett-Packard, and provided the preventive maintenance procedures in this manual are followed. Repairs necessitated by misuse of the product are not covered by this warranty. NO OTHER WARRANTIES ARE EXPRESSED OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. HEWLETT-PACKARD IS NOT LIABLE FOR CONSEQUENTIAL DAMAGES.

Service contracts or customer assistance agreements are available for Hewlett-Packard products.

For any assistance, contact your nearest Hewlett-Packard Sales and Service Office. Addresses are provided at the back of this manual.

CURRENT TRACER

547A

OPERATING AND SERVICE MANUAL

SERIAL NUMBER: A00051 and above

This manual refers directly to Model 547A Current Tracers with Serial numbers A00051.

NEWER INSTRUMENTS

The changes in Current Tracers with Serial numbers higher than A00051 are described in "Change Sheets" included with the manual.

Copyright HEWLETT-PACKARD COMPANY 1976
5301 STEVENS CREEK BLVD., SANTA CLARA, CALIF. 95050

Printed: JAN 1978

Manual Part No. 00547-90006
Microfilm Part No. 00547-90007

Printed in U.S.A.

HEWLETT  PACKARD

TABLE OF CONTENTS

Title	Page
Scope of Manual	1
Description	1
Instrument Identification	1
Specifications	2
Applications	2
Unpacking and Inspection	2
Storage and Shipment	2
Operating Characteristics	3
Current Tracer Operation	3
Theory of Operation	6
Maintenance	7
Performance Tests	8

LIST OF TABLES

Table	Page
1. Model 547A Current Tracer Specifications	2
2. Replaceable Parts List	10
3. Manufacturers Code List	12

LIST OF FIGURES

Figure	Page
1. HP Model 547A Current Tracer	1
2. Wire-AND Node Fault	4
3. Gate-to-Gate Faults	4
4. Solder-Bridge in Printed-Circuit	5
5. Multiple Gate Inputs	5
6. Exploded View of Current Tracer	7
7. Setup for 1 mA Test	9
8. Setup for 1 A Test	10
9. Schematic Diagram	13

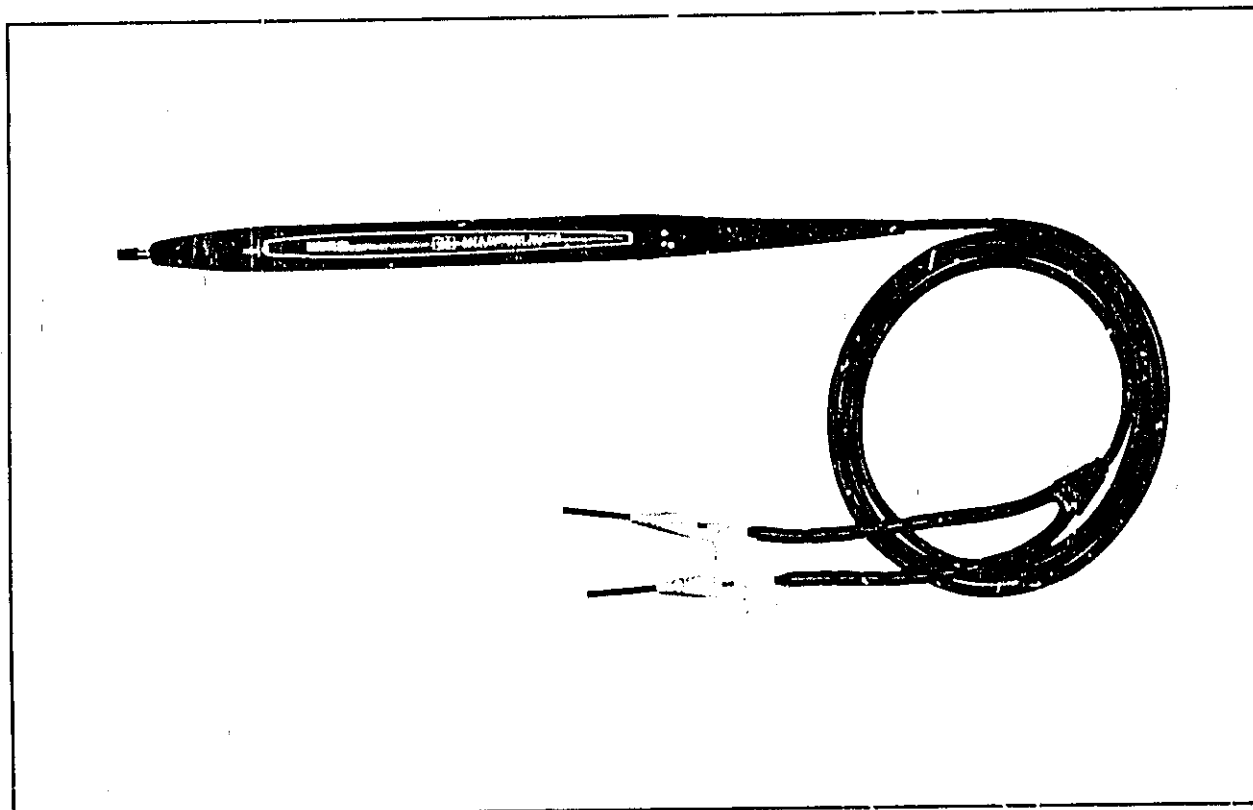


Figure 1. HP Model 547A Current Tracer

SCOPE OF MANUAL

This manual contains information about the Hewlett-Packard 547A Current Tracer. Coverage includes a description of the instrument, its applications, specifications, instructions in its use, theory of operation, maintenance, performance tests, adjustments, list of replaceable parts and how to obtain them, component locators, and schematics.

DESCRIPTION

The HP 547A Current Tracer is a hand-held probe which enables the precise localization of low-impedance faults in electrical systems. The probe senses the magnetic field generated by a pulsing current internal to the circuit or by current pulses supplied by an external stimulus such as the HP 546A or 10526T Logic Pulsers. Indication of the presence of current pulses is provided by lighting the indicator lamp near the Current Tracer tip. Adjustment of probe sensitivity over the 1 mA to 1A range is provided by the SENSITIVITY control near the indicator. The probe is self-contained and requires <75 mA at 4.5V to 18V from any convenient source.

INSTRUMENT IDENTIFICATION

Hewlett-Packard uses a 6-digit serial number (A00000) to identify the Current Tracer. If the serial number of your instrument differs from the serial number(s) on the title page of this manual, there are other differences between the manual and your instrument. These differences are covered in a "MANUAL CHANGES" sheet which is included with the manual.

SPECIFICATIONS

Table 1 lists all specifications for HP Model 547A Current Tracer.

Table 1. Model 547A Current Tracer Specifications

INPUT:

Sensitivity: 1 mA to 1A

Frequency Response:

Light indicates Single-step current transitions: single pulses ≥ 50 ns in width; pulse trains to 10 MHz (typically 20 MHz for current pulses ≥ 10 mA)

Risetime: Light indicates current transitions with risetimes ≤ 200 ns at 1 mA.

POWER SUPPLY REQUIREMENTS:

Voltage: 4.5 to 18 Vdc

Input Current: ≤ 75 mA


Maximum Ripple: ± 500 mV above 5 Vdc

Overvoltage Protection: ± 25 Vdc for one minute

TEMPERATURE: 0° to 55°C

WEIGHT: 113.4 g (4 oz.) net; Shipping Weight: 170 g (6 oz.)

Size Probe body 15.24 cm (6 in.); Cable, 110.38 cm (47 in.)

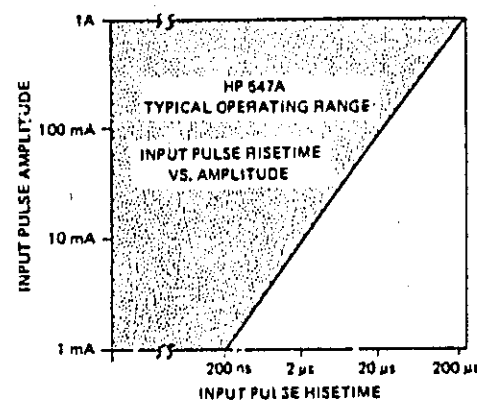

APPLICATIONS

The Current Tracer operates on the principle that whatever is driving a low-impedance fault node must be delivering the majority of the current. Tracing the path of this current leads directly to the fault. Problems that are compatible with this method are:

- Shorted inputs of integrated circuits.
- Solder-bridges on printed-circuit boards.
- Shorted conductors in cables.
- Shorts in voltage distribution networks, e.g., Vcc-to-ground shorts.
- Stuck data buses, such as three state, open-collector, or Hewlett-Packard Interface Bus (HP-IB).
- Stuck wire-AND structure.

UNPACKING AND INSPECTION

If the shipping carton is damaged, ask that the carrier's agent be present when the Current Tracer is unpacked. Inspect the instrument for obvious damage such as dents, scratches, etc. If the instrument is damaged or fails to meet performance tests, notify the carrier and the nearest Hewlett-Packard Sales and Service Office immediately. Retain the shipping carton and the padding material for the carrier's inspection. The Sales and Service Office will arrange for the repair or replacement of the instrument without waiting for the claim against the carrier to be settled.

STORAGE AND SHIPMENT

To protect valuable electronic equipment during storage or shipment, always use the best packaging methods available. Your Hewlett-Packard Sales and Service Office can provide packaging material such as that used for original

factory packaging. Contract packaging companies in many cities can provide dependable custom packaging on short notice. Environmental conditions during storage and shipment should normally be limited as follows:

- a. Maximum altitude: 25,000 ft.
- b. Minimum temperature: -40°F (-40°C).
- c. Maximum temperature: $+149^{\circ}\text{F}$ ($+65^{\circ}\text{C}$).

OPERATING CHARACTERISTICS

Three conditions must be met before the Current Tracer can properly respond to circuit stimulus:

1. The mark on the probe's tip must be aligned along the length of the printed-circuit trace.
2. The probe be held perpendicular to the printed-circuit trace — not at an angle.
3. The printed-circuit trace must be conducting an alternating current, either from an internal source or, from an external stimulus such as a Logic Pulser with a rise-time of ≤ 200 ns.

NOTE

The voltage present on the black power supply lead (negative side of supply) is also present on the tracer's anodized aluminum case. Do not lay the tracer on any grounded area, such as an instrument chassis, unless the chassis is at the same potential as the black lead. Damage to the power supply may result.

CURRENT TRACER OPERATION

Use of the Current Tracer is indicated when conventional troubleshooting reveals a low-impedance fault. The operator aligns the mark on the probe tip along the length of the printed-circuit trace at the driver and adjusts the sensitivity control until the indicator lamp just lights. The probe is then moved along the trace or placed directly on the terminal points of the nodes (or IC pins), while observing the indicator light. This method of

following the path of the current leads directly to the fault responsible for the abnormal current flow. If the driving point does not provide pulse stimulation, the node may be driven externally by using a Logic Pulser at the driving point. The following paragraphs describe troubleshooting techniques for some of the more common problems.



Wire-AND Node

One of the most difficult problems encountered in troubleshooting integrated circuits is a stuck wire-AND node. Typically, one of the open-collector gates may still continue sinking current after it has been turned off. The Current Tracer provides an easy method of identifying the fault gate.

Referring to Figure 2 place the Current Tracer on the gate side of the pull-up resistor. Align the mark on the probe tip along the length of the printed-circuit trace and adjust the probe's sensitivity control until the indicator is just fully lighted. If the indicator will not light — use a Logic Pulser to excite the line. Place the tracer tip on the output pin of each gate; only the faulty gate will cause the indicator to light.

Gate-to-Gate Faults

When a low-impedance fault exists between two gates, the Current Tracer and Logic Pulser combine to quickly pinpoint the defect. In Figure 3 gate A's output is shorted to ground. Place the pulser midway between the two gates and place the Current Tracer's tip on the Pulser's pin. Pulse the line and adjust the Current Tracer's sensitivity control until the indicator just lights. First place the Current Tracer tip next to gate A and then gate B while continuing to excite the trace. The tracer will light only on the gate A side, since gate A, (the defect in this example), is sinking the majority of the current.

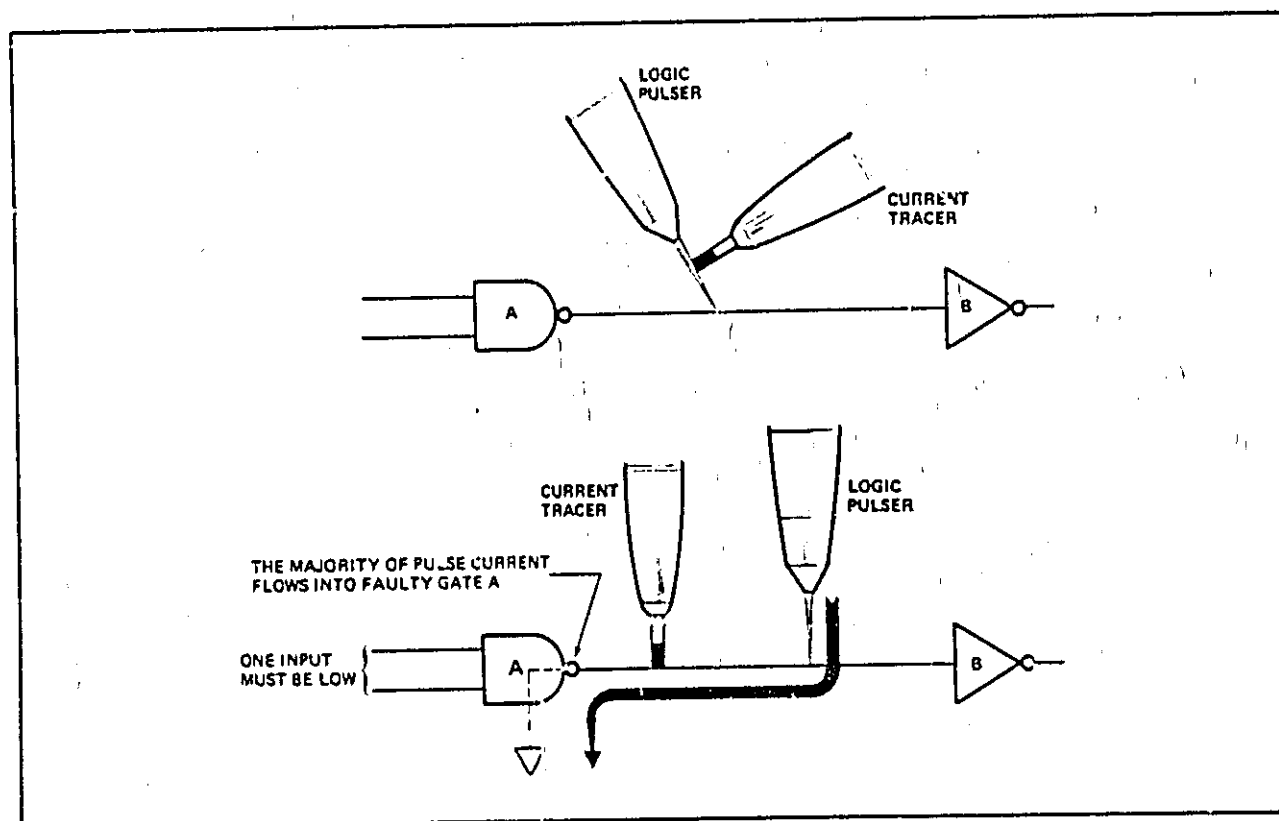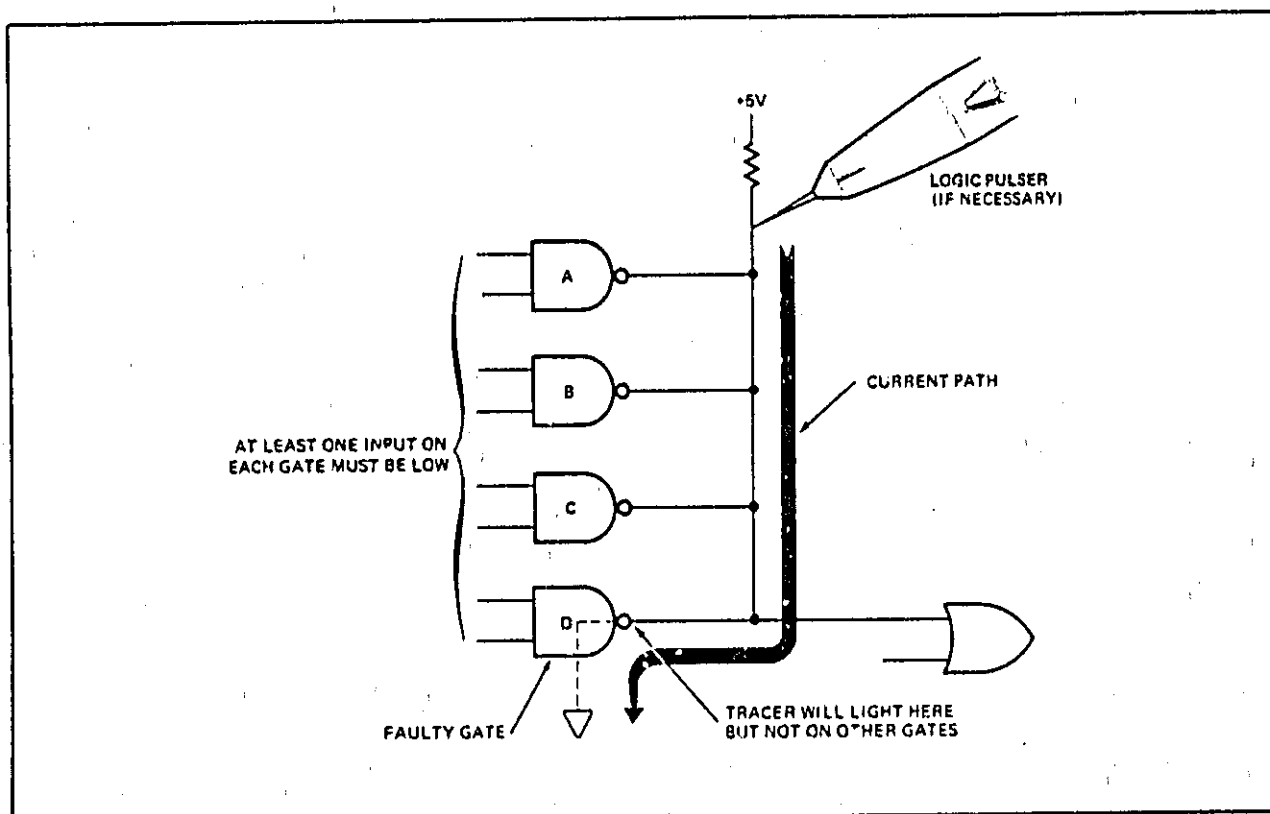

Solder Bridge/Cable Problems

When checking printed-circuit traces which may be shorted by solder-bridges or by other means, start the Current Tracer at the driver and follow the trace. Figure 4 shows an example of an incorrect current path due to a solder-bridge. As the tracer probe follows the trace from gate A toward gate B, the indicator remains lighted until it passes the bridge. This is an indication that the current has found some path other than the trace. Visually inspect this area for solder-splashes, gold-bridges, etc. These principles also apply when troubleshooting shorted cable assemblies.

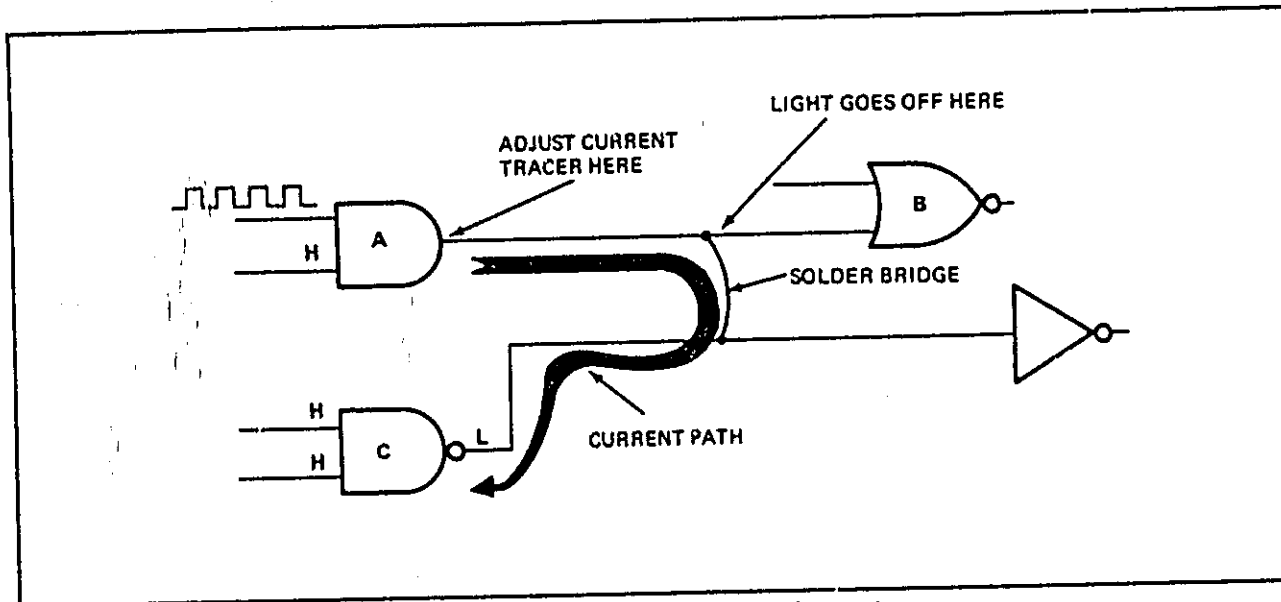


Figure 4. Solder-Bridge in Printed-Circuit

Multiple Gate Inputs

Another type of IC nodal structure is the one-output multiple-input configuration. Figure 5 shows this type of circuit being pulsed by a signal on gate A's input. In this case, place the Current Tracer's tip on the output pin of gate A and adjust the sensitivity control until the indicator light just comes on. Then check the input pins of gates B through E. If one of the input pins is shorted, that pin will be the only one to light the indicator.

Should the tracer fail to light when placed next to gate A's output, it is a good indication that the problem exists in gate A. To be sure that this is true, use the Pulser in the manner described under Gate-to-Gate Faults. If the circuit has no input signal to excite the node, use a Logic Pulser to excite the circuit.

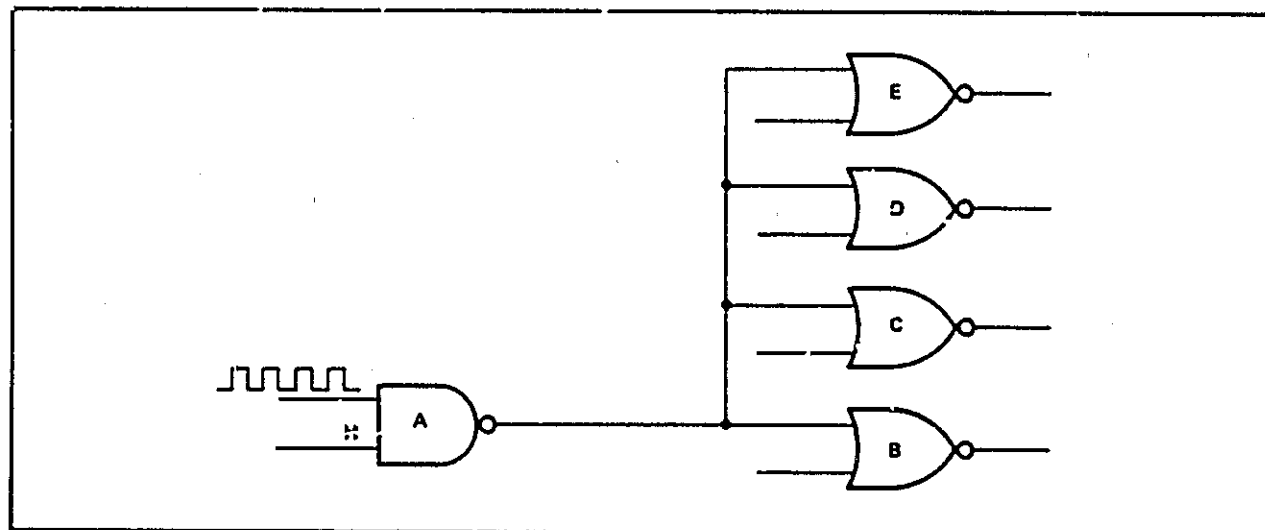


Figure 5. Multiple Gate Inputs

CMOS and ECL Circuits

Troubleshooting CMOS and ECL circuits is performed in the same manner as troubleshooting TTL circuits. The only difference is in the voltages available for the Current Tracer's power supply connections. The following table shows voltage range from each:

Circuit	Typical Voltage Supply Range
CMOS	3V to 15V
ECL	-5.2V to 0V
TTL	0V to 5V

CAUTION

THE VOLTAGE PRESENT ON THE BLACK POWER SUPPLY LEAD IS ALSO PRESENT ON THE TRACER'S ANODIZED ALUMINUM CASE. DO NOT LAY THE TRACER ON ANY GROUNDED AREA, SUCH AS AN INSTRUMENT CHASSIS. DAMAGE TO THE POWER SUPPLY MAY RESULT.

These are differences in potential and the Current Tracer's supply voltages may use both negative and positive, e.g., $V_{DD} = +8V$; $V_{SS} = -8V$. The Current Tracer is compatible with TTL, CMOS, and ECL circuits and operates on supply voltages from 4.5V to 18V. Connect the Current Tracer's black lead to the more negative supply line (V_{SS}) and the red lead to the more positive line (V_{DD}).

THEORY OF OPERATION (Refer to Figure 9 Schematic)

CURRENT-STEP SENSOR. The Current-Step Sensor comprises a pickup core and winding, and eddy-current shield. The signal to be traced is sensed by the pickup winding and core.

VARIABLE-GAIN PREAMP. The Variable-Gain Preamp consists of Q1 and peripheral components. The signal from the Current-Step-Sensor is fed directly to the base of Q1. The output of Q1 is taken directly to U1.

GAIN-CONTROL NETWORK. The gain of the Variable-Gain Preamp is controlled by ac-coupling the emitter and collector of Q1, via capacitors C4 and C5, to the current-controlled variable resistance presented by diode pairs CR4-CR6, and CR5-CR7. Each end of each diode pair is returned to signal ground or one of the ac grounds formed by capacitors C6, C7, and C8. Diodes CR1, CR2, and CR3 determine the control current for the diode pairs. The Gain-Control Network adjusts the gain of the Variable-Gain Preamp from -40 dB to +20 dB with essentially constant, high bandwidth.

FIXED-GAIN AMPLIFIER. U1 serves to increase the output of the Variable-Gain Preamp. Interstage ac-coupling of U1 is effected via R12 and C10.

AMPLIFIER AND BIPOLAR PEAK DETECTOR. The output of the Fixed-Gain Amplifier is ac-coupled through C12 to amplifier U2 which provides additional gain. The output of this amplifier is internally coupled to a bipolar peak detector (p/o U2) where a pulse of either polarity results in rapid charging of C14. This charging signal, a positive, stretched version of the input, with an amplitude proportional to the input, discharges through R20.

2ND PEAK DETECTOR. The output of the Bipolar Peak Detector is fed into another peak-detector consisting of an operational-amplifier (p/o U3), with an additional stage in the feedback loop (p/o U2). When the signal on C14 is positive, C15 is rapidly charged by U2 until the inputs to the operational-amplifier are equalized. The charge on C15 slowly discharges through R18, stretching the input pulse for sufficient time to light the indicator lamp.

DC AMPLIFIER AND DISPLAY DRIVER. The signal at C15 is dc-coupled to this amplifier, which consists of an operational-amplifier (p/o U3) and series-pass transistor Q3. The gain is set by R25 and R27; C19 is provided to suppress oscillations.

MAINTENANCE

PROBE DISASSEMBLY. To disassemble Current Tracer, refer to Figure 6, and proceed as follows:

1. With fingers, unscrew (ccw) the plastic Indicator light window (MP4).
2. Slide the bottom shell off probe tip end (MP1).
3. Lift the top shell off the probe (MP3).
4. Carefully separate the circuit board and cable assembly.

PROBE ASSEMBLY. Reverse disassembly procedure.

CAUTION

BE CAREFUL WHEN REPLACING PARTS ON THE FRAGILE PRINTED-CIRCUIT BOARD. EXCESS HEAT CAN RUIN THE BOARD. USE A LOW WATTAGE SOLDERING IRON (≤ 25 WATTS) AND APPLY THE MINIMUM HEAT NECESSARY TO UNSOLDER THE LEADS.

PREVENTIVE MAINTENANCE. No periodic adjustment or preventive maintenance procedures are necessary for the Current Tracer.

ADJUSTMENTS. Potentiometer R21 is the only maintenance adjustment in the Model 547A. This trimmer may be used as a supplementary adjustment to the gain control (R3) and as a troubleshooting adjustment. Refer to information adjacent to the schematic diagram. Preliminary adjustment of R21 is made by setting the wiper arm approximately midway in its range. If this setting results in too little or too much sensitivity, with R3 set at the 1 mA end, then R21 can be adjusted to correct this. To assure there is 1 mA in the test circuit — refer to Figure 7.

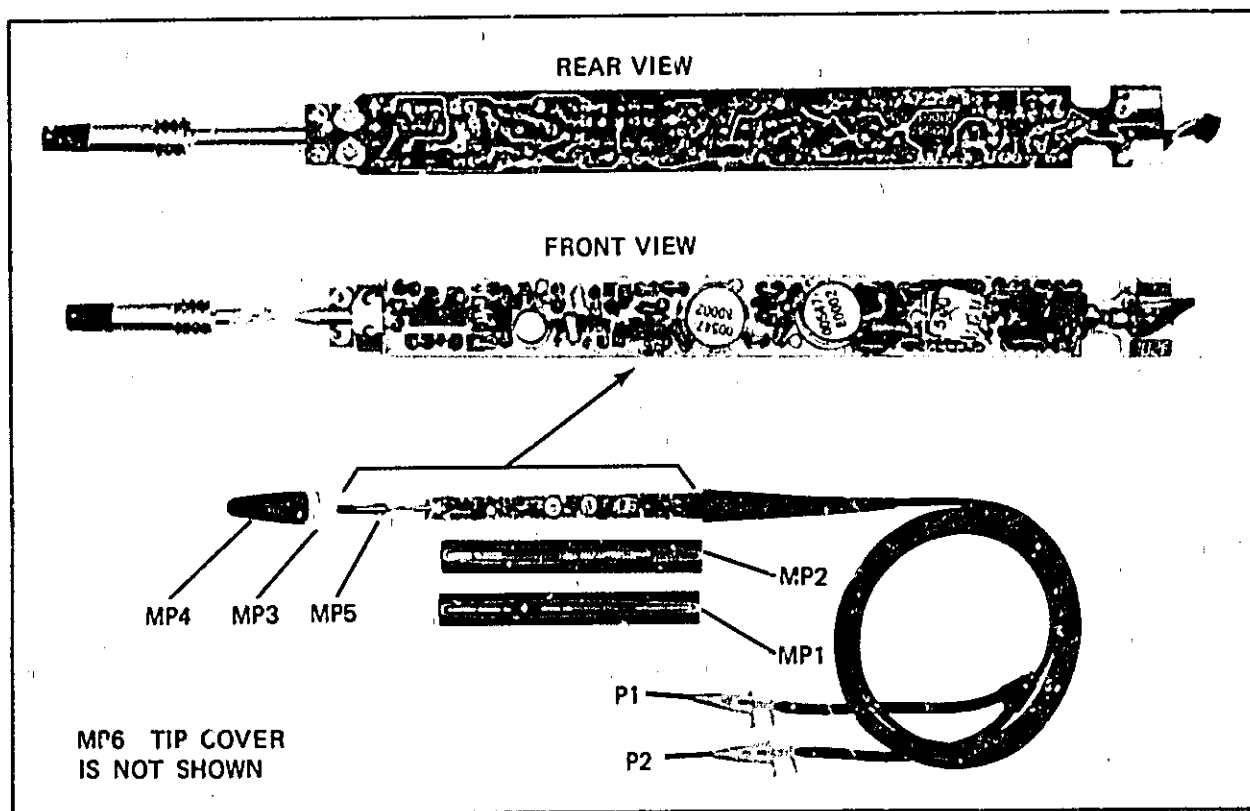


Figure 6. Exploded View of Current Tracer

PERFORMANCE TESTS

The following performance tests validate the dynamic range specifications of the 547A. Equipment required is listed below:

Equipment List for In-Cabinet Performance Tests

Instrument	Required Characteristics	Recommended HP Type
Pulse Generator	Single shot up to 10 MHz 50V, 1 Amp	HP 1915A
Power Supply	0-20 Vdc, Current Limiting at 75 mA.	HP 6823A
Decade Attenuator	40 dB	HP 355D
1 50 Ω	$\pm 1\%$, 0.5W	0811-0592
1 50 Ω	$\pm 5\%$, 20W	0819-0022

Minimum Current (1.0 mA) Performance Test

Equipment Required:

- a) HP 1915A Pulse Generator.
- b) HP 355D Decade Attenuator.
- c) HP 6823A Power Supply.
- d) 50 Ω , 1/2W Resistor.

CAUTION

USE A CURRENT-LIMITED POWER SUPPLY (75 mA), TO PREVENT DESTRUCTION OF TRANSISTORS Q2 AND Q3, DIODE CR8 AND COIL L1 IN EVENT TEST PROBE SHOULD ACCIDENTLY SLIP AND GROUND POINT "A".

With test equipment connected as shown in Figure 7, proceed as follows:

- a. Set attenuator to 0 (zero) dB.
- b. Set Pulse Generator to 5V at the output of attenuator.
- c. Set attenuator to 40 dB.
- d. Adjust power supply output to 4.5 volts with 75 mA current limiting.
- e. Adjust Current Tracer Sensitivity to the 1 mA end (all the way forward).
- f. Place Current Tracer tip at point "A".
- g. Orient Current Tracer for maximum magnetic coupling to the signal at point "A". (Point at which maximum brilliance of indicator occurs).
- h. Vary pulse generator frequency from single — step up to 10 MHz and observe that there is no visible change in indicator brilliance.
- i. Vary power supply output from 4.5 volts to 18 volts and observe that there is little or no change in the indicator brilliance.
- j. Disconnect test equipment.

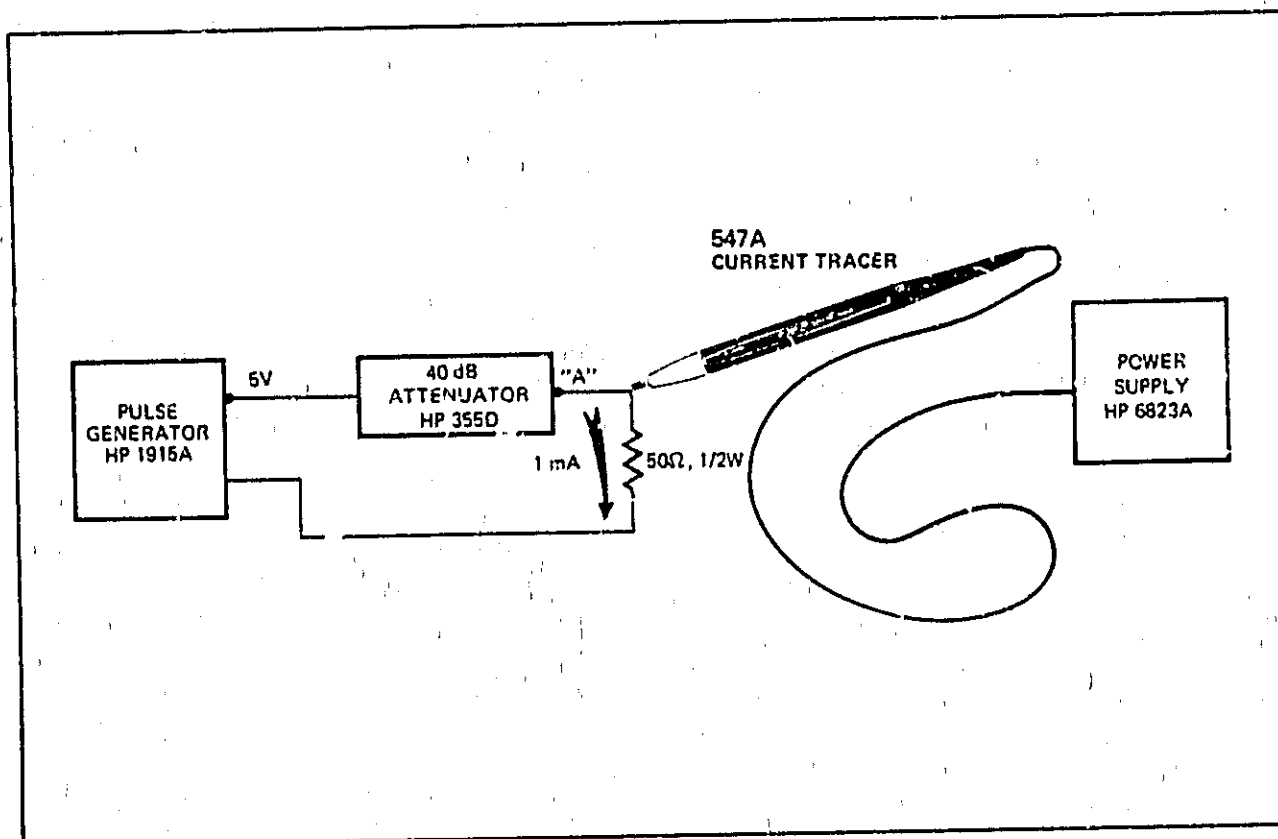


Figure 7. Setup for 1 mA Test

Maximum Current (1.0A) Performance Test

Test equipment required:

- a. HP 1915A Pulse Generator.
- b. HP 6823A Power Supply.
- c. 50Ω, 20W Resistor.

With test equipment connected as shown in Figure 8, proceed as follows:

1. Set pulse generator to 50V amplitude.
2. Adjust power supply output to 4.5 volts.
3. Set Current Tracer sensitivity control at the 1 A end.
4. Place current tracer tip at point "A".
5. Orient current tracer for maximum magnetic coupling to the signal at point "A". (This is the point at which maximum brilliance of the indicator is obtained.)
6. Vary pulse generator frequency from single-step up to 10 MHz and observe that there is no visible change in indicator brilliance.
7. Set pulse generator frequency to 1 kHz.
8. Vary power supply voltage from 4.5V to 18V and observe that there is little or no visible change in brilliance.
9. Disconnect test equipment.

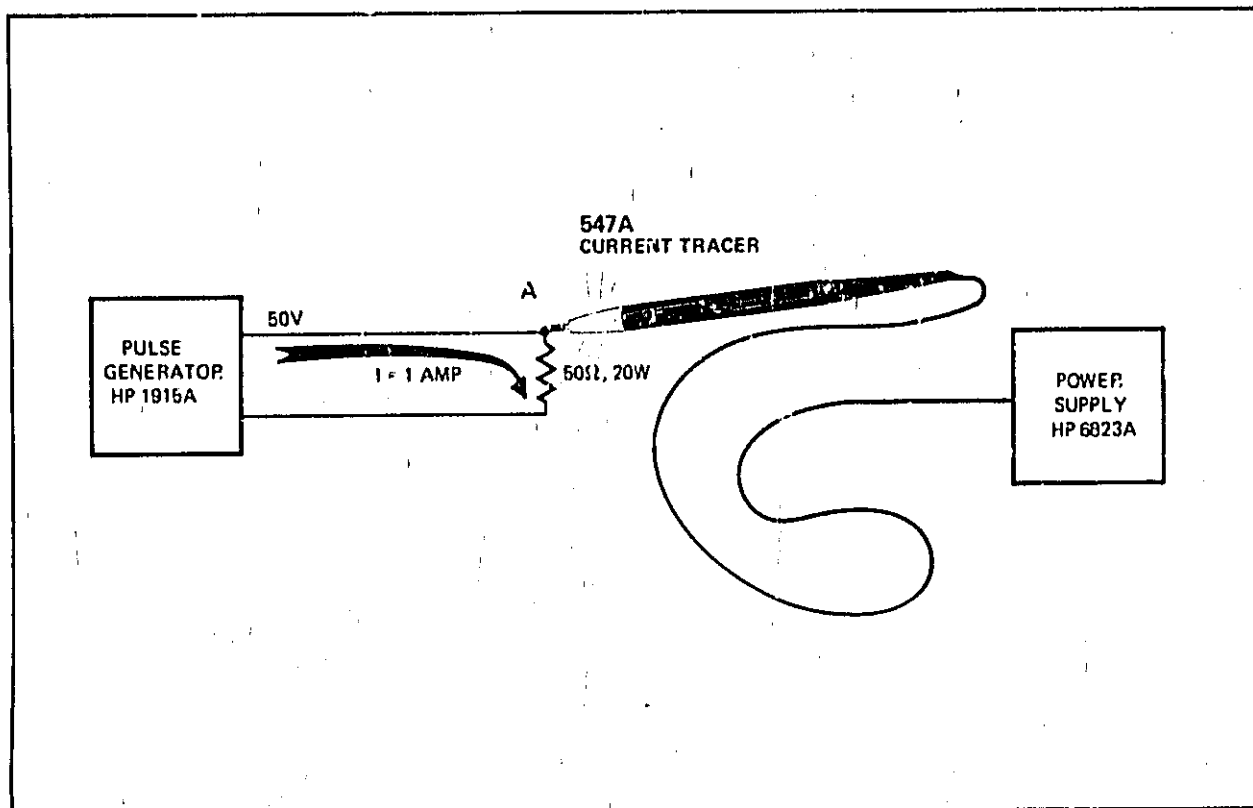


Figure 8. Setup for 1A Test

PARTS LIST

Table 2. Replaceable Parts List

Reference Designation	HP Part Number	Qty	Description	Mfr Code	Mfr Part Number
A1	00547-60001	1	BOARD ASSEMBLY CURRENT TRACER SERIES 163E OR 1640	28480	00547-60001
A1C1	0180-0684	9	CAPACITOR-FXD 6.8UF+-20% 6VDC TA	0044K	T3740685M006A5
A1C2	0180-0684		CAPACITOR-FXD 6.8UF+-20% 6VDC TA	0044K	T3740685M006A5
A1C3	0180-0684		CAPACITOR-FXC 6.8UF+-20% 6VDC TA	144K	T3740685M006A5
A1C4	0160-0574	2	CAPACITOR-FXD .1UF +-20% 50WVDC CER	26654	21308R050R104M
A1C5	0160-0574		CAPACITOR-FXD .1UF +-20% 50WVDC CER	26654	21308R050R104M
A1C6	0180-0684		CAPACITOR-FXD 6.8UF+-20% 6VDC TA	0044K	T3740685M006A5
A1C7	0180-0684		CAPACITOR-FXD 6.8UF+-20% 6VDC TA	0044K	T3740685M006A5
A1C8	0180-0684		CAPACITOR-FXC 6.8UF+-20% 6VDC TA	0044K	T3740685M006A5
A1C9	0160-0574	4	CAPACITOR-FXD .022UF +-20% 100WVDC CER	28480	0160-0574
A1C10	0160-0574		CAPACITOR-FXC .022UF +-20% 100WVDC CER	28480	0160-0574
A1C11	0180-0684		CAPACITOR-FXC 6.8UF+-20% 6VDC TA	0044K	T3740685M006A5
A1C12	0160-0574		CAPACITOR-FXC .022UF +-20% 100WVDC CER	28480	0160-0574
A1C13	0160-0574		CAPACITOR-FXD .022UF +-20% 100WVDC CER	28480	0160-0574
A1C14	0160-4460	1	CAPACITOR-FXD .01UF +-50% 100WVDC CER	28480	0160-4460
A1C15	0180-4340	2	CAPACITOR-FXD 1.2UF +-20% 25WVDC CER	28480	0160-4340
A1C16	0180-0684		CAPACITOR-FXD 6.8UF+-20% 6VDC TA	0044K	T3740685M006A5
A1C17	0180-0684		CAPACITOR-FXC 6.8UF+-20% 6VDC TA	0044K	T3740685M006A5
A1C18	0160-4340		CAPACITOR-FXD .64UF +-36UF 25WVDC CER	28480	0160-4340
A1C19	0180-2608	1	CAPACITOR-FXD .68UF+-20% 35VDC TA	0044K	T3740684M035A5
A1CR1	1901-0040	5	DIODE-SWITCHING 30V 50MA 2NS DO-35	28480	1901-0040
A1CR2	1901-0040		DIODE-SWITCHING 30V 50MA 2NS DO-35	28480	1901-0040
A1CR3	1901-0040		DIODE-SWITCHING 30V 50MA 2NS DO-35	28480	1901-0040
A1CR4	1901-1068	2	DIODE-SCHOTTKY	28480	1901-1068
A1CR5	1901-0040		DIODE-SWITCHING 30V 50MA 2NS DO-35	28480	1901-0040
A1CR6	1901-1068		DIODE-SCHOTTKY	28480	1901-1068
A1CR7	1901-0040		DIODE-SWITCHING 30V 50MA 2NS DO-35	28480	1901-0040
A1CR8	1901-0619	1	DIODE-200V 50NS	28480	1901-0619
A1L1	9100-2265	1	COIL-FXD MOLDED RF SMOKE 10UH 10% 1000	24226	10/102

Table 2. Replaceable Parts List (Continued)

Reference Designation	HP Part Number	Qty	Description	Mfr Code	Mfr Part Number
A1Q1	1834-0345 0340-0410	1	TRANSISTOR NPN 2N5179 SI TO-18 PD=200MW	04713	2N5179
A1Q2	1833-0389 0340-0410	2	INSULATOR-XSTR TO-18 .13-THK	07047	TRANSIPAD 10168
A1Q3	1833-0389 0340-0410	2	TRANSISTOR PNP SI TO-18 PD=150MW FT=4MHZ	28480	1833-0389
			INSULATOR-XSTR TO-18 .13-THK	07047	TRANSIPAD 10168
			TRANSISTOR PNP SI TO-18 PD=150MW FT=4MHZ	29480	1833-0389
			INSULATOR-XSTR TO-18 .13-THK	07047	TRANSIPAD 10168
A1R1	0498-7247	1	RESISTOR 2.47K 2% .05W F TC=0+-100	24546	C3-1/8-TO-2871-G
A1R2	0498-7240	4	RESISTOR 10K 2% .05W F TC=0+-100	24546	C3-1/8-TO-1002-G
A1R3	00547-80004	1	RESISTOR, VAR 1.53K OHM WITH MTG BKT	28480	00547-80004
A1R4	0498-7245	2	RESISTOR 2.37K 2% .05W F TC=0+-100	24546	C3-1/8-TO-2371-G
A1R5	0498-7240	2	RESISTOR 10K 2% .05W F TC=0+-100	24546	C3-1/8-TO-1002-G
A1R6	0498-7220	2	RESISTOR 215 2% .05W F TC=0+-100	24546	C3-1/8-TO-215R-G
A1R7	0498-7240	2	RESISTOR 10K 2% .05W F TC=0+-100	24546	C3-1/8-TO-1002-G
A1R8	0498-7233	4	RESISTOR 750 2% .05W F TC=0+-100	24546	C3-1/8-TO-750R-G
A1R9	0498-7233	4	RESISTOR 750 2% .05W F TC=0+-100	24546	C3-1/8-TO-750R-G
A1R10	0098-7208	2	RESISTOR 75 2% .05W F TC=0+-100	24546	C3-1/8-TO-75R-G
A1R11	0098-7190	1	RESISTOR 12.1 2% .05W F TC=0+-100	24546	C3-1/8-TO-12R1-G
A1R12	0098-7243	2	RESISTOR 1.06K 2% .05W F TC=0+-100	24546	C3-1/8-TO-1061-G
A1R13	0098-7233	2	RESISTOR 750 2% .05W F TC=0+-100	24546	C3-1/8-TO-750R-G
A1R14	0098-7198	1	RESISTOR 20.1 2% .05W F TC=0+-100	24546	C3-1/8-TO-20R1-G
A1R15	0098-7228	1	RESISTOR 484 2% .05W F TC=0+-100	24546	C3-1/8-TO-484R-G
A1R16	0498-7209	1	RESISTOR 75 2% .05W F TC=0+-100	24546	C3-1/8-TO-75R-G
A1R17	0498-7233	1	RESISTOR 750 2% .05W F TC=0+-100	24546	C3-1/8-TO-750R-G
A1R18	0498-7185	1	RESISTOR 220K 5% .125W CC TC=0+-1176	01121	882245
A1R19	0498-7220	1	RESISTOR 215 2% .05W F TC=0+-100	24546	C3-1/8-TO-215R-G
A1R20	0498-7288	1	RESISTOR 147K 2% .05W F TC=0+-100	24546	C3-1/8-TO-1473-G
A1R21	2100-0954 00547-40004	1	RESISTOR-TAHR 500 20% CC SIDE-ADJ 1-TURN	71590	SERIES 3
A1R22	0498-7243	1	SUPPORT, PCY	28480	00547-40004
A1R23	0498-7243	1	RESISTOR 1.96K 2% .05W F TC=0+-100	24546	C3-1/8-TO-1961-G
A1R24	0498-7944	1	RESISTOR 2.37K 2% .05W F TC=0+-100	24546	C3-1/8-TO-2371-G
			RESISTOR 680K 5% .125W CC TC=0+-850	01121	886845
A1R25	0498-7270	1	RESISTOR 26.2K 2% .05W F TC=0+-100	24546	C3-1/8-TO-2612-G
A1R26	0498-7249	2	RESISTOR 3.48K 2% .05W F TC=0+-100	24546	C3-1/8-TO-3481-G
A1R27	0498-7239	1	RESISTOR 1.31K 2% .05W F TC=0+-100	24546	C3-1/8-TO-1331-G
A1R28	0498-7249	1	RESISTOR 3.48K 2% .05W F TC=0+-100	24546	C3-1/8-TO-3481-G
A1R29	0498-7240	1	RESISTOR 10K 2% .05W F TC=0+-100	24546	C3-1/8-TO-1002-G


Table 2. Replaceable Parts List (Continued)

Reference Designation	HP Part Number	Qty	Description	Mfr Code	Mfr Part Number
A1U1	00547-80002	2	IC, LINEAR	28480	00547-80002
A1U2	00547-80002	2	IC, LINEAR	28480	00547-80002
A1U3	1826-0291	1	IC LM 324 0% AMP	27014	LM324P
A1DS1	2140-0378	1	LAMP-INCAND T-1 81LB 5V	00501	210
MP1	00547-20206	1	BOD F, BOTTOM HALF	28480	00547-20206
MP2	00547-20207	1	BODY, TOP HALF	28480	00547-20207
MP3	2190-0104	1	WASHER, LOCK	28480	2190-0104
MP4	00547-40001	1	WINDOW, TIGHTENER	28480	00547-40001
MP5	5088-7024	1	TIP ASSEMBLY	28480	5088-7024
LPS	00547-40005	1	COVER, TIP	28480	00547-40005
P1	10230-62101	2	GRABBER	28480	10230-62101
P2	10230-62101	2	GRABBER	28480	10230-62101
W1	00547-60100	1	C. LE ASSEMBLY, PRGBE	28480	00547-60100

Table 3. Manufacturers Code List

MFR NO.	MANUFACTURER NAME	ADDRESS	ZIP CODE
0044K	KEMET	MOUNTAIN VIEW CA	94040
00501	ILLUMINATED PRODUCTS INC	ANAHEIM CA	92803
01121	ALLEN-BRADLEY CO	MILWAUKEE WI	53212
04713	MOTOROLA SEMICONDUCTOR PRODUCTS	PHOENIX AZ	85008
07047	ROSS MILTON CO	SOUTHAMPTON PA	18966
24226	GOWANDA ELECTRONICS CORP	GOWANDA NY	14070
24546	CORNING GLASS WORKS (BRADFORD)	BRADFORD PA	16701
26654	VARADYNE INC	SANTA MONICA CA	90403
27014	NATIONAL SEMICONDUCTOR CORP	SANTA CLARA CA	95051
28480	HEWLETT-PACKARD CO CORPORATE HQ	PALO ALTO CA	94304
71590	CENTRALAB ELEK DIV GLOBE-UNION INC	MILWAUKEE WI	53201



SCHEMATIC DIAGRAMS

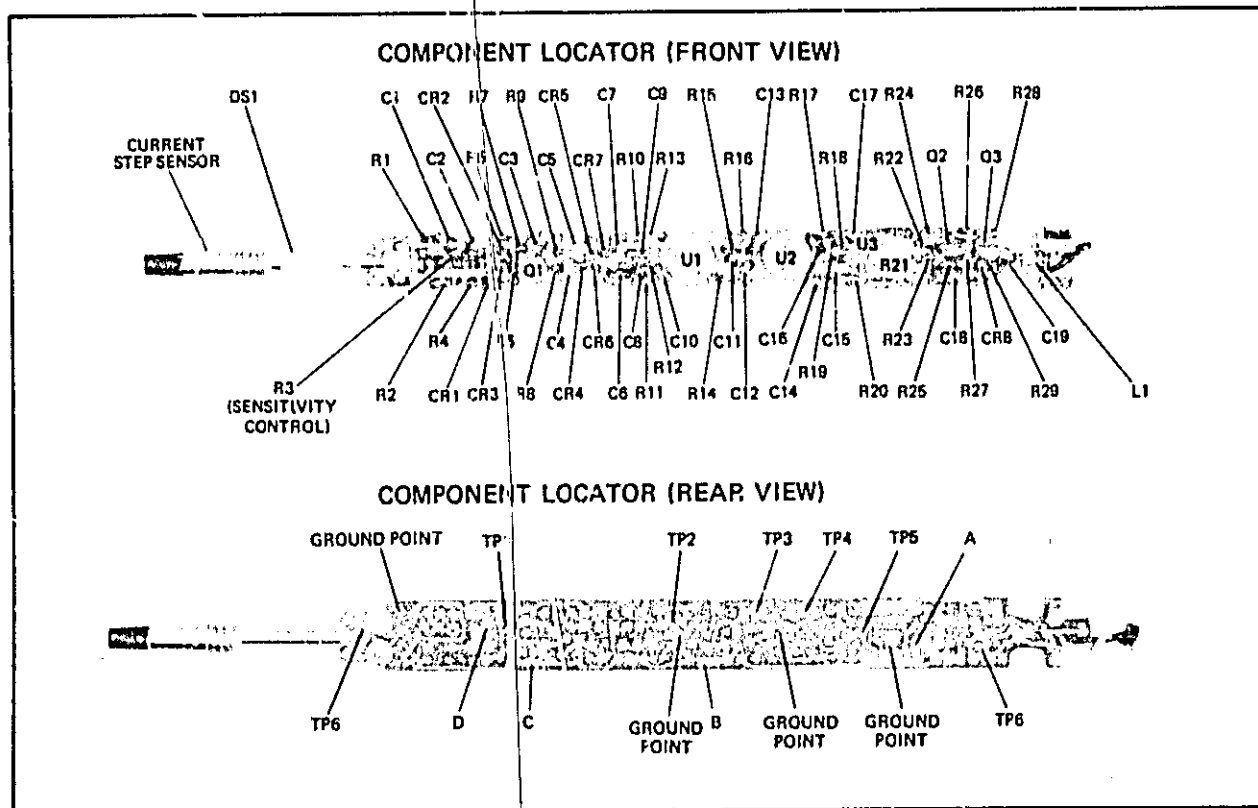


Part of Figure 9. Schematic Diagram

NOTES


1. Reference designations within this assembly are abbreviated. Add assembly number to abbreviation for complete description.
2. Unless otherwise indicated:
Resistance in ohms;
Capacitance in farads;
Inductance in henries.
3. "●" Indicates short lead at component end to be placed on PC board.
4. Voltage and current measurements taken under the following conditions:
 - a. Ambient temperature range 65°F to 85°F.
 - b. Power supply adjusted to give 5.00 Vdc at Test Point (C).
 - c. Trimmer R21 adjusted to give 4.00 Vdc at Test Point (A).
5. If a measured value falls slightly out of the specified range it does not necessarily indicate a malfunction. However, the area might be suspect if the tracer is not working properly.
6. Single line, double line, and boxed values are used at various points on the schematic to give troubleshooting data. These values are defined as follows:
 - a. A single line specification, e.g., 1.4 — 1.6 Vdc indicates measurement to be made at any setting of SENSITIVITY control.
 - b. A double line specification, e.g., $\frac{31 \rightarrow 35 \text{ mA}}{27 \rightarrow 31 \text{ mA}}$ indicates measurement to be made with the sensitivity control in the most sensitive position for the upper value and the least sensitive position for lower value.
 - c. A value shown in a box, e.g., 4.8 — 5.0 Vdc indicates measurement is to be made with sufficient stimulus present to light indicator to full brightness.
7. Numbered points, i.e., ③, on the PC board, designate the signal output or block sections on schematic. Refer to waveforms. Lettered points, i.e., (C), on the PC board. Indicate dc level points.
8. Circuits marked with shaded overlay, i.e., XXXXXX if grounded, and power supply is not current-limited, could result in destruction of Q2, Q3, L1 and CR8.
9. The broken lines, i.e., ---, are feedback paths.
10. Heavy black lines, i.e., ——— indicate path of signal flow.

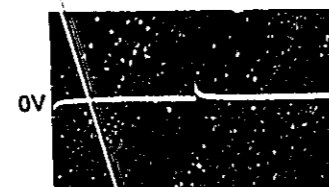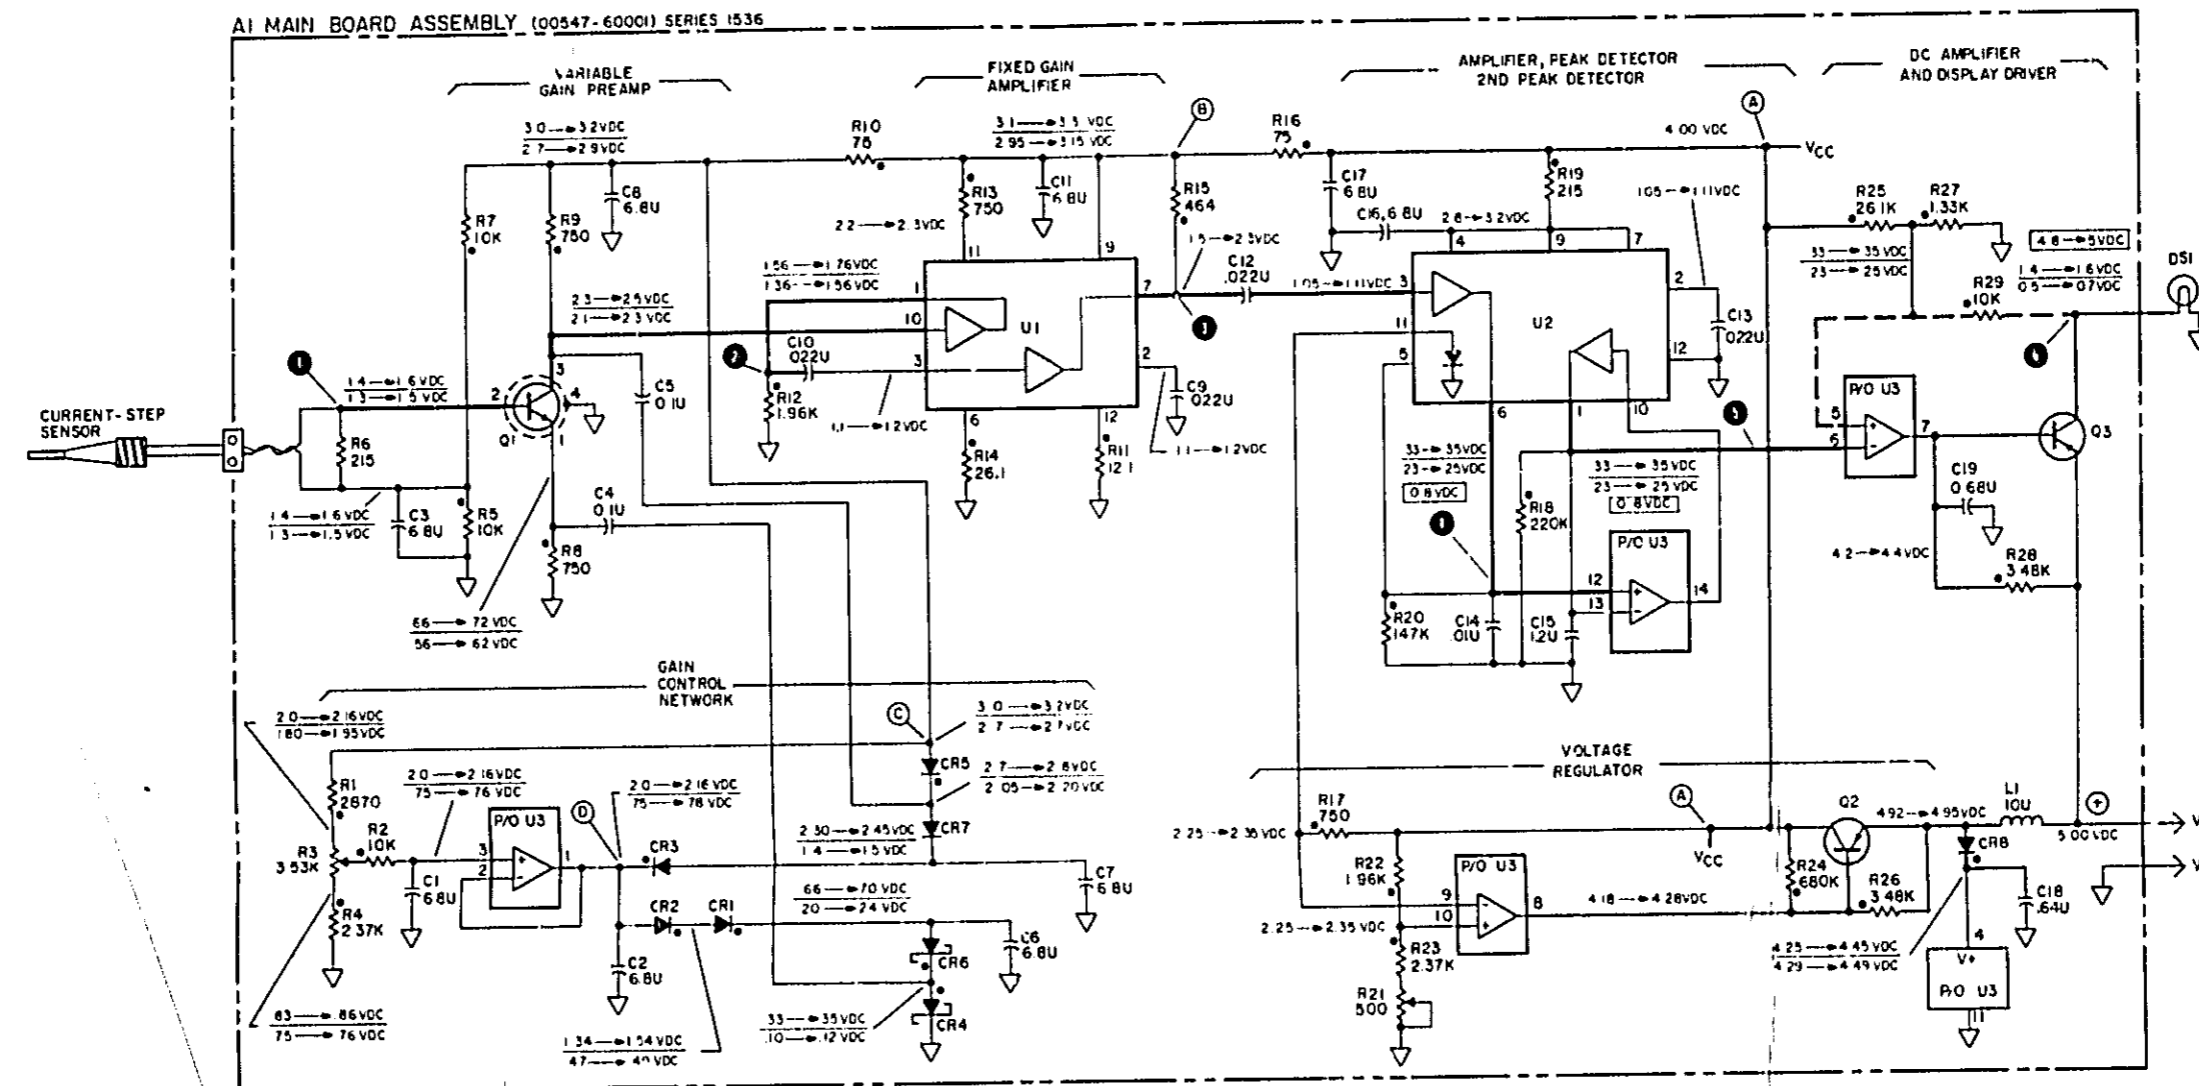


1 10 mV/cm, 5 μsec/cm
PULSE PERIOD (PP) = 34.5 μsec
SQW = 5.0V
(SQW=SQUAREWAVE)

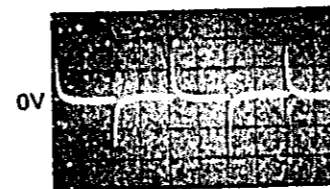


2 50 mV/cm, 5 μsec/cm
PULSE PERIOD (PP) = 34.5 μsec
SQW = 5.0V

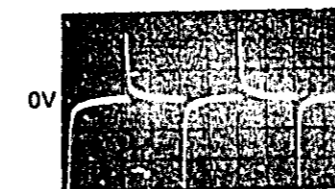


3 100 mV/cm, 5 μsec/cm
PULSE PERIOD (PP) = 34.5 μsec
SQW = 5.0V

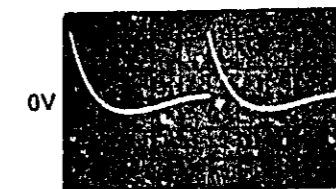

4 200 mV/cm, 0.2 msec/cm
PULSE PERIOD (PP) = 3.3 msec
SQW = 5.0V

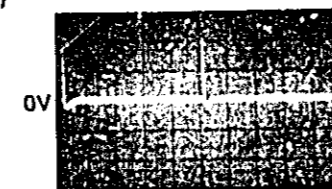

5 100 mV/cm, 5 msec/cm
PULSE PERIOD (PP) = 60 msec
SQW = 5.0V

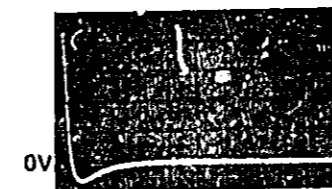

6 200 mV/cm, 1 msec/cm
PULSE PERIOD (PP) = 60 msec
SQW = 5.0V



5 6 INPUT (for test points 5 and 6)
1V/cm, 10μsec/cm

MANUAL CHANGES

MANUAL CHANGES

CHANGE DATE: 01 October 83
(This change supersedes all earlier dated changes.)

*** Make all corrections listed under ERRATA before making other changes.

*** Check following table for your instrument's serial prefix, series number, or date code and make listed change(s) to manual.

MANUAL DESCRIPTION

```
*****
* INSTRUMENT: 547A Current Probe *
*   Operating and Service Manual *
*                               *
* SERIAL PREFIX: A00051 and above *
*                               *
* DATE PRINTED:  JAN 1978 *
* HP PART NO:    00547-90006 *
* MICROFICHE NO: 00547-90007 *
*****
```

INDICATES NEW OR REVISED ITEM

> INDICATES ACTION TO BE TAKEN.

SERIAL PREFIX, SERIES NUMBER OR DATE CODE	MANUAL CHANGE(S)
---	---------------------

SERIES 1932	1
01A2132	3, 4

SERIAL PREFIX, SERIES NUMBER OR DATE CODE	MANUAL CHANGE(S)
---	---------------------

(C547A0SX)

1=8950/2=12008, 12415, 15013/3=15331/4=14228



HEWLETT
PACKARD

Insert this Warning after the Certification/Warranty and Assistance which is on the inside front cover.

WARNING

This product should be connected to a power source that is sufficiently isolated from the main supply to prevent the risk of electric shock.

To further reduce the risk of electric shock, refer to the service manual for the equipment under test (when applicable) and follow the manufacturer's service and safety precautions particularly when voltages exceeding 30 VRMS or 50 VDC are present.

MANUAL CHANGE MODEL 00547A (00547-90006) Page 1

#ERRATA

Page 11, Table 2, Replaceable Parts:

>Delete 00547-40004; 2; SUPPORT, POT; 28480; 00547-40004.

MANUAL CHANGE MODEL 547A (00547-90006) Page 2

CHANGE 1 (Series 1932)

Page 7, Adjustments:

>Delete entire "ADJUSTMENTS" paragraph. Resistor R21 is replaced by a fixed resistor with a factory selected value.

Pages 10 and 11, Table 2, Replaceable Parts:

>Change "SERIES 1536 OR 1540" to SERIES 1932.

>Change R21 from 2100-0956 (500 Ohms adj.) to R21*; 0698-7206; RESISTOR 56.2 Ohms 1% .05W F TC=0+/-100; 24546; C3-1/8-T00-56R2-G.

Page 13, Figure 9, Schematic Diagram:

>Change series number at top of diagram to 1932.

>Change R21 to a fixed value of 56.2 Ohms.

>Add an asterisk (*) adjacent to R21.

CHANGE 2

Title Page NEWER INSTRUMENTS:

>Change to read as follows:

The changes in Current Probes with circuit board Series Numbers higher than A00051 or with condensed Series Numbers provided on the Date Code label, are described in the MANUAL CHANGES included with the manual.

CHANGE 2 (cont'd)

Page 1 INSTRUMENT IDENTIFICATION

>Delete the paragraph under "INSTRUMENT IDENTIFICATION".

>Replace with the following information:

SERIES/DATE CODE This product is identified by a SERIES CODE and DATE CODE, located on a vinyl label affixed to the inside of either the top or bottom of the probe shell. The Series/Date Code format used in all logic probes is as follows:

"01A2132"

The first two digits represent a condensed Series Code. When a change occurs to any model of HP logic probe family which affects the schematic, parts list, or specifications, the condensed SERIES CODE is incremented by one.

The letter "A" designates the country of origin; "A" indicates USA.

#CHANGE 2 (cont'd)

The last four digits represent the Date Code. The Date Code identifies the date-of-manufacture for the probe. The first two digits indicate the year the product was manufactured; the last two digits indicate the week of that year. Datecoding originated in the year 1960, at which time the code "00" was used for the first two digits to represent 1960. Every year after 1960 the code was incremented by one; for example, the Date Code "2012" indicates the product was manufactured in the 12th week of the year 1980 (1960+20).

Your probe will have either a four-digit Series Number stamped on the printed circuit board or a condensed Series Code, prefixing the Date Code on a vinyl label affixed to the inside of the probe shell.

WHICH CHANGES APPLY TO YOUR CURRENT PROBE?

There is a SERIES/DATE CODE number listed on the cover of the MANUAL CHANGES sheet. As changes are made, the condensed Series Code is incremented by one. Make all changes to your manual for Series Codes less than or equal to your tracer Series/Date Code.

Page 10, Table 2. A1(00547-60001) Replaceable Parts List:

>Change A1C15 from 0160-4340 to 0160-5611 CAPACITOR-FXD 1UF SP CER

MANUAL CHANGES MODEL 547A (00547-90006) Page 5

CHANGE 3

Page 11, Table 2. A1 (00547-60001) Replaceable Parts List:

>Change R21 from 0698-7206 to 0698-7225 RESISTOR-FXD 348 1% .05W TC=0+-100.

#CHANGE 4

Page 12, Table 2. Replacement Parts List:

>Change U3 from 1826-0291 to 1826-1072 IC OP AMP LM324D.

SALES & SUPPORT OFFICES

Arranged alphabetically by country



Product Line Sales/Support Key

- Key Product Line
A Analytical
CM Components
C Computer Systems Sales only
CH Computer Systems Hardware Sales and Services
CS Computer Systems Software Sales and Services
E Electronic Instruments & Measurement Systems
M Medical Products
MP Medical Products Primary BRO
MS Medical Products Secondary BRO
P Personal Computation Products
 * Sales only for specific product line
 - Support only for specific product line

IMPORTANT: These symbols designate general product line capability. They do not insure sales or support availability for all products within a line, at all locations. Contact your local sales office for information regarding locations where HP support is available for specific products.

HP distributors are printed in italics.

HEADQUARTERS OFFICES

If there is no sales office listed for your area, contact one of these headquarters offices.

NORTH/CENTRAL AFRICA

Hewlett-Packard S.A.
 7, Rue du Bois-du-Lan
 CH-1217 MEYRIN 2, Switzerland
 Tel: (022) 83 12 12
 Telex: 27835 hpse
 Cable: HEWPACKSA Geneva

ASIA

Hewlett-Packard Asia Ltd.
 6th Floor, Sun Hung Kai Centre
 30 Harbour Rd.
 G.P.O. Box 785
HONG KONG
 Tel: 5-832 3211
After Jan. 1, 1984
 47th Floor, China Resources Bldg.
 26 Harbour Rd., Wanchai
HONG KONG
 Telex: 66678 HEWPA HK
 Cable: HEWPACK HONG KONG

CANADA

Hewlett-Packard (Canada) Ltd.
 6577 Goreway Drive
 MISSISSAUGA, Ontario L4V 1M8
 Tel: (416) 678-9430
 Telex: 610-492-4240

EASTERN EUROPE

Hewlett-Packard Ges.m.b.h.
 Liebigasse 1
 P.O. Box 72
 A-1222 VIENNA, Austria
 Tel: (222) 2365110
 Telex: 1 3 4425 HEPA A

NORTHERN EUROPE

Hewlett-Packard S.A.
 Wilenslede 475
 P.O. Box 999
 NL-1180 AZ AMSTELVEEN
 The Netherlands
 Tel: 20 437771

SOUTH EAST EUROPE

Hewlett-Packard S.A.
 7, Rue du Bois-du-Lan
 CH-1217 MEYRIN 2, Switzerland
 Tel: (022) 83 12 12
 Telex: 27835 hpse
 Cable: HEWPACKSA Geneva

OTHER EUROPE

Hewlett-Packard S.A.
 P.O. Box
 150, Rue du Nant-D'Avril
 CH-1217 MEYRIN 2, Switzerland
 Tel: (022) 83 8111
 Telex: 22486 hpse
 Cable: HEWPACKSA Geneva

MEDITERRANEAN AND MIDDLE EAST

Hewlett-Packard S.A.
 Mediterranean and Middle East
 Operations
 Abrina Centre
 32 Kifissias Ave.
 Paraisos-Amarousion, ATHENS
 Greece
 Tel: 682 88 11
 Telex: 21-5588 HPAT GR
 Cable: HEWPACKSA Athens

EASTERN USA

Hewlett-Packard Co.
 4 Choke Cherry Road
 ROCKVILLE, MD 20850
 Tel: (301) 258-2000

MIDWESTERN USA

Hewlett-Packard Co.
 5201 Tollview Drive
 ROLLING MEADOWS, IL 60008
 Tel: (312) 255-9800

SOUTHERN USA

Hewlett-Packard Co.
 2000 South Park Place
 P.O. Box 105005
 ATLANTA, GA 30349
 Tel: (404) 955-1500

WESTERN USA

Hewlett-Packard Co.
 3639 Lankershim Blvd.
 P.O. Box 3919
 LOS ANGELES, CA 91604
 Tel: (213) 506-0700

OTHER INTERNATIONAL AREAS

Hewlett-Packard Co.
 Intercontinental Headquarters
 3495 Deer Creek Road
 PALO ALTO, CA 94304
 Tel: (415) 857-1501
 Telex: 034-8300
 Cable: HEWPACK

ANGOLA

Telectra
 Empresa Técnica de Equipamentos
 R. Barbosa Rodrigues, 41-1 DT.
 Caixa Postal 6487
 LUANDA
 Tel: 35515, 35515
 EP

ARGENTINA

Hewlett-Packard Argentina S.A.
 Avenida Santa Fe 2035
 Martinez 1640 BUENOS AIRES
 Tel: 798-5735, 792-1293
 Telex: 17595 BIONAR
 Cable: HEWPACKARG
 A, CH, CM, CS, P
Diotron S.A.C.I.M. e I.
 Av Paseo Colon 221, Piso 9
 1399 BUENOS AIRES
 Tel: 30-4846, 30-1851
 Telex: 17595 BIONAR
 M

AUSTRALIA

Adelaide, South Australia
 Office
 Hewlett-Packard Australia Ltd.
 153 Greenhill Road
 PARKSIDE, S.A. 5063
 Tel: 272-5911
 Telex: 82536
 Cable: HEWPAKD Adelaide
 A, CH, CM, E, MS, P
 Brisbane, Queensland Office
 Hewlett-Packard Australia Ltd.
 10 Payne Road
 THE GAP, Queensland 4061
 Tel: 30-4133
 Telex: 42133
 Cable: HEWPAKD Brisbane
 A, CH, CM, E, M, P

Canberra, Australia
 Capital Territory
 Office
 Hewlett-Packard Australia Ltd.
 121 Wollongong Street
 Fyshwick, A.C.T. 2600
 Tel: 80 4244
 Telex: 62650
 Cable: HEWPAKD Canberra
 CH, CM, E, P

Melbourne, Victoria Office
 Hewlett-Packard Australia Ltd.
 31-41 Joseph Street
 CLACKBURN, Victoria 3130
 Tel: 895-2895
 Telex: 31-024
 Cable: HEWPAKD Melbourne
 A, CH, CM, CS, E, MS, P

Perth, Western Australia
 Office
 Hewlett-Packard Australia Ltd.
 261 Stirling Highway
 CLAREMONT, W.A. 6010
 Tel: 383-2188
 Telex: 93859
 Cable: HEWPAKD Perth
 A, CH, CM, E, MS, P

Sydney, New South Wales Office

Hewlett-Packard Australia Ltd.
 17-22 Talavera Road
 P.O. Box 308
 NORTH RYDE, N.S.W. 2113
 Tel: 887-1611
 Telex: 21561
 Cable: HEWPAKD Sydney
 A, CH, CM, CS, E, MS, P

AUSTRIA

Hewlett-Packard Ges.m.b.h.
 Grottenhofstrasse 94
 A-8052 GRAZ
 Tel: (0316) 291 5 66
 Telex: 32375
 CH, E
 Hewlett-Packard Ges.m.b.h.
 Liebigasse 1
 P.O. Box 72
 A-1222 VIENNA
 Tel: (0222) 23 65 11-0
 Telex: 134425 HEPA A
 A, CH, CM, CS, E, MS, P

BAHRAIN

Green Salon
 P.O. Box 557
 Manama
BAHRAIN
 Tel: 255503-255950
 Telex: 84419
 P

Wael Pharmacy

P.O. Box 648
BAHRAIN
 Tel: 256123
 Telex: 8550 WAEI BN
 E, CM

BELGIUM

Hewlett-Packard Belgium S.A./N.V.
 Blvd de la Woluwe, 100
 Woluwedal
 B-1200 BRUSSELS
 Tel: (02) 762-32-00
 Telex: 23-494 paloben bru
 A, CH, CM, CS, E, M, P, P

BRAZIL

Hewlett-Packard do Brasil I.e.C. Ltda.
 Alameda Rio Negro, 750
 Alphaville
 06400 BARUERI SP
 Tel: (011) 421.1311
 Telex: (011) 33872 HPBR-BR
 Cable: HEWPAKD Sao Paulo
 A, CH, CM, CS, E, M, P
 Hewlett-Packard do Brasil I.e.C. Ltda.
 Avenida Epitacio Pessoa, 4664
 22471 RIO DE JANEIRO-RJ
 Tel: (021) 286.0237
 Telex: 021-21905 HPBR-BR
 Cable: HEWPAKD Rio de Janeiro
 A, CH, CM, E, MS, P

ANAMED I.C.E.I. Ltda.

Rua Bage, 103
 04012 SAO PAULO
 Tel: (011) 570-5720
 Telex: 021-21905 HPBR-BR
 M

SALES & SUPPORT OFFICES

Arranged alphabetically by country

CANADA

Alberta
Hewlett-Packard (Canada) Ltd.
3030 3rd Avenue N.E.
CALGARY, Alberta T2A 6T7
Tel: (403) 235-3100
A,CH,CM,E*,MS,P*

Hewlett-Packard (Canada) Ltd.
11120A-178th Street
EDMONTON, Alberta T6S 1P2
Tel: (403) 486-8888
A,CH,CM,CS,E,MS,P

British Columbia
Hewlett-Packard (Canada) Ltd.
10891 Shelbridge Way
RICHMOND,
British Columbia V6X 2W7
Tel: (604) 270-2277
Telex: 610-922-5059
A,CH,CM,CS,E*,MS,P*

Manitoba
Hewlett-Packard (Canada) Ltd.
380-550 Century Street
WINNIPEG, Manitoba R3H 0Y1
Tel: (204) 786-8701
A,CH,CM,E,MS,P*

Nova Scotia
Hewlett-Packard (Canada) Ltd.
P.O. Box 931
90C Windmill Road
DARTMOUTH, Nova Scotia B2Y 3Z6
Tel: (902) 489-7820
CH,CM,CS,E*,MS,P*

Ontario
Hewlett-Packard (Canada) Ltd.
3325 N. Service Rd., Unit 6
BURLINGTON, Ontario P3A 2A3
Tel: (416) 335-8644
CS,M*

Hewlett-Packard (Canada) Ltd.
552 Newbold Street
LONDON, Ontario N6E 2S5
Tel: (519) 686-9181
A,CH,CM,E*,MS,P*

Hewlett-Packard (Canada) Ltd.
6877 Goreway Drive
MISSISSAUGA, Ontario L4V 1M8
Tel: (416) 678-6430
A,CH,CM,CS,E,MP,P

Hewlett-Packard (Canada) Ltd.
2670 Queensview Dr.
OTTAWA, Ontario K2B 8K1
Tel: (613) 820-8483
A,CH,CM,CS,E*,MS,P*

Hewlett-Packard (Canada) Ltd.
220 Yorkland Blvd., Unit #11
WILLOWDALE, Ontario M2J 1R5
Tel: (416) 499-9333
CH

Quebec
Hewlett-Packard (Canada) Ltd.
17500 Sorf, Service Road
Trans-Canada Highway
IRKLAND, Quebec H9J 2M5
Tel: (514) 697-4232
A,CH,CM,CS,E,MP,P*

Hewlett-Packard (Canada) Ltd.
Les Galeries du Vallon
2323 Du Verson Nord
STE. FOY, Quebec G1H 4C2
Tel: (418) 687-4570
CH

CHILE

Jorge Calcagni y Cia. Ltda.
Av. Italia 634 Santiago
Casilla 16475
SANTIAGO 9
Tel: 222-0222
Telex: Public Booth 440001
A,CM,E,M

Olympia (Chile) Ltda.
Av. Rodrigo de Araya 1045
Casilla 256-V
SANTIAGO 21
Tel: (02) 22 55 044
Telex: 240-545 OLYMP CL
Cable: Olympia Chile Santiago Chile
CH,CS,P

CHINA, People's Republic of
China Hewlett-Packard Rep. Office
P.O. Box 418
1A Lane 2, Luchang St.
Beiwei Rd., Xuanwu District
BEIJING
Tel: 33-1947, 33-7426
Telex: 22601 CTSHP CN
Cable: 1920
A,CH,CM,CS,E,P

COLOMBIA

Instrumentación
H. A. Langebaek & Kier S.A.
Carrera 4A No. 52A-26
Apartado Aereo 6287
BOGOTA 1, D.E.
Tel: 212-1466
Telex: 44400 INST CO
Cable: AARIS Bogota
CM,E,M

Casa Humboldt Ltda.
Carrera 14, No. 98-60
Apartado Aereo 51283
BOGOTA 1, D.E.
Tel: 256-1686
Telex: 45403 CCAL CO.
A

COSTA RICA

Cientifica Costarricense S.A.
Avenida 2, Calle 5
San Pedro de Montes de Oca
Apartado 10159
SAN JOSE
Tel: 24-38-20, 24-08-19
Telex: 2367 GALGR CR
CM,E,M

CYPRUS

Telefax Ltd.
P.O. Box 4809
14C Stassinos Avenue
NICOSIA
Tel: 62696
Telex: 2894 LFVDO CY
E,MP

DENMARK

Hewlett-Packard A/S
Datavej 52
DK-3460 BIRKERØD
Tel: (02) 81-86-40
Telex: 37409 hpas dk
A,C*,CM,CS,E,MS,P

Hewlett-Packard A/S
Rølgædsvej 32
DK-8240 RISSKOV, Aarhus
Tel: (06) 17-60-00
Telex: 37409 hpas dk
CH,E

DOMINICAN REPUBLIC

Microprog S.A.
Juan Tomás Mejía y Cotes No. 60.
Arroyo Hondo
SANTO DOMINGO
Tel: 565-6268
Telex: 4510 ARENTA DR (RCA) P

ECUADOR

CYEDE Cia. Ltda.
Avenida Eloy Alfaro 1749
Casilla 6423 CCI
QUITO
Tel: 450-975, 243-052
Telex: 2548 CYEDE ED
CM,E,P

Hospitalar S.A.
Robles 625
Casilla 3590
QUITO
Tel: 545-250, 545-122
Telex: 2485 HOSPTL ED
Cable: HOSPITALAR-Quito
M

EGYPT

International Engineering Associates
24 Hussein Hegazi Street
Kasr-el-Aini
CAIRO
Tel: 23829, 21641
Telex: JEA UN 93830
CH,CS,E,M

EGYPTOR
P.O. Box 2558
42 El Zahraa Street
CAIRO, Egypt
Tel: 65 00 21
Telex: 83 337
P

EL SALVADOR

IPESA de El Salvador S.A.
29 Avenida Norte 1216
SAN SALVADOR
Tel: 26-6858, 26-6868
Telex: 20539 IPESASAL
A,CH,CM,CS,E,P

FINLAND

Hewlett-Packard Oy
Revontulentie 7
PL 24
SF-02101 ESPOO 10
Tel: (90) 4550211
Telex: 121563 hpwpa sf
CH,CM,CS,P

Hewlett-Packard Oy
Carinkuoma 7
PL 24
02101 ESPOO 10
Tel: (90) 4521022
A,E,MS

Hewlett-Packard Oy
Aatoksankatu 10-C
SF-00720-72 JYVASKYLÄ
Tel: (941) 216318
CH

Hewlett-Packard Oy
Kainvintie 1-C
SF-90140-14 OULU
Tel: (981) 338785
CH

FRANCE

Hewlett-Packard France
Z.I. Mercure B
Rue Berthelot
F-13783 Les Milles Cedex
AIX-EN-PROVENCE
Tel: 16 (42) 59-41-02
Telex: 410770F
A,CH,E,MS,P*

Hewlett-Packard France
64, rue Marchand Saillant
F-61000 ALENCON
Tel: 16 (33) 29 04 42

Hewlett-Packard France
Boite Postale 503
F-25026 BESANCON
28 rue de la République
F-25000 BESANCON
Tel: 16 (81) 83-16-22
CH,M

Hewlett-Packard France
13, Place Napoléon III
F-29000 BREST
Tel: 16 (98) 03-38-35

Hewlett-Packard France
Chemin des Mouilles
Boite Postale 162
F-69130 ECULLY Cedex (Lyon)
Tel: 16 (78) 833-81-25
Telex: 310617F
A,CH,CS,E,MP

Hewlett-Packard France
Tour Lorraine
Boulevard de France
F-91035 EVRY Cedex
Tel: 16 6 077-96-60
Telex: 092315F
E

Hewlett-Packard France
Parc d'Activité du Bois Briard
Ave. du Lac
F-91040 EVRY Cedex
Tel: 16 6 077-8383
Telex: 692315F
E

Hewlett-Packard France
5, avenue Raymond Chanas
F-38320 EYBENS (Grenoble)
Tel: 16 (76) 25-81-41
Telex: 980124 HP GRENBO EYBE
CH

Hewlett-Packard France
Centre d'Affaires Paris-Nord
Bâtiment Ampère 5 étage
Rue de la Commune de Paris
Boite Postale 3
F-93153 LE BLANC MESSIL
Tel: 16 (1) 865-44-52
Telex: 211032F
CH,CS,E,MS

Hewlett-Packard France
Parc d'Activités Cadere
Quartier Jean Mennet
Avenue du Président JF Kennedy
F-33700 MERIGNAC (Bordeaux)
Tel: 16 (56) 34-00-84
Telex: 550105F
CH,E,MC

Hewlett-Packard France
Immeuble "Les 3 B"
Nouveau Chemin de la Garde
ZAC de Bois Briard
F-44085 NANTES Cedex
Tel: 16 (40) 50-32-22
CH**

SALES & SUPPORT OFFICES

Arranged alphabetically by country

3



FRANCE (Cont'd)

Hewlett-Packard France
125, rue du Faubourg Banner
F-45000 OPLEANS
Tel: 16 (38) 68 01 63

Hewlett-Packard France
Zone Industrielle de Courtaboeuf
Avenue des Tropiques
F-91947 Les Ulis Cedex ORSAY
Tel: (6) 907-78-25
Telex: 600048F
A,CH,CM,CS,E,MP,P

Hewlett-Packard France
Paris Porte-Millot
15, Avenue de L'Amiral Bruix
F-75782 PARIS CEDEX 16
Tel: 16 (1) 502-12-20
Telex: 613663F
CH,MS,P

Hewlett-Packard France
124, Boulevard Tourasse
F-84000 PAU
Tel: 16 (59) 80 38 02

Hewlett-Packard France
2 Allée de la Bourgonnette
F-35100 RENNES
Tel: 16 (99) 51-42-44
Telex: 740912F
CH,CM,E,MS,P*

Hewlett-Packard France
88 Avenue de Bretagne
F-76100 ROUEN
Tel: 16 (35) 63-57-66
CH**CS

Hewlett-Packard France
4 Rue Thomas Mann
Boite Postale 58
F-67033 STRASBOURG Cedex
Tel: 16 (88) 28-58-48
Telex: 890141F
CH,E,MS,P*

Hewlett-Packard France
Le Périple
20, Chemin du Pigeonnier de la
Céplère
F-31083 TOULOUSE Cedex
Tel: 16 (61) 40-11-12
Telex: 531639F
A,CH,CS,E,P*

Hewlett-Packard France
9, rue Baudin
F-26000 VALENCE
Tel: 16 (75) 42 78 16

Hewlett-Packard France
Carolor
ZAC de Bois Briand
F-57640 VIGY (Metz)
Tel: 16 (8) 77 20 22
CH

Hewlett-Packard France
Immerable Péricestra
F-59638 VILLENEUVY D'ASCO Cedex
Tel: 16 (20) 91-41-25
Telex: 190124F
CH,E,MS,P*

GERMAN FEDERAL REPUBLIC

Hewlett-Packard GmbH
Geschäftsstelle
Keithstrasse 2-4
D-1000 BERLIN 30
Tel: (030) 24-91-86
Telex: 018 3405 hpbln d
A,CH,E,MP

Hewlett-Packard GmbH
Geschäftsstelle
Herrenberger Strasse 130
D-7030 BOBLINGEN
Tel: (7031) 14-0
Telex:

A,CH,CM,CS,E,MP,P
Hewlett-Packard GmbH
Geschäftsstelle
Emanuel-Lutze-Strasse 1
D-4000 DUISSELDORF
Tel: (0211) 5971-1
Telex: 085/65 533 hpdd d
A,CH,CS,E,MS,P

Hewlett-Packard GmbH
Geschäftsstelle
Schleefstr. 28a
D-4600 DORTMUND-Aplerbeck
Tel: (0231) 45001

Hewlett-Packard GmbH
Vertriebszentrale Frankfurt
Berner Strasse 117
Postfach 560 140
D-6000 FRANKFURT 56
Tel: (0611) 50-04-1
Telex: 04 13249 hpfm d
A,CH,CM,CS,E,MP,P

Hewlett-Packard GmbH
Geschäftsstelle
Aussenstelle Bad Homburg
Luisenstrasse 115
D-6380 BAD HOMBURG
Tel: (06172) 109-0

Hewlett-Packard GmbH
Geschäftsstelle
Kapstadtring 5
D-2000 HAMBURG 60
Tel: (040) 63804-1
Telex: 021 63 032 hphh d
A,CH,CS,E,MS,P

Hewlett-Packard GmbH
Geschäftsstelle
Heidering 37-39
D-3000 HANNOVER 61
Tel: (0511) 5706-0
Telex: 092 3259
A,CH,CM,E,MS,P

Hewlett-Packard GmbH
Geschäftsstelle
Rosslauer Weg 2-4
D-6800 MANNHEIM
Tel: (0621) 70050
Telex: 0462105
A,C,E

Hewlett-Packard GmbH
Geschäftsstelle
Messerschmittstrasse 7
D-7910 NEU-ULM
Tel: 0731-70241
Telex: 0712816 HP ULM-D
A,C,E*

Hewlett-Packard GmbH
Geschäftsstelle
Ehrlacherstr. 13
D-8500 MÜNCHEN 10
Tel: (0911) 5205-0
Telex: 0623 8J0
CH,CM,E,MS,P

Hewlett-Packard GmbH
Geschäftsstelle
Eschenstrasse 5
D-8028 TAUFKIRCHEN
Tel: (089) 6117-1
Telex: 0524985
A,CH,CM,E,MS,P

GREAT BRITAIN

See United Kingdom

GREECE

Kostas Karayannis S.A.
8 Omirou Street
ATHENS 133
Tel: 32 30 37 J, 32 37 771
Telex: 215967 FKAT GR
A,CH,CM,CS,E,MP
PLASO S.A.
G. Gerardos
24 Stourara Street
ATHENS
Tel: 36-11-160
Telex: 221871
P

GUATEMALA

IPESA
Avenida Reforma 3-48, Zona 9
GUATEMALA CITY
Tel: 316627, 314786
Telex: 4192 TELTRO GU
A,CH,CM,CS,E,MP

HONG KONG

Hewlett-Packard Hong Kong, Ltd.
G.P.O. Box 795
5th Floor, Sun Hung Kai Centre
30 Harbour Road
HONG KONG
Tel: 5-8323211
Telex: 66678 HEWPA HX
Cable: HEWPAK HONG KONG
E,CH,CS,P
CET Ltd.
1402 Tung Wah Mansion
199-203 Hennessy Rd.
Wanchia, HONG KONG
Tel: 5-729376
Telex: 85148 CET HX
CM
Schmidt & Co. (Hong Kong) Ltd.
Wing On Centre, 28th Floor
Connaught Road, C.
HONG KONG
Tel: 5-455644
Telex: 74766 SCHMX HX
AM

ICELAND

Elding Trading Company Inc.
Halnamvolf-Tryggvagotu
P.O. Box 895
IS-REYKJAVIK
Tel: 1-58-20, 1-63-03
M

INDIA

Computer products are sold through
Blue Star Ltd. All computer repairs and
maintenance service is done through
Computer Maintenance Corp.

Blue Star Ltd.
Sabri Complex II Floor
24 Residency Rd.
BANGALORE 560 025
Tel: 55660
Telex: 0845-430
Cable: BLUESTAR
A,CH*,CM,CS*,E

Blue Star Ltd.
Band Box House
Prabhadevi
BOMBAY 400 025
Tel: 422-3101
Telex: 011-3751
Cable: BLUESTAR
AM

Blue Star Ltd.
Sahas
414/2 Vr Savarkar Marg
Prabhadevi
BOMBAY 400 025
Tel: 422-6155
Telex: 011-4093
Cable: FROSTELUE
A,CH*,CM,CS*,E,M

Blue Star Ltd.
Kalyan, 19 Vishwas Colony
Akrapul, BORODA, 390 005
Tel: 65235
Cable: BLUE STAR
A

Blue Star Ltd.
7 Hare Street
CALCUTTA 700 001
Tel: 12-01-31
Telex: 021-7655
Cable: BLUESTAR
AM

Blue Star Ltd.
133 Kodambakkam High Road
MADRAS 600 034
Tel: 82957
Telex: 041-379
Cable: BLUESTAR
AM

Blue Star Ltd.
Bhandari House, 7th/8th Floors
91 Nehru Place
NEW DELHI 110 024
Tel: 682547
Telex: 031-2463
Cable: BLUESTAR
A,CH*,CM,CS*,E,M

Blue Star Ltd.
15/16, C Wellesley Rd.
PUNE 411 011
Tel: 22775
Cable: BLUE STAR
A

Blue Star Ltd.
2-2-47/1108 Bolarum Rd.
SECUNDERABAD 500 003
Tel: 72057
Telex: 0155-459
Cable: BLUEFROST
A,E

Blue Star Ltd.
T.C. 7/603 Poomina
Maruthankuzhi
TRIVANDRUM 695 013
Tel: 65799
Telex: 0884-259
Cable: BLUESTAR
E

Computer Maintenance Corporation
Ltd.
115, Sarojini Devi Road
SECUNDERABAD 500 003
Tel: 310-184, 345-774
Telex: 031-2960
CH**



SALES & SUPPORT OFFICES

Arranged alphabetically by country

INDONESIA

BERCA Indonesia P.T.

P.O. Box 496/Jkt.

J. Abdul Muis 62

JAKARTA

Tel: 21-375009

Telex: 46748 BERSAL IA

Cable: BERSAL JAKARTA

P

BERCA Indonesia P.T.

P.O. Box 2497/Jkt

Antara Bldg., 17th Floor

J. Medan Merdeka Selatan 17

JAKARTA-PUSAT

Tel: 21-344-181

Telex: BERSAL IA

A.C.S.E.M

BERCA Indonesia P.T.

P.O. Box 174/SBY.

J. Kutei No. 11

SURABAYA

Tel: 68172

Telex: 31148 BERSAL SB

Cable: BERSAL-SURABAYA

A*,E,M,P

IRAQ

Hewlett-Packard Trading S.A.

Service Operation

Al Mansoor City 98/3/7

BAGHDAD

Tel: 551-49-73

Telex: 212-455 HEPARAO IK

CH,CS

IRELAND

Hewlett-Packard Ireland Ltd.

82/83 Lower Leeson Street

DUBLIN 2

Tel: 0001 608800

Telex: 30439

A,CH,CM,CS,E,M,P

Cardiac Services Ltd.

Kilmore Road

Arlane

DUBLIN 5

Tel: (01) 351820

Telex: 30439

M

ISRAEL

Eidan Electronic Instrument Ltd.

P.O. Box 1270

JERUSALEM 91000

16, Chelav St.

JERUSALEM 94467

Tel: 533 221, 553 242

Telex: 25231 AB/PAKRD IL

A

Electronics Engineering Division

Motorola Israel Ltd.

16 Kremenetski Street

P.O. Box 25016

TEL-AVIV 67899

Tel: 3 08 388

Telex: 33569 Mott IL

Cable: BASTEL Tel-Aviv

CH,CM,CS,E,M,P

ITALY

Hewlett-Packard Italiana S.p.A.

Traversa 99C

Via Giulio Petroni, 19

I-70124 BARI

Tel: (080) 41-07-44

M

Hewlett-Packard Italiana S.p.A.

Via Martin Luther King, 38/M

I-40132 BOLOGNA

Tel: (051) 402394

Telex: 511630

CH,E,MS

Hewlett-Packard Italiana S.p.A.

Via Principe Nicola 436/C

I-95126 CATANIA

Tel: (095) 37-10-87

Telex: 970291

C,P

Hewlett-Packard Italiana S.p.A.

Via G. Di Vittorio 9

I-20063 CERNUSCO SUL NAVIGLIO

(Milano)

Tel: (02) 923691

Telex: 334832

A,CH,CM,CS,E,M,P

Hewlett-Packard Italiana S.p.A.

Via C. Colombo 49

I-20090 TREZZANO SUL NAVIGLIO

(Milano)

Tel: (02) 4459041

Telex: 322116

C,M

Hewlett-Packard Italiana S.p.A.

Via Nuova San Rocco a

Cepodimonte, 62/A

I-60131 NAPOLI

Tel: (081) 7413544

Telex: 710698

A,CH,E

Hewlett-Packard Italiana S.p.A.

Viale G. Modugno 33

I-16156 GENOVA PEGLI

Tel: (010) 63-37-07

Telex: 215238

E,C

Hewlett-Packard Italiana S.p.A.

Via F. Jizzo 15

I-35128 PADOVA

Tel: (049) 664888

Telex: 430315

A,CH,E,MS

Hewlett-Packard Italiana S.p.A.

Viale C. Pavese 340

I-00144 ROMA EUR

Tel: (06) 54831

Telex: 610514

A,CH,CM,CS,E,MS,P*

Hewlett-Packard Italiana S.p.A.

Via di Casellina 57/C

I-50018 SCANDICCIO FIRENZE

Tel: (055) 753863

Hewlett-Packard Italiana S.p.A.

Corso Svizzera, 185

I-10144 TORINO

Tel: (011) 74 4044

Telex: 221079

CH,E

JAPAN

Yokogawa-Hewlett-Packard Ltd.

152-1, Onna

ATSUBI, Kanagawa, 243

Tel: (0462) 28-0451

CM,C*,E

Yokogawa-Hewlett-Packard Ltd.

Meiji-Seimei Bldg. 2F

3-1 Hon Chiba-Cho

CHIBA, 280

Tel: 472 25 7701

E,CH,CS

Yokogawa-Hewlett-Packard Ltd.

Yasuda-Seimei Hirschman Bldg.

8-11, Hon-dori, Naka-ku

HIROSHIMA, 730

Tel: 82-241-0611

Yokogawa-Hewlett-Packard Ltd.

Towa Building

2-3, Kaigan-dori, 2 Chome Chuo-ku

KOBE, 650

Tel: (078) 392-4791

C,E

Yokogawa-Hewlett-Packard Ltd.

Kumagaya Asahi 82 Bldg

3-4 Tsukuba

KUMAGAYA, Saitama 360

Tel: (0485) 24-6563

CH,CM,E

Yokogawa-Hewlett-Packard Ltd.

Asahi Shinbun Daichi Seimei Bldg.

4-7, Hanabata-cho

KUMAMOTO, 860

Tel: (0963) 54-7311

CH,E

Yokogawa-Hewlett-Packard Ltd.

Shin-Kyoto Center Bldg.

614, Higashi-Shikokji-cho

Karasuma-Nishiku

Shikokji-dori, Shimogyo-ku

KYOTO, 600

Tel: 075-343-0921

CH,E

Yokogawa-Hewlett-Packard Ltd.

Mito Mitsui Bldg

4-73, Sanno-maru, 1 Chome

MITO, Ibaraki 310

Tel: (0292) 25-7470

CH,CM,E

Yokogawa-Hewlett-Packard Ltd.

Sumitomo Seimei 14-9 Bldg.

Meieki-Minami, 2 Chome

Nakamura-ku

NAGOYA, 450

Tel: (052) 571-5171

CH,CM,CS,E,MS

Yokogawa-Hewlett-Packard Ltd.

Chuo Bldg.,

4-20 Nishinakajima, 5 Chome

Yodogawa-ku

OSAKA, 532

Tel: (06) 304-6021

Telex: YHFGSA 523-3824

A,CH,CM,CS,E,M,P*

Yokogawa-Hewlett-Packard Ltd.

27-15, Yabe, 1 Chome

SAGAMIHARA Kanagawa, 229

Tel: 0427 59-1311

Yokogawa-Hewlett-Packard Ltd.

Daichi Seimei Bldg.

7-1, Nishi Shinjuku, 2 Chome

Shinjuku-ku, TOKYO 160

Tel: 03-348-4811

CH,E

Yokogawa-Hewlett-Packard Ltd.

29-21 Takaido-Higashi, 3 Chome

Suginami-ku TOKYO 168

Tel: (03) 331-6111

Telex: 232-2024 YHPTOK

A,CH,CM,CS,E,M,P*

Yokogawa-Hewlett-Packard Ltd.

Daichi Asano Building

2-8, Odori, 5 Chome

UTSUNOMIYA, Tochigi 320

Tel: (0286) 25-7155

CH,CS,E

Yokogawa-Hewlett-Packard Ltd.

Yasuda Seimei Nishiguchi Bldg.

30-4 Tsuruya-cho, 3 Chome

YOKOHAMA 221

Tel: (045) 312-1252

CH,CM,E

JORDAN

Mousher Cousins Company

P.O. Box 1387

AMMAN

Tel: 24907, 399C

Telex: 21456 SABCO JO

CH,E,M,P

KENYA

ADCOM Ltd., Inc., Kenya

P.O. Box 30070

NAIROBI

Tel: 331955

Telex: 22639

E,M

KOREA

Samsung Electronics HP Division

12 Fl. Kiam Bldg.

San 75-31, Yeoksam-Dong

Kangnam-Ku

Yeongdong P.O. Box 72

SEOUL

Tel: 555-7555, 555-5447

Telex: K27364 SAMSAN

A,CH,CM,CS,E,M,P

KUWAIT

Al-Khaldiya Trading & Contracting

P.O. Box 830 Safat

KUWAIT

Tel: 42-4910, 41-1726

Telex: 22481 Areeg ki

CH,E,M

Photo & Cine Equipment

P.O. Box 270 Safat

KUWAIT

Tel: 42-2846, 42-3801

Telex: 22247 Matin ki

P

LEBANON

G.M. Dolmactian

Achrafieh

P.O. Box 165.167

BEIRUT

Tel: 290293

MP**

Computer Information Systems

P.O. Box 11-6274

BEIRUT

Tel: 89 48 73

Telex: 22259

C

LUXEMBOURG

Hewlett-Packard Belgium S.A./N.V.

Bvd de la Woluwe, 100

Woluwe

B-1200 BRUSSELS

Tel: (02) 762-32-00

Telex: 23-494 paloben bru

A,CH,CM,CS,E,M,P

MALAYSIA

Hewlett-Packard Sales (Malaysia)

Sdn. Bhd.

1st Floor, Bangunan British

American

Jalan Semantan, Damansara Heights

KUALA LUMPUR 23-03

Tel: 943022

Telex: MA31011

A,CH,E,M,P*

SALES & SUPPORT OFFICES

Arranged alphabetically by country

5



MALAYSIA (Cont'd)

Protel Engineering
P.O. Box 1917
Lot 6624, Section 64
23/4 Pandan Road
Kuching, SARAWAK
Tel: 36299
Telex: MA 70904 PROMAL
Cable: PROTELENG
J.E.M.

MALTA

Philp Toledo Ltd.
Notable Rd.
BIRKBECK
Tel: 447 47, 455 66
Telex: Media MH 649
E.P.

MEXICO

Hewlett-Packard Mexicana, S.A.
de C.V.
Av. Periferico Sur No. 6501
Tepepan, Xochimilco
16020 MEXICO D.F.
Tel: 6-78-46-00
Telex: 17-74-507 HEWPACK MEX
A.CH,CS,E,MS,F
Hewlett-Packard Mexicana, S.A.
de C.V.
Ave. Colonia del Valle 409
Col. del Valle
Municipio de Garza Garcia
MONTERREY, Nuevo Leon
Tel: 78 42 41
Telex: 038 410
CH
ECISA
José Vasconcelos No. 218
Col. Condesa Deleg. Cuauhtémoc
MEXICO D.F. 06140
Tel: 553-1206
Telex: 17-72755 ECE ME
M

MOROCCO

Dolbeau
81 rue Karachi
CASABLANCA
Tel: 3041-82, 3068-38
Telex: 23051, 22822
E

Gerep

2 rue d'Agadir
Boite Postale 156
CASABLANCA
Tel: 272093, 272095
Telex: 23 739
P

NETHERLANDS

Hewlett-Packard Nederland B.V.
Van Heuven Goedhartlaan 121
NL 1181KK AMSTELVEEN
P.O. Box 667
NL 1180 AR AMSTELVEEN
Tel: (020) 47-20-21
Telex: 13 216 HEPA NL
A.CH,CM,CS,E,MP,P
Hewlett-Packard Nederland B.V.
Bongerd 2
NL 2906YK CAPELLE A/D IJSSEL
P.O. Box 41
NL 2900AA CAPELLE A/D IJSSEL
Tel: (10) 51-84-44
Telex: 21261 HEPAC NL
A.CH,CS,E

Hewlett-Packard Nederland B.V.
Pastoor Petersstraat 134-136
NL 5612 LV EINDHOVEN
P.O. Box 2342
NL 5600 CH EINDHOVEN
Tel: (040) 326911
Telex: 51484 hepas nl
A.CH**E,M

NEW ZEALAND

Hewlett-Packard (N.Z.) Ltd.
5 Owens Road
P.O. Box 26-189
Epsom, AUCKLAND
Tel: 687-159
Cable: HEWPACK Auckland
CH,CM,E,P

Hewlett-Packard (N.Z.) Ltd.
4-12 Crickshank Street
Kilbirnie, WELLINGTON 3
P.O. Box 8443
Courtenay Place, WELLINGTON 3
Tel: 877-199
Cable: HEWPACK Wellington
CH,CM,E,P

Northrop Instruments & Systems Ltd.
369 Khyber Pass Road
P.O. Box 8602
AUCKLAND
Tel: 784-091
Telex: 60605
A.M

Northrop Instruments & Systems Ltd.
110 Mendenhall St.
P.O. Box 8388
CHRISTCHURCH
Tel: 486-828
Telex: 4203
A.M

Northrop Instruments & Systems Ltd.
Sturdee House
85-87 Ghuznee Street
P.O. Box 2406
WELLINGTON
Tel: 850-091
Telex: NZ 3380
A.M

NORTHERN IRELAND

See United Kingdom

NORWAY

Hewlett-Packard Norge A/S
Folke Bernadottes vei 50
P.O. Box 3558
N-5033 FYLLINGSDALEN (Bergen)
Tel: 0047/5/18 55 40
Telex: 16621 hpnas n
CH,CS,E,MS

Hewlett-Packard Norge A/S
Østerdalen 16-18
P.O. Box 34
N-1345 ØSTERÅS
Tel: 0047/2/17 11 80
Telex: 16621 hpnas n
A.CH,CM,CS,E,MP

OMAN

Khimil Ramdas
P.O. Box 19
MUSCAT
Tel: 722225, 745601
Telex: 3289 BROKER MB MUSCAT
P

Suhail & Saud Bahwan
P.O. Box 169
MUSCAT
Tel: 734 201-3
Telex: 3274 BAHWAN MB

PAKISTAN

Mushko & Company Ltd.
1-B, Street 43
Sector F-8/1
ISLAMABAD
Tel: 51071
Cable: FEMUS Rawalpindi
A.E.M

Mushko & Company Ltd.
Doshman Chambers
Abdullah Haroon Road
KARACHI 0302
Tel: 524131, 524132
Telex: 2894 MUSYO PK
Cable: COOPERA FOR Karachi
A.E.M.P

PANAMA

Electrónico Balboa, S.A.
Calle Samuel Lewis, Ed. Alfa
Apartado 4829
PANAMA 5
Tel: 63-6613, 63-6748
Telex: 3483 ELECTRON PG
A.CH,CM,E,P

PERU

Cia Electro Médica S.A.
Los Flamencos 145, San Isidro
Casilla 1030
LIMA 1
Tel: 41-4325, 41-3703
Telex: Pub. Booth 25306
CH,CM,E,P

PHILIPPINES

The Online Advanced Systems
Corporation
Rico House, Amorsolo Cor. Herrera
Street
Legaspi Village, Makati
P.O. Box 1510
Metro MANILA
Tel: 85-35-81, 85-34-91, 85-32-21
Telex: 3274 ONLINE
A.CH,CS,E,M
Electronic Specialists and Proponents
Inc.
690-B Epifanio de los Santos Avenue
Cubao, QUEZON CITY
P.O. Box 2649 Manila
Tel: 98-96-81, 98-96-82, 98-96-83
Telex: 40018, 42000 ITT GLOBE
MACKAY BOOTH
P

PORTUGAL

Mundinter
Intercambio Mundial de Comércio
S.A.R.L.
P.O. Box 2761
Av. Antonio Augusto de Aguiar 138
P-LISBON
Tel: (19) 53-21-31, 53-21-37
Telex: 16691 munter p
M

Soquímica
Av. da Liberdade, 220-2
1298 LISBOA C: dex
Tel: 56 21 81/2/3
Telex: 13318 SABACA
P

Teletra-Empresa Técnica de
Equipamentos Eléctricos S.A.R.L.
Rua Rodrigo de Fonseca 103
P.O. Box 2531
P-LISBON 1
Tel: (19) 68-60-72
Telex: 12598
CH,CS,E,P

PUERTO RICO

Hewlett-Packard Puerto Rico
Ave. Muñoz Rivera #101
Esq. Calle Ochoa
HATO REY, Puerto Rico 00918
Tel: (809) 754-7800
Hewlett-Packard Puerto Rico
Calle 272 Edificio 203
Urb. Country Club
RIO PIEDRAS, Puerto Rico
P.O. Box 4407
CAROLINA, Puerto Rico 00628
Tel: (809) 762-7255
A.CH,CS

QATAR

Computarbia
P.O. Box 2750
DOHA
Tel: 883555
Telex: 4806 CHPARB
P
Eastern Technical Services
P.O. Box 4747
DOHA
Tel: 329 693
Telex: 4156 EASTEC DH
Nasser Trading & Contracting
P.O. Box 1563
DOHA
Tel: 22170, 23539
Telex: 4439 NASCER DH
M

SAUDI ARABIA

Modern Electronic Establishment
Hewlett-Packard Division
P.O. Box 22015
Thuobah
AL-KHOBAR
Tel: 895-1760, 895-1764
Telex: 671 106 HPMEEK SJ
Cable: ELECTA AL-KHOBAR
CH,CS,E,M
Modern Electronic Establishment
Hewlett-Packard Division
P.O. Box 1228
Rodeo Plaza, 6th Floor
JEDDAH
Tel: 644 38 48
Telex: 4027 12 FARNAS SJ
Cable: ELECTA JEDDAH
CH,CS,E,M

Modern Electronic Establishment
Hewlett-Packard Division
P.O. Box 22015
RIYADH
Tel: 491-97 15, 491-63 87
Telex: 202049 MEERYD SJ
CH,CS,E,M
Abdul Ghani El Ajou
P.O. Box 78
RIYADH
Tel: 40 41 717
Telex: 200 932 EL AJOU
P

SCOTLAND

See United Kingdom

SINGAPORE

Hewlett-Packard Singapore (Sales)
Pte. Ltd.
#08-00 Inchope House
450-2 Alexandra Road
P.O. Box 58 Alexandra Rd. Post Office
SINGAPORE, 9115
Tel: 631788
Telex: HPSGSO PS 34209
Cable: HEWPACK, Singapore
A.CH,CS,E,MS,P



SALES & SUPPORT OFFICES

Arranged alphabetically by country

SINGAPORE (Cont'd)

Dynamar International Ltd.
Unit 05-11 Block 6
Kohlan Ayer Industrial Estate
SINGAPORE 1334
Tel: 747-6188
Telex: RS 26283
CM

SOUTH AFRICA

Hewlett-Packard So Africa (Pty.) Ltd.
P.O. Box 120
Howard Place CAPE PROVINCE 7450
Pine Park Center, Forest Drive,
Pinelands

CAPE PROVINCE 7405

Tel: 53-7954

Telex: 57-20006

A,CH,CM,E,MS,P

Hewlett-Packard So Africa (Pty.) Ltd.

P.O. Box 37099

92 Overport Drive

DURBAN 4007

Tel: 28-4178, 28-4179, 28-4110

Telex: 6-22954

CH,CM

Hewlett-Packard So Africa (Pty.) Ltd.

6 Linton Arcade

511 Cape Road

Linton Grange

PORT ELIZABETH 6000

Tel: 041-302148

CH

Hewlett-Packard So Africa (Pty.) Ltd.

P.O. Box 33345

Glenstantia 0010 TRANSVAAL

1st Floor East

Constantia Park Ridge Shopping

Centre

Constantia Park

PRETORIA

Tel: 982043

Telex: 32163

CH,E

Hewlett-Packard So Africa (Pty.) Ltd.

Private Bag Wendywood

SANDTON 2144

Tel: 602-5111, 802-5125

Telex: 4-20877

Cable: HEWPACK Johannesburg

A,CH,CM,CS,E,MS,P

SPAIN

Hewlett-Packard Española S.A.

Calle Entenza, 321

E-BARCELONA 29

Tel: 322.24.51, 321.73.54

Telex: 52603 hpbce

A,CH,CS,E,MS,P

Hewlett-Packard Española S.A.

Calle San Vicente S/No

Edificio Albia II

E-BILBAO 1

Tel: 423.83.06

A,CH,E,MS

Hewlett-Packard Española S.A.

Ctra. de la Coruña, Km. 16, 400

Las Rozas

E-MADRID

Tel: (1) 637.00.11

CH,CS,M

Hewlett-Packard Española S.A.

Avda. S. Francisco Javier, S/No

Planta 10. Edificio Sevilla 2,

E-SEVILLA 5

Tel: 64.44.54

Telex: 72933

A,CS,MS,P

Hewlett-Packard Española S.A.
Calle Ramon Gordoño, 1 (Entro.3)
E-VALENCIA 10
Tel: 361-1354
CH,P

SWEDEN

Hewlett-Packard Sverige AB

Sunnanvägen 14K

S-22226 LUND

Tel: (046) 13-69-79

Telex: (854) 17886 (via Spånga

office)

CH

Hewlett-Packard Sverige AB

Östra Tullgatan 3

S-21128 MALMÖ

Tel: (040) 70270

Telex: (854) 17886 (via Spånga

office)

Hewlett-Packard Sverige AB

Västra Vintergatan 9

S-70344 ÖREBRO

Tel: (19) 10-48-80

Telex: (854) 17886 (via Spånga

office)

CH

Hewlett-Packard Sverige AB

Skallholtsgränd 9, Kista

Box 19

S-16383 SPÅNGA

Tel: (08) 750-2000

Telex: (854) 17886

Telefax: (08) 7527781

A,CH,CM,CS,E,MS,P

Hewlett-Packard Sverige AB

Fröfallsgränd 30

S-42132 VÄSTRA-FRÖLUNDA

Tel: (031) 49-09-50

Telex: (854) 17886 (via Spånga

office)

CH,E,P

SWITZERLAND

Hewlett-Packard (Schweiz) AG

Clarastrasse 12

CH-4058 BASEL

Tel: (61) 33-59-20

A

Hewlett-Packard (Schweiz) AG

7, rue du Bois-du-Lan

Casa Postale 365

CH-1217 MEYRIN 2

Tel: (0041) 22-83-11-11

Telex: 27333 HPAG CH

CH,CM,CS

Hewlett-Packard (Schweiz) AG

Allmend 2

CH-8967 WIDEN

Tel: (0041) 57 31 21 11

Telex: 53933 hpag ch

Cable: HPAG CH

A,CH,CM,CS,E,MS,P

SYRIA

General Electronic Inc.

Nuri Basha Ahmad Ebn Kays Street

P.O. Box 5781

DAMASCUS

Tel: 33-24-87

Telex: 411 215

Cable: ELECTROBOR DAMASCUS

E

Middle East Electronics

P.O. Box 2308

Abu Rummaneh

DAMASCUS

Tel: 33 4 5 92

Telex: 411 304

M

TAIWAN

Hewlett-Packard Far East Ltd.

Kaohsiung Office

2/F 68-2, Chung Cheng 3rd Road

KAOHSIUNG

Tel: (07) 241-2318

CH,CS,E

Hewlett-Packard Far East Ltd.

Taiwan Branch

8th Floor

337 Fu Hsing North Road

TAIPEI

Tel: (02) 712-0404

Telex: 24439 HEWPACK

Cable: HEWPACK Taipei

A,CH,CM,CS,E,MS,P

Ing Lih Trading Co.

3rd Floor, 7 Jen-Ai Road, Sec. 2

TAIPEI 100

Tel: (02) 3948191

Cable: INGLI TAIPEI

A

THAILAND

Unimesa

30 Patpong Ave., Suriwong

BANGKOK 5

Tel: 235-5727

Telex: 84439 Simonco TH

Cable: UNIMESA Bangkok

A,CH,CS,E,M

Bangkok Business Equipment Ltd.

5/5-6 Dejo Road

BANGKOK

Tel: 234-8670, 234-8671

Telex: 87669-BEQUIPT TH

Cable: BUSIQUIPT Bangkok

P

TRINIDAD & TOBAGO

Caribbean Telecoms Ltd.

50/A Jerningham Avenue

P.O. Box 732

PORT-OF-SPAIN

Tel: 62-44213, 62-44214

Telex: 235,272 HUGCO WG

CH,E,MP

TUNISIA

Tunis Electronique

31 Avenue de la Liberté

TUNIS

Tel: 280-144

E,P

Corema

1 ter. Av. de Carthage

TUNIS

Tel: 253-821

Telex: 12319 CABAM TN

M

TURKEY

Teknim Company Ltd.

Iran Caddesi No. 7

Kavakdere, ANKARA

Tel: 275800

Telex: 42155 TKNM TR

E

E.M.A.

Medina Eidem Sokak No.4/1/6

Yüksel Caddesi

ANKARA

Tel: 175 622

Telex: 42 591

M

UNITED ARAB EMIRATES

Emilac Ltd.

P.O. Box 2711

ABU DHABI

Tel: 82 04 19-20

Cable: EMTAC ABUDHABI

Emilac Ltd.

P.O. Box 1641

SHARJAH

Tel: 591 181

Telex: 68136 Emilac Sh

CH,CS,E,MP

UNITED KINGDOM

GREAT BRITAIN

Hewlett-Packard Ltd.

Trafalgar House

Navigation Road

ALTRINCHAM

Cheshire WA14 1NU

Tel: 061 928 6422

Telex: 668068

A,CH,CS,E,M,MS,P

Hewlett-Packard Ltd.

Elstree House, Elstree Way

BOREHAMWOOD, Herts WD6 1SG

Tel: 01 207 5000

Telex: 8952716

E,CH,CS,P

Hewlett-Packard Ltd.

Oakfield House, Oakfield Grove

Clifton BRISTOL, Avon BS8 2BN

Tel: 0272 736806

Telex: 444302

CH,CS,E,P

Hewlett-Packard Ltd.

Bridewell House

Bridewell Place

LONDON EC4V 6BS

Tel: 01 583 6565

Telex: 298163

CH,CS,P

Hewlett-Packard Ltd.

Fourier House

257-263 High Street

LONDON COLNEY

Herts. AL2 1HA, St. Albans

Tel: 0727 24400

Telex: 1-8952716

CH,CS

Hewlett-Packard Ltd.

Pontefract Road

NORMANTON, West Yorkshire WF6 1RN

Tel: 0824 895566

Telex: 557355

CH,CS,P

Hewlett-Packard Ltd.

The Quadrangle

106-118 Station Road

REDHILL, Surrey RH1 1PS

Tel: 0737 68655

Telex: 947234

CH,CS,E,P

SALES & SUPPORT OFFICES

Arranged alphabetically by country

7



GREAT BRITAIN (Cont'd)

Hewlett-Packard Ltd.
Avon House
435 Stratford Road
Shirley, BOLLING, West Midlands
B90 4BL
Tel: 021 745 8800
Telex: 339105
CH,CS,E,P
Hewlett-Packard Ltd.
West End House
41 High Street, West End
SOUTHAMPTON
Hampshire SO3 3DQ
Tel: 04218 6767
Telex: 477138
CH,CS,P
Hewlett-Packard Ltd.
Eskdale Rd.
Winnersh, WOKINGHAM
Berkshire RG11 0DZ
Tel: 0734 696822
Telex: 848884
E

Hewlett-Packard Ltd.
King Street Lane
Winnersh, WOKINGHAM
Berkshire RG11 5AR
Tel: 0734 784774
Telex: 847178
A,CH,CS,E,MP,P
Hewlett-Packard Ltd.
Nine Mile Ride
Easthampstead, WOKINGHAM
Berkshire, RG11 3LL
Tel: 0344 773100
Telex: 848805
CH,CS,E,P

IRELAND

NORTHERN IRELAND

Hewlett-Packard Ltd.
Cardiac Services Building
95A Finaghy Road South
BELFAST BT10 0BY
Tel: 0232 625-566
Telex: 747626
CH,CS

SCOTLAND

Hewlett-Packard Ltd.
SOUTH QUEENSFERRY
West Lothian, EH30 9TG
Tel: 031 331 1188
Telex: 72682
CH,CM,CS,E,M,P

UNITED STATES

Alabama

Hewlett-Packard Co.
700 Century Park South, Suite 128
BIRMINGHAM, AL 35226
Tel: (205) 822-8802
A,CH,M

Hewlett-Packard Co.
420 Wynn Drive
HUNTSVILLE, AL 35805
P.O. Box 7700
HUNTSVILLE, AL 35807
Tel: (205) 830-2000
CH,CM,CS,E,M*

Arizona

Hewlett-Packard Co.
8080 Pointe Parkway West
PHOENIX, AZ 85044
Tel: (602) 273-8000
A,CH,CM,CS,E,MS

Hewlett-Packard Co.
2424 East Aragon Road
TUCSON, AZ 85706
Tel: (602) 889-4631
CH,E,MS**

California

Hewlett-Packard Co.
99 South Hill Dr.
BRISBANE, CA 94005
Tel: (415) 330-2500
CH,CS

Hewlett-Packard Co.
P.O. Box 7830 (93747)
5060 E. Clinton Avenue, Suite 102
FRESNO, CA 93727
Tel: (209) 252-9652
CH,CS,MS

Hewlett-Packard Co.
P.O. Box 4230
1430 East Orangethorpe
FULLERTON, CA 92631
Tel: (714) 870-1000
CH,CM,CS,E,MP

Hewlett-Packard Co.
320 S. Kellogg, Suite B
GOLETA, CA 93117
Tel: (805) 967-3405
CH

Hewlett-Packard Co.
5400 W. Rosecrans Boulevard
LAWDALE, CA 90260
P.O. Box 92105
LOS ANGELES, CA 90009
Tel: (213) 970-7500
Telex: 910-325-6608
CH,CM,CS,MP

Hewlett-Packard Co.
3155 Porter Oaks Drive
PALO ALTO, CA 94304
Tel: (415) 857-8000
CH,CS,E

Hewlett-Packard Co.
4244 So. Market Court, Suite A
P.O. Box 15976
SACRAMENTO, CA 95852
Tel: (916) 929-7222
A*,CH,CS,E,MS

Hewlett-Packard Co.
9606 Aero Drive
P.O. Box 23333
SAN DIEGO, CA 92139
Tel: (619) 279-3200
CH,CM,CS,E,MP

Hewlett-Packard Co.
2305 Camino Ramon "C"
SAN RAMON, CA 94583
Tel: (415) 838-5900
CH,CS

Hewlett-Packard Co.
3005 Scott Boulevard
SANTA CLARA, CA 95050
Tel: (408) 988-7000
Telex: 910-338-0566
A,CH,CM,CS,E,MP

Hewlett-Packard Co.
5703 Corsa Avenue
WESTLAKE VILLAGE, CA 91362
Tel: (213) 706-8800
E*,CH*,CS*

Colorado

Hewlett-Packard Co.
24 Inverness Place, East
ENGLEWOOD, CO 80112
Tel: (303) 649-5000
A,CH,CM,CS,E,MS

Connecticut

Hewlett-Packard Co.
47 Barnes Industrial Road South
P.O. Box 5007
WALLINGFORD, CT 06492
Tel: (203) 265-7801
A,CH,CM,CS,E,MS

Florida

Hewlett-Packard Co.
2901 N.W. 82nd Street
P.O. Box 24210
FORT LAUDERDALE, FL 33307
Tel: (305) 973-2600
CH,CS,E,MP

Hewlett-Packard Co.
6177 Lake Ellenor Drive
P.O. Box 13910
ORLANDO, FL 32859
Tel: (305) 859-2900
A,CH,CM,CS,E,MS

Hewlett-Packard Co.
5750B N. Hoover Blvd., Suite 123
P.O. Box 15200
TAMPA, FL 33614
Tel: (813) 884-3282
A*,CH,CM,CS,E*,M*

Georgia

Hewlett-Packard Co.
2000 South Park Place
P.O. Box 105005
ATLANTA, GA 30348
Tel: (404) 955-1500
Telex: 810-766-4890
A,CH,CM,CS,E,MP

Hawaii

Hewlett-Packard Co.
Kawaiahao Plaza, Suite 190
567 South King Street
HONOLULU, HI 96813
Tel: (808) 526-1555
A,CH,E,MS

Illinois

Hewlett-Packard Co.
304 Eldorado Road
P.O. Box 1807
BLOOMINGTON, IL 61701
Tel: (309) 662-9411
CH,MS**

Hewlett-Packard Co.
1100 31st Street, Suite 100
DOWNERS GROVE, IL 60515
Tel: (312) 960-5760
CH,CS

Hewlett-Packard Co.
5201 Tollview Drive
ROLLING MEADOWS, IL 60008
Tel: (312) 255-9800
Telex: 910-687-1066
A,CH,CM,CS,E,MP

Indiana

Hewlett-Packard Co.
7301 No. Shadeland Avenue
P.O. Box 50807
INDIANAPOLIS, IN 46250
Tel: (317) 842-1000
A,CH,CM,CS,E,MS

Iowa

Hewlett-Packard Co.
1776 22nd Street, Suite 1
WEST DES MOINES, IA 50265
Tel: (515) 224-1435
CH,MS**

Kansas

Hewlett-Packard Co.
7804 East Funston Road, #203
WICHITA, KS 67207
Tel: (316) 684-8491
CH

Kentucky

Hewlett-Packard Co.
10300 Linn Station Road, #100
LOUISVILLE, KY 40223
Tel: (502) 426-0100
A,CH,CS,MS

Louisiana

Hewlett-Packard Co.
160 James Drive East
ST. ROSE, LA 70087
P.O. Box 1449
KENNER, LA 70063
Tel: (504) 467-4100
A,CH,CS,E,MS

Maryland

Hewlett-Packard Co.
3701 Koppers Street
BALTIMORE, MD 21227
Tel: (301) 644-5800
Telex: 710-882-1943
A,CH,CM,CS,E,MS

Hewlett-Packard Co.
2 Choke Cherry Road
ROCKVILLE, MD 20850
Tel: (301) 948-6370
A,CH,CM,CS,E,MP

Massachusetts

Hewlett-Packard Co.
1775 Minuteman Road
ANDOVER, MA 01810
Tel: (617) 682-1500
A,C,CH,CS,CM,E,MP,P*
Hewlett-Packard Co.
32 Hartwell Avenue
LEXINGTON, MA 02173
Tel: (617) 861-8960
CH,CS,E

Michigan

Hewlett-Packard Co.
4326 Cascade Road S.E.
GRAND RAPIDS, MI 49506
Tel: (616) 957-1970
CH,CS,MS
Hewlett-Packard Co.
1771 W. Big Beaver Road
TROY, MI 48064
Tel: (313) 643-6474
CH,CS

Minnesota

Hewlett-Packard Co.
2025 W. Larpenteur Ave.
ST. PAUL, MN 55113
Tel: (612) 644-1100
A,CH,CM,CS,E,MP

Missouri

Hewlett-Packard Co.
11131 Colorado Avenue
KANSAS CITY, MO 64137
Tel: (816) 763-8000
A,CH,CM,CS,E,MS

Hewlett-Packard Co.
13001 Hollenberg Drive
BRIDGETON, MO 63044
Tel: (314) 344-5100
A,CH,CS,E,MP



SALES & SUPPORT OFFICES

Arranged alphabetically by country

UNITED STATES (Cont'd)

Nebraska

Hewlett-Packard
10824 Old Mill Rd., Suite 3
OMAHA, NE 68154
Tel: (402) 334-1813
CM,MS

New Jersey

Hewlett-Packard Co.
120 W. Century Road
PARAMUS, NJ 07652
Tel: (201) 235-5000
A,CH,CM,CS,E,MP

Hewlett-Packard Co.
60 New England ... West
PISCATAWAY, NJ 08854
Tel: (201) 981-1199
A,CH,CM,CS,E

New Mexico

Hewlett-Packard Co.
11300 Lomas Blvd., N.E.
P.O. Box 11634
ALBUQUERQUE, NM 87112
Tel: (505) 292-1330
CH,CS,E,MS

New York

Hewlett-Packard Co.
5 Computer Drive South
ALBANY, NY 12205
Tel: (518) 458-1550
A,CH,E,MS

Hewlett-Packard Co.
9800 Main Street
P.O. Box AC
CLARENCE, NY 14031
Tel: (716) 759-8621
CH

Hewlett-Packard Co.
200 Cross Keys Office Park
FAIRPORT, NY 14450
Tel: (716) 223-9950
CH,CM,CS,E,MS

Hewlett-Packard Co.
7641 Henry Clay Blvd.
LIVERPOOL, NY 13088
Tel: (315) 451-1820
A,CH,CM,E,MS

Hewlett-Packard Co.
No. 1 Pennsylvania Plaza
55th Floor
34th Street & 8th Avenue
MANHATTAN NY 10119
Tel: (212) 971-0300
CH,CS,E*,M*

Hewlett-Packard Co.
250 Westchester Avenue
WHITE PLAINS, NY 10604
Tel: (914) 684-6100
CM,CH,CS,E

Hewlett-Packard Co.
3 Crossways Park West
WOODBURY, NY 11797
Tel: (516) 921-0300
A,CH,CM,CS,E,MS

North Carolina

Hewlett-Packard Co.
5605 Roanne Way
P.O. Box 26500
GREENSBORO, NC 27420
Tel: (919) 852-1800
A,CH,CM,CS,E,MS

Ohio

Hewlett-Packard Co.
9920 Carver Road
CINCINNATI, OH 45242
Tel: (513) 891-9870
CH,CS,MS

Hewlett-Packard Co.
16500 Sprague Road
CLEVELAND, OH 44130
Tel: (216) 243-7300
A,CH,CM,CS,E,MS

Hewlett-Packard Co.
962 Crupper Ave.
COLUMBUS, OH 43229
Tel: (614) 436-1041
Eff: Nov. 25, 1983
675 Brookside Blvd.
WESTERVILLE, OH 43081
CH,CM,CS,E*

Hewlett-Packard Co.
330 Progress Rd.
DAYTON, OH 45449
Tel: (513) 859-8202
A,CH,CM,E*,MS

Oklahoma

Hewlett-Packard Co.
304 N. Meridian, Suite A
P.O. Box 75609
OKLAHOMA CITY, OK 73147
Tel: (405) 948-9499
A*,CH,E*,MS

Hewlett-Packard Co.
3840 S. 103rd E. Avenue, #100
P.O. Box 35747
TULSA, OK 74153
Tel: (918) 665-3300
A**,CH,CS,M*

Oregon

Hewlett-Packard Co.
9255 S. W. Pioneer Court
P.O. Box 328
WILSONVILLE, OR 97070
Tel: (503) 682-8000
A,CH,CS,E*,MS

Pennsylvania

Hewlett-Packard Co.
111 Zela Drive
PITTSBURGH, PA 15238
Tel: (412) 782-0400
A,CH,CS,E,MP

Hewlett-Packard Co.
2750 Monroe Boulevard
P.O. Box 713
VALLEY FORGE, PA 19482
Tel: (215) 666-9000
A,CH,CM,E,M

South Carolina

Hewlett-Packard Co.
Brookside Park, Suite 122
1 Harbison Way
P.O. Box 21708
COLUMBIA, SC 29221
Tel: (803) 732-0400
CH,E,MS

Hewlett-Packard Co.
Koger Executive Center
Chesterfield Bldg., Suite 124
GREENVILLE, SC 29615
Tel: (803) 297-4120

Tennessee

Hewlett-Packard Co.
224 Peters Road, Suite 102
P.O. Box 22490
KNOXVILLE, TN 37922
Tel: (615) 691-2371
A*,CH,MS

Hewlett-Packard Co.
3070 Directors Row
MEMPHIS, TN 38131
Tel: (901) 346-8370
A,CH,MS

Texas

Hewlett-Packard Co.
4171 North Mesa
Suite C-110
EL PASO, TX 79902
Tel: (915) 533-3555
CH,E*,MS**

Hewlett-Packard Co.
10535 Harwin Drive
P.O. Box 42816
HOUSTON, TX 77042
Tel: (713) 776-8400
A,CH,CM,CS,E,MP

Hewlett-Packard Co.
830 E. Campbell Rd.
P.O. Box 1270
RICHARDSON, TX 75080
Tel: (214) 231-6101
A,CH,CM,CS,E,MP

Hewlett-Packard Co.
1020 Central Parkway South
P.O. Box 32993
SAN ANTONIO, TX 78216
Tel: (512) 494-8336
CH,CS,E,MS

Utah

Hewlett-Packard Co.
3530 W. 2100 South
SALT LAKE CITY, UT 84119
Tel: (801) 974-1700
A,CH,CS,E,MS

Virginia

Hewlett-Packard Co.
4375 Cox Road
GLEN ALLEN, VA 23060
P.O. Box 9669
RICHMOND, VA 23228
Tel: (804) 747-7750
A,CH,CS,E,MS

Washington

Hewlett-Packard Co.
15815 S.E. 37th Street
BELLEVUE, WA 98008
Tel: (206) 843-4001
A,CH,CM,CS,E,MP

Hewlett-Packard Co.
Suite A
708 North Argonne Road
SPOKANE, WA 99212
Tel: (509) 922-7000
CH,CS

West Virginia

Hewlett-Packard Co.
4604 MacCorkle Ave.
P.O. Box 4297
CHARLESTON, WV 25304
Tel: (304) 925-0492
A,MS

Wisconsin

Hewlett-Packard Co.
150 S. Sunny Slope Road
BROOKFIELD, WI 53005
Tel: (414) 764-8800
A,CH,CS,E*,MP

URUGUAY

Pablo Ferrando S.A.C. e I.
Avenida Italia 2877
Casilla de Correo 370
MONTEVIDEO
Tel: 80-2586
Telex: Public Booth 901
A,CH,E,M

VENEZUELA

Hewlett-Packard de Venezuela C.A.
3FA Transversal Los Ruices Norte
Edificio Segre 1, 2 & 3
Apartado 50833
CARACAS 1071
Tel: 239-4133

Telex: 251046 HEWPACK
A,CH,CS,E,MS,P

Hewlett-Packard de Venezuela C.A.
Calle-72-Entre 3H y 3Y, No. 3H-40
Edificio Ada-Evelyn, Local B
Apartado 2646
4001, MARACAIBO, Estado Zulia
Tel: (031) 80.304
C,E*

Hewlett-Packard de Venezuela C.A.
Calle Vargas Rondon
Edificio Seguros Carabobo, Piso 10
VALENZIA
Tel: (041) 51 385
CH,CS,P

Bioelectronica Medica C.A.
Calle Buen Pastor
Edif. Cola MI-Piso 2 y Semi Solano 1
Boleita Norte
Apartado 50710 CARACAS 1050A
Tel: 239 84 41
Telex: 26518

ZIMBABWE

Field Technical Sales
45 Kelyin Road, North
P.B. 3458
SALISBURY
Tel: 705 231
Telex: 4-122 RH
C,E,MP

July 1983

5952-6900

Indicates main office

HP distributors are printed in italics.

END